


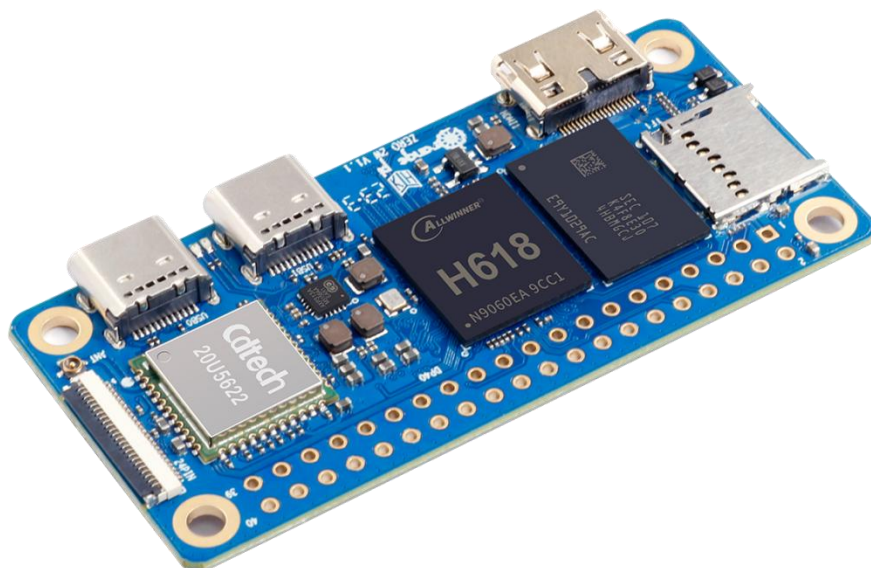

Orange Pi Zero 2w

User Manual





Catalogue

1. Basic features of Orange Pi Zero 2w	1
1. 1. What is Orange Pi Zero 2w	1
1. 2. Usage of Orange Pi Zero 2w	1
1. 3. Who is Orange Pi Zero 2w designed for?	1
1. 4. Hardware features of Orange Pi Zero 2w	2
1. 5. Top view and bottom view of Orange Pi Zero 2w	3
1. 6. Orange Pi Zero 2w interface details	4
1. 7. Orange Pi Zero 2w 24pin expansion board interface details	5
2. Introduction to the use of development boards	7
2. 1. Prepare necessary accessories	7
2. 2. Download the development board image and related information	11
2. 3. Method of burning Linux image to TF card based on Windows PC	12
2. 3. 1. How to burn Linux image using balenaEtcher	12
2. 3. 2. How to burn Linux image using Win32Diskimager	16
2. 4. Method to burn Linux image to TF card based on Ubuntu PC	19
2. 5. Method of burning Android image to TF card	23
2. 6. Instructions for using micro-linux system in onboard SPI Flash	30
2. 7. Start the Orange Pie development board	31
2. 8. How to use the debugging serial port	32
2. 8. 1. Debug serial port connection instructions	32
2. 8. 2. How to use the debugging serial port on Ubuntu platform	34
2. 8. 3. How to use the debugging serial port on Windows platform	36
2. 9. Instructions for using the 5v pin in the 40pin interface of the development board for power supply	39
3. Debian/Ubuntu Server and Xfce desktop system usage instructions	41
3. 1. Supported linux image types and kernel versions	41



3. 2.	Linux kernel driver adaptation situation	42
3. 3.	Linux command format description in this manual	44
3. 4.	Linux system login instructions	45
3. 4. 1.	Linux system default login account and password	45
3. 4. 2.	How to set up automatic login of Linux system terminal	46
3. 4. 3.	Instructions for automatic login of Linux desktop version system	46
3. 4. 4.	Setting method for automatic login of root user in Linux desktop system	48
3. 4. 5.	How to disable the desktop in Linux desktop system	48
3. 5.	Onboard LED light test instructions	49
3. 6.	Operation instructions for rootfs partition capacity of Linux system in TF card	51
3. 6. 1.	The first startup will automatically expand the capacity of the rootfs partition in the TF card.	51
3. 6. 2.	Method to prohibit automatic expansion of rootfs partition capacity in TF card	53
3. 6. 3.	Method to manually expand the capacity of rootfs partition in TF card	54
3. 6. 4.	Method to reduce the capacity of rootfs partition in TF card	60
3. 7.	24Pin expansion board interface pin description	64
3. 8.	How to use the two LRADC buttons on the 24pin expansion board	66
3. 9.	Network connection test	71
3. 9. 1.	Ethernet port test	71
3. 9. 2.	WIFI connection test	73
3. 9. 3.	Method to create WIFI hotspot through create_ap	82
3. 9. 4.	How to set a static IP address	89
3. 9. 5.	How to set up the Linux system to automatically connect to the network for the first time	97
3. 10.	SSH remote login development board	102
3. 10. 1.	SSH remote login development board under Ubuntu	102
3. 10. 2.	SSH remote login development board under Windows	103
3. 11.	HDMI test	105
3. 11. 1.	HDMI display test	105
3. 11. 2.	HDMI to VGA display test	106



3. 11. 3.	How to set HDMI resolution in Linux5.4 system	107
3. 11. 4.	How to modify the width and height of Framebuffer in Linux5.4 system	108
3. 11. 5.	Framebuffer cursor setting	109
3. 12.	How to use Bluetooth	110
3. 12. 1.	Testing method for desktop image	110
3. 12. 2.	How to use server version image	113
3. 13.	USB interface test	116
3. 13. 1.	USB interface extension description	116
3. 13. 2.	How to set USB0 to HOST mode	117
3. 13. 3.	Connect USB mouse or keyboard to test	119
3. 13. 4.	Connect USB storage device for testing	120
3. 13. 5.	USB Ethernet card test	120
3. 13. 6.	USB camera test	122
3. 14.	Audio test	124
3. 14. 1.	How to play audio using the command line	124
3. 14. 2.	Test audio methods on desktop systems	126
3. 15.	Infrared reception test	127
3. 16.	Temperature sensor	130
3. 16. 1.	How to check the temperature in linux5.4 system	130
3. 16. 2.	How to check the temperature in linux6.1 system	131
3. 17.	40 Pin Interface pin description	131
3. 18.	How to install wiringOP	132
3. 19.	40pin interface GPIO, I2C, UART, SPI and PWM testing	134
3. 19. 1.	40pin GPIO port test	134
3. 19. 2.	How to set the pull-down resistor of 40 Pin GPIO port	135
3. 19. 3.	40pin SPI test	136
3. 19. 4.	40pin I2C test	139
3. 19. 5.	40pin UART test	143
3. 19. 6.	PWM test method	146
3. 20.	How to use wiringOP hardware PWM	150
3. 20. 1.	How to set PWM using wiringOP' s gpio command	151



3. 20. 2.	How to use the PWM test program	155
3. 21.	How to install and use wiringOP-Python	157
3. 21. 1.	How to install wiringOP-Python	157
3. 21. 2.	40pin GPIO port test	159
3. 21. 3.	40pin SPI test	162
3. 21. 4.	40pin I2C test	165
3. 21. 5.	40pin UART test	169
3. 22.	Hardware watchdog test	173
3. 23.	Check the chipid of H618 chip	174
3. 24.	Python related instructions	174
3. 24. 1.	How to compile and install Python source code	174
3. 24. 2.	How to replace pip source in Python	175
3. 25.	How to install Docker	176
3. 26.	How to install Home Assistant	177
3. 26. 1.	Installation via docker	177
3. 26. 2.	Installation via python	181
3. 27.	OpenCV installation method	184
3. 27. 1.	Use apt to install OpenCV	184
3. 28.	Set up the Chinese environment and install the Chinese input method	184
3. 28. 1.	Debian system installation method	184
3. 28. 2.	Installation method of Ubuntu 20.04 system	191
3. 28. 3.	Installation method of Ubuntu 22.04 and Ubuntu 24.04 system	195
3. 29.	How to remotely log in to the Linux system desktop	201
3. 29. 1.	Remote login using NoMachine	201
3. 29. 2.	Remote login using VNC	205
3. 30.	QT installation method	207
3. 31.	ROS installation method	215
3. 31. 1.	How to install ROS 1 Noetic on Ubuntu20.04	215
3. 31. 2.	How to install ROS 2 Galactic on Ubuntu20.04	219
3. 31. 3.	How to install ROS 2 Humble on Ubuntu22.04	222
3. 31. 4.	Ubuntu24.04 Method for Installing ROS 2 Jazzy	224



3. 32.	How to install kernel header files	226
3. 33.	Testing of some programming languages supported by Linux system	228
3. 33. 1.	Debian Bullseye system	228
3. 33. 2.	Debian Bookworm system	229
3. 33. 3.	Ubuntu Focal system	231
3. 33. 4.	Ubuntu Jammy system	233
3. 33. 5.	Ubuntu Noble System	235
3. 34.	Method of uploading files to the development board Linux system	237
3. 34. 1.	Method to upload files to the development board Linux system in Ubuntu PC	237
3. 34. 2.	Method to upload files from Windows PC to development board Linux system	240
3. 35.	Instructions for using the logo on and off the machine	245
3. 36.	How to turn on the power button in Linux5.4	245
3. 37.	How to shut down and restart the development board	247
4.	Linux SDK——orange-pi-build usage instructions	248
4. 1.	Compilation system requirements	248
4. 2.	Obtain the source code of linux sdk	250
4. 2. 1.	Download orange-pi-build from github	250
4. 2. 2.	Download the cross-compilation tool chain	252
4. 2. 3.	orange-pi-build complete directory structure description	254
4. 3.	Compile u-boot	255
4. 4.	Compile the linux kernel	259
4. 5.	Compile rootfs	263
4. 6.	Compile linux image	267
5.	Instructions for using the Orange Pi OS Arch system	272
5. 1.	Orange Pi OS Arch system function adaptation status	272
5. 2.	Orange Pi OS Arch System User Guide Instructions	273
5. 3.	How to set DT overlays	278



5. 4.	How to install software	280
6.	OpenWRT System User Manual	281
6. 1.	OpenWRT version	281
6. 2.	OpenWRT Adaptation situation	281
6. 3.	First time boot expansion rootfs	281
6. 4.	Method of logging into the system	282
6. 4. 1.	Login via serial port	282
6. 4. 2.	Login to the system via SSH	282
6. 4. 3.	Login to LuCI Management Interface	283
6. 4. 4.	Log in to the terminal through the LuCI management interface	284
6. 4. 5.	Login to the terminal using IP address and port number	287
6. 5.	Method of modifying LAN port IP address through command line	287
6. 6.	Method for changing root password	289
6. 6. 1.	Modify via Command Line	289
6. 6. 2.	Modify through LuCI management interface	289
6. 7.	USB interface testing	291
6. 7. 1.	Mounting USB Storage Devices at the Command Line	291
6. 7. 2.	Mounting USB Storage Devices in LuCI Management Interface	292
6. 8.	USB Wireless Network Card Test	295
6. 8. 1.	Method of connecting WIFI hotspot using USB wireless network card	296
6. 8. 2.	Method for creating a WIFI hotspot using a USB wireless network card	299
6. 9.	Installing software packages through the command line	303
6. 9. 1.	Installing through opkg on the terminal	303
6. 10.	OpenWRT management interface installation software package	304
6. 10. 1.	View the list of available software packages in the system	304
6. 10. 2.	Example of Installing Software Packages	305
6. 10. 3.	Example of Removing Software Packages	307
6. 11.	Using Samba Network Sharing	309
7.	Compilation method of OpenWRT source code	313
7. 1.	Download OpenWRT source code	313



7. 2. Compile OpenWRT source code	313
8. Android 12 TV system usage instructions	315
8. 1. Supported Android versions	315
8. 2. Android 12 TV function adaptation status	315
8. 3. Onboard LED light display instructions	316
8. 4. How to return to the previous interface in Android	316
8. 5. How to use ADB	317
8. 5. 1. Use network connection adb debugging	317
8. 5. 2. Use data cable to connect adb debugging	318
8. 6. View how to set HDMI display resolution	318
8. 6. 1. HDMI to VGA display test	320
8. 7. WI-FI connection method	321
8. 8. How to use WI-FI hotspot	323
8. 9. How to check the IP address of the Ethernet port	325
8. 10. Bluetooth connection method	327
8. 11. How to set USB0 to HOST mode	330
8. 12. How to use USB camera	331
8. 13. Android system ROOT description	332
8. 14. How to use MiracastReceiver to cast the mobile phone screen to the development board	334
8. 15. Method of turning on and off the machine through buttons or infrared remote control	337
8. 16. 40pin interface GPIO, UART, SPI test	339
8. 16. 1. 40pin GPIO port test method	339
8. 16. 2. 40pin UART test method	342
8. 16. 3. 40pin SPI test method	345
8. 16. 4. 40pin I2C test method	348
8. 16. 5. 40pin PWM test	353
9. How to compile Android 12 source code	356



9. 1. Download the source code of Android 12	356
9. 2. Compile the source code of Android 12	358
10. Appendix	360
10. 1. User manual update history	360
10. 2. Image update history	361



1. Basic features of Orange Pi Zero 2w

1. 1. What is Orange Pi Zero 2w

Orange Pi is an open source single-board card computer, a new generation of arm64 development board, which can run operating systems such as Android TV 12, Ubuntu and Debian. The Orange Pi Zero 2w development board uses the Allwinner H618 system-on-chip, and can optionally have 1GB or 1.5GB or 2GB or 4GB LPDDR4 memory.

1. 2. Usage of Orange Pi Zero 2w

We can use it to achieve:

- A small Linux desktop computer
- A small Linux network server
- Install the Klipper host computer to control the 3D printer
- Android TV TV box

Of course, there are more functions. Relying on a powerful ecosystem and a variety of expansion accessories, Orange Pi can help users easily achieve delivery from ideas to prototypes to mass production. It is an ideal choice for makers, dreamers, and hobbyists. An ideal creative platform for readers.

1. 3. Who is Orange Pi Zero 2w designed for?

The Orange Pi development board is not only a consumer product, but also designed for anyone who wants to use technology to create and innovate. It's a simple, fun, and practical tool you can use to shape the world around you.



1. 4. Hardware features of Orange Pi Zero 2w

Introduction to hardware features	
CPU	Allwinner H618 quad-core 64-bit 1.5GHz high-performance Cortex-A53 processor
GPU	Mali G31 MP2 Supports OpenGL ES 1.0/2.0/3.2、OpenCL 2.0
Memory	1GB/1.5GB/2GB/4GB LPDDR4 (shared with GPU)
Onboard storage	TF card slot, 16MB SPI Flash
WIFI+BT	• 20U5622 chip, supports IEEE 802.11 a/b/g/n/ac, BT5.0
Video Output	• Mini HDMI 2.0 interface
Audio Output	• Mini HDMI output
Power Supply	Type-C 5V/2A
USB 2.0 port	Type-C USB2.0 x 2
40pinexpansion interface	Used to expand GPIO, UART, I2C, SPI, PWM
24pinexpansion interface	Used to expand USB2.0 x 2, 100M Ethernet, infrared reception, audio output, TV-OUT output, power on/off button, LRADC button x 2
LED Light	Power light and status light
Supported OS	Android 12 TV , Debian11 , Debian12 , Ubuntu22.04 , Ubuntu20.04, Orange Pi OS (Arch) etc.
Appearance specifications introduction	
PCB Size	30mm x 65mm x 1.2mm
Weight	12.5g
 range Pi™ is a registered trademark of Shenzhen Xunlong Software Co., Ltd.	




1. 5. Top view and bottom view of Orange Pi Zero 2w

Top view:




Bottom view:

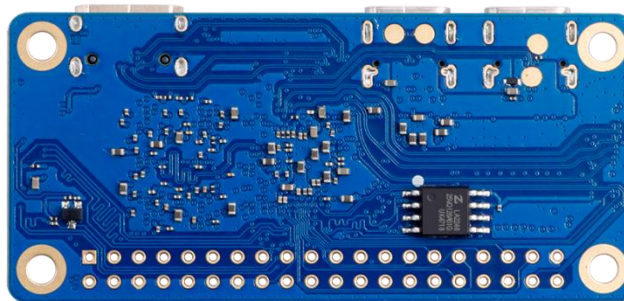




1. 6. Orange Pi Zero 2w interface details

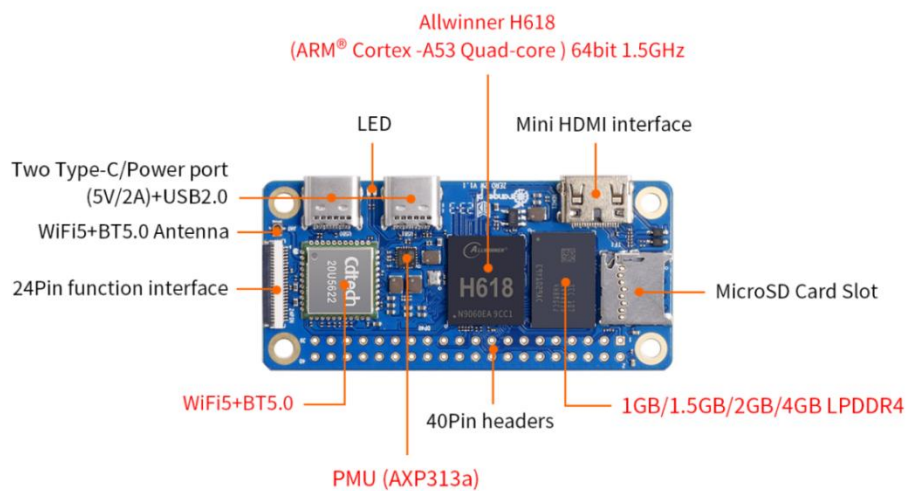



Top View

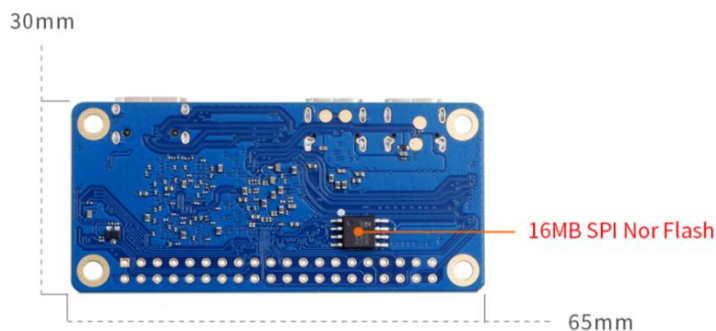


Bottom View



1.7. Orange Pi Zero 2w 24pin expansion board interface details

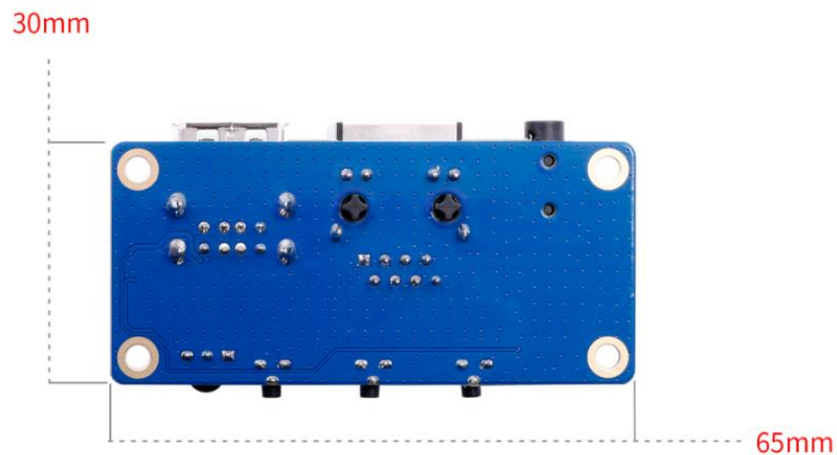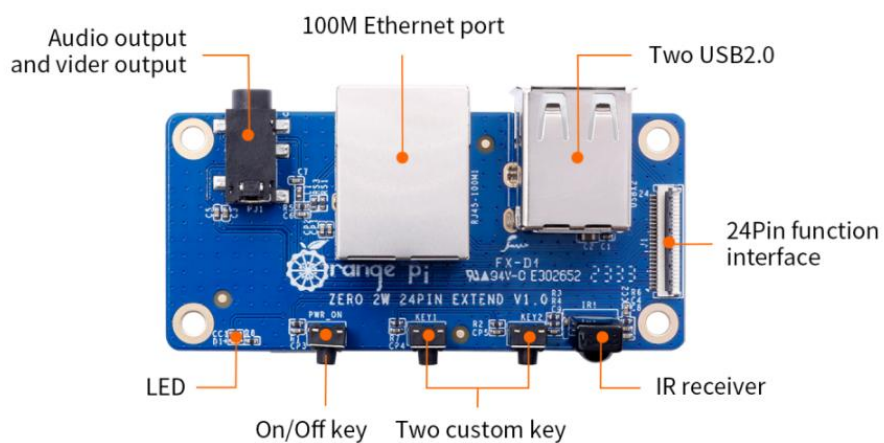

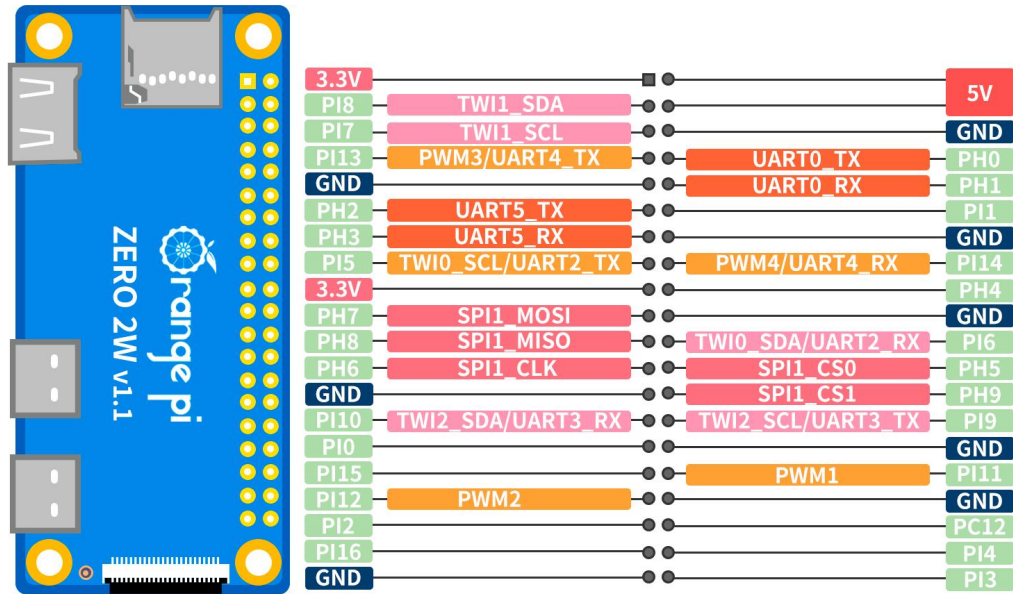

The diameters of the four positioning holes are all 3.0mm.




2. Introduction to the use of development boards

2.1. Prepare necessary accessories

- 1) TF card, high-speed SanDisk card with minimum capacity of 8GB, class 10 or above

SanDisk 闪迪

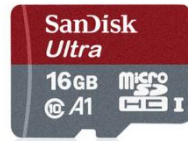

When using other brands of TF cards (non-SanDisk TF cards), as shown in the picture below (including but not limited to these cards), some friends have reported that problems will occur during system startup, such as the system getting stuck halfway through startup. Or the reboot command cannot be used normally, and it was finally solved after replacing the SanDisk TF card. Therefore, if you are using a non-SanDisk TF card and find problems with system startup or use, please replace it with a SanDisk TF card and then test again.



There are currently reports that some TF cards have problems booting on Orange Pi Zero 2w.

In addition, TF cards that can be used normally on other types of development boards are not guaranteed to be able to start normally on Orange Pi Zero 2w. Please pay special attention to this point.

- 2) TF card reader, used to read and write TF cards





3) Mini HDMI to HDMI cable, used to connect the development board to an HDMI monitor or TV for display



4) Power supply. If you have a 5V/2A or 5V/3A power supply, you only need to prepare a USB to Type C interface data cable as shown in the picture on the left below. You can also use a cable similar to the picture on the right below. 5V/2A or 5V/3A high-quality USB Type C interface power adapter integrated with the power head.



OPI USB turn Type-C Power Cable



OPI 5V3A US Type-C Power Supply



Type-C

Both Type-C interfaces on the development board can be used for power supply.

Both Type-C interfaces can provide power,
just choose one of the two



5) 24pin expansion board



6) USB interface mouse and keyboard, as long as it is a standard USB interface mouse and keyboard, the mouse and keyboard can be used to control the Orange Pi development board

7) Infrared remote control, mainly used to control Android TV system




Note that the remote control of the air conditioner or the TV cannot control the Orange Pi development board. By default, only the remote control provided by Orange Pi can.

8) Network cable to connect the development board to the Internet

9) AV video cable. If you want to display video through the TV-OUT interface instead of the HDMI interface, you need to connect the development board to the TV through the AV video cable.



10) Heat sink. If you are worried that the temperature of the development board is too high, you can add some heat sinks and stick the heat sinks on the H618 chip and memory chip.

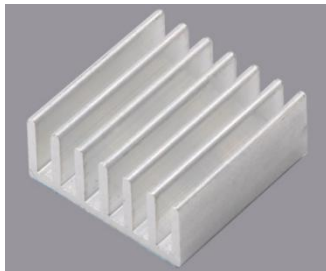

11) 5V cooling fan, as shown in the figure below. There are 5V and GND pins on the 40pin interface of the development board that can be connected to the cooling fan. The spacing of the 40pin pins is 2.54mm. The power interface of the cooling fan can be purchased according to this specification.



Note that the 5V pin can be used directly after the development board is plugged in and no other settings are required. In addition, the voltage output by the 5V pin cannot be adjusted or turned off through software.



The pin headers on the 40pin interface are not soldered by default, and you need to solder them yourself before you can use them.

12) Type-C to USB cable for connecting USB devices



13) USB to TTL module and Dupont cable. When using the serial port debugging function, a USB to TTL module and Dupont cable are needed to connect the development board and the computer.



Note that the TTL level used by the development board is 3.3v. In addition to the USB to TTL module shown in the picture above, other similar 3.3v USB to TTL modules are generally available.

14) X64 computer with Ubuntu and Windows operating systems installed

1	Ubuntu22.04 PC	Optional, used to compile Android and Linux source code
2	Windows PC	For burning Android and Linux images

2.2. Download the development board image and related information

1) The download URL for the Chinese version of the information is

<http://www.orangepi.cn/html/hardWare/computerAndMicrocontrollers/service-and-support/Orange-Pi-Zero-2W.html>



2) The download URL for the English version of the information is

<http://www.orangepi.org/html/hardWare/computerAndMicrocontrollers/service-and-support/Orange-Pi-Zero-2W.html>

3) The information mainly includes

- a. **Android source code**: saved on Google Cloud Drive
- b. **Linux source code**: saved on Github
- c. **Android image**: saved on Google Cloud Drive
- d. **Ubuntu image**: saved on Google Cloud Drive
- e. **Debian image**: saved on Google Cloud Drive
- f. **Orange Pi OS (Arch) image**: saved on Google Cloud Drive
- g. **User manual and schematic diagram**: chip-related data manuals will also be placed here
- h. **Official tools**: mainly include software needed when using the development board

2.3. Method of burning Linux image to TF card based on Windows PC

Note that the Linux image mentioned here specifically refers to the Linux distribution image such as Debian or Ubuntu downloaded from the Orange Pi information download page.

2.3.1. How to burn Linux image using balenaEtcher

1) First prepare a TF card with 8GB or larger capacity. The transmission speed of the TF card must be class10 or above. It is recommended to use TF cards from SanDisk and other brands.

2) Then use the card reader to insert the TF card into the computer

3) Download the compressed package of the Linux operating system image file you want to burn from the [Orange Pi information download page](#), and then use the decompression software to decompress it. In the decompressed file, the file ending with ".img" is the image file of the operating system. The size is generally above 1GB


4) Then download the Linux image burning software-**balenaEtcher**, the download



address is

<https://www.balena.io/etcher/>


5) After entering the balenaEtcher download page, click the green download button to jump to the software download location.

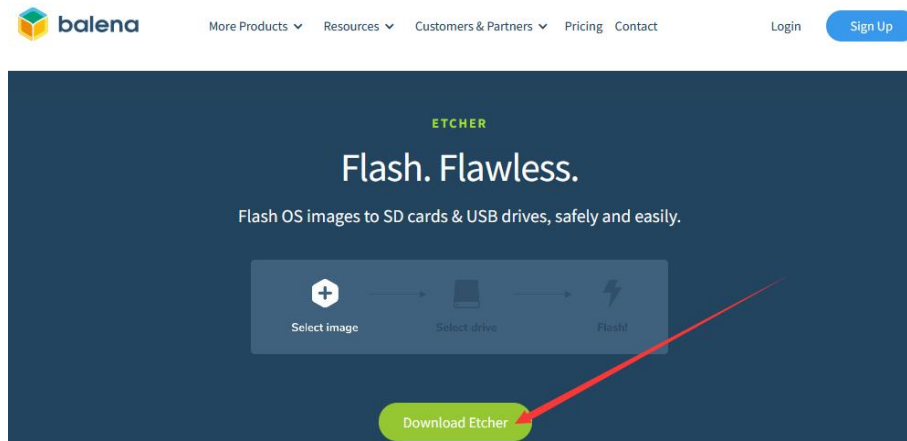

6) Then you can choose to download the Portable version of balenaEtcher software. The Portable version does not need to be installed. You can use it by double-clicking to open it.



7) If you downloaded the version of balenaEtcher that needs to be installed, please install it first and then use it. If you downloaded the Portable version of balenaEtcher, just double-click to open it. The balenaEtcher interface after opening is as shown below.

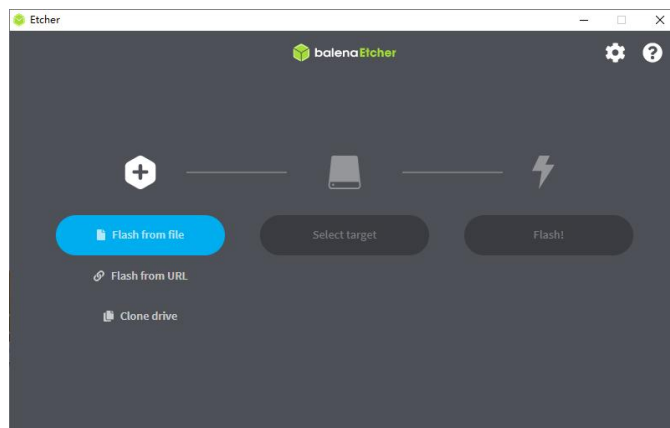

If the following error is prompted when opening balenaEtcher:

Attention

 
Something went wrong. If it is a compressed image, please check that the archive is not corrupted.

User did not grant permission.

Cancel

Retry


Please select balenaEtcher, right-click, and select Run as administrator.




- 8) The specific steps to use balenaEtcher to burn a Linux image are as follows
- First select the path of the Linux image file to be burned.
 - Then select the drive letter of the TF card
 - Finally click Flash and it will start burning the Linux image to the TF card.




9) The interface displayed during the process of burning the Linux image by balenaEtcher is as shown in the figure below. In addition, the progress bar displays purple to indicate that the Linux image is being burned into the TF card.

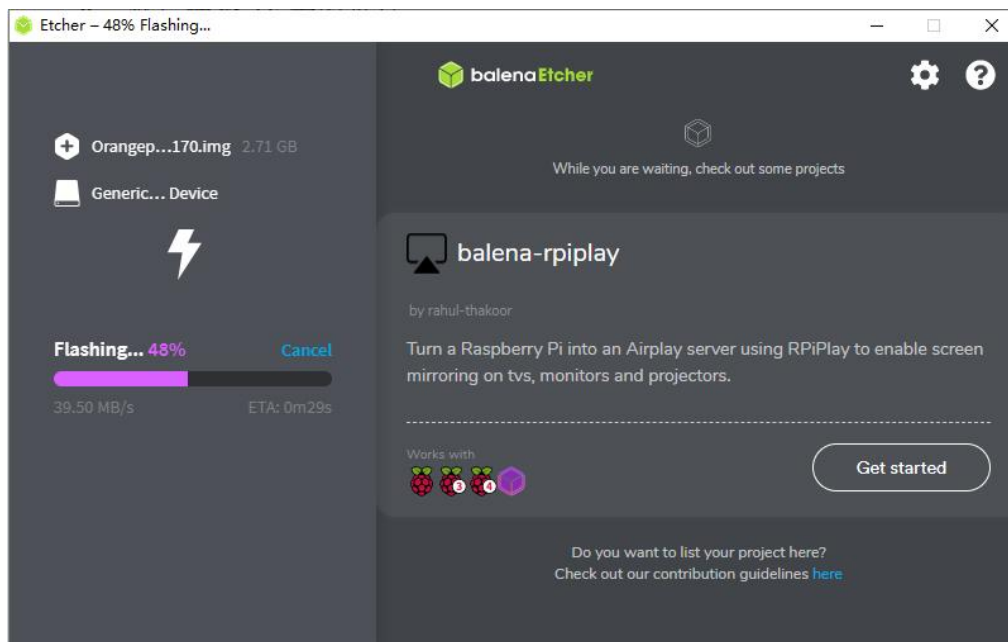

10) After the Linux image is burned, balenaEtcher will also verify the image burned into the TF card by default to ensure that there are no problems during the burning process. As shown in the figure below, a green progress bar indicates that the image has been burned, and balenaEtcher is verifying the burned image.

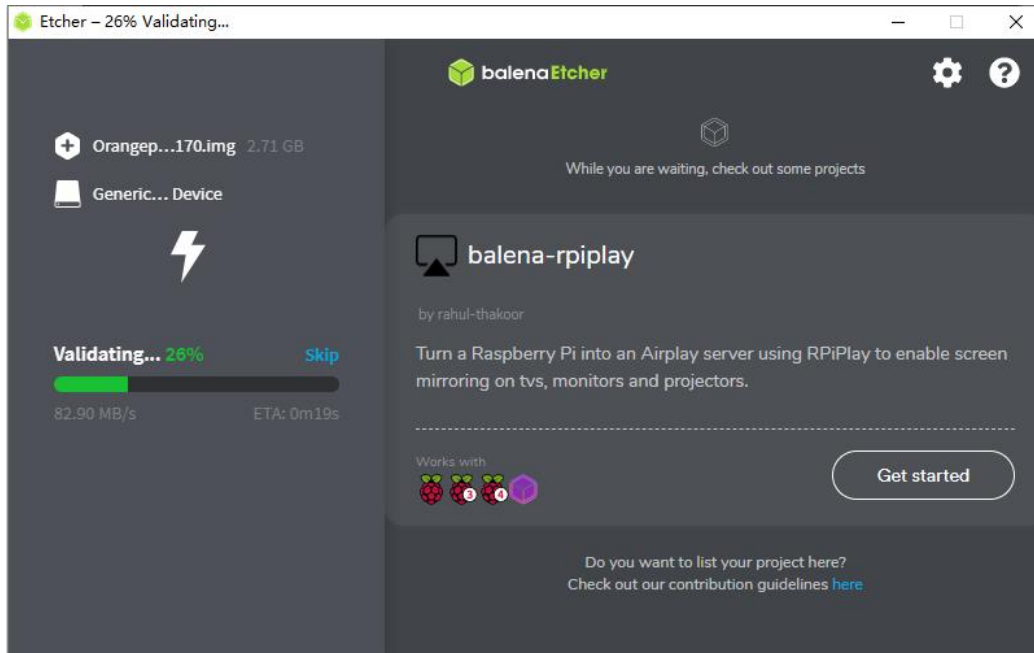

11) After successful burning, the display interface of balenaEtcher is as shown below. If the green indicator icon is displayed, it means that the image burning is successful. At this time, you can exit balenaEtcher, then pull out the TF card and insert it into the TF card slot of the development board for use.

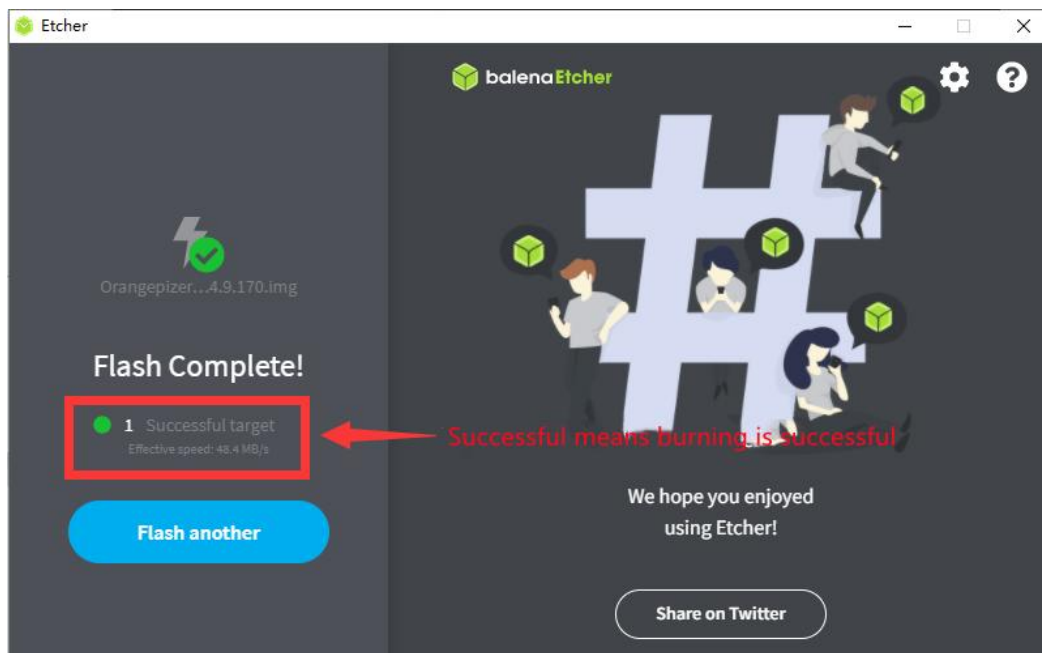

2. 3. 2. How to burn Linux image using Win32Diskimager

1) First prepare a TF card with 8GB or larger capacity. The transmission speed of the TF card must be class10 or above. It is recommended to use TF cards from SanDisk and



other brands.


2) Then use the card reader to insert the TF card into the computer

3) Then format the TF card


- a. You can use the **SD Card Formatter** software to format the TF card. Its download address is:

https://www.sdcard.org/downloads/formatter/eula_windows/SDCardFormatterv5_WinEN.zip

- b. After downloading, just unzip and install it, and then open the software.
- c. If only the TF card is inserted into the computer, the drive letter of the TF card will be displayed in the "Select card" column. If multiple USB storage devices are inserted into the computer, you can select the drive letter corresponding to the TF card through the drop-down box.

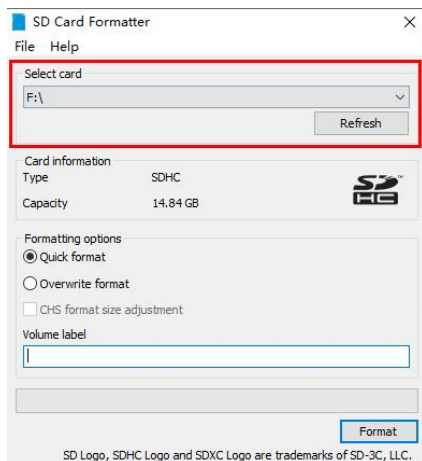


- d. Then click "**Format**". A warning box will pop up before formatting. After selecting "**Yes (Y)**", formatting will begin.

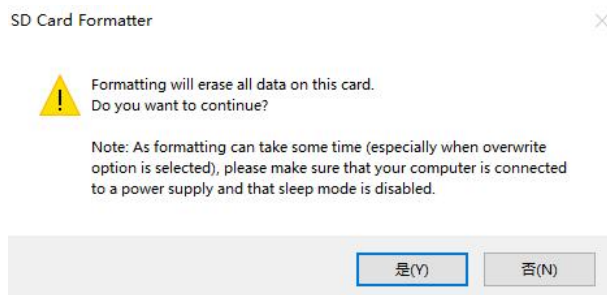



- e. After formatting the TF card, the information shown in the picture below will pop up, click OK.

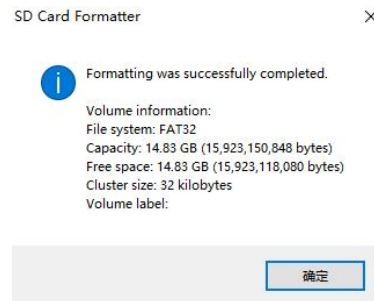

- 4) Download the compressed package of the Linux operating system image file you want to burn from the [Orange Pi information download page](#), and then use the decompression software to decompress it. In the decompressed file, the file ending with ".img" is the image file of the operating system. The size is generally above 1GB

- 5) Use **Win32Diskimager** to burn the Linux image to the TF card

- a. The download page of Win32Diskimager is


<http://sourceforge.net/projects/win32diskimager/files/Archive/>

- b. After downloading, you can install it directly. The Win32Diskimager interface is as follows

- a) First select the path to the image file

- b) Then confirm that the drive letter of the TF card is consistent with what is displayed in the "Device" column

- c) Finally click "Write" to start burning

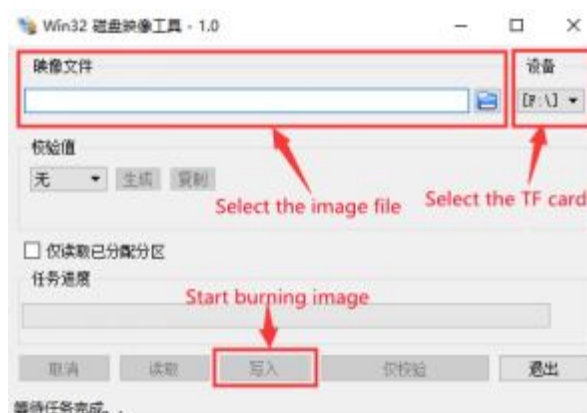

- c. After the image writing is completed, click the "Exit" button to exit. Then you



can pull out the TF card and insert it into the development board to start.

2. 4. Method to burn Linux image to TF card based on Ubuntu PC

Note that the Linux image mentioned here specifically refers to the Linux distribution image such as Debian or Ubuntu downloaded from the Orange Pi information download page. Ubuntu PC refers to the personal computer with the Ubuntu system installed.


1) First prepare a TF card with 8GB or larger capacity. The transmission speed of the TF card must be class10 or above. It is recommended to use TF cards from SanDisk and other brands.

2) Then use the card reader to insert the TF card into the computer

3) Download the balenaEtcher software, the download address is

<https://www.balena.io/etcher/>

4) After entering the balenaEtcher download page, click the green download button to jump to the software download place.

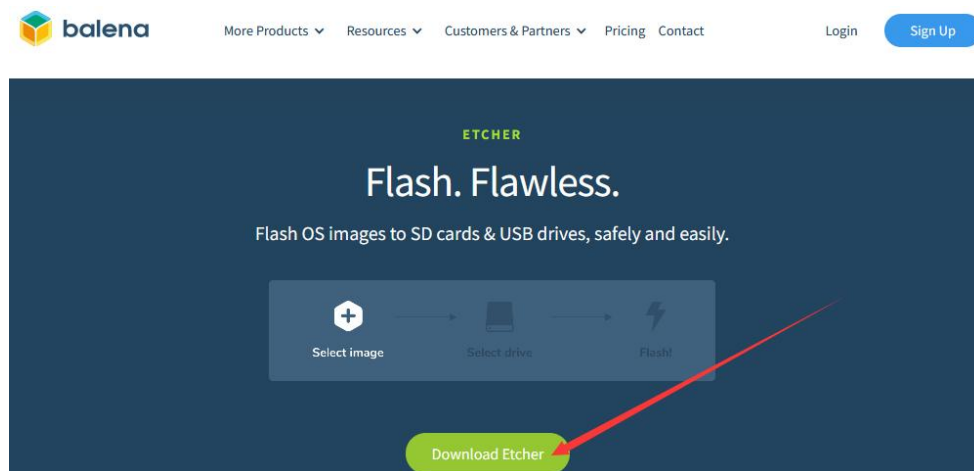

5) Then choose to download the Linux version of the software



DOWNLOAD

Download Etcher

ASSET	OS	ARCH	
ETCHER FOR WINDOWS (X86 X64) (INSTALLER)	WINDOWS	X86 X64	Download
ETCHER FOR WINDOWS (X86 X64) (PORTABLE)	WINDOWS	X86 X64	Download
ETCHER FOR WINDOWS (LEGACY 32 BIT) (X86 X64) (PORTABLE)	WINDOWS	X86 X64	Download
ETCHER FOR MACOS	MACOS	X64	Download
ETCHER FOR LINUX X64 (64-BIT) (APPIMAGE)	LINUX	X64	Download
ETCHER FOR LINUX (LEGACY 32 BIT) (APPIMAGE)	LINUX	X86	Download

Looking for [Debian \(.deb\)](#) packages or [Red Hat \(.rpm\)](#) packages?OSS hosting by [cloudsmith](#)


6) Download the compressed package of the Linux operating system image file you want to burn from the [Orange Pi information download page](#), and then use the decompression software to decompress it. In the decompressed file, the file ending with ".img" is the image file of the operating system. The size is generally above 1GB. The decompression command for the compressed package ending in 7z is as follows:

```
test@test:~$ 7z x orangepizero2w_1.0.0_ubuntu_focal_desktop_linux6.1.31.7z
test@test:~$ ls orangepizero2w_1.0.0_ubuntu_focal_desktop_linux6.1.31.*
orangepizero2w_1.0.0_ubuntu_focal_desktop_linux6.1.31.7z
orangepizero2w_1.0.0_ubuntu_focal_desktop_linux6.1.31.sha    #Checksum file
orangepizero2w_1.0.0_ubuntu_focal_desktop_linux6.1.31.img    #Image file
```


7) After decompressing the image, you can first use the `sha256sum -c *.sha` command to calculate whether the checksum is **correct**. If it prompts that it is successful, it means that the downloaded image is correct, and you can burn it to the TF card with confidence. If it prompts that the **checksum does not match**, it means There is a problem with the downloaded image, please try downloading again

```
test@test:~$ sha256sum -c *.sha
orangepizero2w_1.0.0_ubuntu_focal_desktop_linux6.1.31.img: successful
```


8) Then double-click **balenaEtcher-1.14.3-x64.AppImage** on the graphical interface of Ubuntu PC to open balenaEtcher (**no installation required**). The interface after balenaEtcher is opened is as shown below

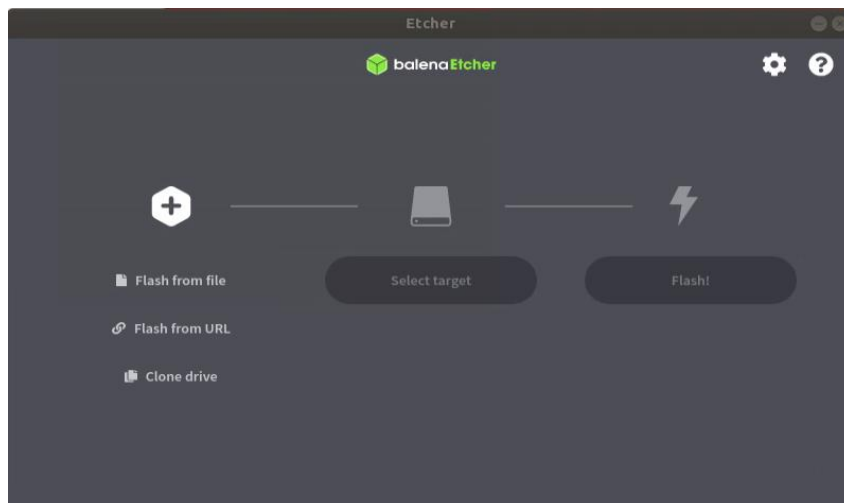


- 9) The specific steps to use balenaEtcher to burn a Linux image are as follows
- First select the path of the Linux image file to be burned.
 - Then select the drive letter of the TF card
 - Finally click Flash and it will start burning the Linux image to the TF card.

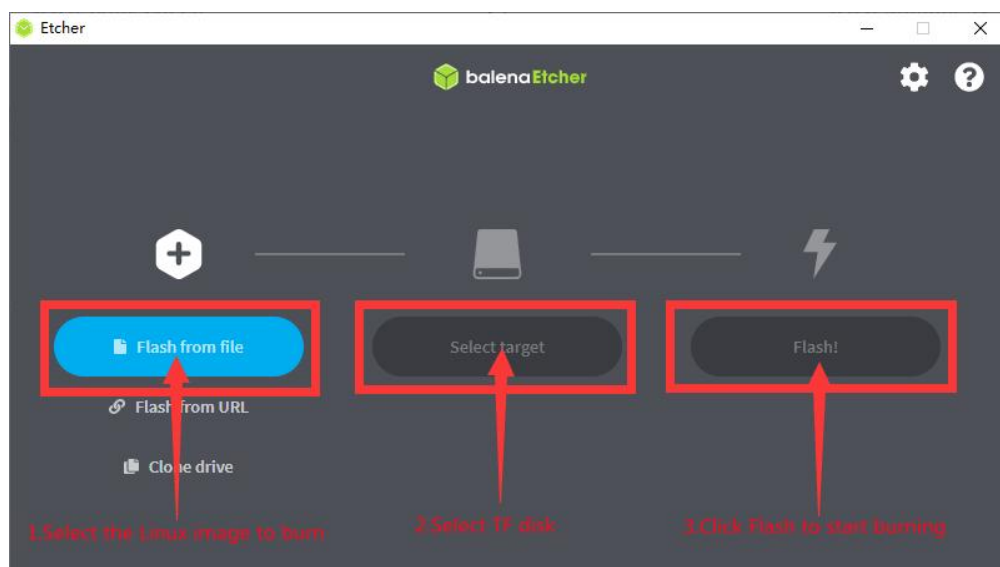

- 10) The interface displayed during the process of burning the Linux image by balenaEtcher is as shown in the figure below. In addition, the progress bar displays purple to indicate that the Linux image is being burned into the TF card.

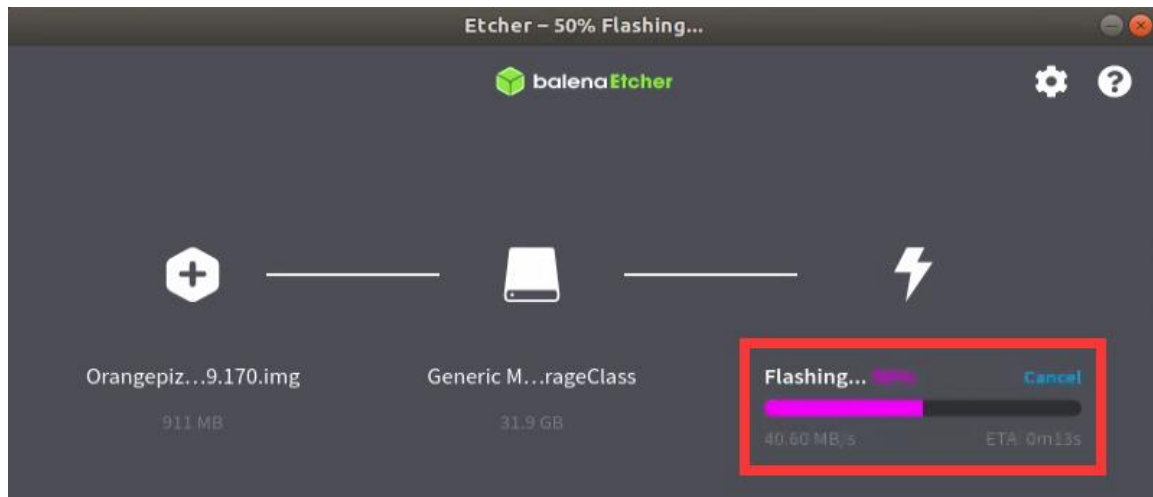

11) After the Linux image is burned, balenaEtcher will also verify the image burned into the TF card by default to ensure that there are no problems during the burning process. As shown in the figure below, a green progress bar indicates that the image has been burned, and balenaEtcher is verifying the burned image.

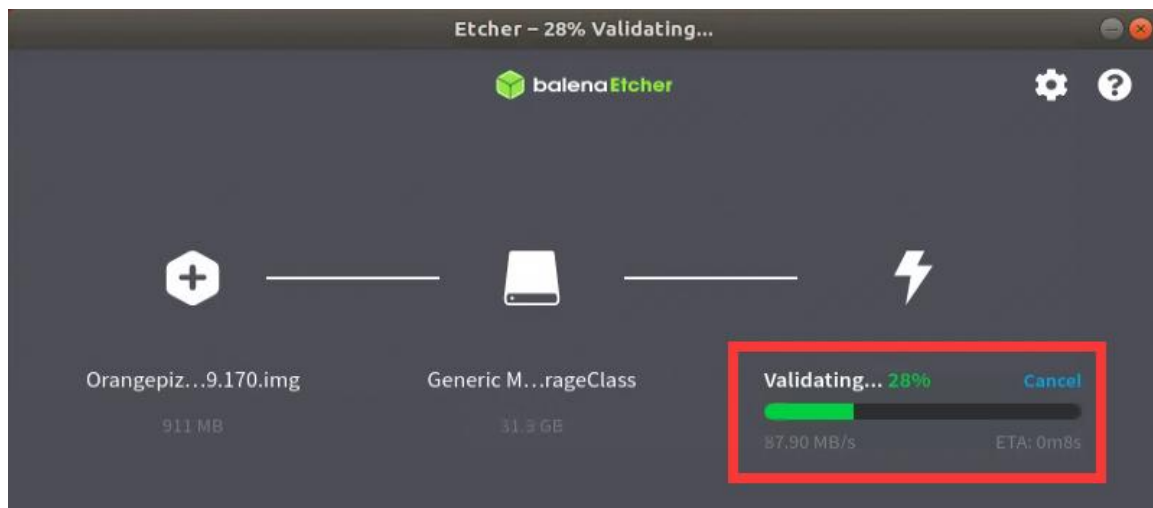

12) After successful burning, the display interface of balenaEtcher is as shown below. If a green indicator icon is displayed, it means that the image burning is successful. At this time, you can exit balenaEtcher, then pull out the TF card and insert it into the TF card slot of the development board for use.




2. 5. Method of burning Android image to TF card

The Android image of the development board can only be burned to the TF card using the **PhoenixCard** software under the Windows platform. The version of the PhoenixCard software must be **PhonixCard-4.2.8**.


Please do not use software to burn Linux images, such as Win32Diskimager or balenaEtcher to burn Android images.

In addition, PhoenixCard software does not have versions for Linux and Mac platforms, so it is impossible to burn Android images to TF cards under Linux and Mac platforms.

- 1) First, please make sure that **Microsoft Visual C++ 2008 Redistrbutable - x86** is installed on your Windows system.

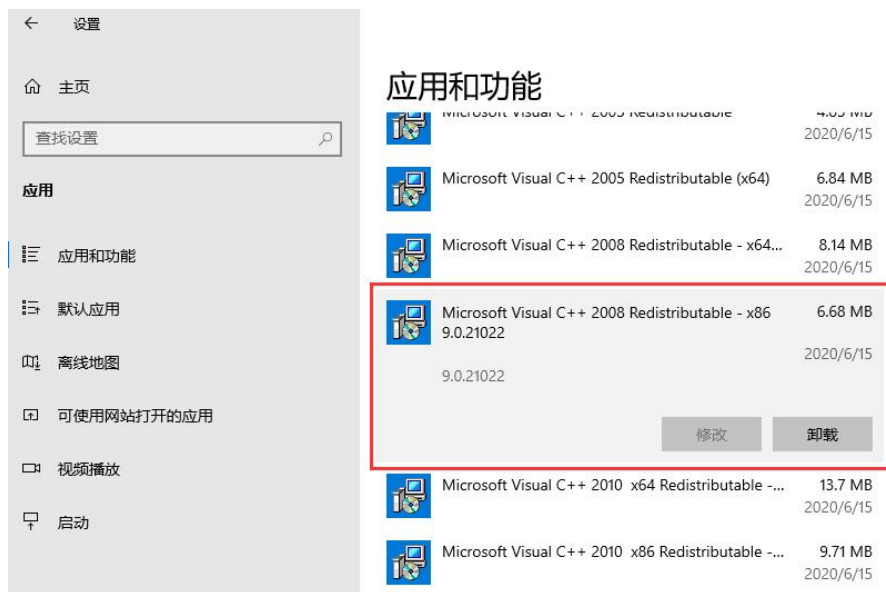


- 2) If **Microsoft Visual C++ 2008 Redistributable - x86** is not installed, using **PhoenixCard** to format the TF card or burn the Android image will prompt the following error

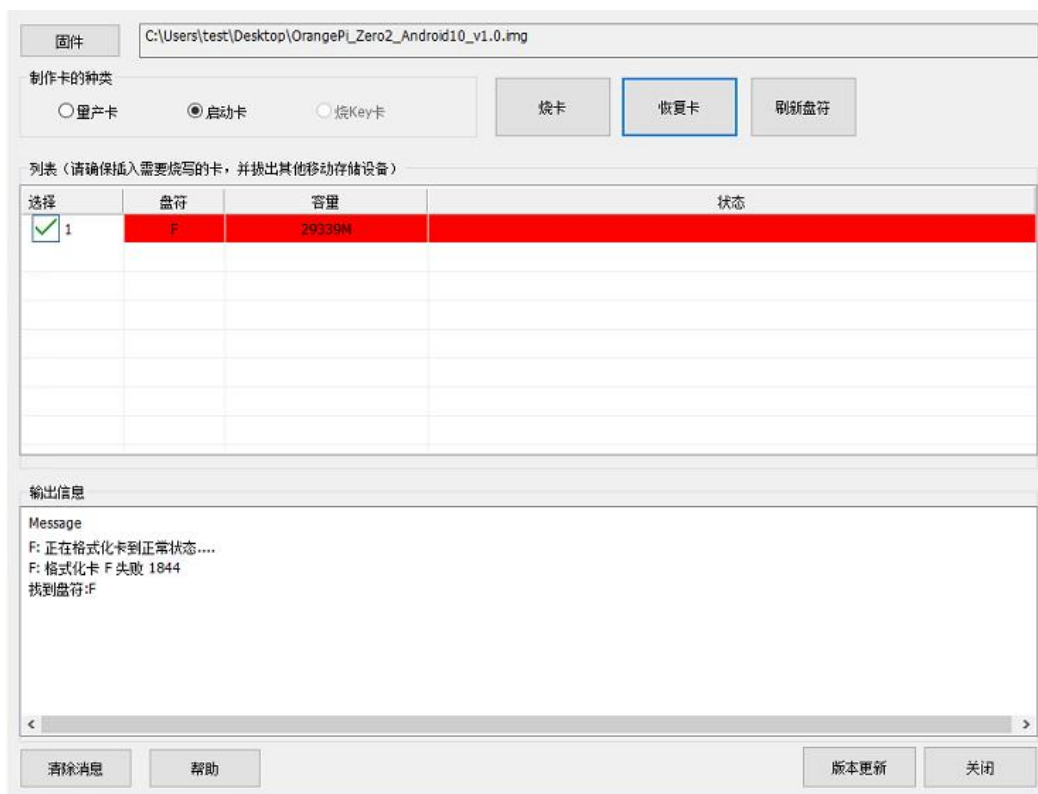

- 3) **Microsoft Visual C++ 2008 Redistributable - x86** installation package can be



downloaded from the [official tool](#) of Orange Pi Zero 2w, or you can download it from [Microsoft's official website](#)

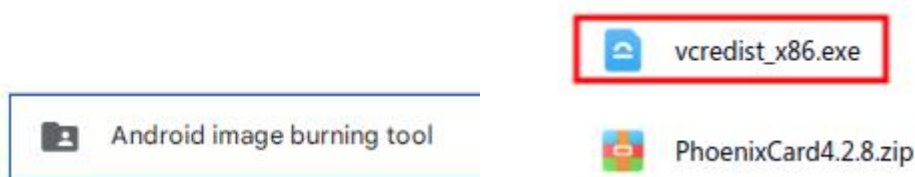

4) Then prepare a TF card with 8GB or larger capacity. The transmission speed of the TF card must be class10 or above. It is recommended to use TF cards from SanDisk and other brands.

5) Then use the card reader to insert the TF card into the computer

6) Download the Android image and PhoenixCard burning tool from the [Orange Pi download page](#). Please ensure that the version of the PhonenixCrad tool is **PhonixCard-4.2.8. Please do not use PhonixCard software with a version lower than 4.2.8 to burn the Android image.** Low There may be problems with the Android image programmed with this version of PhonixCard tool.


☐	Balena-etcher	-	2020-11-04 13:48
☐	Android测试APP	-	2020-11-04 13:48
☐	win32diskimager-1.0.0-install.exe	12M	2020-11-04 13:48
☐	vcredist_x86.exe	4.3M	2021-04-25 21:25
☐	security.tar.gz	2.3M	2021-06-16 14:07
☐	SDCardFormatv5_WinEN.zip	6M	2020-11-04 13:48
☐	PhonixCard-4.2.5.zip	4.9M	2021-03-08 18:07
☐	PhonixCard4.2.8.zip	10.2M	2022-01-05 13:33
☐	MobaXterm_Portable_v20.3.zip	24.9M	2020-11-04 13:48

Please download this latest version of the software.

7) Then use decompression software to decompress the compressed package of the downloaded Android image. In the decompressed file, the file ending with ".img" is the Android image file, with a size of more than 1GB. If you don't know how to decompress the Android image compressed package, you can install a [360 compression software](#) to decompress the image.




8) Then use decompression software to decompress **PhoenixCard4.2.8.zip**. This software does not need to be installed. Just find PhoenixCard in the decompressed folder and open it.

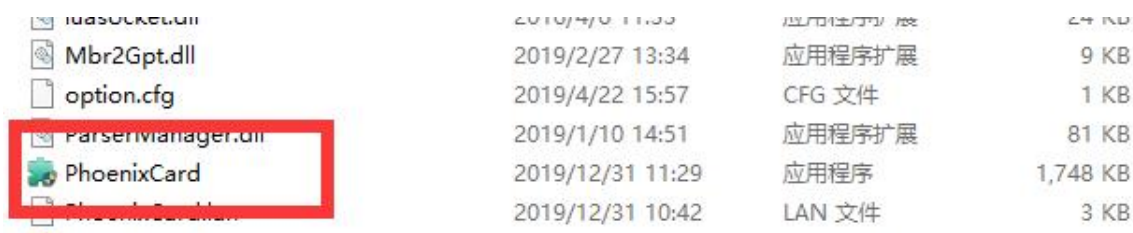

9) After opening PhoenixCard, if the TF card is recognized normally, the drive letter and capacity of the TF card will be displayed in the middle list. **Please make sure that the displayed drive letter is consistent with the drive letter of the TF card you want to burn.** If there is no display, you can try to remove the TF card, or click the "Refresh Drive Letter" button in PhoenixCard.




10) After confirming the drive letter, format the TF card first and click the "Restore Card" button in PhoenixCard (if the "Restore Card" button is gray and cannot be pressed, you can click the "Refresh Drive Letter" button first)

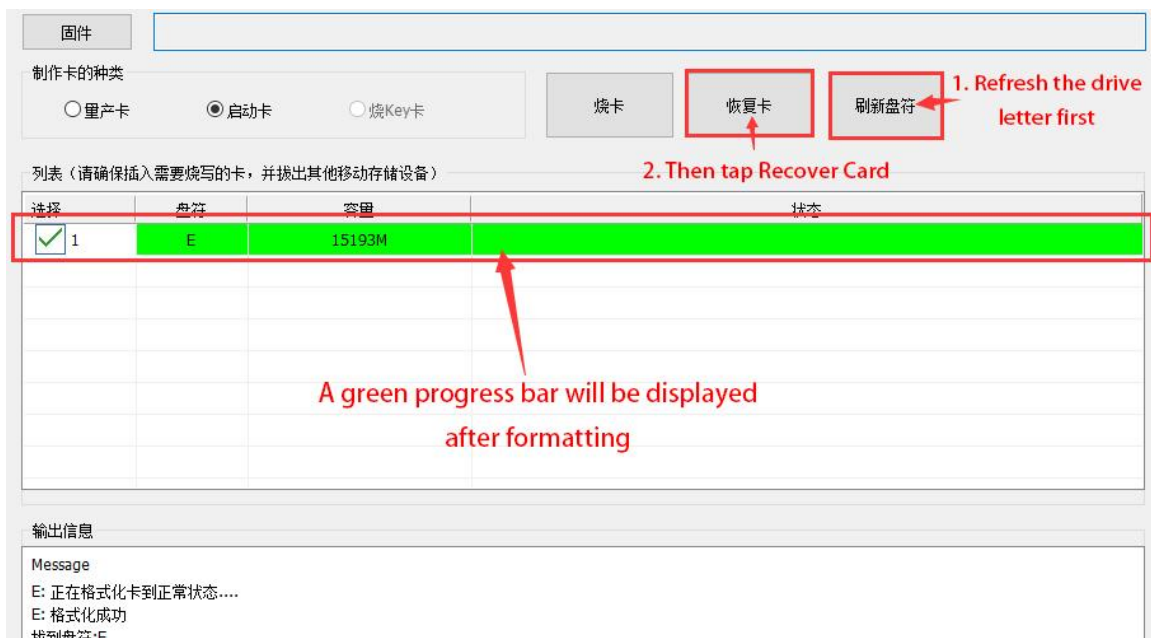


If there is a problem with formatting, please try to remove the TF card and then test again. If there is still a problem after re-inserting the TF card, you can restart the Windows computer or try another computer.

- 11) Then start writing the Android image to the TF card
 - a. First select the path to the Android image in the "**Firmware**" column
 - b. Select "**Start Card**" in "**Card Type**"
 - c. Then click the "**Burn Card**" button to start burning.

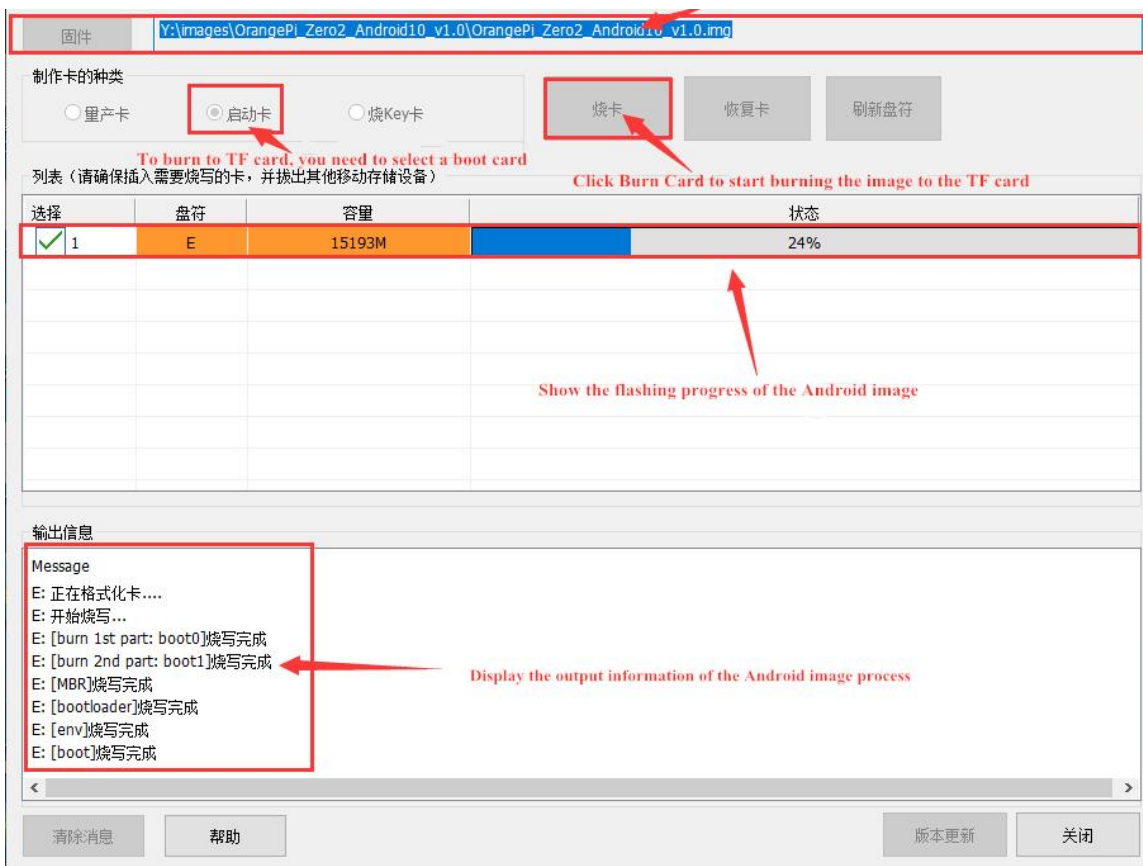

12) After burning, the display of PhoenixCard is as shown below. At this time, click the "Close" button to exit PhoenixCard, and then you can pull out the TF card from the computer and insert it into the development board to start.

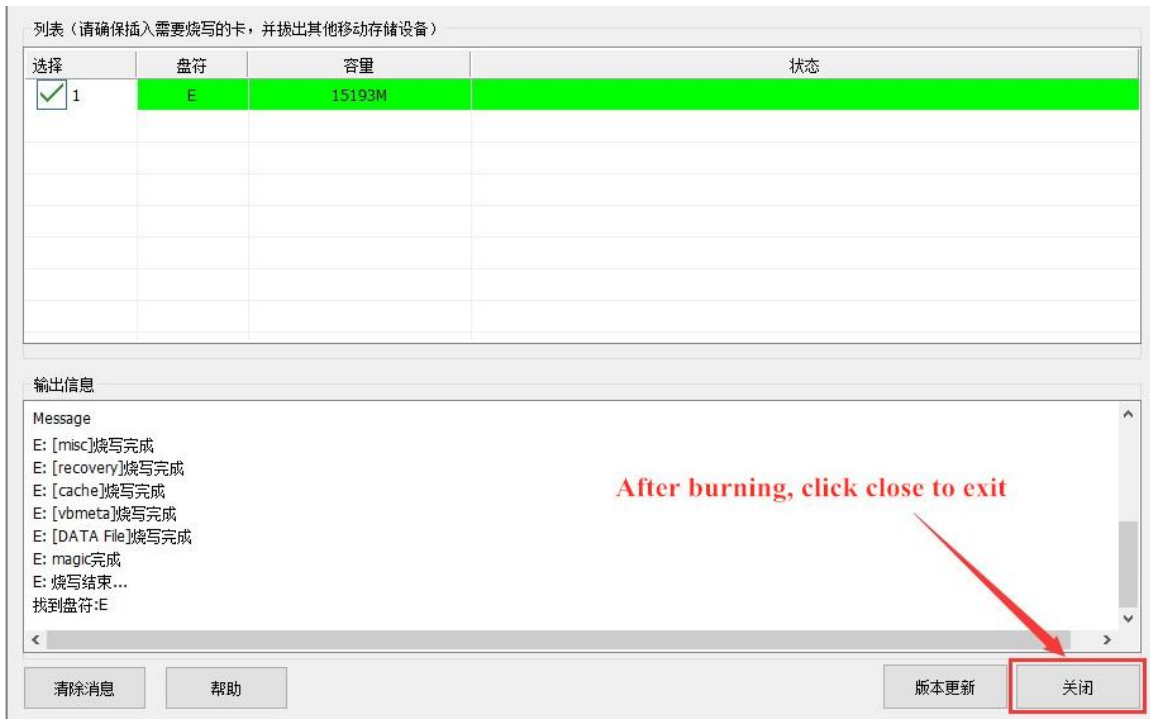

After burning the Android system, you can only see a 128 MB partition on the TF card in Windows. The displayed partition is as shown below (some computers may pop up more than twenty disk partitions, but they can only open the 128 MB one. partition), please note that this is normal, please do not think that the TF card is burned out. The reason for this is that there are more than twenty partitions in the Android system, but most of them cannot be recognized normally in the Windows system. At this time, please feel free to unplug the TF card and insert it into the development board to start.



After the Android system starts, you can use the following command to see the twenty partitions in the TF card:

```
console:/ # ls /dev/block/mmcblk0*
/dev/block/mmcblk0      /dev/block/mmcblk0p17  /dev/block/mmcblk0p25
/dev/block/mmcblk0p1    /dev/block/mmcblk0p18  /dev/block/mmcblk0p3
/dev/block/mmcblk0p10   /dev/block/mmcblk0p19  /dev/block/mmcblk0p4
/dev/block/mmcblk0p11   /dev/block/mmcblk0p2    /dev/block/mmcblk0p5
/dev/block/mmcblk0p12   /dev/block/mmcblk0p20  /dev/block/mmcblk0p6
/dev/block/mmcblk0p13   /dev/block/mmcblk0p21  /dev/block/mmcblk0p7
/dev/block/mmcblk0p14   /dev/block/mmcblk0p22  /dev/block/mmcblk0p8
/dev/block/mmcblk0p15   /dev/block/mmcblk0p23  /dev/block/mmcblk0p9
/dev/block/mmcblk0p16   /dev/block/mmcblk0p24
console:/ #
```




Using the `df -h` command, you can see that after burning the Android system on the 16GB TF card, there is about 11 GB of space available (not all of the more than twenty partitions will be mounted to the Android system, focus on these to see to the partition you want to reach).

```
console:/ # df -h
Filesystem                Size      Used Avail Use% Mounted on
tmpfs                     727M      1.1M   726M    1% /dev
tmpfs                     727M        0   727M    0% /mnt
/dev/block/mmcblk0p19       11M    136K    11M    2% /metadata
/dev/block/dm-0            782M    779M    2.4M 100% /
/dev/block/dm-1           104M    103M    332K 100% /vendor
/dev/block/dm-3            6.5M    6.5M    24K 100% /vendor_dkms
/dev/block/dm-2           250M    249M    788K 100% /product
/dev/block/mmcblk0p23       16M        0    16M    0% /oem
tmpfs                     727M    8.0K    727M    1% /apex
tmpfs                     727M    532K    726M    1% /linkerconfig
/dev/block/mmcblk0p25       11G    904M    11G    8% /data
tmpfs                     727M        0   727M    0% /data_mirror
/dev/block/mmcblk0p24       16M        0    16M    0% /Reserve0
/dev/fuse                  11G    904M    11G    8% /mnt/user/0/emulated
/dev/block/vold/public:179,1 128M    5.3M   122M    5% /mnt/media_rw/0000-0000
/dev/fuse                  128M    5.3M   122M    5% /mnt/user/0/0000-0000
console:/ #
```

2. 6. Instructions for using micro-linux system in onboard SPI Flash

There is a 16MB SPI Flash on the development board, and its location is shown in the figure below:

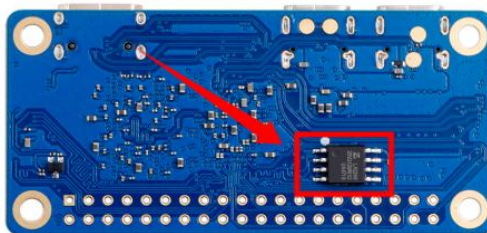

A micro Linux system is programmed into SPI Flash by default. This system is mainly used to prove that the development board can start normally. After getting the development board, there is no need to burn the system into the TF card. You only need to connect the Type-C power supply to the development board to start the micro Linux system in the SPI Flash. The main functions of this system are:

- After booting into the kernel, the green LED light will flash;
- If the development board is connected to an HDMI screen, after the system



startup is completed, the command line interface of the micro Linux system can be seen on the HDMI screen.

I would like to emphasize again that the micro Linux system in SPI Flash is only used to prove that the development board can start normally (you can light up the development board without burning the system). If you find that there are other problems with the system in SPI Flash (such as serial port Unable to log in), please ignore it.

If you want to use the development board normally, please burn Ubuntu, Debian and other Linux images or Android images to the TF card, and then use it.


2. 7. Start the Orange Pie development board

- 1) Insert the TF card with the burned image into the TF card slot of the Orange Pi development board.
- 2) The development board has a Mini HDMI interface. You can connect the development board to a TV or HDMI monitor through a Mini HDMI to HDMI cable.
- 3) If you purchase a 24-pin expansion board, you can connect the 24-pin expansion board to the 24-pin interface of the development board through a cable.
- 4) Connect a USB mouse and keyboard to control the Orange Pi development board.
- 5) Connect a high-quality power adapter with a 5V/2A (5V/3A is also available) USB Type C interface

Remember not to plug in a power adapter with a voltage output greater than 5V, as it will burn out the development board.

Many unstable phenomena during system power-on and startup are basically caused by power supply problems, so a reliable power adapter is very important. If you find that you are constantly restarting during the startup process, please replace the power supply or Type C data cable and try again.

Both Type-C interfaces on the development board can be used for power supply.

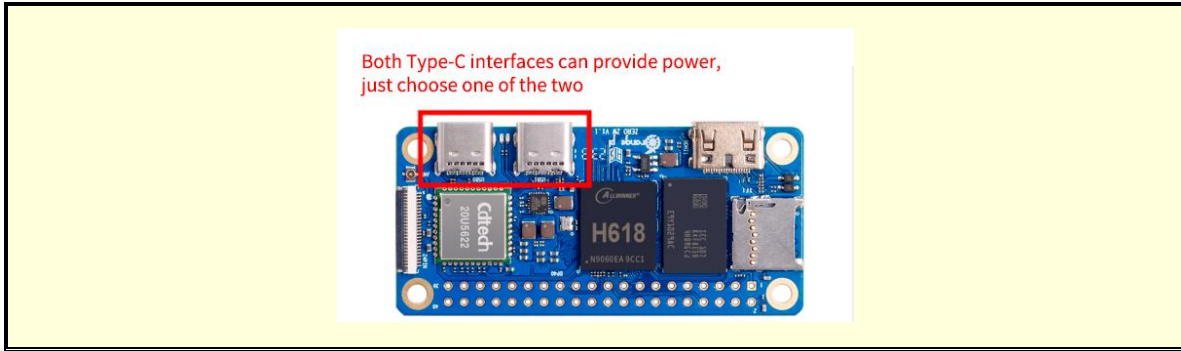


6) Then turn on the power adapter. If everything is normal, the system startup screen will be visible on the HDMI monitor.

7) If you want to view the output information of the system through the debugging serial port, please use the serial port cable to connect the development board to the computer. For the serial port connection method, please refer to the [section on how to use the debugging serial port](#).

2. 8. How to use the debugging serial port


2. 8. 1. Debug serial port connection instructions

1) First, you need to prepare a 3.3v USB to TTL module, and then insert one end of the USB interface of the USB to TTL module into the USB interface of the computer.

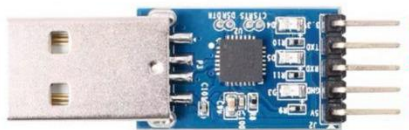

The 3.3V of the USB to TTL module does not need to be connected
 The TXD of the USB to TTL module is connected to the RXD of the debugging serial port of the development board
 Connect the RXD of the USB to TTL module to the TXD of the debugging serial port of the development board
 Connect the GND of the USB to TTL module to the GND of the debugging serial port of the development board
 The 5V of the USB to TTL module does not need to be connected

2) The corresponding relationship between the GND, TX and RX pins of the debugging serial port of the development board is shown in the figure below

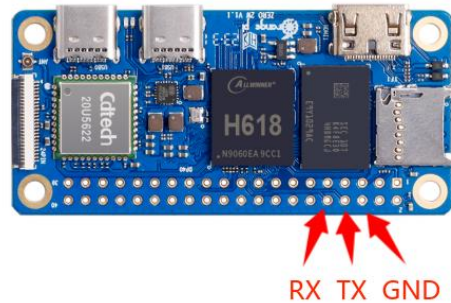


Note: The pin header on the 40pin interface is not soldered by default, and you need to solder it yourself before it can be used.

3) The GND, TX and RX pins of the USB to TTL module need to be connected to the debugging serial port of the development board through Dupont lines.

- a. Connect the GND of the USB to TTL module to the GND of the development board
- b. **Connect the RX of the USB to TTL module to the TX of the development board**
- c. **Connect the TX of the USB to TTL module to the RX of the development board**

4) The schematic diagram of connecting the USB to TTL module to the computer and Orange Pi development board is as shown below

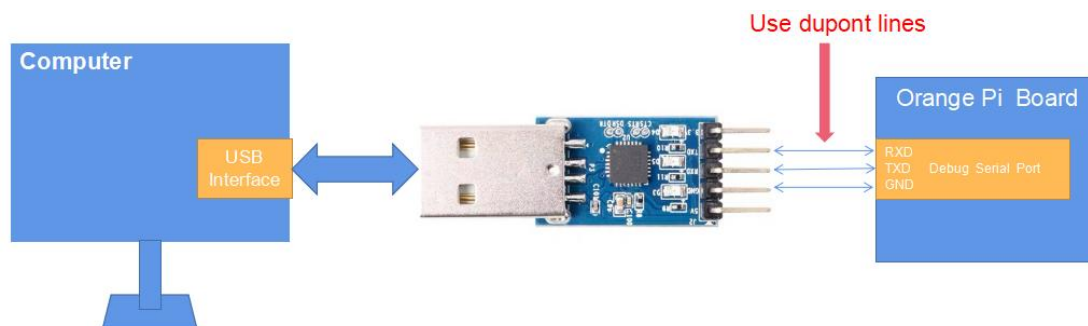

Schematic diagram of connecting USB to TTL module to computer and Orange Pi development board

The TX and RX of the serial port need to be cross-connected. If you don't want to carefully distinguish the order of TX and RX, you can casually connect the TX and RX of the serial port first. If there is no output from the test serial port, then exchange the order of TX and RX, so that there is a right order.



2. 8. 2. How to use the debugging serial port on Ubuntu platform

There are many serial port debugging software that can be used under Linux, such as putty, minicom, etc. The following demonstrates how to use putty.

1) First insert the USB to TTL module into the USB interface of the Ubuntu computer. If the USB to TTL module is connected and recognized normally, you can see the corresponding device node name under `/dev` of the Ubuntu PC. Remember this node name and set the serial port later. software will be used

```
test@test:~$ ls /dev/ttyUSB*  
/dev/ttyUSB0
```


2) Then use the following command to install putty on Ubuntu PC

```
test@test:~$ sudo apt update  
test@test:~$ sudo apt install -y putty
```


3) Then run putty, **remember to add sudo permissions**

```
test@test:~$ sudo putty
```

4) After executing the putty command, the following interface will pop up

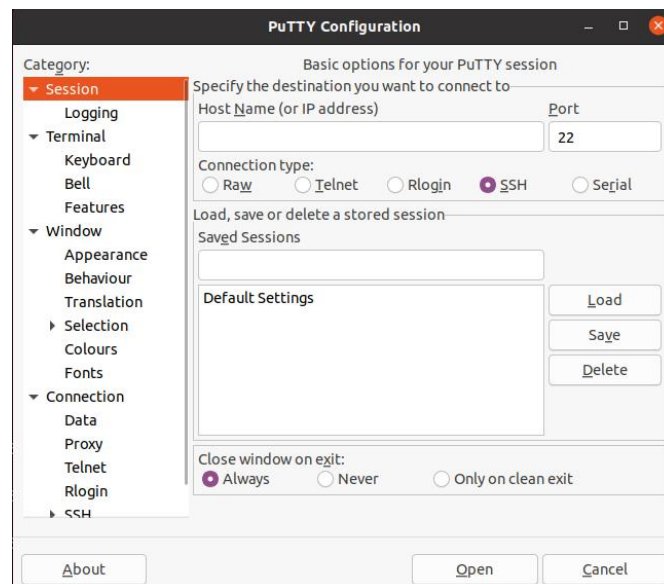


5) First select the serial port setting interface

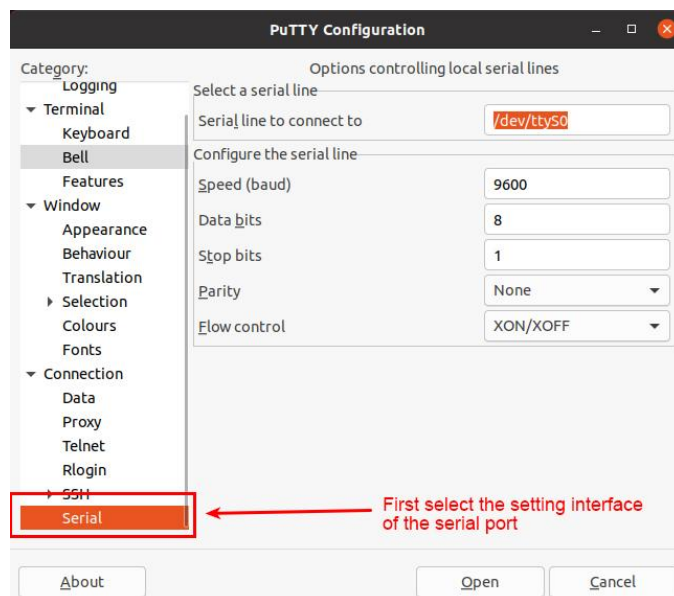

6) Then set the parameters of the serial port


- Set the **Serial line to connect to** to **/dev/ttyUSB0** (modify to the corresponding node name, usually **/dev/ttyUSB0**)
- Set **Speed(baud)** to **115200** (baud rate of the serial port)
- Set **Flow control** to **None**

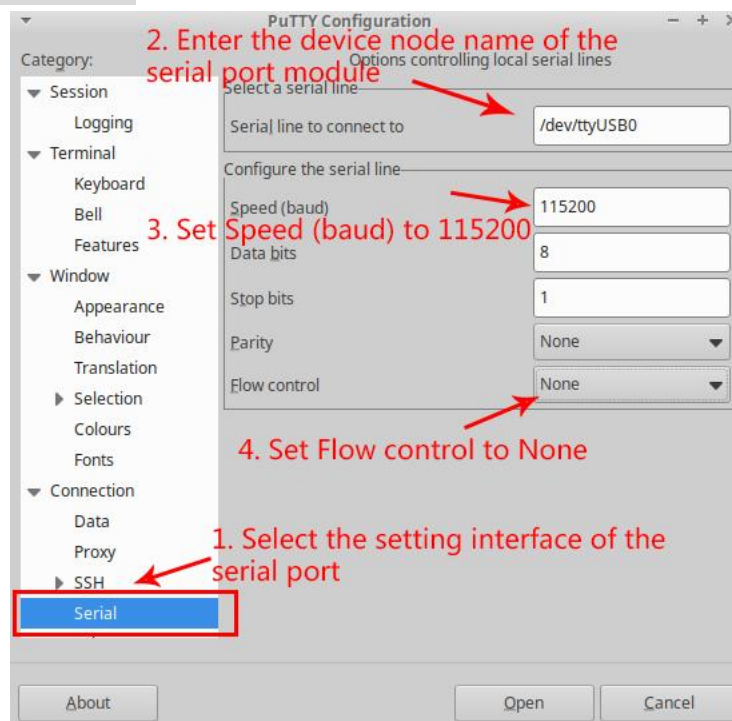


7) After setting up the serial port setting interface, return to the Session interface.



- First select **Connection type** as **Serial**
- Then click the **Open** button to connect to the serial port

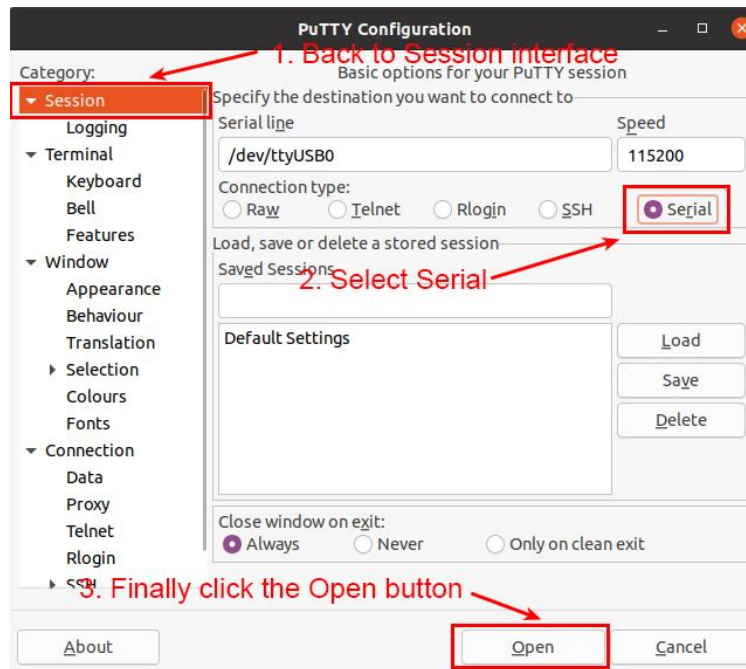

8) Then start the development board, and you can see the Log information output by the system from the open serial terminal.

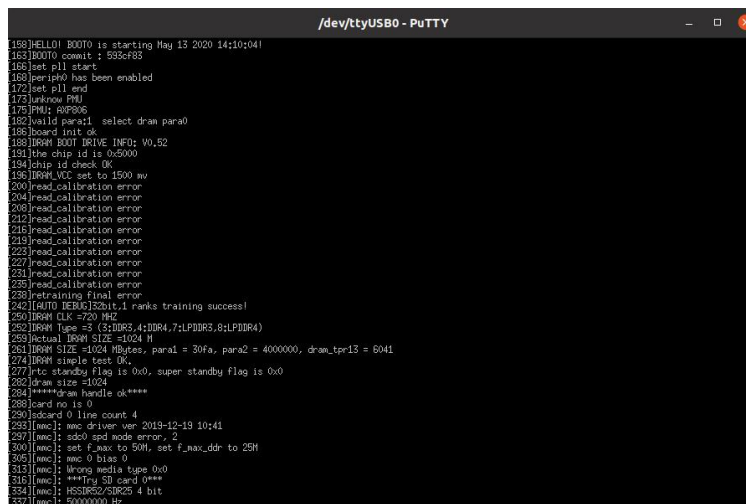

2. 8. 3. How to use the debugging serial port on Windows platform

There are many serial port debugging software that can be used under Windows, such as SecureCRT, MobaXterm, etc. The following demonstrates how to use MobaXterm. This software has a free version and can be used without purchasing a serial number.




1) Download MobaXterm


- a. Download MobaXterm URL as follows

<https://mobaxterm.mobatek.net/>


- b. Enter the MobaXterm download webpage and click **GET XOBATERM NOW!**

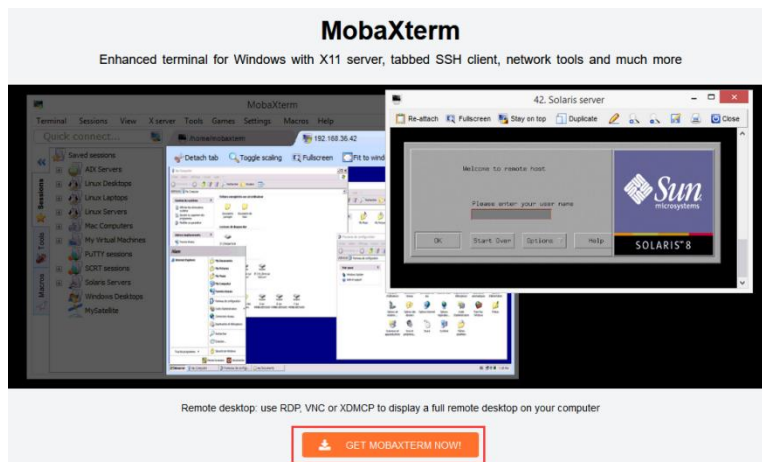

- c. Then choose to download the Home version

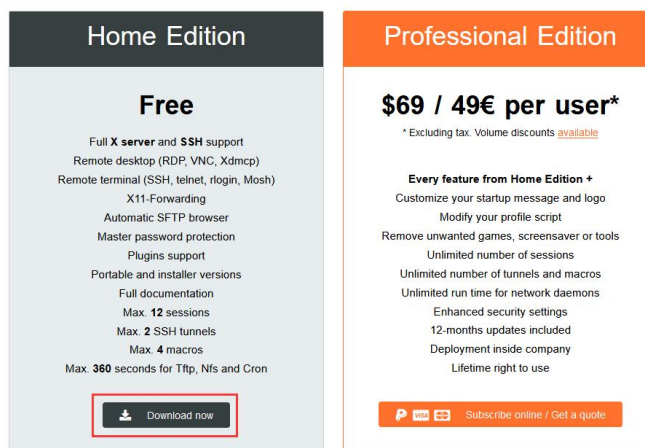

- d. Then select the Portable version. There is no need to install it after downloading. You can open it directly and use it.

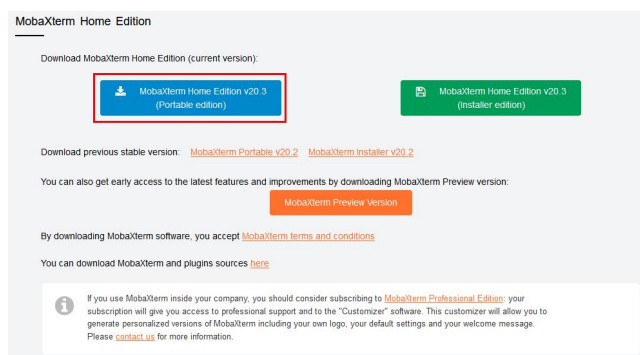




2) After downloading, use decompression software to decompress the downloaded compressed package to get the executable software of MobaXterm, and then double-click to open it.

名称	修改日期	类型	大小
CygUtils.plugin	2020/5/21 4:06	PLUGIN 文件	15,570 KB
MobaXterm_Personal_20.3	2020/6/5 4:30	应用程序	14,104 KB

3) After opening the software, the steps to set up the serial port connection are as follows:

- Open the session settings interface
- Select the serial port type
- Select the port number of the serial port (select the corresponding port number according to the actual situation). If you cannot see the port number, please use **360 Driver Master** to scan and install the driver for the USB to TTL serial port chip.
- Select the baud rate of the serial port to **115200**
- Finally click the "OK" button to complete the settings

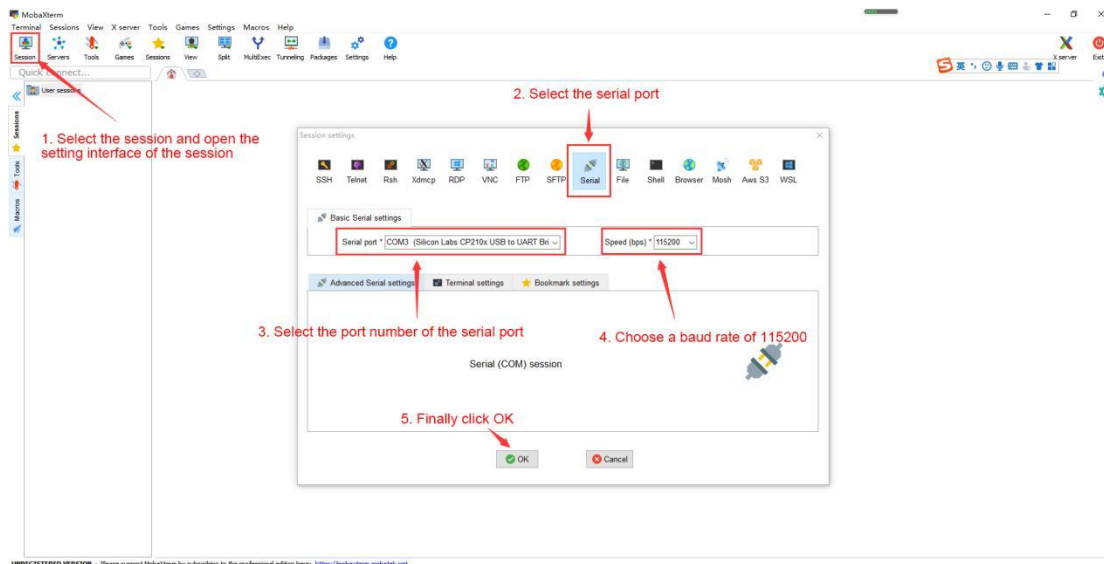

4) After clicking the "OK" button, you will enter the following interface. At this time, start the development board and you can see the output information of the serial port.



The power supply method we recommend for the development board is to use a 5V/2A or 5V/3A Type C interface power cord and plug it into the development board's Type C power interface. If you need to use the 5V pin in the 40-pin interface to power the development board, please ensure that the power cable used can meet the power supply requirements of the development board. If the use is unstable, please switch to Type C power supply.

www.orange-pi.cn



1) First you need to prepare a power cord as shown in the picture below



The power cord shown in the picture above can be purchased on Taobao, please search and buy it yourself.

2) Use the 5V pin in the 40pin interface to power the development board. The power cord connection is as follows:

- The USB-A port of the power cord shown in the picture above needs to be plugged into the 5V/2A or 5V/3A power adapter connector.
- The red DuPont wire needs to be plugged into the 5V pin of the 40pin interface of the development board
- The black DuPont wire needs to be plugged into the GND pin of the 40pin interface
- The positions of the 5V pin and GND pin of the 40pin interface in the development board are as shown in the figure below. **Remember not to connect them reversely.**





3. Debian/Ubuntu Server and Xfce desktop system usage instructions

3.1. Supported linux image types and kernel versions

Linux image type	Kernel version	Server version	desktop version
Ubuntu 20.04 - Focal	Linux5.4	Support	Support
Debian 11 - Bullseye	Linux5.4	Support	Support
Ubuntu 22.04 - Jammy	Linux6.1	Support	Support
Ubuntu 24.04 - Noble	Linux6.1	Support	Support
Debian 11 - Bullseye	Linux6.1	Support	Support
Debian 12 - Bookworm	Linux6.1	Support	Support

After entering the download page of the corresponding development board on the [Orange Pi data download page](#), you can see the following download options. In the description below, **Ubuntu images** and **Debian images** are generally referred to as **Linux images**.



Ubuntu Image

[Downloads](#)

Debian Image

[Downloads](#)

The naming rules for Linux images are:

Development board model_version number_Linux distribution type_distribution code_server or desktop_kernel version

- a. **Development board models:** all are **orangezero2w**. The model names of different development boards are generally different. Before burning the image, please make sure that the model name of the selected image matches the development board.
- b. **Version number:** such as **1.x.x**, this version number will increase with the update



- of the mirror function. In addition, the last number of the version number of the development board Linux mirror is an even number.
- c. **Type of Linux distribution:** **Ubuntu** and **Debian** are currently supported. Since Ubuntu is derived from Debian, there is not much difference in usage between the two systems. However, there are still slight differences in the default configuration of some software and the use of commands. In addition, Ubuntu and Debian each maintain their own supported software repositories, and there are also slight differences in the supported installable software packages. These need to be used and experienced in person to have a deeper understanding. For more details, please refer to the official documentation provided by Ubuntu and Debian.
 - d. **Release codename:** Used to distinguish different versions of specific Linux distributions such as Ubuntu or Debian. Among them, **focal**, **jammy** and **noble** are all Ubuntu distributions. **focal** means Ubuntu20.04, **jammy** means Ubuntu22.04 and **noble** represents Ubuntu24.04. The biggest difference between different versions is that the software in the software warehouse maintained by the new version of Ubuntu system is much better than that of the old version of Ubuntu system. The ones in it should be new, such as Python and GCC compilation tool chains. **bullseye** is the specific version code name of Debian, **bullseye** means Debian11, and **bookworm** means Debian12.
 - e. **Server or desktop:** Used to indicate whether the system has a desktop environment. If it is **server**, it means that the system does not have a desktop environment installed. The storage space and resources occupied by the image are relatively small. The command line is mainly used to operate the control system. If it is **desktop_xfce**, it means that the system has the XFCE desktop environment installed by default. The image takes up a lot of storage space and resources. You can connect a monitor, mouse and keyboard to operate the operating system through the interface. Of course, the desktop version of the system can also be operated through the command line like the server version of the system.
 - f. **Kernel version:** used to indicate the version number of the linux kernel. Currently, **linux5.4** and **linux6.1** are supported.

3. 2. Linux kernel driver adaptation situation

Board functions	Linux5.4	Linux6.1
HDMI video	OK	OK



HDMI audio	OK	OK
Type-C USB2.0 x 2	OK	OK
TF card startup	OK	OK
WIFI	OK	OK
Bluetooth	OK	OK
USB Camera	OK	OK
LED Light	OK	OK
40pin GPIO	OK	OK
40pin I2C	OK	OK
40pin SPI	OK	OK
40pin UART	OK	OK
40pin PWM	OK	OK
Temperature Sensor	OK	OK
Hardware watchdog	OK	OK
Mali GPU	NO	NO
Video codec	NO	NO

24pin expansion board function	Linux5.4	Linux6.1
100M network port	OK	OK
100M Ethernet port light	OK	OK
USB2.0 HOST x 2	OK	OK
Infrared reception	OK	OK
Headphone audio playback	OK	OK
On/off button	OK	OK
LRADC custom buttons x 2	OK	OK
TV-OUT	NO	NO

 


3.3. Linux command format description in this manual

1) All commands that need to be entered in the Linux system in this manual will be enclosed in the following boxes



As shown below, the content in the yellow box indicates content that requires special attention, except for the commands inside.



2) Description of the prompt type before the command

- a. The prompt in front of the command refers to the red part in the box below. This part is not part of the Linux command. Therefore, when entering commands in the Linux system, please do not also enter the content in the red font.

```
orangepi@orangepi:~$ sudo apt update
root@orangepi:~# vim /boot/boot.cmd
test@test:~$ ssh root@192.168.1.xxx
root@test:~# ls
```

- b. **orangepi@orangepi:~\$** prompt indicates that this command is entered in the **Linux system of the development board**. The **\$** at the end of the prompt indicates that the current user of the system is an ordinary user. When executing a privileged command, **sudo** needs to be added.
- c. **root@orangepi:~#** The prompt indicates that this command is entered in the **Linux system of the development board**. The **#** at the end of the prompt indicates that the current user of the system is the root user and can execute any command you want to execute.
- d. **test@test:~\$** prompt indicates that this command was entered in the Ubuntu PC or Ubuntu virtual machine, not the Linux system of the development board. The **\$** at the end of the prompt indicates that the current user of the system is an ordinary user. When executing privileged commands, sudo needs to be added.
- e. **root@test:~#** prompt indicates that this command is entered in the Ubuntu PC or Ubuntu virtual machine, not the Linux system of the development board. The **#** at the end of the prompt indicates that the current user of the system is the root user and can execute any command you want to execute.



3) What are the commands that need to be entered?

- a. As shown below, the **bold black part** is the command that needs to be input. The content below the command is the output content (some commands have output, and some may not output). This part of the content does not need to be input.

```
root@orangePi:~# cat /boot/orangepiEnv.txt
verbosity=7
bootlogo=false
console=serial
```

- b.
- c. As shown below, some commands that cannot be written in one line will be placed on the next line. As long as the black and bold parts are the commands that need to be entered. When these commands are entered into one line, the "\" at the end of each line needs to be removed. This is not part of the command. In addition, different parts of the command have spaces, please don't miss them.

```
orangePi@orangePi:~$ echo \
"deb [arch=$(dpkg --print-architecture) \
signed-by=/usr/share/keyrings/docker-archive-keyring.gpg] \
https://download.docker.com/linux/debian \
$(lsb_release -cs) stable" | sudo tee /etc/apt/sources.list.d/docker.list > /dev/null
```

3. 4. Linux system login instructions

3. 4. 1. Linux system default login account and password

Account	Password
root	orangePi
orangePi	orangePi

Note that when entering a password, **the specific content of the entered password will not be displayed on the screen**. Please do not think that there is any malfunction. Just press Enter after entering the password.

When you are prompted for an incorrect password or there is a problem with the ssh connection, please note that as long as you are using the Linux image provided by Orange Pi, **please do not suspect that the above password is incorrect**,



but look for other reasons.

3. 4. 2. How to set up automatic login of Linux system terminal

1) The Linux system automatically logs in to the terminal by default. The default login user name is **orange pi**

```
orange pi login: orange pi (automatic login)

  _ _ _ _ _
 | _ | _ | _ |
 | _ | _ | _ |
 | _ | _ | _ |
 | _ | _ | _ |
 | _ | _ | _ |

Welcome to Orange Pi 1.0.0 Bullseye with Linux 6.1.31-sun50iw9

System load:  43%           Up time:      0 min
Memory usage: 18% of 1.45G  IP:        192.168.1.121
CPU temp:    53°C          Usage of /:  13% of 29G

Last login: Thu Jun  8 06:37:02 UTC 2023 on tty1
orange pi@orange pi:~$
```

2) Use the following command to set the root user to automatically log in to the terminal

```
orange pi@orange pi:~$ sudo auto_login_cli.sh root
```

3) Use the following command to disable automatic login to the terminal


```
orange pi@orange pi:~$ sudo auto_login_cli.sh -d
```

4) Use the following command to set the orange pi user to automatically log in to the terminal again

```
orange pi@orange pi:~$ sudo auto_login_cli.sh orange pi
```

3. 4. 3. Instructions for automatic login of Linux desktop version system


1) The desktop version system will automatically log in to the desktop after startup without entering a password.

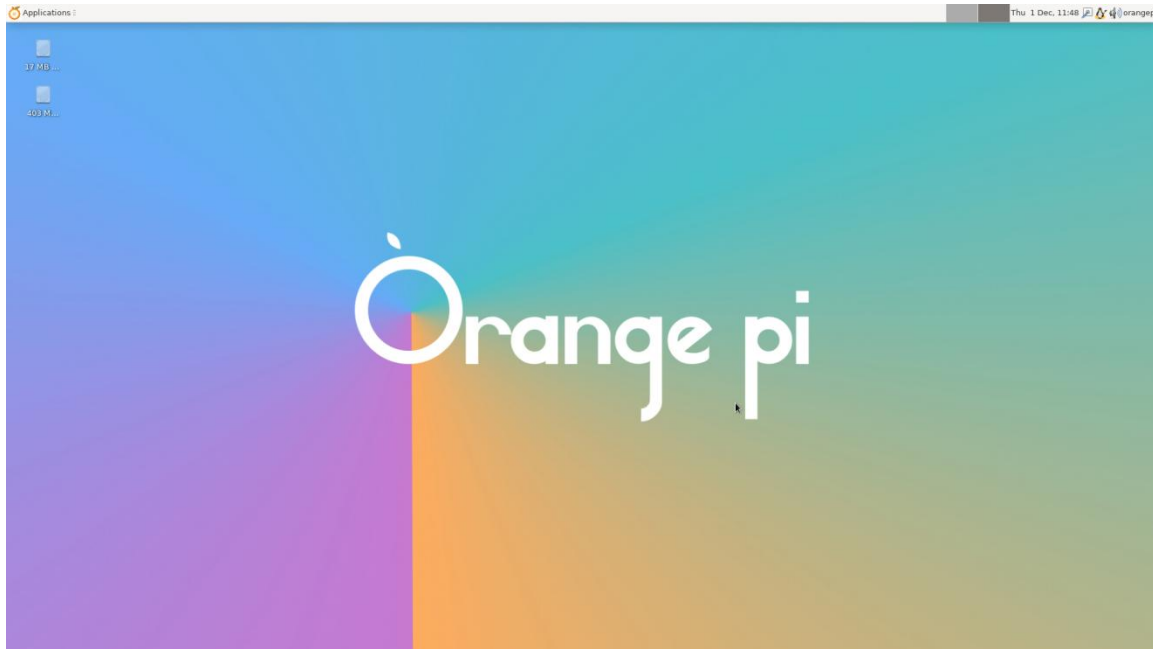

2) Run the following command to prevent the desktop system from automatically logging into the desktop.

```
orange pi@orange pi:~$ sudo disable_desktop_autologin.sh
```

3) Then restart the system and a login dialog box will appear. At this time, you need to enter a password to enter the system.

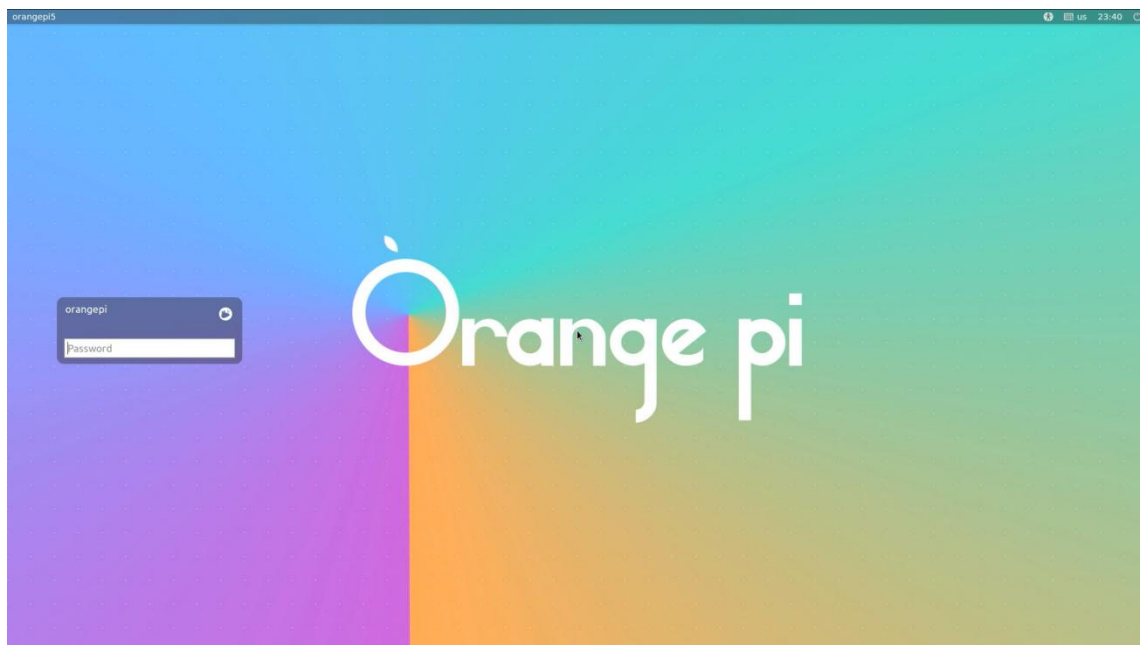




3. 4. 4. Setting method for automatic login of root user in Linux desktop system

1) Execute the following command to set the desktop version of the system to automatically log in using the root user

```
orangeypi@orangeypi:~$ sudo desktop_login.sh root
```

2) Then restart the system and you will automatically log in to the desktop as the root user.

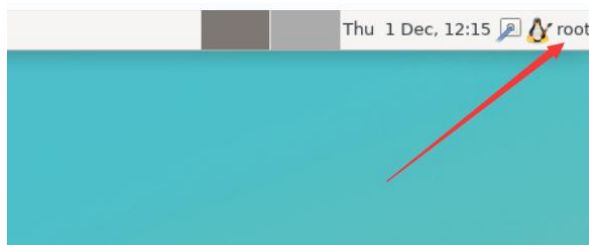

Note that if you use the root user to log in to the desktop system, you cannot use pulseaudio in the upper right corner to manage audio devices.

Also please note that this is not a bug, because pulseaudio is not allowed to run under the root user.

3) Execute the following command to set up the desktop version of the system again to use the orangeypi user to automatically log in

```
orangeypi@orangeypi:~$ sudo desktop_login.sh orangeypi
```

3. 4. 5. How to disable the desktop in Linux desktop system

1) First enter the following command on the command line, please remember to add sudo permissions

```
orangeypi@orangeypi:~$ sudo systemctl disable lightdm.service
```

2) Then restart the Linux system and you will find that the desktop will not be displayed.

```
orangeypi@orangeypi:~$ sudo reboot
```

3) The command to reopen the desktop is as follows, please remember to add sudo permissions

```
orangeypi@orangeypi:~$ sudo systemctl start lightdm.service
```

```
orangeypi@orangeypi:~$ sudo systemctl enable lightdm.service
```



3.5. Onboard LED light test instructions

1) There are two LED lights on the development board, one green light and one red light. The default display of the LED lights when the system is started is as follows:

	Green light	Red Light
u-boot startup phase	Turn off	Bright
Kernel boot to enter the system	Flashing	Bright

The green light on the development board can be controlled through software. The red light will be on continuously after power is turned on and cannot be controlled through software.

When you get the development board, you may find that even if the TF card with the system burned is not inserted into the development board, the green light will flash after connecting the power supply to the development board. This is because the 16MB SPI Flash on the development board is factory default. A miniature Linux system will be burned. This system will set the green light to flash after entering the kernel.

If the Linux system in the SPI Flash is cleared, then without inserting the TF card with the system programmed in it, you will only see a steady red light on the development board after turning on the power.

2) The method of setting the green light to turn on and off and flash is as follows:

Note that the following operations should be performed under the root user.

a. First enter the setting directory of the green light

```
root@orangepi:~# cd /sys/class/leds/green_led
```

b. The command to set the green light to stop flashing is as follows:

```
root@orangepi:/sys/class/leds/green_led# echo none > trigger
```

c. The command to set the green light to be always on is as follows:

```
root@orangepi:/sys/class/leds/green_led# echo default-on > trigger
```

d. The command to set the green light flashing is as follows:

```
root@orangepi:/sys/class/leds/green_led# echo heartbeat > trigger
```

3) If you do not need the LED light to flash after powering on, you can use the following




method to turn off the green light flashing


- a. First run **orangepi-config**. Ordinary users remember to add **sudo** permissions.

```
orangepi@orangepi:~$ sudo orangepi-config
```


- b. Then select **System**

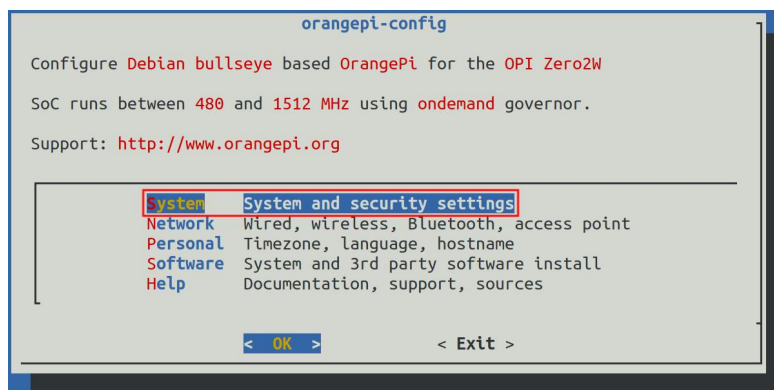


- c. Then select **Hardware**

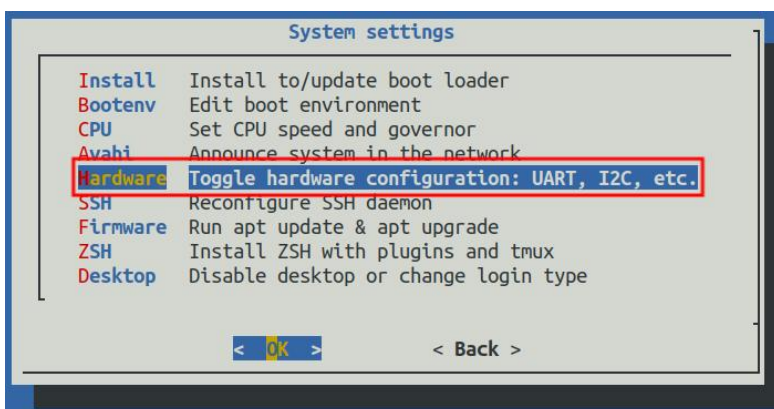

 
- d. Then use the keyboard's arrow keys to locate the position shown in the picture below, and then use the space to select **disable-leds**




- e. Then select **<Save>** to save

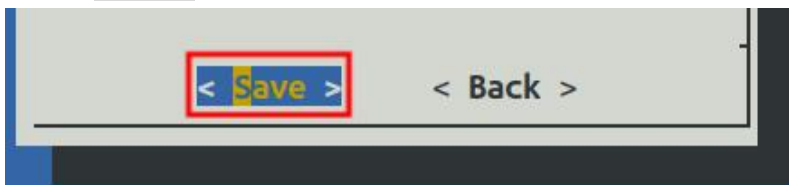

- f. Then select **<Back>**

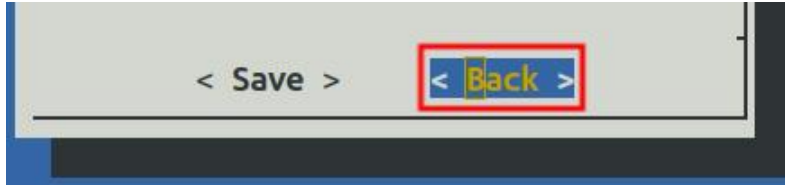

- g. Then select **<Reboot>** to restart the system to make the configuration take effect.

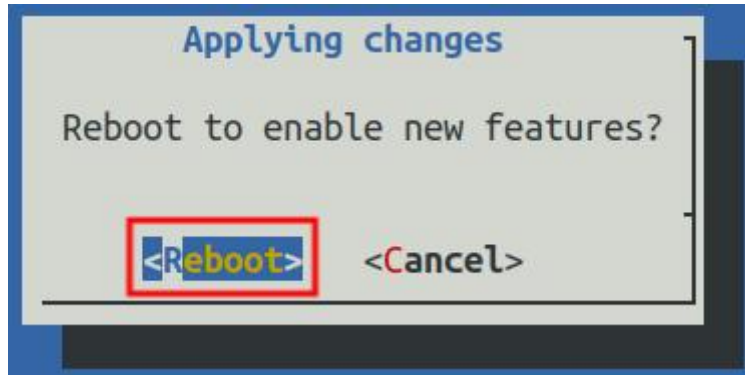

- h. After restarting and entering the system, you can see that the green LED light on the development board will no longer light up.

3. 6. Operation instructions for rootfs partition capacity of Linux system in TF card

3. 6. 1. The first startup will automatically expand the capacity of the rootfs partition in the TF card.

1) After burning the Linux image of the development board into the TF card, you can check the usage of the TF card capacity on the **Ubuntu computer**. The steps are as follows:

Note that failure to perform this step will not affect the automatic expansion of the Linux system of the development board. Here I just want to explain how to check the capacity of the TF card after burning the Linux image on the TF card.


- a. First install the gparted software on your Ubuntu computer

```
test@test:~$ sudo apt install -y gparted
```

- b. Then open gparted

```
test@test:~$ sudo gparted
```

- c. After opening gparted, you can select the TF card in the upper right corner, and then you can see the usage of the TF card capacity.

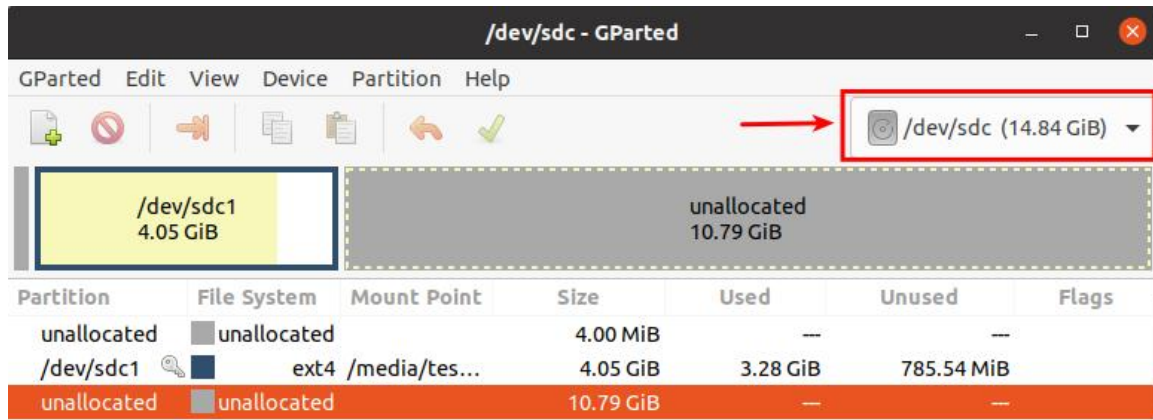

- d. The picture above shows the situation of the TF card after burning the Linux desktop system. It can be seen that although the total capacity of the TF card is 16GB (displayed as 14.84GiB in GParted), the rootfs partition (/dev/ sdc1) Only 4.05GiB is actually allocated, leaving 10.79GiB unallocated


2) Then you can insert the TF card with the Linux system burned into the development board to start. When the TF card starts the Linux system for the first time, it will automatically call the **orangepi-resize-filesystem** script through the **orangepi-resize-filesystem.service** systemd service. Expansion of rootfs partition, **so there is no need to manually expand it**

3) After logging in to the system, you can use the **df -h** command to check the size of rootfs. If it is consistent with the actual capacity of the TF card, it means that the automatic expansion is running correctly.

```
orangepi@orangepi:~$ df -h
```

Filesystem	Size	Used	Avail	Use%	Mounted on
udev	430M	0	430M	0%	/dev
tmpfs	100M	5.6M	95M	6%	/run
/dev/mmcblk0p1	15G	915M	14G	7%	/
tmpfs	500M	0	500M	0%	/dev/shm

4) After starting the Linux system for the first time, we can also remove the TF card from the development board and reinsert it into the **Ubuntu computer**, and then use gparted again to check the status of the TF card, as shown in the figure below, rootfs partition (/dev/ The capacity of sdc1) has been expanded to 14.69GiB

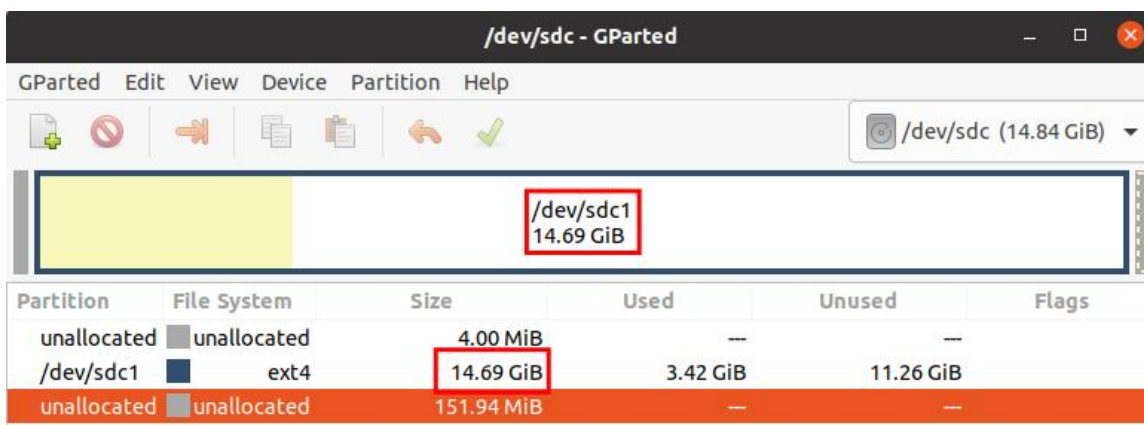

It should be noted that the Linux system has only one ext4 format partition and does not use a separate BOOT partition to store files such as kernel images, so there is no problem of BOOT partition expansion.

3. 6. 2. Method to prohibit automatic expansion of rootfs partition capacity in TF card

1) First, burn the Linux image of the development board into the TF card on the **Ubuntu computer** (Windows is not available), and **then unplug and insert the TF card again**.

2) Then the Ubuntu computer will usually automatically mount the partition of the TF card. If the automatic mounting is normal, use the ls command to see the following output.

```
test@test:~$ ls /media/test/opi_root/
bin boot dev etc home lib lost+found media mnt opt proc root run
sbin selinux srv sys tmp usr var
```

3) Then switch the current user to the root user on the Ubuntu computer

```
test@test:~$ sudo -i
[sudo] test 的密码:
root@test:~#
```

4) Then enter the root directory of the Linux system in the TF card and create a new file named **.no_rootfs_resize**

```
root@test:~# cd /media/test/opi_root/
root@test:/media/test/opi_root# cd root
root@test:/media/test/opi_root/root# touch .no_rootfs_resize
```



```
root@test:/media/test/opi_root/root# ls .no_rootfs*
.no_rootfs_resize
```

5) Then you can uninstall the TF card, then pull out the TF card and insert it into the development board to start. When the Linux system starts, when the **.no_rootfs_resize** file is detected in the **/root** directory, rootfs will not be automatically expanded.

6) After disabling the automatic expansion of rootfs, you can enter the Linux system and you can see that the total capacity of the rootfs partition is only 4GB (the image tested here is the desktop version), which is much smaller than the actual capacity of the TF card, indicating that the automatic expansion of rootfs has been successfully disabled.

```
orangePi@orangePi:~$ df -h
Filesystem      Size  Used Avail Use% Mounted on
udev            925M    0  925M   0% /dev
tmpfs           199M   3.2M  196M   2% /run
/dev/mmcblk0p1  4.0G   3.2G  686M  83% /
```

7) If you need to re-expand the capacity of the rootfs partition in the TF card, just execute the following command and then restart the Linux system of the development board.

Note, please execute the following command under the root user.

```
root@orangePi:~# rm /root/.no_rootfs_resize
root@orangePi:~# systemctl enable orangePi-resize-filesystem.service
root@orangePi:~# sudo reboot
```

After restarting, enter the Linux system of the development board again and you will see that the rootfs partition has been expanded to the actual capacity of the TF card.

```
root@orangePi:~# df -h
Filesystem      Size  Used Avail Use% Mounted on
udev            925M    0  925M   0% /dev
tmpfs           199M   3.2M  196M   2% /run
/dev/mmcblk0p1  15G   3.2G  12G  23% /
```

3. 6. 3. Method to manually expand the capacity of rootfs partition in TF card

If the total capacity of the TF card is large, such as 128GB, and you do not want



the rootfs partition of the Linux system to use all the capacity of the TF card, you only want to allocate a part of the capacity, such as 16GB, to the Linux system, and then the remaining capacity of the TF card can be used for other purposes. use. Then you can use the content introduced in this section to manually expand the capacity of the rootfs partition in TF.

1) First, burn the Linux image of the development board into the TF card on the **Ubuntu computer** (Windows is not available), and **then unplug and insert the TF card again**.

2) Then the Ubuntu computer will usually automatically mount the partition of the TF card. If the automatic mounting is normal, use the ls command to see the following output.

```
test@test:~$ ls /media/test/opi_root/
bin  boot  dev  etc  home  lib  lost+found  media  mnt  opt  proc  root  run
sbin  selinux  srv  sys  tmp  usr  var
```

3) Then switch the current user to the root user on the Ubuntu computer

```
test@test:~$ sudo -i
[sudo] test 的密码:
root@test:~#
```

4) Then enter the root directory of the Linux system in the TF card and create a new file named **.no_rootfs_resize**

```
root@test:~# cd /media/test/opi_root/
root@test:/media/test/opi_root/# cd root
root@test:/media/test/opi_root/root# touch .no_rootfs_resize
root@test:/media/test/opi_root/root# ls .no_rootfs*
.no_rootfs_resize
```

5) Then install the gparted software on your Ubuntu computer


```
test@test:~$ sudo apt install -y gparted
```

6) Then open gparted


```
test@test:~$ sudo gparted
```




7) After opening gparted, you can select the TF card in the upper right corner, and then you can see the usage of the TF card capacity. The picture below shows the situation of the TF card after burning the Linux desktop system. It can be seen that although the total capacity of the TF card is 16GB (displayed as 14.84GiB in GParted), the rootfs partition (/dev/sdc1) Only 4.05GiB is actually allocated, leaving 10.79GiB unallocated

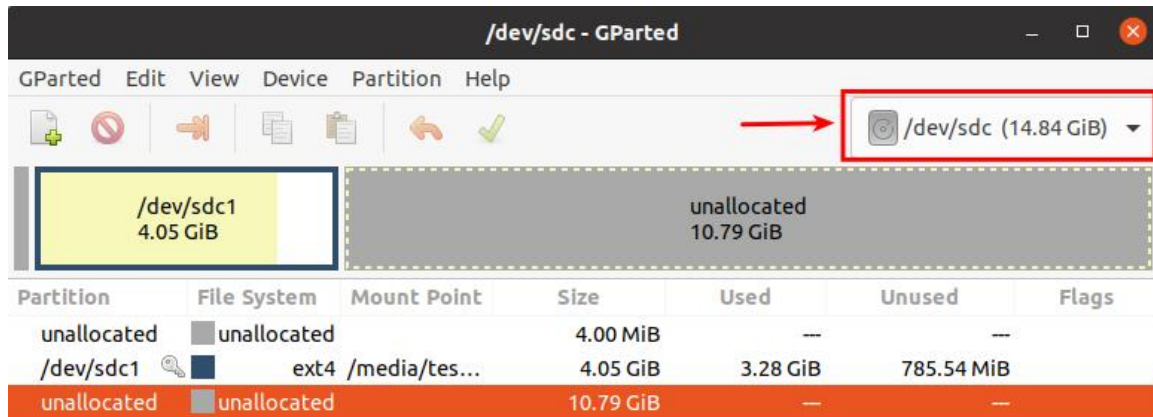


8) Then select the rootfs partition (/dev/sdc1)

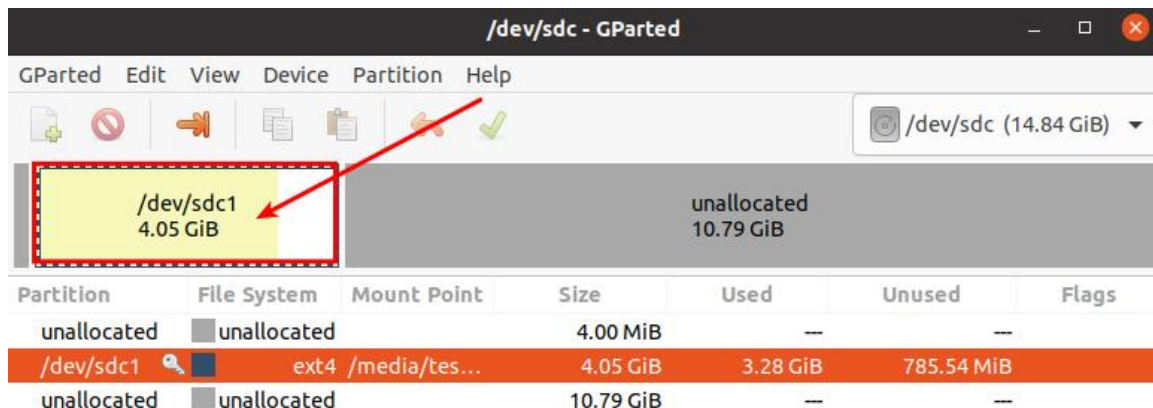


9) Right-click the mouse again to see the operation options shown in the picture below. If the TF card has been mounted, you first need to Umount the rootfs partition of the TF card.

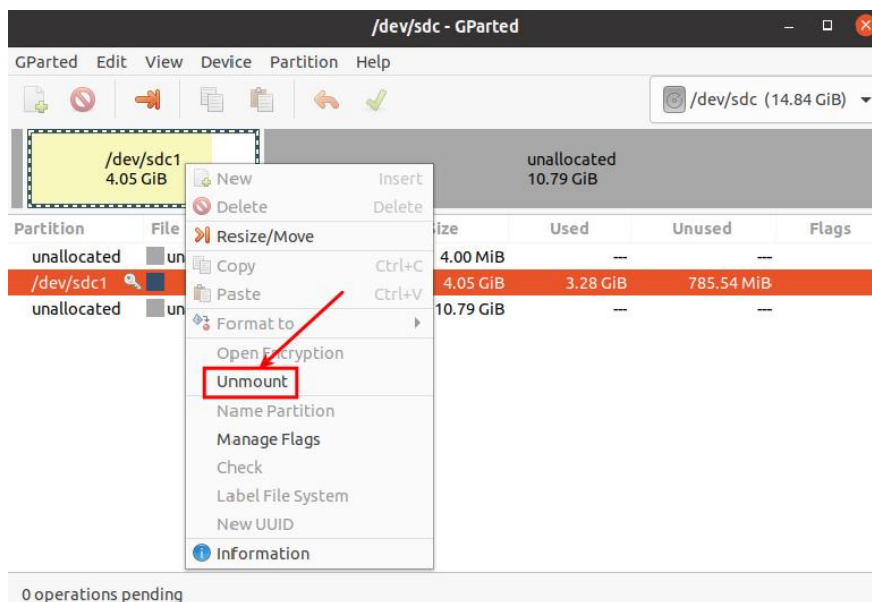


10) Then select the rootfs partition again, right-click, and select **Resize/Move** to start expanding the size of the rootfs partition.

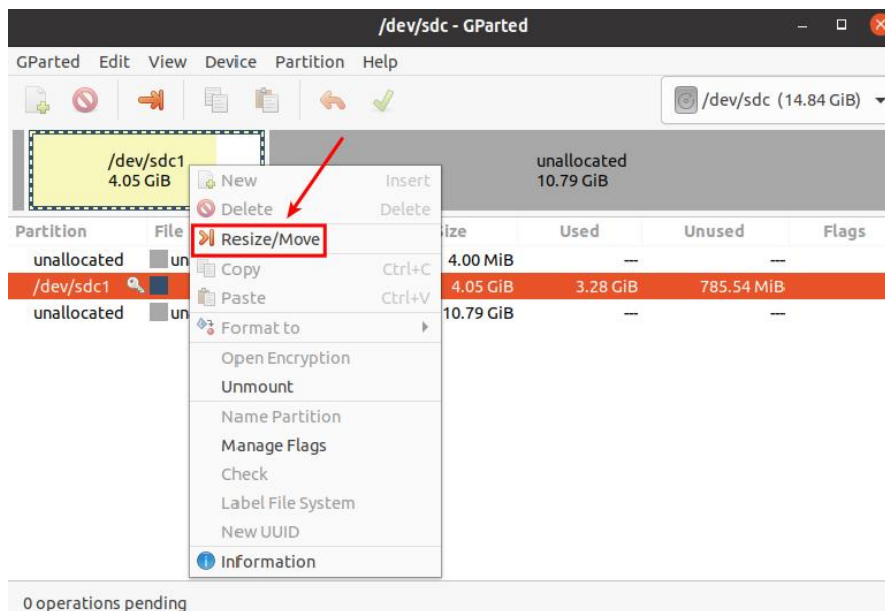


11) After the **Resize/Move** option is turned on, the following setting interface will pop up.

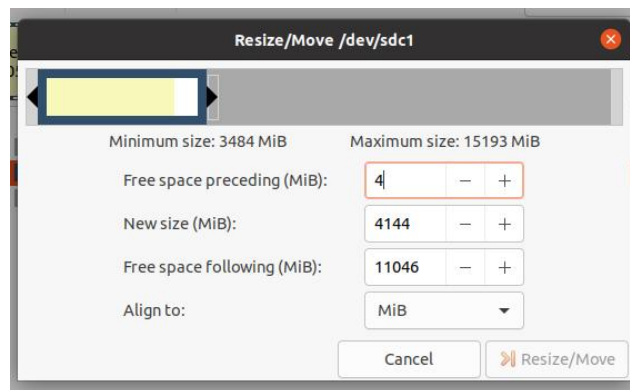


12) Then you can directly drag the position shown in the figure below to set the size of the capacity, or you can set the size of the rootfs partition by setting the number in **New size(MiB)**

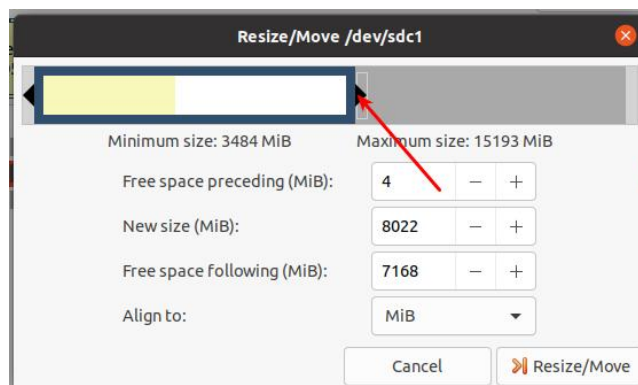


13) After setting the capacity, click **Resize/Move** in the lower right corner.

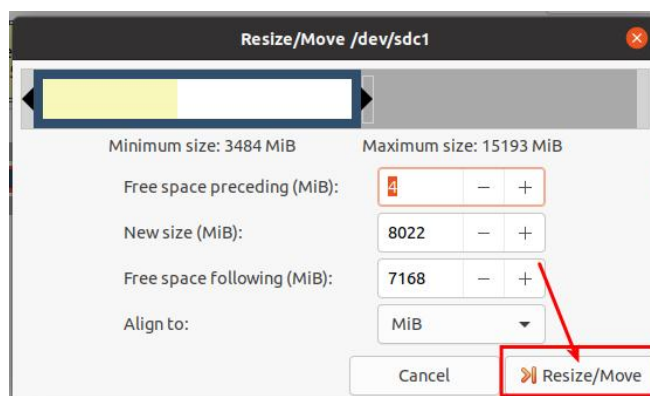


14) After final confirmation, click the green ✓ shown in the picture below.

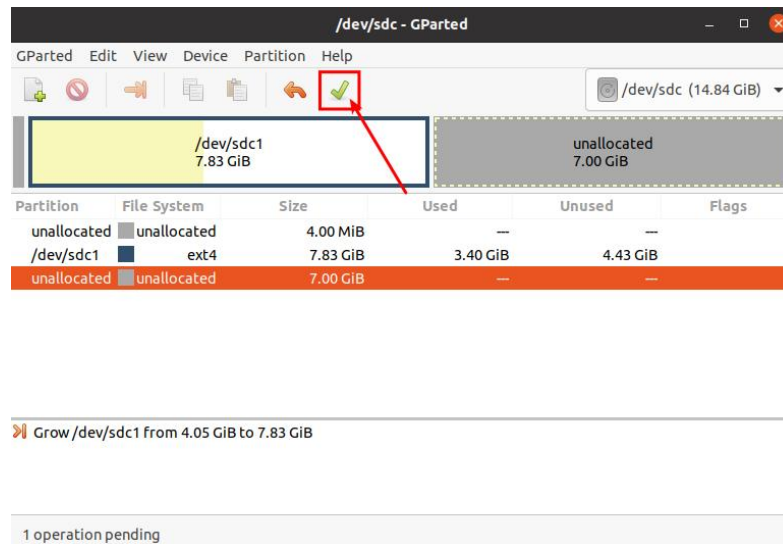

15) Then select **Apply**, and the capacity expansion of the rootfs partition will officially begin.

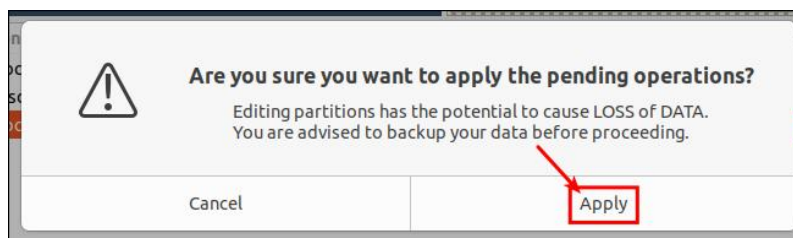

16) After the expansion is completed, click **Close** to close it.

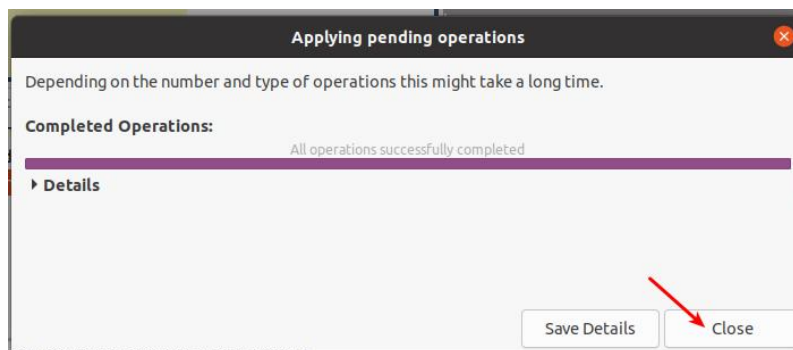

17) Then you can unplug the TF card and insert it into the development board to start. After entering the Linux system of the development board, if you use the **df -h** command to see that the size of the rootfs partition is consistent with the size set previously, it means manual Expansion successful

```
root@orangePi:~# df -h
```



Filesystem	Size	Used	Avail	Use%	Mounted on
udev	925M	0	925M	0%	/dev
tmpfs	199M	3.2M	196M	2%	/run
/dev/mmcblk0p1	7.7G	3.2G	4.4G	42%	/

3. 6. 4. Method to reduce the capacity of rootfs partition in TF card

After configuring the application or other development environment in the Linux system of the TF card, if you want to back up the Linux system in the TF card, you can use the method in this section to reduce the size of the rootfs partition first, and then start the backup.

1) First, insert the TF card you want to operate on your **Ubuntu computer** (not Windows)


2) Then install the gparted software on your Ubuntu computer

```
test@test:~$ sudo apt install -y gparted
```


3) Then open gparted

```
test@test:~$ sudo gparted
```


4) After opening gparted, you can select the TF card in the upper right corner, and then you can see the usage of the TF card capacity.

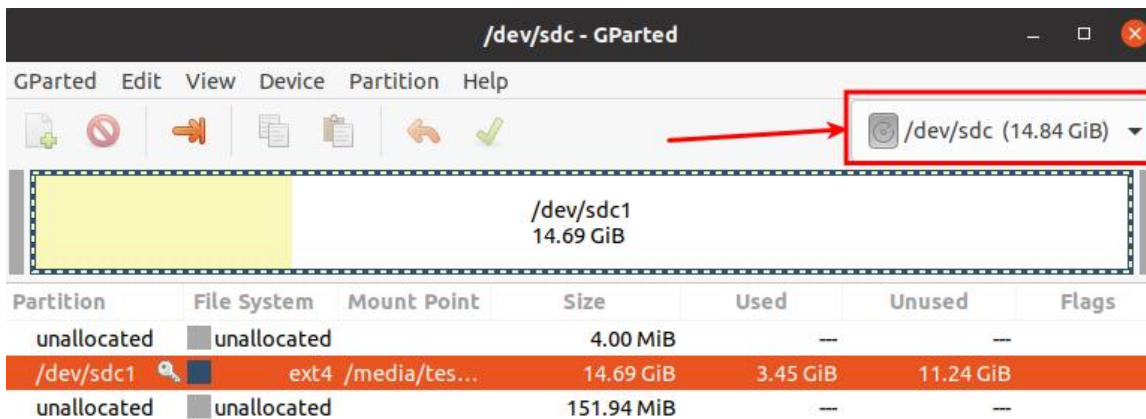


5) Then select the rootfs partition (/dev/sdc1)

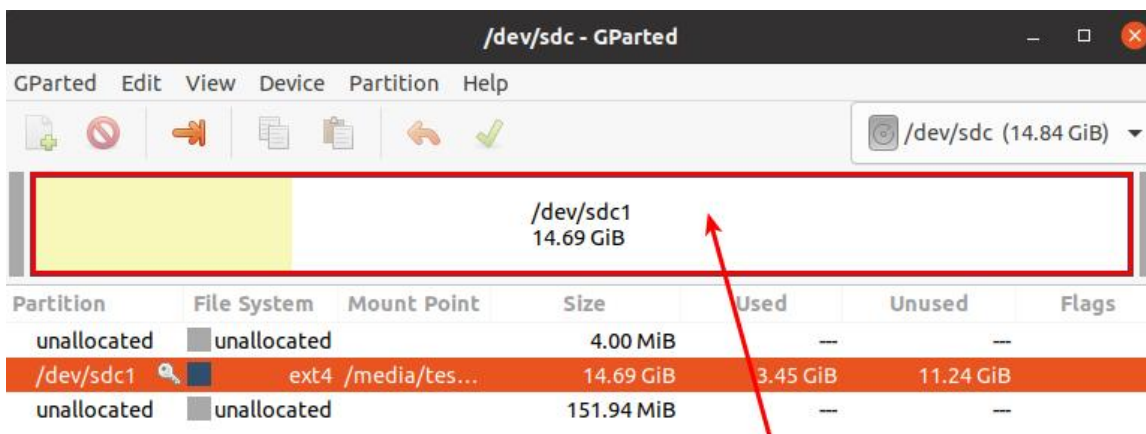


6) Right-click the mouse again to see the operation options shown in the picture below. If the TF card is already mounted, you first need to Umount the rootfs partition of the TF card.

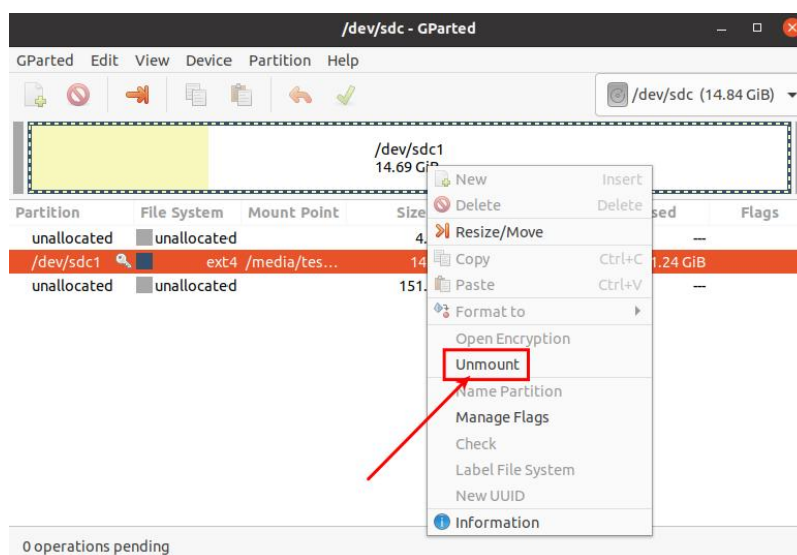


7) Then select the rootfs partition again, right-click the mouse, and select **Resize/Move** to start setting the size of the rootfs partition.

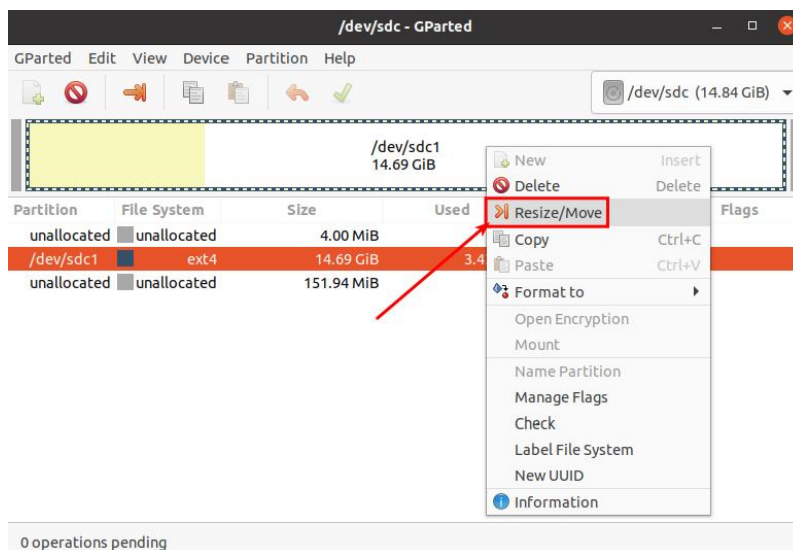


8) After the **Resize/Move** option is turned on, the following setting interface will pop up.

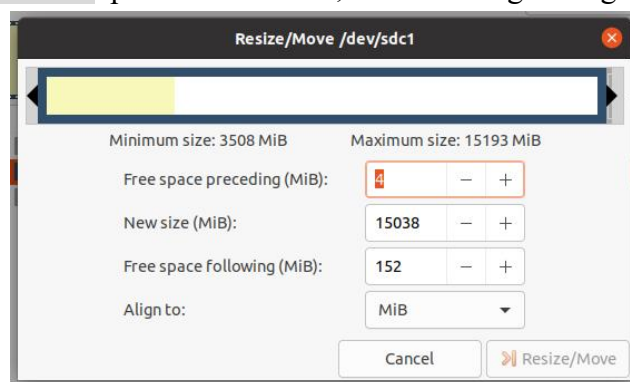


9) Then you can directly drag the position shown in the figure below to set the size of the capacity, or you can set the size of the rootfs partition by setting the number in **New size(MiB)**

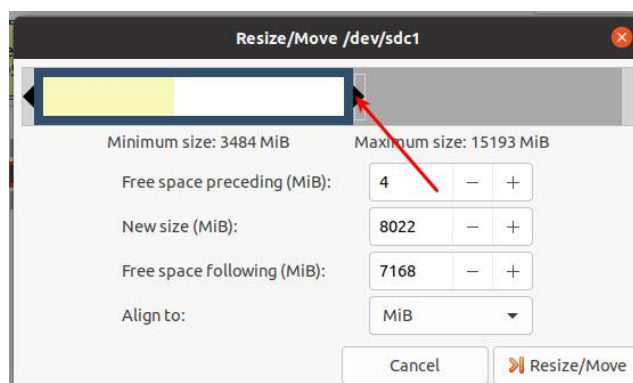


10) After setting the capacity, click **Resize/Move** in the lower right corner.

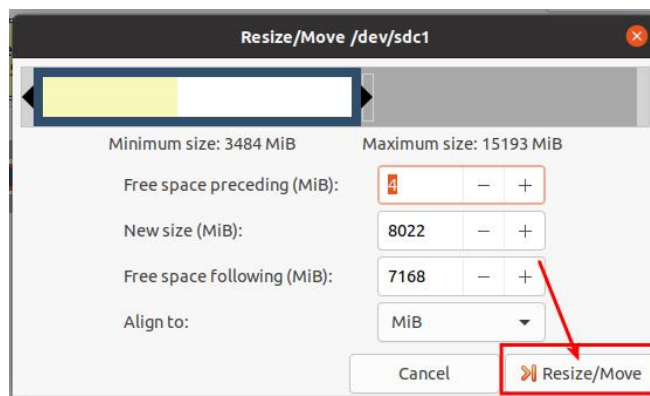


11) After final confirmation, click the green ✓ as shown in the picture below.

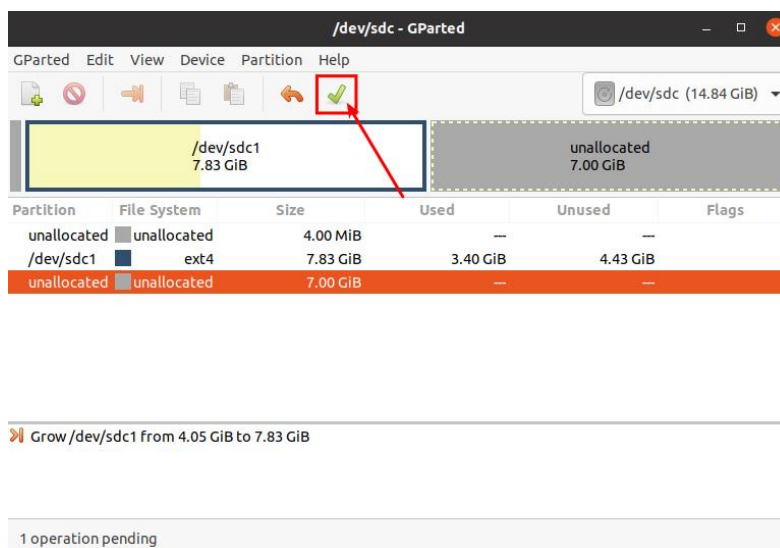

12) Then select **Apply**, and the capacity expansion of the rootfs partition will officially begin.

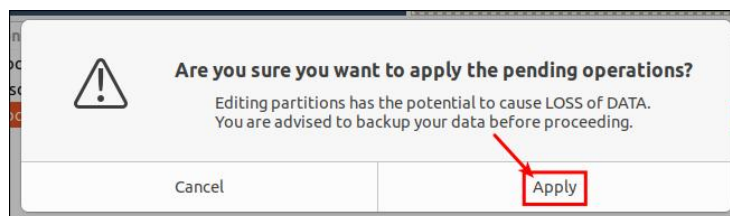

13) After the expansion is completed, click **Close** to close it.

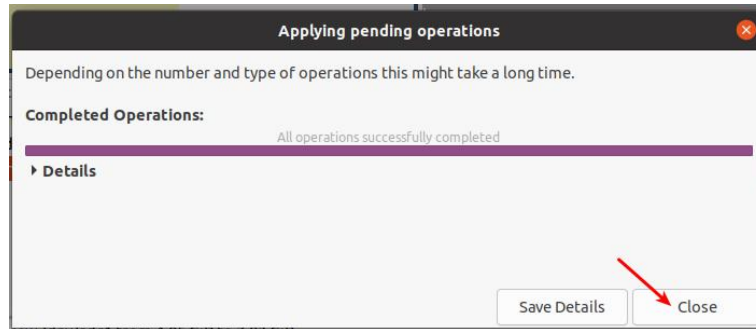

14) Then you can unplug the TF card and insert it into the development board to start. After entering the Linux system of the development board, if you use the **df -h** command, you can see that the size of the rootfs partition is consistent with the size set previously, which means it has been reduced capacity success

```
root@orangepi:~# df -h
```


Filesystem	Size	Used	Avail	Use%	Mounted on
udev	925M	0	925M	0%	/dev
tmpfs	199M	3.2M	196M	2%	/run
/dev/mmcblk0p1	7.7G	3.2G	4.4G	42%	/

3. 7. 24Pin expansion board interface pin description


1) Please refer to the figure below for the order of the interface pins of the 24-pin expansion board of the development board.




2) The schematic diagram of the 24pin expansion board interface of the development board is as follows

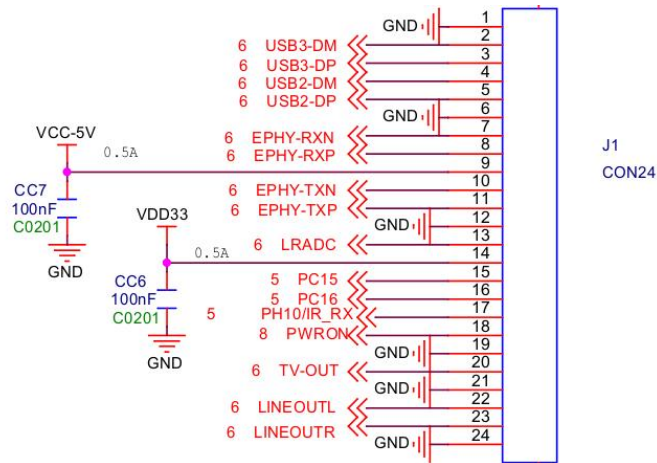

3) The way to connect the expansion board to the development board is as follows. Please pay attention to the forward and reverse directions of the cable and do not plug it in backwards.

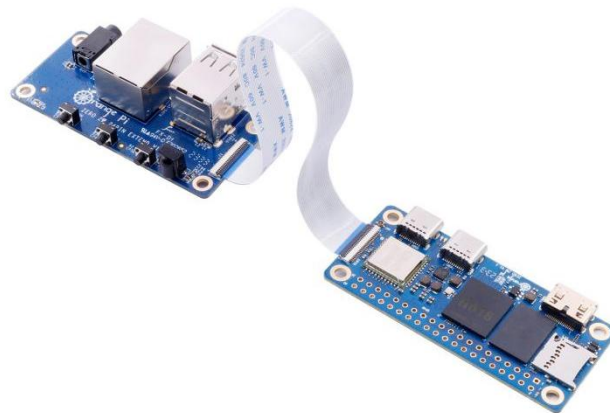

4) The functions that the expansion board can expand include:

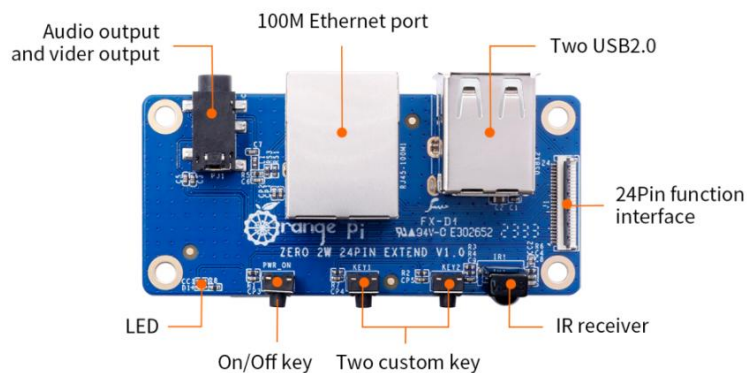



1	100M network port	Used to connect to a wired network to access the Internet
2	Analog audio and video output interface	In Linux system, it can be used to connect headphones to play music, but the TV-OUT function cannot be used.
3	USB 2.0 Host x 2	For connecting USB keyboard, mouse and USB storage devices
4	Infrared receiving function	Currently it is mainly used in Android systems, and Linux systems are mainly adapted to kernel drivers.
5	On/off button	Used to turn off or turn on the development board
6	LRADC custom buttons x 2	The default settings of the Linux system are KEY_1 (Number 1 key) and KEY_ENTER (Enter key), which can be customized as other function keys by modifying the dts configuration.

5) The adaptation of Linux5.4 and Linux6.1 systems to expansion boards is shown in the following table


24pin expansion board function	Linux5.4	Linux6.1
100M network port	OK	OK
100M Ethernet port light	OK	OK
USB2.0 HOST x 2	OK	OK
Infrared reception	OK	OK
Headphone audio playback	OK	OK
On/off button	OK	OK
LRADC custom buttons x 2	OK	OK
TV-OUT	NO	NO

3.8. How to use the two LRADC buttons on the 24pin expansion board

1) There are two LRADC buttons on the 24pin expansion board, and their locations are



as shown in the figure below:

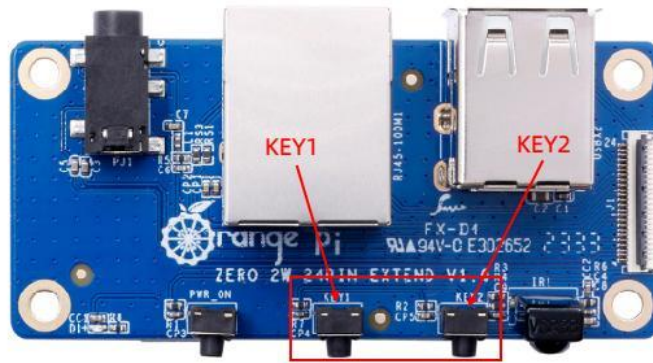

2) In the Linux system, the default key values of KEY1 and KEY2 are

Linux kernel	KEY1	KEY2
Linux5.4	KEY_1, the number 1 on the keyboard	KEY_ENTER, the enter key
Linux6.1	KEY_1, the number 1 on the keyboard	KEY_ENTER, the enter key

3) Through the **evtest** command, we can check the key values reported after KEY1 and KEY2 are pressed.

a. linux5.4

```

orangepi@orangepizero2w:~$ evtest
No device specified, trying to scan all of /dev/input/event*
Not running as root, no devices may be available.
Available devices:
/dev/input/event0:  sunxi-keyboard
/dev/input/event1:  sunxi-ir
/dev/input/event2:  axp2101-pek
/dev/input/event3:  SONiX USB Keyboard
/dev/input/event4:  SONiX USB Keyboard Consumer Control
/dev/input/event5:  SONiX USB Keyboard System Control
/dev/input/event6:  PixArt USB Optical Mouse
/dev/input/event7:  BRLTTY 6.3 Linux Screen Driver Keyboard
Select the device event number [0-7]: 0    #You need to enter the serial number
corresponding to sunxi-keyboard
Input driver version is 1.0.1

```



Input device ID: bus 0x19 vendor 0x1 product 0x1 version 0x100

Input device name: "sunxi-keyboard"

Supported events:

Event type 0 (EV_SYN)

Event type 1 (EV_KEY)

Event code 2 (KEY_1)

Event code 28 (KEY_ENTER)

Properties:

Testing ... (interrupt to exit)

#The following are the key values reported after pressing KEY1 and KEY2

Event: time 1693555298.132314, type 1 (EV_KEY), code 2 (KEY_1), value 1

Event: time 1693555298.132314, ----- SYN_REPORT -----

Event: time 1693555298.226071, type 1 (EV_KEY), code 2 (KEY_1), value 0

Event: time 1693555298.226071, ----- SYN_REPORT -----

Event: time 1693555298.601042, type 1 (EV_KEY), code 28 (KEY_ENTER), value 1

Event: time 1693555298.601042, ----- SYN_REPORT -----

Event: time 1693555298.710415, type 1 (EV_KEY), code 28 (KEY_ENTER), value 0

Event: time 1693555298.710415, ----- SYN_REPORT -----

b. linux6.1

orange@orangezero2w:~\$ evtest

No device specified, trying to scan all of /dev/input/event*

Not running as root, no devices may be available.

Available devices:

/dev/input/event0: axp20x-pek

/dev/input/event1: 5070800.lradc

/dev/input/event2: SONiX USB Keyboard

/dev/input/event3: SONiX USB Keyboard Consumer Control

/dev/input/event4: SONiX USB Keyboard System Control

/dev/input/event5: PixArt USB Optical Mouse

/dev/input/event6: sunxi-ir

Select the device event number [0-6]: **1** **#You need to enter the serial number corresponding to 5070800.lradc**

Input driver version is 1.0.1

Input device ID: bus 0x19 vendor 0x1 product 0x1 version 0x100



```
Input device name: "5070800.lradc"
```

```
Supported events:
```

```
Event type 0 (EV_SYN)
```

```
Event type 1 (EV_KEY)
```

```
Event code 2 (KEY_1)
```

```
Event code 28 (KEY_ENTER)
```

```
Properties:
```

```
Testing ... (interrupt to exit)
```

#The following are the key values reported after pressing KEY1 and KEY2

```
Event: time 1694075818.810877, type 1 (EV_KEY), code 2 (KEY_1), value 1
```

```
Event: time 1694075818.810877, ----- SYN_REPORT -----
```

```
Event: time 1694075818.961345, type 1 (EV_KEY), code 2 (KEY_1), value 0
```

```
Event: time 1694075818.961345, ----- SYN_REPORT -----
```

```
Event: time 1694075819.536128, type 1 (EV_KEY), code 28 (KEY_ENTER), value 1
```

```
Event: time 1694075819.536128, ----- SYN_REPORT -----
```

```
Event: time 1694075819.705009, type 1 (EV_KEY), code 28 (KEY_ENTER), value 0
```

```
Event: time 1694075819.705009, ----- SYN_REPORT -----
```

4) If you need to modify the key values reported after KEY1 and KEY2 are pressed, you can use the following method:

- a. There is a **sun50i-h618-lradc-keys.dts** file under the **/usr/src/** path, through which we can define KEY1 and KEY2 as the desired key values.

```
orange@orangezero2w:~$ cd /usr/src/
orange@orangezero2w:/usr/src$ ls *.dts
sun50i-h618-lradc-keys.dts
```

- b. The contents of the **sun50i-h618-lradc-keys.dts** file in the linux5.4 system are as follows:

- a) KEY1 correspondence: modify **key0 = <600 2>;** where 2 is the number corresponding to the desired key value
- b) KEY2 correspondence: modify **key1 = <800 28>;** where 28 is the number corresponding to the desired key value

```
orange@orangezero2w:/usr/src$ sudo vim sun50i-h618-lradc-keys.dts
/dts-v1/;
```



```

/plugin/;

/ {
    fragment@0 {
        target = <&keyboard>;

        __overlay__ {
            status = "okay";

            key0 = <600 2>;
            key1 = <800 28>;
        };
    };
};

```

- c. The contents of the c.linux6.1 system **sun50i-h618-lradc-keys.dts** file are as follows:
- KEY1 corresponding: modify **linux,code = <2>**; the 2 in it is the number corresponding to the desired key value
 - KEY2 correspondence: modify **linux,code = <28>**; the 28 in it is the number corresponding to the desired key value

```

orange@orangezero2w:/usr/src$ sudo vim sun50i-h618-lradc-keys.dts
/dts-v1/;
/plugin/;

/ {
    fragment@0 {
        target = <&r_lradc>;

        __overlay__ {
            status = "okay";

            button-500 {
                label = "KEY_1";
                linux,code = <2>;
            };
        };
    };
};

```



```

        button-800 {
            label = "KEY_ENTER";
            linux,code = <28>;
        };
    };
};
};

```

- d. For the key values that can be set, please refer to the macro definition in the **input-event-codes.h** header file. Its path in the kernel source code is:

```
orange-pi-5.4-sun50iw9/include/uapi/linux/input-event-codes.h
```

```
orange-pi-6.1-sun50iw9/include/uapi/linux/input-event-codes.h
```

- e. After modification, use the **orangepi-add-overlay** command to add the **sun50i-h618-lradc-keys.dts** configuration to the system.

```
orangepi@orangezero2w:/usr/src$ sudo orangepi-add-overlay sun50i-h618-lradc-keys.dts
```

Compiling the overlay

Copying the compiled overlay file to /boot/overlay-user/


Reboot is required to apply the changes

- f. Then restart the system and the customized key values will take effect.

3.9. Network connection test

3.9.1. Ethernet port test

- 1) There is no wired network interface on the main board of the development board. We can expand the 100M wired network interface through a 24pin expansion board.

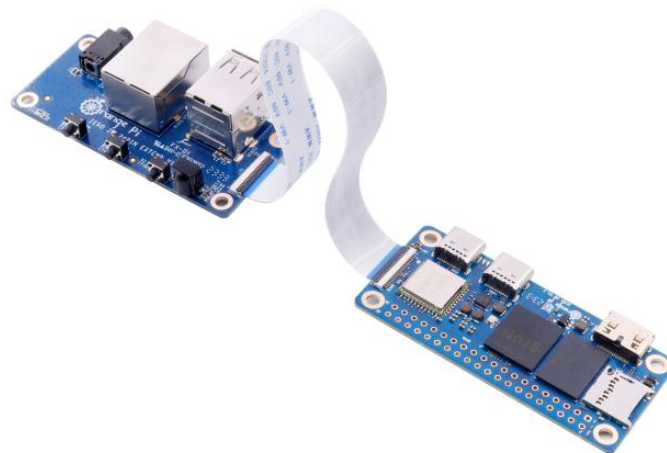



2) Then plug one end of the network cable into the Ethernet interface of the expansion board, and the other end of the network cable into the router, and make sure the network is smooth.

3) After the system starts, it will automatically assign an IP address to the Ethernet card through **DHCP**, **and no other configuration is required.**

4) The command to view the IP address in the Linux system of the development board is as follows:

Please do not copy the following commands. For example, the network node name in debian12 and ubuntu24.04 is end0, and the following command needs to be modified to `ip a s end0`.

```
orangePi@orangePi:~$ ip a s eth0
3: eth0: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc pfifo_fast state UP group default qlen 1000
    link/ether 5e:ac:14:a5:93:b3 brd ff:ff:ff:ff:ff:ff
    inet 192.168.1.16/24 brd 192.168.1.255 scope global dynamic noprefixroute eth0
        valid_lft 259174sec preferred_lft 259174sec
    inet6 240e:3b7:3240:c3a0:e269:8305:dc08:135e/64 scope global dynamic noprefixroute
        valid_lft 259176sec preferred_lft 172776sec
    inet6 fe80::957d:bbbd:4928:3604/64 scope link noprefixroute
        valid_lft forever preferred_lft forever
```

There are three ways to check the IP address after the development board is started:

1. Connect the HDMI display, then log in to the system and use the `ip a s eth0` command to check the IP address.

2. Enter the `ip a s eth0` command in the debugging serial terminal to view the IP address.

3. If there is no debugging serial port or HDMI display, you can also check the IP address of the development board's network port through the router's management interface. However, with this method, people often fail to see the IP address of the development board. If you can't see it, here's how to debug it:



A) First check whether the Linux system has started normally. If the green light of the development board flashes, it usually means that it has started normally. If only the red light is on, or the red and green lights are not on, it means that the system has not started normally;

B) Check whether the network cable is plugged in tightly, or try another network cable;

C) Try another router (I have encountered many problems with routers, such as the router being unable to assign an IP address normally, or the IP address being assigned normally but not being visible in the router);

D) If there is no router to replace, you can only connect an HDMI display or use the debugging serial port to check the IP address.

In addition, it should be noted that the development board's DHCP automatic allocation of IP addresses does not require any settings.

5) The command to test network connectivity is as follows. The **ping** command can be interrupted by pressing the **Ctrl+C** shortcut key.

Please do not copy the following commands. For example, the network node name in debian12 and ubuntu24.04 is end0. The following command needs to be modified to ping www.baidu.com -I end0.

```
orange@orange:~$ ping www.baidu.com -I eth0
PING www.a.shifen.com (14.215.177.38) from 192.168.1.12 eth0: 56(84) bytes of data.
64 bytes from 14.215.177.38 (14.215.177.38): icmp_seq=1 ttl=56 time=6.74 ms
64 bytes from 14.215.177.38 (14.215.177.38): icmp_seq=2 ttl=56 time=6.80 ms
64 bytes from 14.215.177.38 (14.215.177.38): icmp_seq=3 ttl=56 time=6.26 ms
64 bytes from 14.215.177.38 (14.215.177.38): icmp_seq=4 ttl=56 time=7.27 ms
^C
--- www.a.shifen.com ping statistics ---
4 packets transmitted, 4 received, 0% packet loss, time 3002ms
rtt min/avg/max/mdev = 6.260/6.770/7.275/0.373 ms
```

3. 9. 2. WIFI connection test

Please do not connect to WIFI by modifying the `/etc/network/interfaces` configuration file. There will be problems in connecting to the WIFI network in this way.



3.9.2.1. Server version image connects to WIFI through commands

When the development board is not connected to Ethernet or HDMI display, but only to the serial port, it is recommended to use the commands demonstrated in this section to connect to the WIFI network. Because nmtui can only display characters in some serial port software (such as minicom) and cannot display the graphical interface normally. Of course, if the development board is connected to an Ethernet or HDMI display, you can also use the commands demonstrated in this section to connect to the WIFI network.

1) First log in to the Linux system, there are three ways:

- a. If the development board is connected to a network cable, you can remotely log in to [the Linux system through ssh](#).
- b. If the development board is connected to the debugging serial port, you can use the serial port terminal to log in to the Linux system.
- c. If the development board is connected to an HDMI display, you can log in to the Linux system through the HDMI display terminal.

1) First use the **nmcli dev wifi** command to scan the surrounding WIFI hotspots

```
orangeypi@orangeypi:~$ nmcli dev wifi
```

```
root@orangeypi:~# nmcli dev wifi
IN-USE  BSSID          SSID          MODE  CHAN  RATE        SIGNAL  BARS  SECURITY
28:6C:07:6E:87:2E  orangeypi     Infra  9     260 Mbit/s  97      █████ WPA1 WPA2
D8:D8:66:A5:BD:D1  orangeypi     Infra  10    270 Mbit/s  90      █████ WPA1 WPA2
A0:40:A0:A1:72:20  orangeypi     Infra  4     405 Mbit/s  82      █████ WPA2
28:6C:07:6E:87:2F  orangeypi_5G  Infra  149   540 Mbit/s  80      █████ WPA1 WPA2
CA:50:E9:89:E2:44  ChinaNet_TC15 Infra  1     130 Mbit/s  79      █████ WPA1 WPA2
A0:40:A0:A1:72:31  WOT00000000  Infra  100   405 Mbit/s  67      █████ WPA2
D4:EE:07:08:A9:E0  orangeypi     Infra  4     130 Mbit/s  55      █████ WPA1 WPA2
88:C3:97:49:25:13  orangeypi     Infra  6     130 Mbit/s  52      █████ WPA1 WPA2
00:BD:82:51:53:C2  orangeypi     Infra  12    130 Mbit/s  49      █████ WPA1 WPA2
C0:61:18:FA:49:37  orangeypi     Infra  149   270 Mbit/s  47      █████ WPA1 WPA2
04:79:70:8D:0C:B8  orangeypi     Infra  153   270 Mbit/s  47      █████ WPA2
04:79:70:FD:0C:B8  orangeypi     Infra  153   270 Mbit/s  47      █████ WPA2
9C:A6:15:DD:E6:0C  orangeypi     Infra  10    270 Mbit/s  45      █████ WPA1 WPA2
B4:0F:3B:45:D1:F5  orangeypi     Infra  48    270 Mbit/s  45      █████ WPA1 WPA2
E8:CC:18:4F:7B:44  orangeypi     Infra  157   135 Mbit/s  45      █████ WPA1 WPA2
B0:95:8E:D8:2F:ED  orangeypi     Infra  11    405 Mbit/s  39      █████ WPA1 WPA2
C0:61:18:FA:49:36  orangeypi     Infra  11    270 Mbit/s  24      █████ WPA1 WPA2
root@orangeypi:~#
```

2) Then use the **nmcli** command to connect to the scanned WIFI hotspot, where:



- a. **wifi_name** needs to be replaced with the name of the WIFI hotspot you want to connect to
- b. **wifi_passwd** needs to be replaced with the password of the WIFI hotspot you want to connect to.

```
orangepi@orangepi:~$ sudo nmcli dev wifi connect wifi_name password wifi_passwd
Device 'wlan0' successfully activated with 'cf937f88-ca1e-4411-bb50-61f402eef293'.
```

3) You can check the IP address of the wifi through the **ip addr show wlan0** command

```
orangepi@orangepi:~$ ip a s wlan0
11: wlan0: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc pfifo_fast
state UP group default qlen 1000
    link/ether 23:8c:d6:ae:76:bb brd ff:ff:ff:ff:ff:ff
    inet 192.168.1.11/24 brd 192.168.1.255 scope global dynamic noprefixroute wlan0
        valid_lft 259192sec preferred_lft 259192sec
    inet6 240e:3b7:3240:c3a0:c401:a445:5002:ccdd/64 scope global dynamic
noprefixroute
        valid_lft 259192sec preferred_lft 172792sec
    inet6 fe80::42f1:6019:a80e:4c31/64 scope link noprefixroute
        valid_lft forever preferred_lft forever
```

4) Use the **ping** command to test the connectivity of the wifi network. The **ping** command can be interrupted by pressing the **Ctrl+C** shortcut key.

```
orangepi@orangepi:~$ ping www.orangepi.org -I wlan0
PING www.orangepi.org (182.92.236.130) from 192.168.1.49 wlan0: 56(84) bytes of
data.
64 bytes from 182.92.236.130 (182.92.236.130): icmp_seq=1 ttl=52 time=43.5 ms
64 bytes from 182.92.236.130 (182.92.236.130): icmp_seq=2 ttl=52 time=41.3 ms
64 bytes from 182.92.236.130 (182.92.236.130): icmp_seq=3 ttl=52 time=44.9 ms
64 bytes from 182.92.236.130 (182.92.236.130): icmp_seq=4 ttl=52 time=45.6 ms
64 bytes from 182.92.236.130 (182.92.236.130): icmp_seq=5 ttl=52 time=48.8 ms
^C
--- www.orangepi.org ping statistics ---
5 packets transmitted, 5 received, 0% packet loss, time 4006ms
rtt min/avg/max/mdev = 41.321/44.864/48.834/2.484 ms
```




3. 9. 2. 2. Server version image connects to WIFI graphically

- 1) First log in to the Linux system, there are three ways:
 - a. If the development board is connected to a network cable, you can remotely log in to **the Linux system through ssh.**
 - b. If the development board is connected to the debugging serial port, you can use the serial port terminal to log in to the Linux system (please use MobaXterm for the serial port software, the graphical interface cannot be displayed using minicom)
 - c. If the development board is connected to an HDMI display, you can log in to the Linux system through the HDMI display terminal.


- 2) Then enter the nmtui command in the command line to open the wifi connection interface

```
orange_pi@orange_pi:~$ sudo nmtui
```


- 3) Enter the nmtui command to open the interface as shown below

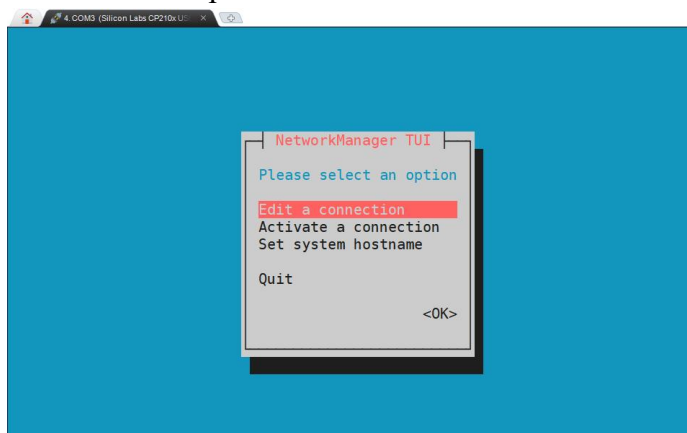


- 4) Select **Activate a connect** and press Enter

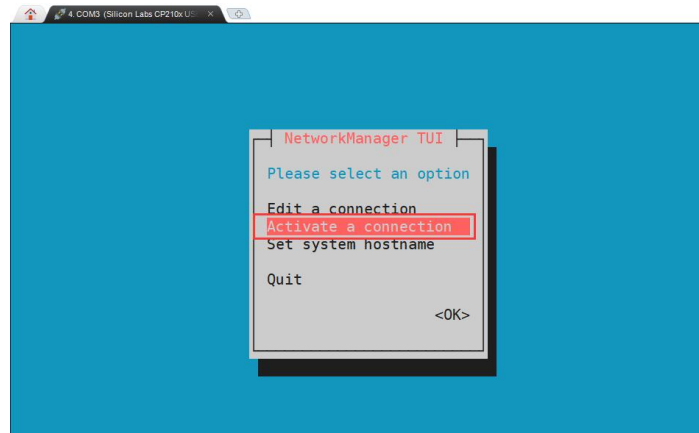


5) Then you can see all the searched WIFI hotspots

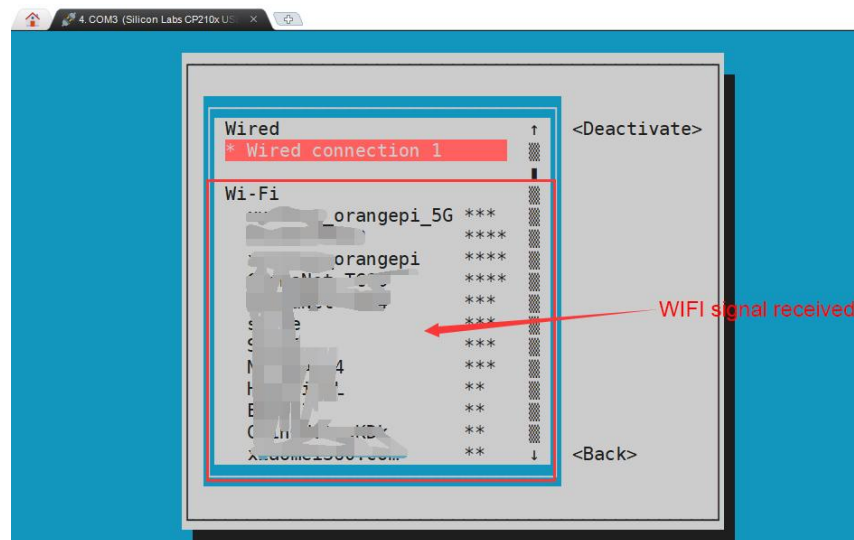


6) Select the WIFI hotspot you want to connect to, then use the Tab key to position the cursor on **Activate** and press Enter.

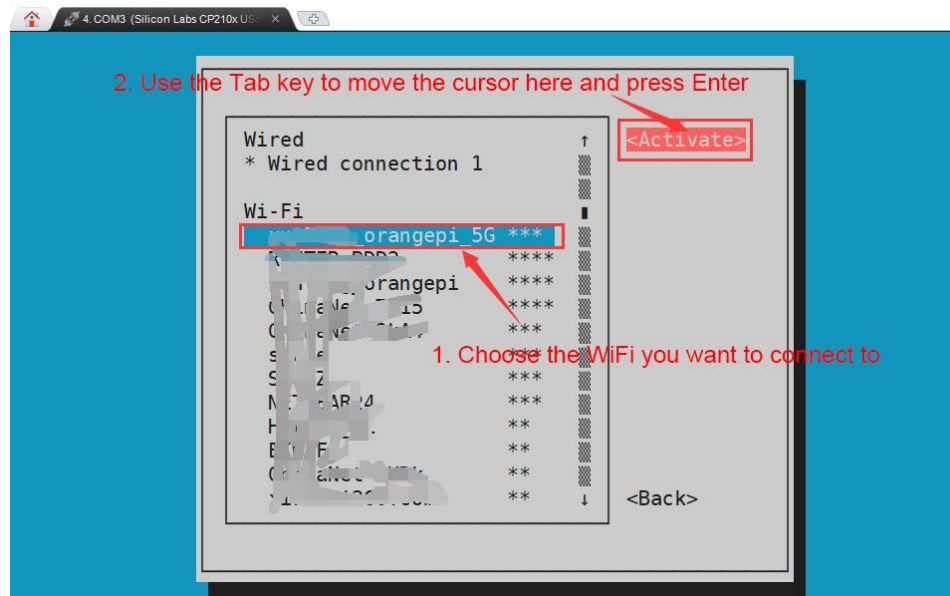

7) Then a dialog box for entering the password will pop up. Enter the corresponding password in **Password** and press Enter to start connecting to WIFI.

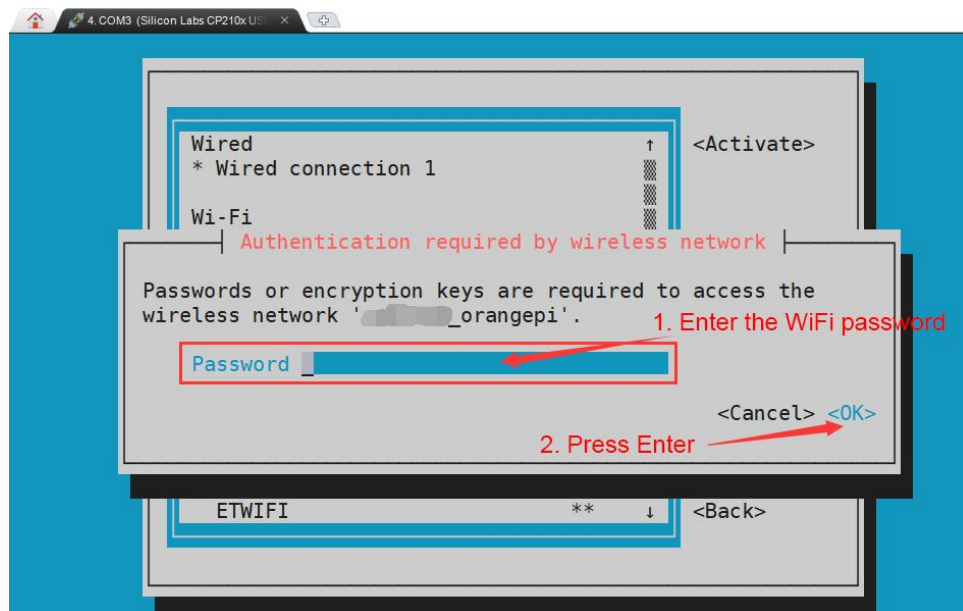

8) After the WIFI connection is successful, a "*" will be displayed in front of the connected WIFI name.

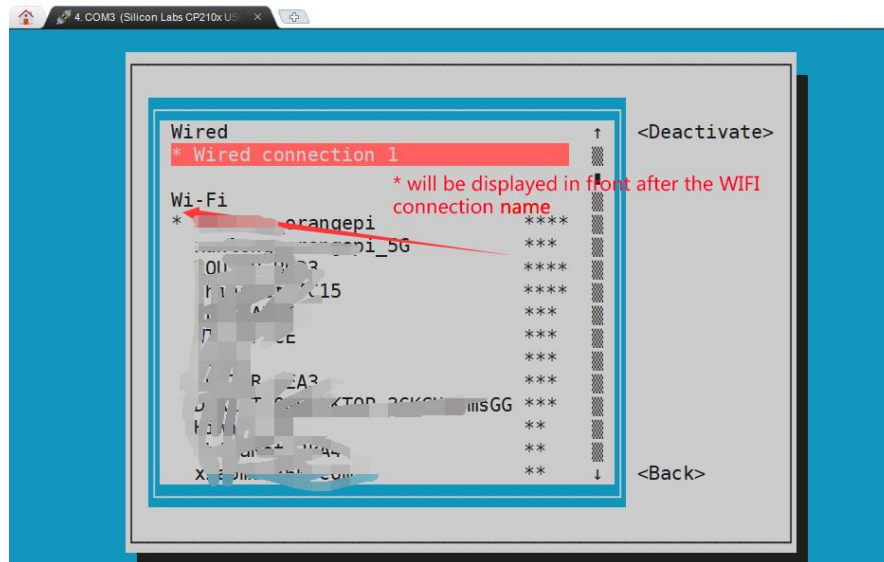

9) You can check the IP address of the wifi through the **ip a s wlan0** command

```

orangeipi@orangeipi:~$ ip a s wlan0
11: wlan0: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc pfifo_fast
state UP group default qlen 1000
    link/ether 24:8c:d3:aa:76:bb brd ff:ff:ff:ff:ff:ff
    inet 192.168.1.11/24 brd 192.168.1.255 scope global dynamic noprefixroute wlan0
        valid_lft 259069sec preferred_lft 259069sec
    inet6 240e:3b7:3240:c4a0:c401:a445:5002:ccdd/64 scope global dynamic
noprefixroute
        valid_lft 259071sec preferred_lft 172671sec
    inet6 fe80::42f1:6019:a80e:4c31/64 scope link noprefixroute
        valid_lft forever preferred_lft forever

```

10) Use the **ping** command to test the connectivity of the wifi network. The **ping** command can be interrupted by pressing the **Ctrl+C** shortcut key.


```
orangeipi@orangeipi:~$ ping www.orangeipi.org -I wlan0
PING www.orangeipi.org (182.92.236.130) from 192.168.1.49 wlan0: 56(84) bytes of
data.
64 bytes from 182.92.236.130 (182.92.236.130): icmp_seq=1 ttl=52 time=43.5 ms
64 bytes from 182.92.236.130 (182.92.236.130): icmp_seq=2 ttl=52 time=41.3 ms
64 bytes from 182.92.236.130 (182.92.236.130): icmp_seq=3 ttl=52 time=44.9 ms
64 bytes from 182.92.236.130 (182.92.236.130): icmp_seq=4 ttl=52 time=45.6 ms
64 bytes from 182.92.236.130 (182.92.236.130): icmp_seq=5 ttl=52 time=48.8 ms
```




```
^C
--- www.orangepi.org ping statistics ---
5 packets transmitted, 5 received, 0% packet loss, time 4006ms
rtt min/avg/max/mdev = 41.321/44.864/48.834/2.484 ms
```

3. 9. 2. 3. Test method for desktop image

1) Click the network configuration icon in the upper right corner of the desktop (please do not connect the network cable when testing WIFI)

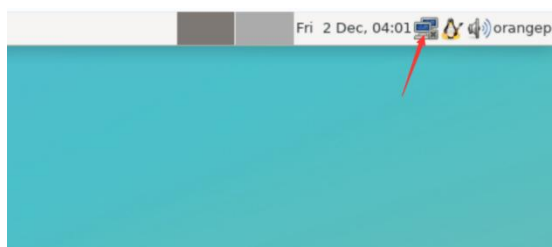

2) Click **More networks** in the pop-up drop-down box to see all scanned WIFI hotspots, and then select the WIFI hotspot you want to connect to.

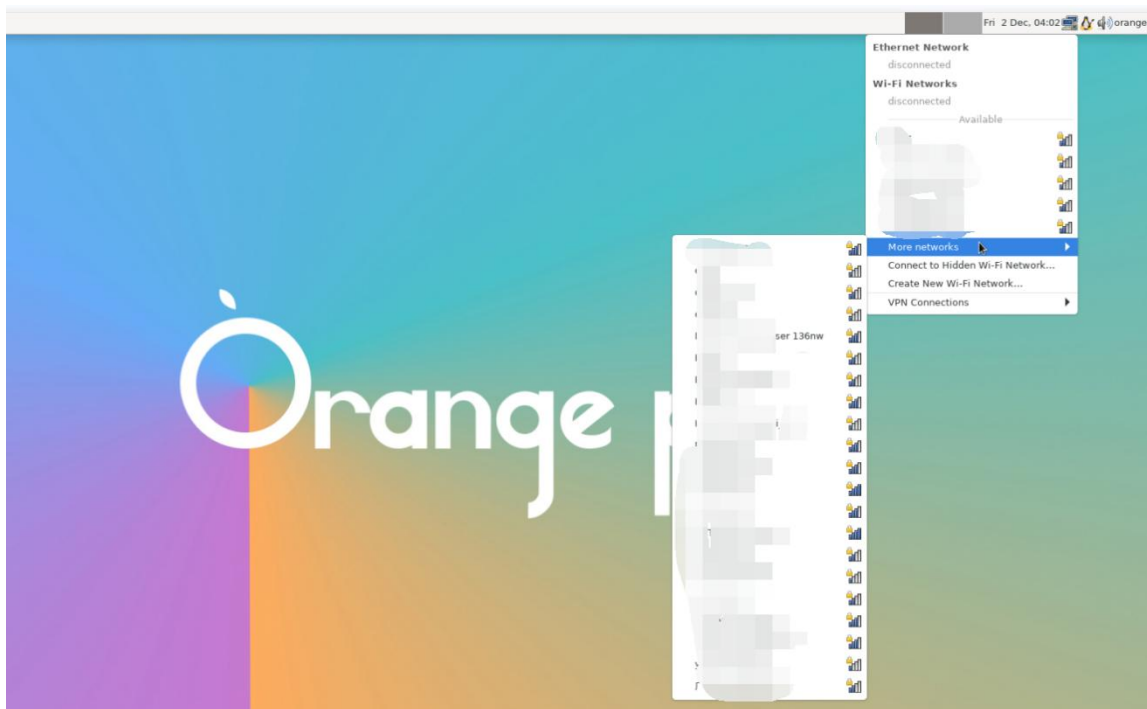


3) Then enter the password of the WIFI hotspot and click **Connect** to start connecting to


WIFI



4) After connecting to WIFI, you can open the browser to check whether you can access the Internet. The browser entrance is as shown below

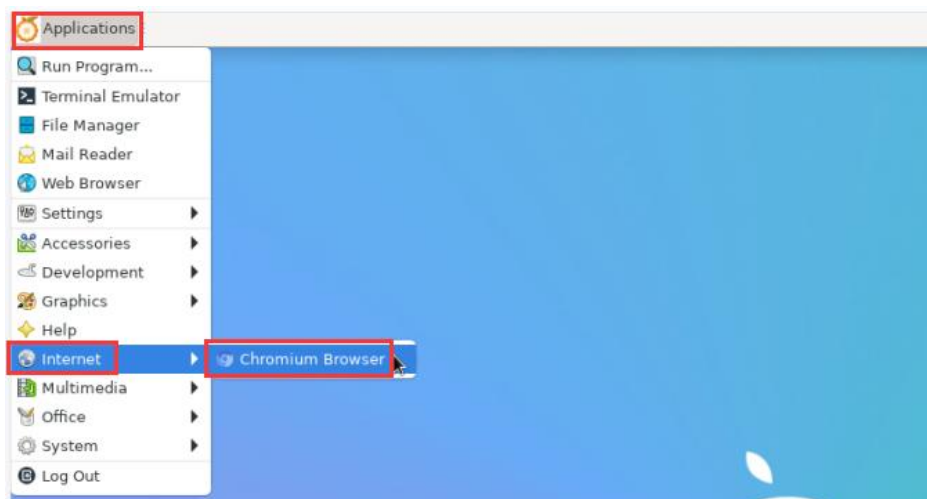

5) If you can open other web pages after opening the browser, it means the WIFI connection is normal.

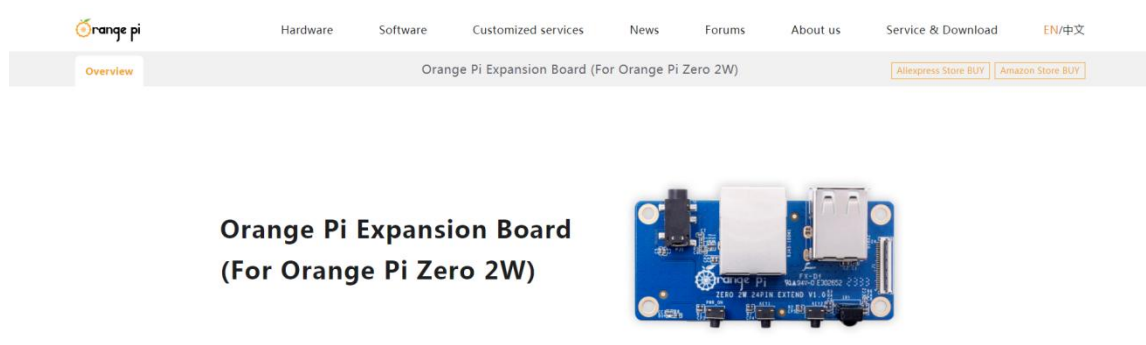



3. 9. 3. Method to create WIFI hotspot through create_ap

create_ap is a script that helps quickly create WIFI hotspots on Linux, and supports bridge and NAT modes. It can automatically combine hostapd, dnsmasq and iptables to complete the setting of WIFI hotspots, avoiding users from complicated configurations. The github address is as follows:

https://github.com/oblique/create_ap

The Linux image released by OPI has been pre-installed with the **create_ap** script. You can use the **create_ap** command to create a WIFI hotspot. The basic command format of **create_ap** is as follows:

```
create_ap [options] <wifi-interface> [<interface-with-internet>]
[<access-point-name> [<passphrase>]]
```

* **options:** You can use this parameter to specify the encryption method, frequency band of WIFI hotspot, bandwidth mode, network sharing method, etc. You can get the options through **create_ap -h**.

* **wifi-interface:** The name of the wireless network card

* **interface-with-internet:** The name of the network card that can connect to the Internet, usually **eth0**

* **access-point-name:** Hotspot name

* **passphrase:** hotspot password

3. 9. 3. 1. create_ap method to create WIFI hotspot in NAT mode

1) Enter the following command to create a WIFI hotspot with the name **orangeapi** and password **orangeapi** in NAT mode

Note that in the following command, Debian12 and Ubuntu24.04 needs to modify eth0 to end0

```
orangeapi@orangeapi:~$ sudo create_ap -m nat wlan0 eth0 orangeapi orangeapi --no-virt
```

2) If the following information is output, it means that the WIFI hotspot is successfully created.

```
orangeapi@orangeapi:~$ sudo create_ap -m nat wlan0 eth0 orangeapi orangeapi --no-virt
Config dir: /tmp/create_ap.wlan0.conf.TQkJtsz1
```



```
PID: 26139
Network Manager found, set wlan0 as unmanaged device... DONE
Sharing Internet using method: nat
hostapd command-line interface: hostapd_cli -p
/tmp/create_ap.wlan0.conf.TQkJtsz1/hostapd_ctrl
wlan0: interface state UNINITIALIZED->ENABLED
wlan0: AP-ENABLED
wlan0: STA ce:bd:9a:dd:a5:86 IEEE 802.11: associated
wlan0: AP-STA-CONNECTED ce:bd:9a:dd:a5:86
wlan0: STA ce:bd:9a:dd:a5:86 RADIUS: starting accounting session
D4FBF7E5C604F169
wlan0: STA ce:bd:9a:dd:a5:86 WPA: pairwise key handshake completed (RSN)
wlan0: EAPOL-4WAY-HS-COMPLETED ce:bd:9a:dd:a5:86
```

3) At this time, take out your mobile phone and find the WIFI hotspot named **orangepi** created by the development board in the searched WIFI list. Then you can click **orangepi** to connect to the hotspot. The password is **orangepi** set above.



4) The display after successful connection is as shown below



5) In NAT mode, the wireless device connected to the development board's hotspot requests an IP address from the development board's DHCP service, so there will be two different network segments. For example, the development board's IP here is 192.168.1.X



Note that in the following command, Debian12 and Ubuntu24.04 needs to modify eth0 to end0.

```
orange@orange:~$ sudo ifconfig eth0
eth0: flags=4163<UP,BROADCAST,RUNNING,MULTICAST>  mtu 1500
    inet 192.168.1.150  netmask 255.255.255.0  broadcast 192.168.1.255
    inet6 fe80::938f:8776:5783:afa2  prefixlen 64  scopeid 0x20<link>
    ether 4a:a0:c8:25:42:82  txqueuelen 1000  (Ethernet)
    RX packets 25370  bytes 2709590 (2.7 MB)
    RX errors 0  dropped 50  overruns 0  frame 0
    TX packets 3798  bytes 1519493 (1.5 MB)
    TX errors 0  dropped 0 overruns 0  carrier 0  collisions 0
    device interrupt 83
```

The DHCP service of the development board will assign the IP address of **192.168.12.0/24** to the device connected to the hotspot by default. At this time, click on the connected WIFI hotspot **orange**, and then you can see that the IP address of the mobile phone is **192.168.12.X**.



6) If you want to specify a different network segment for the connected device, you can specify it through the -g parameter. For example, use the -g parameter to specify the network segment of the access point AP as 192.168.2.1.

Note that in the following command, Debian12 and Ubuntu24.04 needs to

**modify eth0 to end0.**

```
orange@orange:~$ sudo create_ap -m nat wlan0 eth0 orange orange -g 192.168.2.1 --no-virt
```

At this time, after connecting to the hotspot through the mobile phone, click on the connected WIFI hotspot **orange**, and then you can see that the IP address of the mobile phone is **192.168.2.X**



7) Without specifying the **--freq-band** parameter, the hotspot created by default is in the 2.4G frequency band. If you want to create a hotspot in the 5G frequency band, you can specify it through the **--freq-band 5** parameter. The specific command is as follows

Note that in the following command, Debian12 and Ubuntu24.04 needs to modify eth0 to end0

```
orange@orange:~$ sudo create_ap -m nat wlan0 eth0 orange orange --freq-band 5 --no-virt
```

8) If you need to hide the SSID, you can specify the **--hidden** parameter. The specific command is as follows

Note that in the following command, Debian12 and Ubuntu24.04 needs to modify eth0 to end0.

```
orange@orange:~$ sudo create_ap -m nat wlan0 eth0 orange orange --hidden --no-virt
```

At this time, the mobile phone cannot search for WIFI hotspots. You need to



manually specify the WIFI hotspot name and enter the password to connect to the WIFI hotspot.

Enter network information	
Cancel	Other Network Join
Name	orangepi
Security	WPA >
Password	

3.9.3.2. create_ap method to create WIFI hotspot in bridge mode

1) Enter the following command to create a WIFI hotspot with the name **orangepi** and password **orangepi** in bridge mode

Note that in the following command, Debian12 and Ubuntu24.04 needs to modify eth0 to end0.

```
orangepi@orangepi:~$ sudo create_ap -m bridge wlan0 eth0 orangepi orangepi --no-virt
```

2) If the following information is output, it means that the WIFI hotspot is successfully created.

```
orangepi@orangepi:~$ sudo create_ap -m bridge wlan0 eth0 orangepi orangepi --no-virt
Config dir: /tmp/create_ap.wlan0.conf.zAcFIYTx
PID: 27707
Network Manager found, set wlan0 as unmanaged device... DONE
Sharing Internet using method: bridge
Create a bridge interface... br0 created.
hostapd command-line interface: hostapd_cli -p
/tmp/create_ap.wlan0.conf.zAcFIYTx/hostapd_ctrl
wlan0: interface state UNINITIALIZED->ENABLED
wlan0: AP-ENABLED
wlan0: STA ce:bd:9a:dd:a5:86 IEEE 802.11: associated
wlan0: AP-STA-CONNECTED ce:bd:9a:dd:a5:86
```



```
wlan0: STA ce:bd:9a:dd:a5:86 RADIUS: starting accounting session
937BF40E51897A7B
wlan0: STA ce:bd:9a:dd:a5:86 WPA: pairwise key handshake completed (RSN)
wlan0: EAPOL-4WAY-HS-COMPLETED ce:bd:9a:dd:a5:86
```

3) At this time, take out your mobile phone and find the WIFI hotspot named **orangepi** created by the development board in the searched WIFI list. Then you can click **orangepi** to connect to the hotspot. The password is **orangepi** set above.



4) The display after successful connection is as shown below



5) In bridge mode, the wireless device connected to the hotspot of the development board also requests an IP address from the DHCP service of the main router (the router to which the development board is connected). For example, the IP of the development board here is **192.168.1.X**

```
orangepi@orangepi:~$ sudo ifconfig eth0
eth0: flags=4163<UP,BROADCAST,RUNNING,MULTICAST>  mtu 1500
    inet 192.168.1.150  netmask 255.255.255.0  broadcast 192.168.1.255
    inet6 fe80::938f:8776:5783:afa2  prefixlen 64  scopeid 0x20<link>
    ether 4a:a0:c8:25:42:82  txqueuelen 1000  (Ethernet)
    RX packets 25370  bytes 2709590 (2.7 MB)
```



```

RX errors 0   dropped 50   overruns 0   frame 0
TX packets 3798   bytes 1519493 (1.5 MB)
TX errors 0   dropped 0 overruns 0   carrier 0   collisions 0
device interrupt 83

```

The IP of the device connected to the WIFI hotspot is also assigned by the main router, so the mobile phone connected to the WIFI hotspot and the development board are in the same network segment. At this time, click on the connected WIFI hotspot **orangepi**, and then you can see the IP address of the mobile phone. Also **192.168.1.X**.



6) Without specifying the **--freq-band** parameter, the hotspot created by default is in the 2.4G frequency band. If you want to create a hotspot in the 5G frequency band, you can specify it through the **--freq-band** parameter. The specific command is as follows

Note that in the following command, Debian12 and Ubuntu24.04 needs to modify eth0 to end0.

```
orangepi@orangepi:~$ sudo create_ap -m bridge wlan0 eth0 orangepi orangepi --freq-band 5 --no-virt
```

7) If you need to hide the SSID, you can specify the **--hidden** parameter. The specific command is as follows

Note that in the following command, Debian12 and Ubuntu24.04 needs to modify eth0 to end0.

```
orangepi@orangepi:~$ sudo create_ap -m bridge wlan0 eth0 orangepi orangepi --hidden --no-virt
```



At this time, the mobile phone cannot search for WIFI hotspots. You need to manually specify the WIFI hotspot name and enter the password to connect to the WIFI hotspot.

Enter network information

Cancel Other Network Join

Name orangepi

Security WPA >

Password

3. 9. 4. How to set a static IP address


Please do not set a static IP address by modifying the `/etc/network/interfaces` configuration file.

3. 9. 4. 1. Use the `nmtui` command to set a static IP address

1) First run the `nmtui` command

```
orangepi@orangepi:~$ sudo nmtui
```


2) Then select **Edit a connection** and press the Enter key

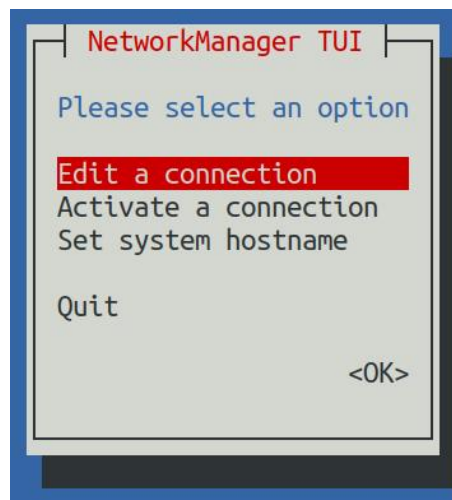


3) Then select the network interface for which a static IP address needs to be set. For




example, to set the static IP address of the **Ethernet** interface, select **Wired connection 1**.

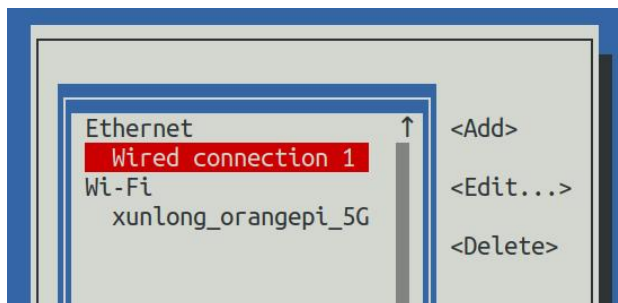


4) Then select **Edit** via the **Tab** key and press the Enter key

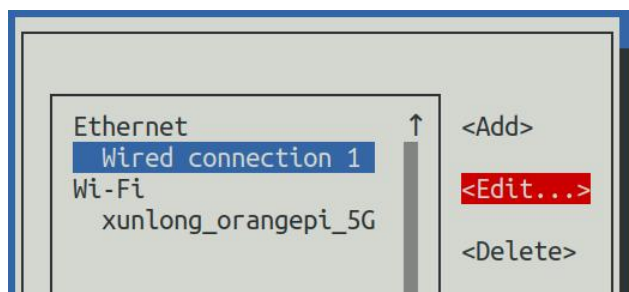


5) Then use the Tab key to move the cursor to the **<Automatic>** position shown in the figure below to configure IPv4

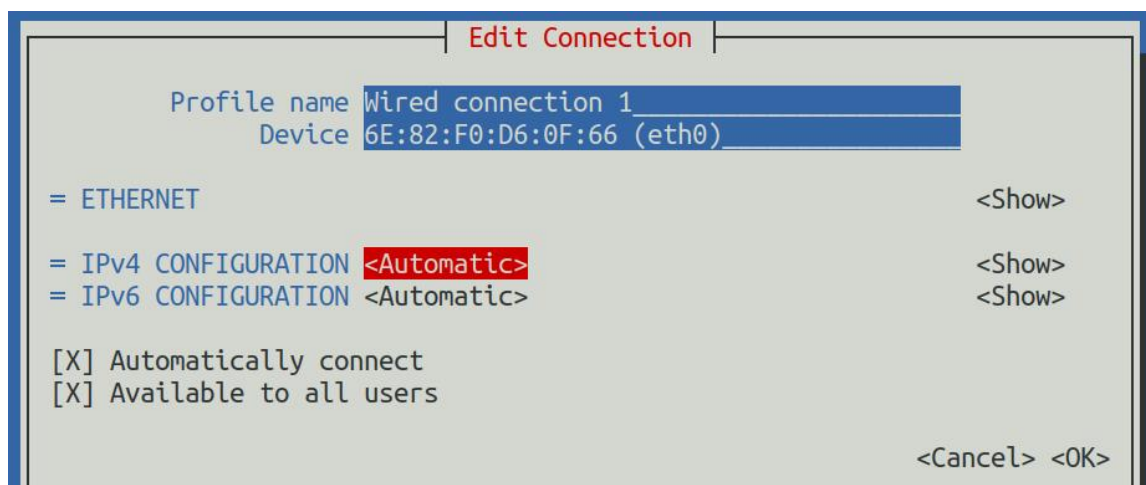


6) Then press Enter, select **Manual** through the up and down arrow keys, and then press Enter to confirm.

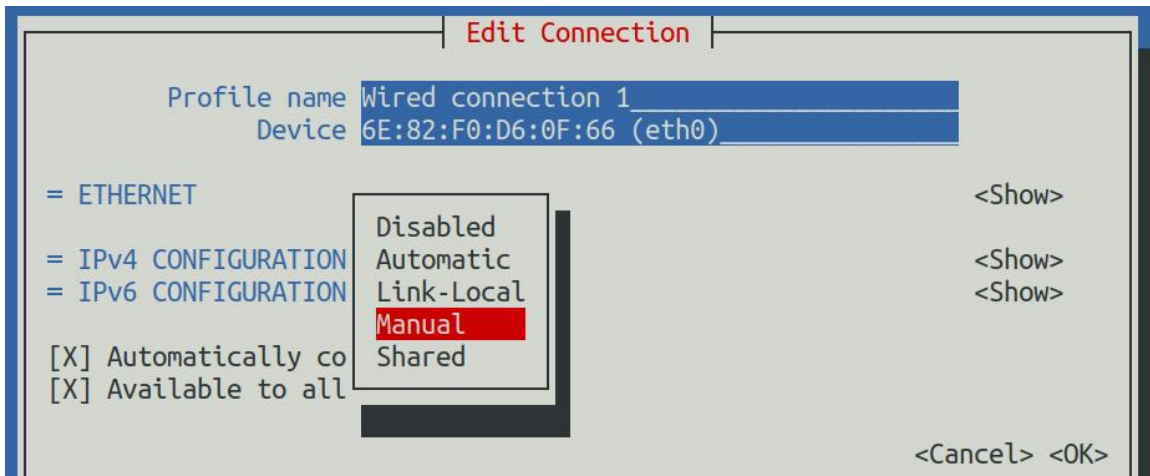

7) The display after selection is as shown below

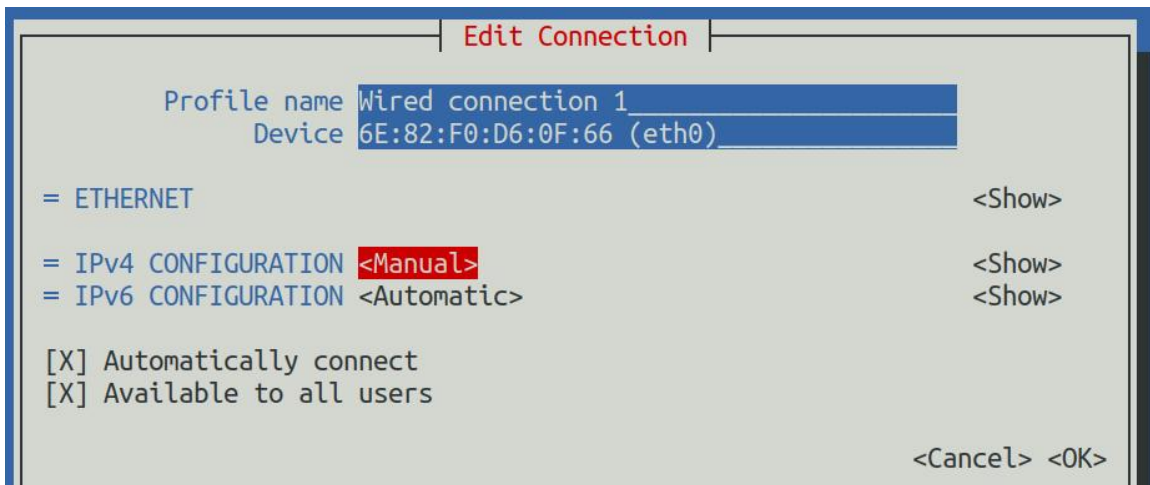

8) Then move the cursor to **<Show>** via the Tab key

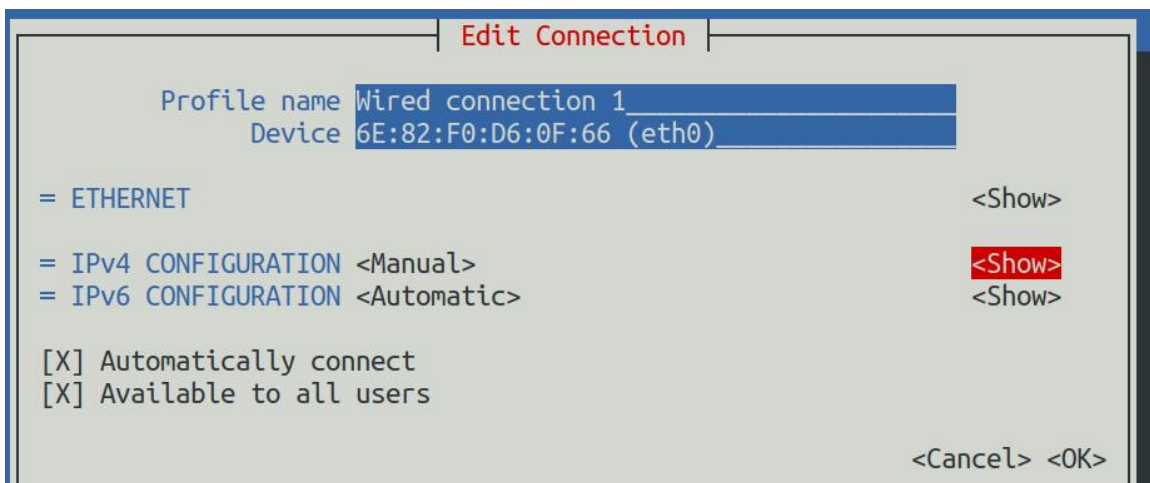



9) Then press Enter. After pressing Enter, the following setting interface will pop up.

Profile name Wired connection 1
Device 6E:82:F0:D6:0F:66 (eth0)

= ETHERNET <Show>

= IPv4 CONFIGURATION <Manual> <Hide>
Addresses <Add...>
Gateway <Add...>
DNS servers <Add...>
Search domains <Add...>

Routing (No custom routes) <Edit...>
☐ Never use this network for default route
☐ Ignore automatically obtained routes
☐ Ignore automatically obtained DNS parameters
☐ Require IPv4 addressing for this connection

= IPv6 CONFIGURATION <Automatic> <Show>

☒ Automatically connect
☒ Available to all users

<Cancel> <OK>

10) Then you can set the IP address (Addresses), gateway (Gateway) and DNS server address as shown in the figure below (there are many other setting options, please explore by yourself), please set according to your specific needs. The values set in the image below are just an example


Profile name Wired connection 1
Device eth0 (86:F2:85:2C:81:CE)

= ETHERNET <Show>


= IPv4 CONFIGURATION <Manual> <Hide>
Addresses 192.168.1.177/24 <Remove>
<Add...>
Gateway 192.168.1.1
DNS servers 8.8.8.8 <Remove>
<Add...>
Search domains <Add...>




11) After setting, move the cursor to **<OK>** in the lower right corner, and then press Enter to confirm.

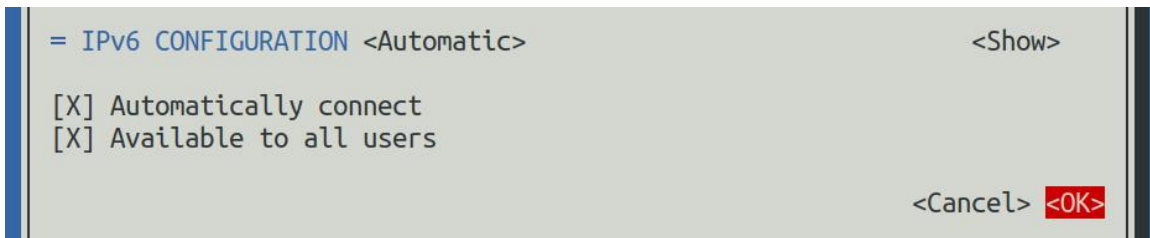


12) Then click **<Back>** to return to the previous level selection interface

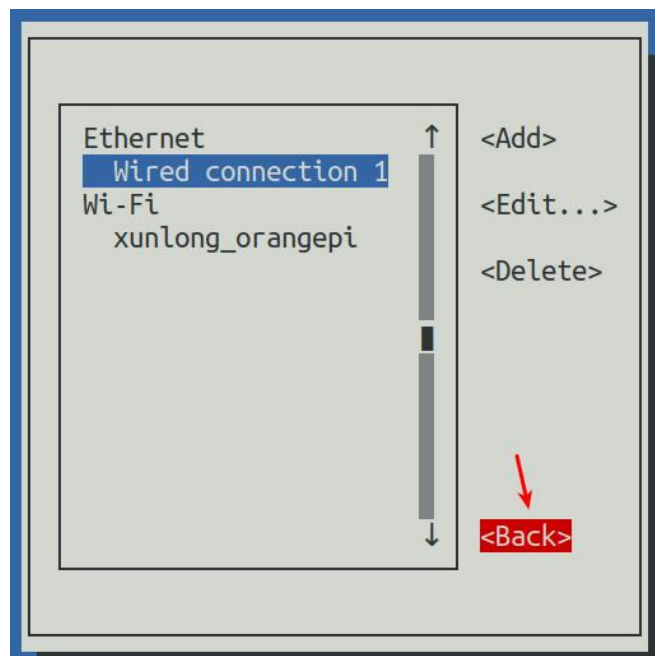


13) Then select **Activate a connection**, then move the cursor to **<OK>**, and finally click Enter

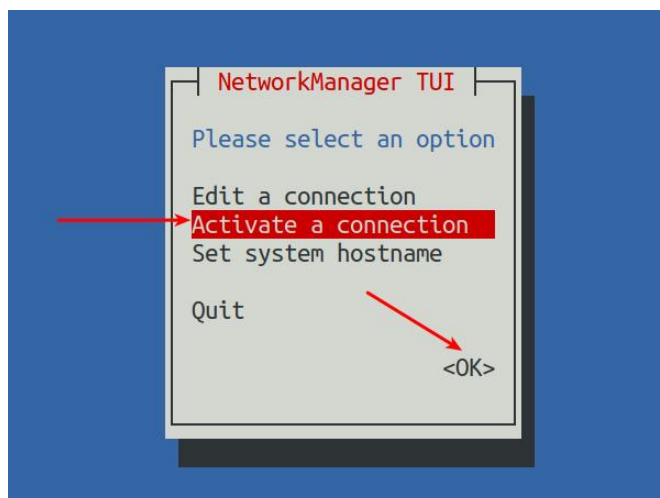


14) Then select the network interface that needs to be set, such as **Wired connection 1**, then move the cursor to **<Deactivate>**, and then press the Enter key to disable **Wired connection 1**

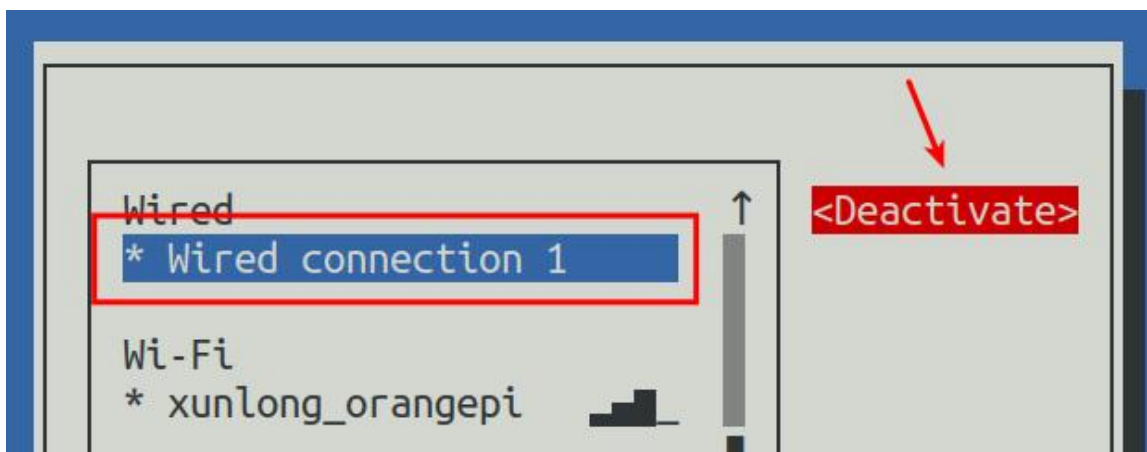

15) Then please do not move the cursor, and then press the Enter key to re-enable **Wired connection 1**, so that the static IP address set previously will take effect.

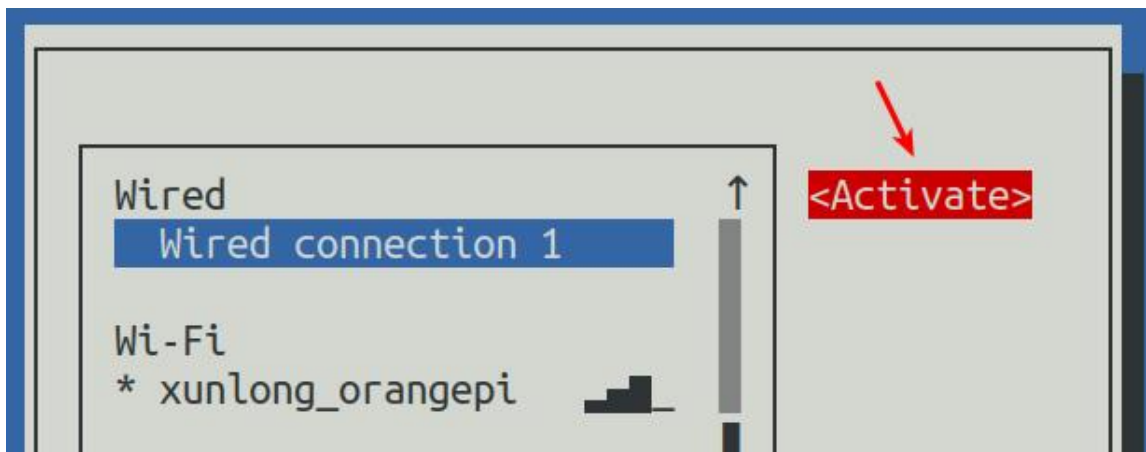

16) Then you can exit nmtui through the **<Back>** and **Quit** buttons

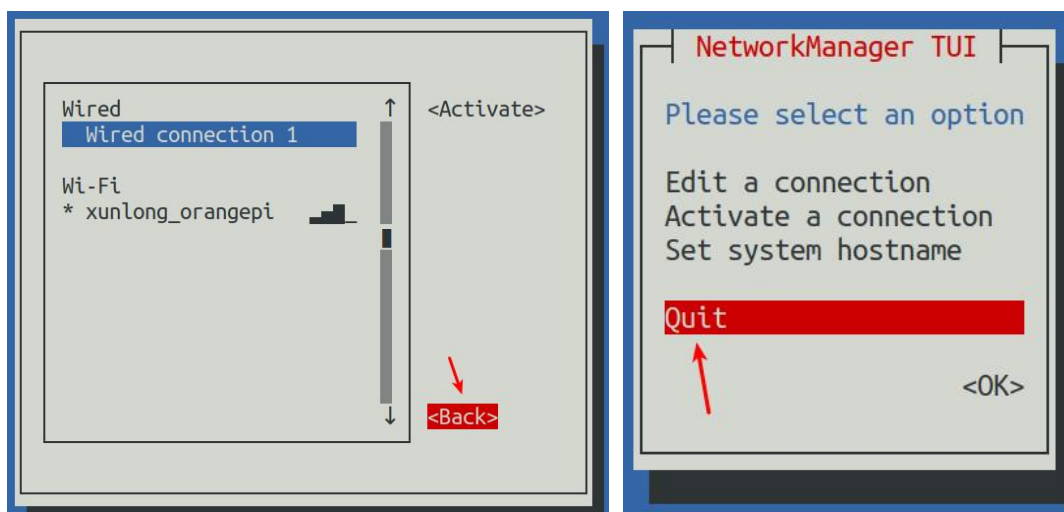

17) Then through **ip a s eth0** you can see that the IP address of the network port has become the static IP address set previously.

Note that in the following command, Debian12 and Ubuntu24.04 needs to modify eth0 to end0.

```
orange@orange:~$ ip a s eth0
3: eth0: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc pfifo_fast state UP group default qlen 1000
    link/ether 5e:ac:14:a5:92:b3 brd ff:ff:ff:ff:ff:ff
    inet 192.168.1.177/24 brd 192.168.1.255 scope global noprefixroute eth0
        valid_lft forever preferred_lft forever
    inet6 241e:3b8:3240:c3a0:e269:8305:dc08:135e/64 scope global dynamic
```



```
noprefixroute
    valid_lft 259149sec preferred_lft 172749sec
inet6 fe80::957d:bbbe:4928:3604/64 scope link noprefixroute
    valid_lft forever preferred_lft forever
```

18) Then you can test the network connectivity to check whether the IP address is configured OK. The **ping** command can be interrupted by using the **Ctrl+C** shortcut key.

Note that in the following command, Debian12 and Ubuntu24.04 needs to modify eth0 to end0.

```
orangeipi@orangeipi:~$ ping 192.168.1.177 -I eth0
PING 192.168.1.47 (192.168.1.47) from 192.168.1.188 eth0: 56(84) bytes of data.
64 bytes from 192.168.1.47: icmp_seq=1 ttl=64 time=0.233 ms
64 bytes from 192.168.1.47: icmp_seq=2 ttl=64 time=0.263 ms
64 bytes from 192.168.1.47: icmp_seq=3 ttl=64 time=0.273 ms
64 bytes from 192.168.1.47: icmp_seq=4 ttl=64 time=0.269 ms
64 bytes from 192.168.1.47: icmp_seq=5 ttl=64 time=0.275 ms
^C
--- 192.168.1.47 ping statistics ---
5 packets transmitted, 5 received, 0% packet loss, time 4042ms
rtt min/avg/max/mdev = 0.233/0.262/0.275/0.015 ms
```

3.9.4.2. Use nmcli command to set static IP address

1) If you want to set a static IP address for the network port, please plug the network cable into the development board first. **If you need to set a static IP address for WIFI, please connect to WIFI first**, and then start setting the static IP address.

2) Then you can view the name of the network device through the **nmcli con show** command, as shown below

- a. **orangeipi** is the name of the WIFI network interface (the names are not necessarily the same)
- b. **Wired connection 1** is the name of the Ethernet interface

```
orangeipi@orangeipi:~$ nmcli con show
```

NAME	UUID	TYPE	DEVICE
orangeipi	cfc4f922-ae48-46f1-84e1-2f19e9ec5e2a	wifi	wlan0



Wired connection 1	9db058b7-7701-37b8-9411-efc2ae8bfa30	ethernet	eth0
---------------------------	--------------------------------------	----------	------

3) 中 Then enter the following command, where

- "Wired connection 1"** means setting the static IP address of the Ethernet port. If you need to set the static IP address of WIFI, please change it to the name corresponding to the WIFI network interface (can be obtained through the **nmcli con show** command)
- ipv4.addresses** is followed by the static IP address to be set, which can be modified to the value you want to set.
- ipv4.gateway** represents the address of the gateway

```
orangeipi@orangeipi:~$ sudo nmcli con mod "Wired connection 1" \
ipv4.addresses "192.168.1.110" \
ipv4.gateway "192.168.1.1" \
ipv4.dns "8.8.8.8" \
ipv4.method "manual"
```

4) Then restart the linux system

```
orangeipi@orangeipi:~$ sudo reboot
```

5) Then re-enter the Linux system and use the **ip addr show eth0** command to see that the IP address has been set to the desired value.

```
orangeipi@orangeipi:~$ ip addr show eth0
3: eth0: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc pfifo_fast state
UP group default qlen 1000
    link/ether 5e:ae:14:a5:91:b3 brd ff:ff:ff:ff:ff:ff
    inet 192.168.1.110/32 brd 192.168.1.110 scope global noprefixroute eth0
        valid_lft forever preferred_lft forever
    inet6 240e:3b7:3240:c3a0:97de:1d01:b290:fe3a/64 scope global dynamic
noprefixroute
        valid_lft 259183sec preferred_lft 172783sec
    inet6 fe80::3312:861a:a589:d3c/64 scope link noprefixroute
        valid_lft forever preferred_lft forever
```

3. 9. 5. How to set up the Linux system to automatically connect to the network for the first time

The development board has an Ethernet port. If you want to remotely log in to



the Linux system of the development board through the Ethernet port, you only need to plug in a network cable that can access the Internet normally. After starting the Linux system, it will automatically connect to the Ethernet port through DHCP. Assign an IP address, and then we can obtain the IP address of the Ethernet port through the HDMI screen, serial port, or view the router's background, and then log in to the Linux system remotely.

The development board also has wireless WIFI. If you want to remotely log in to the Linux system of the development board through WIFI, you need to remotely log in to the Linux system through ssh through the IP address of the Ethernet port and then use commands to connect to WIFI, or use commands on the HDMI screen or serial port. Connect to WIFI.

But if there is no HDMI screen and serial port module, although there is a network cable, the IP address of the development board cannot be viewed through the router background. Or if there is no HDMI screen, serial port module and network cable, and only WIFI can be connected, you can use the method introduced in this section to automatically connect to WIFI and set the static IP address of WIFI or automatically set the static IP address of the Ethernet port.

To use the method in this section, you first need to prepare a Linux system machine. For example, a computer or virtual machine with Ubuntu system installed.

Why do you need a Linux system machine? Because the root file system of the Linux system of the development board burned in the TF card is in ext4 format. The Linux system machine can mount it normally and then modify the configuration file in it.

If you want to modify it in a Windows system, you can use the software **Paragon ExtFS for Windows**. Since this software requires payment, and there is currently no similar free software that is easy to use, I will not demonstrate it in detail here.

In addition, if you have any problems when trying to use **Paragon ExtFS for Windows**, please solve it yourself. We will not answer questions.

1) First burn the Linux image of the development board you want to use into a TF card, and then use a card reader to insert the TF card with the Linux image of the development board into a machine with a Linux system (such as a machine with Ubuntu system Computer, the following uses Ubuntu computer as an example for demonstration)



2) When the TF card is inserted into the Ubuntu computer, the Ubuntu computer will generally automatically mount the Linux root file system partition in the TF card. From the following command, we can know that **/media/test/opi_root** is the Linux root file in the TF card. System mounting path

```
test@test:~$ df -h | grep "media"
/dev/sdd1 1.4G 1.2G 167M 88% /media/test/opi_root
test@test:~$ ls /media/test/opi_root
bin boot dev etc home lib lost+found media mnt opt proc root run
sbin selinux srv sys tmp usr var
```

3) Then enter the **/boot** directory of the Linux system burned in the TF card

```
test@test:~$ cd /media/test/opi_root/boot/
```

4) Then copy the **orange_pi_first_run.txt.template** to **orange_pi_first_run.txt**. Through the **orange_pi_first_run.txt** configuration file, you can set the development board to automatically connect to a WIFI hotspot when the Linux system starts for the first time. You can also set the WIFI or Ethernet port Static IP address.

```
test@test:/media/test/opi_root/boot$ sudo cp orange_pi_first_run.txt.template orange_pi_first_run.txt
```

5) You can open the **orange_pi_first_run.txt** file through the following command, and then you can view and modify the contents.

```
test@test:/media/test/opi_root/boot$ sudo vim orange_pi_first_run.txt
```

6) Variable usage instructions in the **orange_pi_first_run.txt** file

- a. **FR_general_delete_this_file_after_completion** The variable is used to set whether to delete the **orange_pi_first_run.txt** file after the first startup. The default is 1, which means deletion. If set to 0, **orange_pi_first_run.txt** will be renamed after the first startup.**orange_pi_first_run.txt.old**, Generally, just keep the default value
- b. **FR_net_change_defaults** The variable is used to set whether to change the default network settings. This must be set to 1, otherwise all network settings will not take effect.
- c. **FR_net_ethernet_enabled** The variable is used to control whether to enable the configuration of the Ethernet port. If you need to set the static IP address of the



Ethernet port, please set it to 1

- d. **FR_net_wifi_enabled** The variable is used to control whether to enable WIFI configuration. If you need to set the development board to automatically connect to WIFI hotspots, you must set it to 1. Also please note that if this variable is set to 1, the Ethernet port settings will be invalid. That is to say, the WIFI and Ethernet ports cannot be set at the same time (why, because it is not necessary...)
- e. **FR_net_wifi_ssid** Variable is used to set the name of the WIFI hotspot you want to connect to
- f. **FR_net_wifi_key** Variable is used to set the password of the WIFI hotspot you want to connect to
- g. **FR_net_use_static** Variables are used to set whether the static IP address of the WIFI or Ethernet port needs to be set.
- h. **FR_net_static_ip** The variable is used to set the static IP address. Please set it according to your actual situation.
- i. **FR_net_static_gateway** Variables are used to set the gateway. Please set according to your actual situation.

7) Here are some specific setting examples:

- a. For example, if you want the Linux system of the development board to automatically connect to the WIFI hotspot after it is started for the first time, you can set it like this:
 - a) Set **FR_net_change_defaults** to 1
 - b) Set **FR_net_wifi_enabled** to 1
 - c) Set **FR_net_wifi_ssid** to the name of the WIFI hotspot you want to connect to
 - d) Set **FR_net_wifi_key** to the password of the WIFI hotspot you want to connect to
- b. For example, you want the Linux system of the development board to automatically connect to the WIFI hotspot after the first startup, and set the WIFI IP address to a specific static IP address (so that when the Linux system starts, you can directly use the set static IP address to ssh remotely Log in to the development board, there is no need to check the IP address of the development board through the router background), you can set it like this:
 - a) Set **FR_net_change_defaults** to 1
 - b) Set **FR_net_wifi_enabled** to 1



- c) Set **FR_net_wifi_ssid** to the name of the WIFI hotspot you want to connect to
 - d) Set **FR_net_wifi_key** to the password of the WIFI hotspot you want to connect to
 - e) Set **FR_net_use_static** to **1**
 - f) Set **FR_net_static_ip** to the desired IP address
 - g) Set **R_net_static_gateway** to the corresponding gateway address
- c. For example, if you want the development board's Linux system to automatically set the IP address of the Ethernet port to the desired static IP address after it is started for the first time, you can set it like this
- a) Set **FR_net_change_default** to **1**
 - b) Set **FR_net_ethernet_enabled** to **1**
 - c) Set **FR_net_use_static** to **1**
 - d) Set **FR_net_static_ip** to the desired IP address
 - e) Set **FR_net_static_gateway** to the corresponding gateway address
- 8) After modifying the `orange_pi_first_run.txt` file, you can exit the `/boot` directory of the development board Linux system in the TF card, uninstall the TF card, and then insert the TF card into the development board to start.
- 9) If a static IP address is not set, you still need to check the IP address through the router background. If a static IP address is set, you can ping the set static IP address on the computer. If you can ping, it means that the system has started normally, and The network has been set up correctly, and then you can use the set IP address to ssh to remotely log in to the Linux system of the development board.

After the development board's Linux system is started for the first time, `orange_pi_first_run.txt` will be deleted or renamed to `orange_pi_first_run.txt.old`. At this time, even if the `orange_pi_first_run.txt` configuration file is reset, and then the development board's Linux system is restarted, `orange_pi_first_run`. The configuration in txt will not take effect again, because this configuration will only take effect when the Linux system is started for the first time after burning it. Please pay special attention to this point.



3. 10. SSH remote login development board

Linux systems enable ssh remote login by default and allow root users to log in to the system. Before ssh login, you first need to ensure that the Ethernet or wifi network is connected, and then use the ip addr command or obtain the IP address of the development board by checking the router

3. 10. 1. SSH remote login development board under Ubuntu

1) Obtain the IP address of the development board

2) Then you can remotely log in to the Linux system through the ssh command

```
test@test:~$ ssh orangepi@192.168.1.xxx      (Need to be replaced with the IP
                                             address of the development board)
orangepi@192.168.1.xx's password:          ( iEnter your password here, the default
                                             password is orangepi )
```

Note that when entering a password, **the specific content of the entered password will not be displayed on the screen**. Please do not think that there is something wrong. Just press Enter after entering it.。

f you are prompted to refuse the connection, as long as you are using the image provided by Orange Pi, **please do not doubt whether the orangepi password is incorrect**, but look for other reasons.。

3) After successfully logging into the system, the display is as shown below



```
test@test:~$ ssh orangepi@192.168.1.121
orangepi@192.168.1.121's password:

Welcome to Orange Pi 1.0.0 Bullseye with Linux 6.1.31-sun50iw9

System load: 39%      Up time: 21 min    Local users: 4
Memory usage: 31% of 1.45G  IP: 192.168.1.121
CPU temp: 54°C      Usage of /: 25% of 15G

Last login: Thu Jun  8 08:03:08 2023 from 192.168.1.119
orangepi@orangepi:~$
```


If ssh cannot log in to the Linux system normally, first check whether the IP address of the development board can be pinged. If there is no problem with ping, you can log in to the Linux system through the serial port or HDMI display and enter the following command on the development board before trying again. Can it be connected?:

```
root@orangepi:~# reset_ssh.sh
```

If it still doesn't work, please try restarting the system.


3. 10. 2. SSH remote login development board under Windows

- 1) First obtain the IP address of the development board
- 2) You can use MobaXterm to remotely log in to the development board under Windows. First create a new ssh session.
 - a. Open **Session**
 - b. Then select **SSH** in **Session Setting**
 - c. Then enter the IP address of the development board in **Remote host**
 - d. Then enter the username **root** or **orangepi** of the linux system in **Specify username**.
 - e. Finally click **OK**

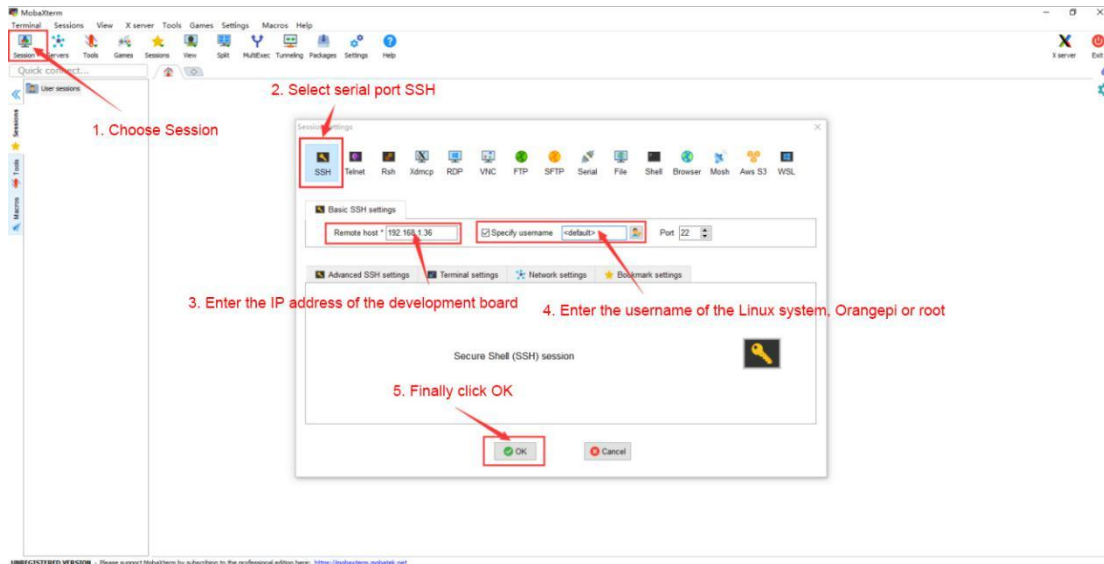


3) You will then be prompted to enter a password. The default passwords for both root and orangepi users are orangepi.

Note that when entering a password, the specific content of the entered password will not be displayed on the screen. Please do not think that there is any malfunction. Just press Enter after entering the password.

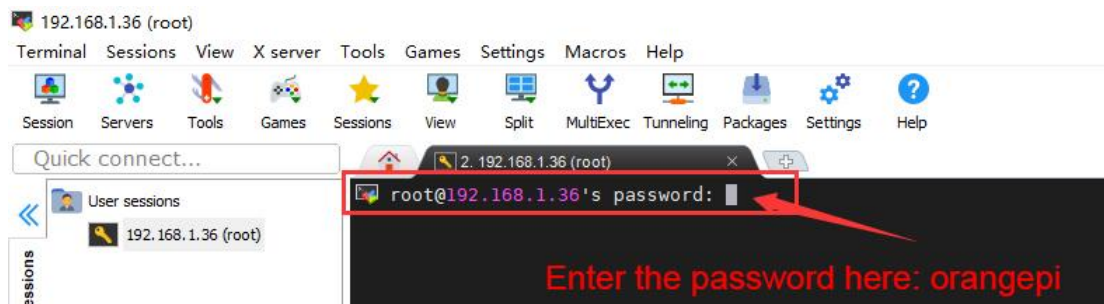

4) After successfully logging into the system, the display is as shown below

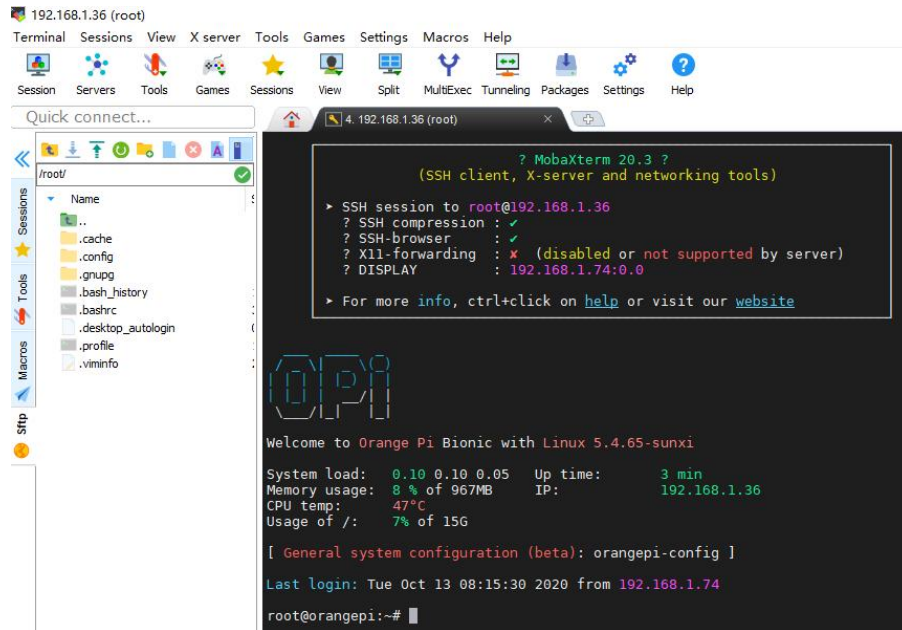

3. 11. HDMI test

3. 11. 1. HDMI display test

1) Use Mini HDMI to HDMI cable to connect the Orange Pi development board and HDMI display



2) After starting the Linux system, if there is image output on the HDMI display, it means that the HDMI interface is working normally.

Note that although many laptops have HDMI interfaces, the HDMI interface of the laptop generally only has the output function and does not have the HDMI in function, which means that the HDMI output of other devices cannot be displayed on the laptop screen

When you want to connect the HDMI of the development board to the HDMI



interface of your laptop, please first confirm that your laptop supports the HDMI in function

When HDMI does not display, please first check whether the HDMI cable is plugged in tightly. After confirming that the wiring is OK, you can try a different screen to see if there is any display.

3. 11. 2. HDMI to VGA display test

1) First you need to prepare the following accessories

- a. HDMI to VGA converter



- b. A VGA cable and a Mini HDMI male to HDMI female adapter



- c. A monitor or TV that supports VGA interface

2) HDMI to VGA display test is as follows



When using HDMI to VGA display, the development board and the Linux system of the development board do not need to make any settings. You only need the Mini HDMI interface of the development board to display normally. So if there is a problem with the test, please check whether there is a problem with the HDMI to VGA converter, VGA cable and monitor.

3. 11. 3. How to set HDMI resolution in Linux5.4 system

Note: This method is only applicable to systems with Linux 5.4 kernel.

1) There is a `disp_mode` variable in `/boot/orangepiEnv.txt` of the Linux system, which can be used to set the resolution of HDMI output. The default resolution of the Linux system is 1080p60

```
orangepi@orangepi:~$ sudo vim /boot/orangepiEnv.txt
verbosity=1
console=both
disp_mode=1080p60
fb0_width=1920
fb0_height=1080
```

2) The `disp_mode` variable supports setting values as shown in the table below



disp_mode supported values	HDMI resolution	HDMI refresh rate
480i	720x480	60
576i	720x480	50
480p	720x480	60
576p	720x576	60
720p50	1280x720	50
720p60	1280x720	60
1080i50	1920x1080	50
1080i60	1920x1080	60
1080p24	1920x1080	24
1080p50	1920x1080	50
1080p60	1920x1080	60

Note: Linux systems currently do not support 4K resolution.

3) Change the value of the disp_mode variable to the resolution you want to output, then restart the system, and HDMI will output the set resolution.

4) The method of checking the HDMI output resolution is as follows. If the displayed resolution is the same as the set resolution, it means that the settings on the development board are correct.

```
orange@orange:~$ sudo cat /sys/class/disp/disp/attr/sys
```

```

orange@orange:~$ sudo cat /sys/class/disp/disp/attr/sys
screen 0
de_rate 696000000 hz_ref_fps:60
mode: 1920x1080 fnt(rgb) c1(0x0) range(limit) eef(0x0) bits(8bits) err(0) force_sync(0) unblank direct_show(false) iommu(1)
output: cache(0) cache_max(0) umap_skip(0) umap_skip_max(0)
hdmi output mode(10) fps:60.6 1920x1080
err:0 skip:1 irq:6200 vsync:0 vsync_skip:0
BUF enable ch(1) yr(0) z(16) prem(1) align(1) 255 fnt( 0) fb(1920,1080,1920,1080) align( 0, 0, 0) crop( 0, 0,1920,1080) frame( 0, 0,1920,1080) addr(fe000000, 0, 0) fla
p(0x 0) trd(0,0)
depth( 0) trans(0)
orange@orange:~$

```

3. 11. 4. How to modify the width and height of Framebuffer in Linux5.4 system

Note: This method is only applicable to systems with Linux 5.4 kernel.

There are two variables, fb0_width and fb0_height, in `/boot/orangepiEnv.txt` of the Linux system. You can use them to set the width and height of the Framebuffer. The Linux system defaults to fb0_width=1920 and fb0_height=1080.

```
orange@orange:~$ sudo vim /boot/orangepiEnv.txt
```



```

verbosity=1
console=both
disp_mode=1080p60
fb0_width=1920
fb0_height=1080

```

The reference values corresponding to different resolutions of fb0_width and fb0_height are as follows::

HDMI resolution	fb0_width	fb0_height
480p	720	480
576p	720	576
720p	1280	720
1080p	1920	1080

Under the same HDMI resolution, when the values set by fb0_width and fb0_height are larger, the text displayed on the screen will be smaller. When the values of fb0_width and fb0_height are set smaller, the text displayed on the screen will be larger.

3. 11. 5. Framebuffer cursor setting

1) The softcursor used by Framebuffer, the method to set the cursor to blink or not to blink is as follows

```

root@orangepi:~# echo 1 > /sys/class/graphics/fbcon/cursor_blink    #Cursor flashes
root@orangepi:~# echo 0 > /sys/class/graphics/fbcon/cursor_blink    #Cursor does
                                not flash

```

2) If you need to hide the cursor, you can add vt.global_cursor_default=0 to the extraargs variable in **/boot/orangepiEnv.txt** (the value of extraargs will be assigned to the bootargs environment variable and eventually passed to the kernel) (if **vt.global_cursor_default=1**, it will be displayed cursor), then restart the system and you will see that the cursor has disappeared.

```

orangepi@orangepi:~$ sudo vim /boot/orangepiEnv.txt
verbosity=1
console=both
disp_mode=1080p60
fb0_width=1920
fb0_height=1080
extraargs=vt.global_cursor_default=0

```


3. 12. How to use Bluetooth

3. 12. 1. Testing method for desktop image


- 1) Click the Bluetooth icon in the upper right corner of the desktop




- 2) Then select the adapter

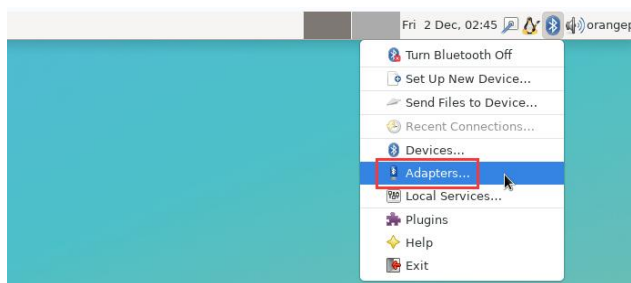

- 3) If prompted with the following interface, please select **Yes**.

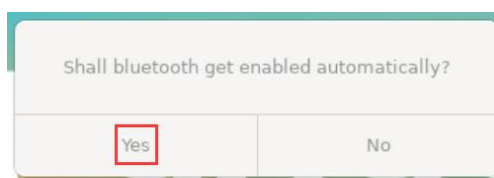



- 4) Then set the **Visibility Setting** to **Always visible** in the Bluetooth adapter setting interface, and then turn it off.

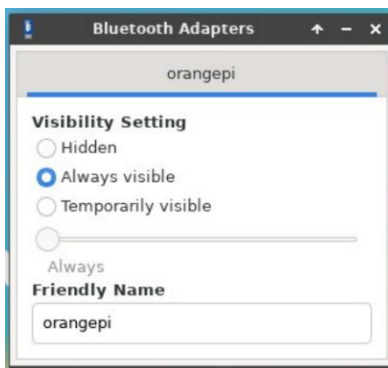




5) Then open the configuration interface of the Bluetooth device


If you are using the Ubuntu24.04 system, please follow the steps shown in the following figure from the application list in the upper left corner of the system desktop, and click "Applications>Settings>Bluetooth Manager" to open the Bluetooth Manager.

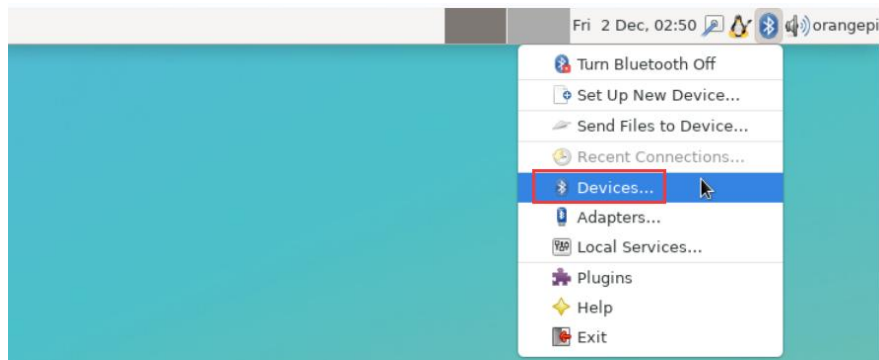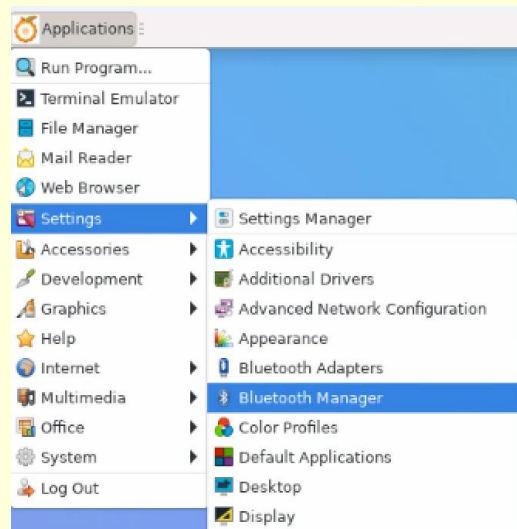


6) Click **Search** to start scanning for surrounding Bluetooth devices

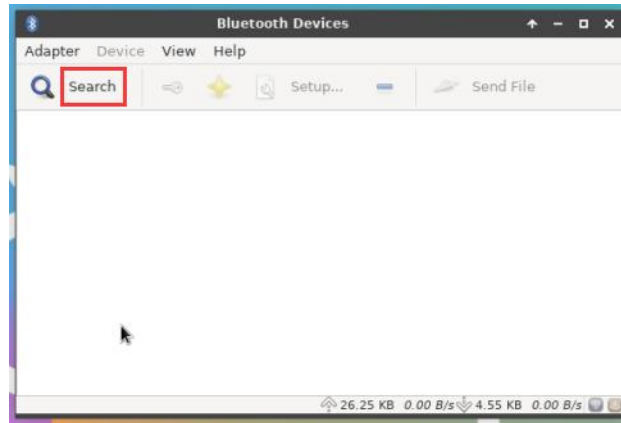

7) Then select the Bluetooth device you want to connect, and then right-click the mouse to pop up the operation interface for the Bluetooth device. Select **Pair** to start pairing. The demonstration here is pairing with an Android phone.

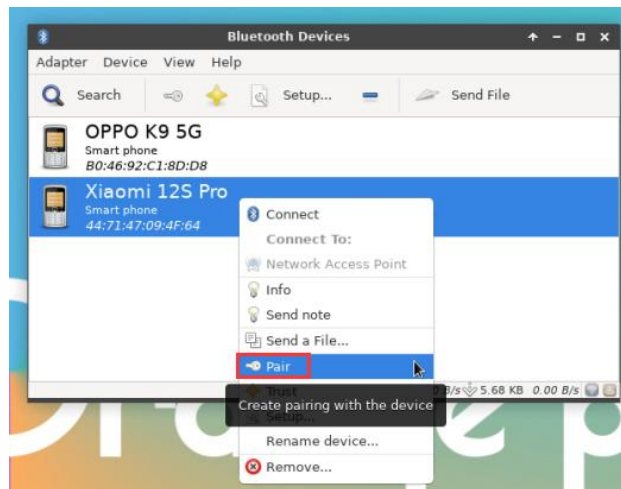


8) When pairing, a pairing confirmation box will pop up in the upper right corner of the desktop. Just select **Confirm** to confirm. At this time, you also need to confirm on the mobile phone.

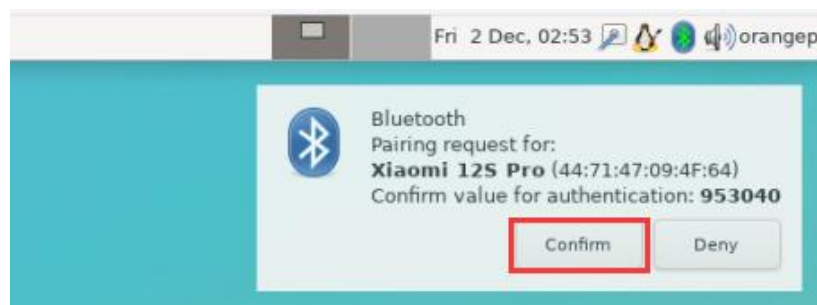




9) After pairing with the mobile phone, you can select the paired Bluetooth device, then right-click and select **Send a File** to start sending a picture to the mobile phone.

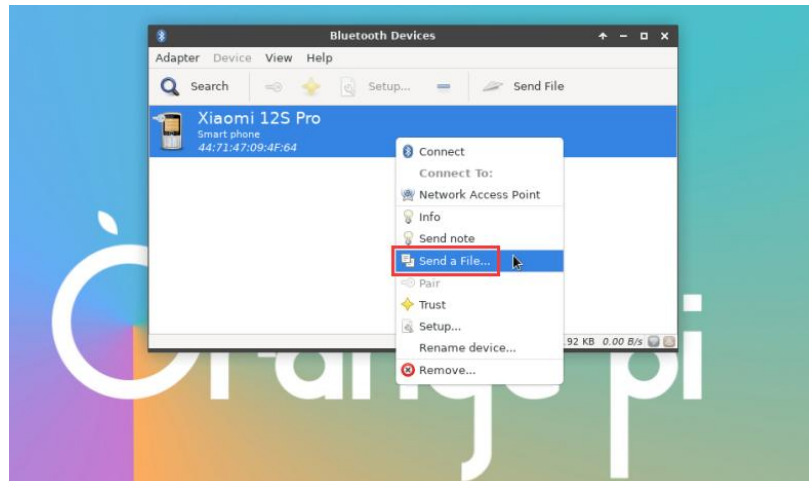

10) The interface for sending pictures is as follows

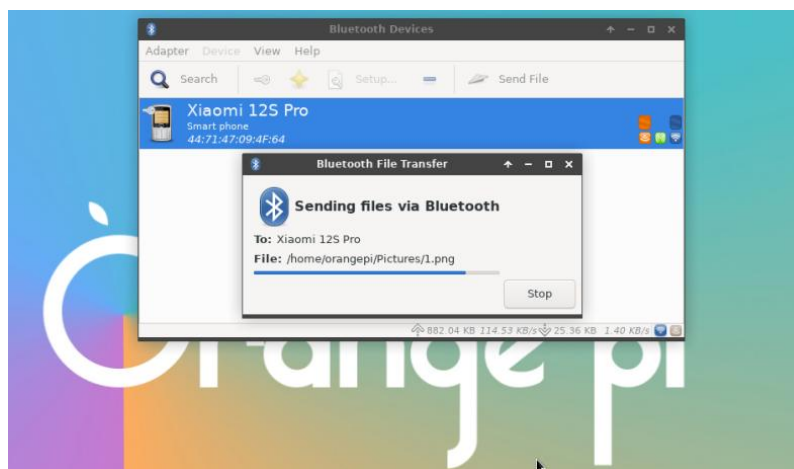

3. 12. 2. How to use server version image

1) After entering the system, you can first check whether there is a Bluetooth device node through the **hciconfig** command. If it exists, it means that the Bluetooth initialization is normal.

```
orangepi@orangepi:~$ sudo apt update && sudo apt install -y bluez
orangepi@orangepi:~$ hciconfig -a
hci0:  Type: Primary  Bus: UART
      BD Address: 3E:61:3D:19:0E:52  ACL MTU: 1021:8  SCO MTU: 240:3
      UP RUNNING
      RX bytes:925 acl:0 sco:0 events:72 errors:0
      TX bytes:5498 acl:0 sco:0 commands:72 errors:0
      Features: 0xbf 0xff 0x8d 0xfe 0xdb 0x3d 0x7b 0xc7
```



```
Packet type: DM1 DM3 DM5 DH1 DH3 DH5 HV1 HV2 HV3
Link policy: RSWITCH SNIFF
Link mode: SLAVE ACCEPT
Name: 'orangepi'
Class: 0x3c0000
Service Classes: Rendering, Capturing, Object Transfer, Audio
Device Class: Miscellaneous,
HCI Version: 5.0 (0x9)  Revision: 0x400
LMP Version: 5.0 (0x9)  Subversion: 0x400
Manufacturer: Spreadtrum Communications Shanghai Ltd (492)
```

2) Use **bluetoothctl** to scan for Bluetooth devices

```
orangepi@orangepi:~$ sudo bluetoothctl
[NEW] Controller 10:11:12:13:14:15 orangepizero2w [default]
Agent registered
[bluetooth]# power on          #enable controller
Changing power on succeeded
[bluetooth]# discoverable on    #Set the controller to be discoverable
Changing discoverable on succeeded
[CHG] Controller 10:11:12:13:14:15 Discoverable: yes
[bluetooth]# pairable on        #Set the controller to be pairable
Changing pairable on succeeded
[bluetooth]# scan on            #Start scanning for surrounding Bluetooth devices
Discovery started
[CHG] Controller 10:11:12:13:14:15 Discovering: yes
[NEW] Device 76:60:79:29:B9:31 76-60-79-29-B9-31
[NEW] Device 9C:2E:A1:42:71:11  Xiaomi mobile phone
[NEW] Device DC:72:9B:4C:F4:CF orangepi
[bluetooth]# scan off           #After scanning to the Bluetooth device you want to
connect, you can turn off the scan, and then write down the MAC address of the
Bluetooth device. The Bluetooth device tested here is an Android phone, the
Bluetooth name is orangepi, and the corresponding MAC address is
DC:72:9B:4C :F4:CF
Discovery stopped
[CHG] Controller 10:11:12:13:14:15 Discovering: no
```



```
[CHG] Device DC:72:9B:4C:F4:CF RSSI is nil
```

3) After scanning the device you want to pair, you can pair it. For pairing, you need to use the MAC address of the device.

```
[bluetooth]# pair DC:72:9B:4C:F4:CF      #Pair using the MAC address of the
scanned Bluetooth device
Attempting to pair with DC:72:9B:4C:F4:CF
[CHG] Device DC:72:9B:4C:F4:CF Connected: yes
Request confirmation
[leeb1m[agent] Confirm passkey 764475 (yes/no): yes  #Enter yes here, you also need
to confirm on the mobile phone
[CHG] Device DC:72:9B:4C:F4:CF Modalias: bluetooth:v010Fp107Ed1436
[CHG] Device DC:72:9B:4C:F4:CF UUIDs: 0000046a-0000-1000-8000-00805f9b34fb
[CHG] Device DC:72:9B:4C:F4:CF ServicesResolved: yes
[CHG] Device DC:72:9B:4C:F4:CF Paired: yes
Pairing successful  #Prompt pairing successful
[CHG] Device DC:72:9B:4C:F4:CF ServicesResolved: no
[CHG] Device DC:72:9B:4C:F4:CF Connected: no
```

4) After successful pairing, the Bluetooth interface of the mobile phone will appear as follows:



5) To connect to a Bluetooth device, you need to install the **pulseaudio-module-bluetooth** software package, and then start the **pulseaudio** service

```
orangepi@orangepi:~$ sudo apt update
orangepi@orangepi:~$ sudo apt -y install pulseaudio-module-bluetooth
orangepi@orangepi:~$ pulseaudio --start
```

6) How to connect Bluetooth devices



```

orangepi@orangepi:~$ sudo bluetoothctl
Agent registered
[bluetooth]# devices Paired      #View the MAC address of a paired Bluetooth
device
Device DC:72:9B:4C:F4:CF orangepi
[bluetooth]# connect DC:72:9B:4C:F4:CF  #Connect to Bluetooth device using
MAC address
Attempting to connect to DC:72:9B:4C:F4:CF
[CHG] Device DC:72:9B:4C:F4:CF Connected: yes
Connection successful
[CHG] Device DC:72:9B:4C:F4:CF ServicesResolved: yes
[CHG] Controller 10:11:12:13:14:15 Discoverable: no
[orangepi]#                #If this prompt appears, the connection is successful.

```

7) After connecting the Bluetooth device, you can see the prompt that the audio for calls and media has been **connected in the Bluetooth configuration interface of the Android phone.**



8) At this time, audio will be played through the phone, and the sound will be played through the HDMI device connected to the development board

3. 13. USB interface test


The USB interface can be connected to a USB hub to expand the number of USB interfaces.

3. 13. 1. USB interface extension description

As shown in the figure below, there are only two Type-C USB2.0 interfaces on the main board of the development board, which cannot directly connect USB Type-A mice,




keyboards and other USB devices.

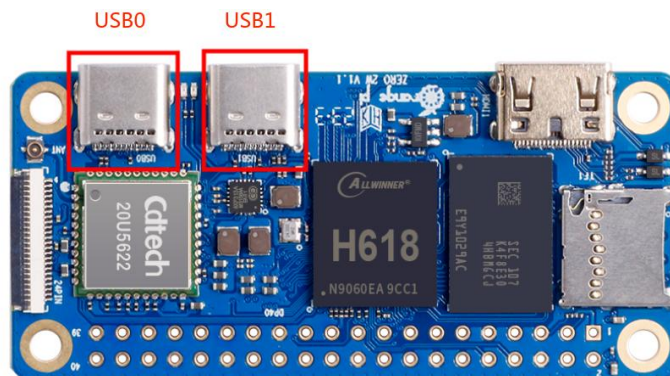

If you only purchased the motherboard and not the 24pin expansion board, you can prepare a Type-C to USB cable as shown in the figure below, plug one end of the Type-C interface into the Type-C interface of the motherboard, and then plug the other end into You can connect USB devices such as mouse and keyboard. If you feel that one USB interface is not enough, you can also expand multiple USB interfaces through USB Hub.



If you purchase a 24pin expansion board, you do not need a Type-C to USB cable, because the 24pin expansion board can expand two USB2.0 interfaces.

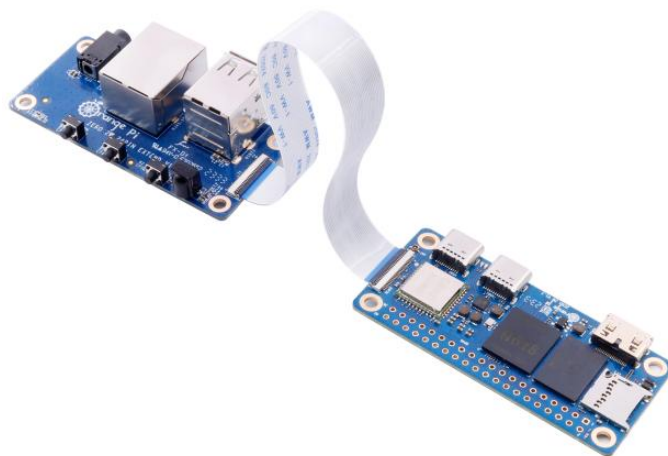


3. 13. 2. How to set USB0 to HOST mode

As shown in the figure below, there are two Type-C interfaces on the main board of



the development board: USB0 and USB1. Both of these interfaces can be used to power the development board, and they can also be used as USB2.0 HOST interfaces. The difference between USB0 and USB1 is that in addition to being set to HOST mode, USB0 can also be set to Device mode, while USB1 only has HOST mode

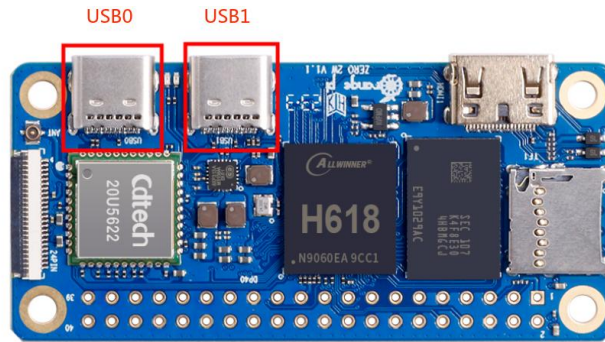


USB0 of the Linux system released by Orange Pi is set to Device mode by default, so when there is no need to use USB0 Device mode, it is recommended to use USB0 for power supply, so that USB1 can be used directly to connect USB devices

If you need to use USB0 to connect USB devices, you need to set USB0 to HOST mode. The method is as follows:


- a. First run **orangepi-config**. Ordinary users remember to add **sudo** permissions.

```
orangepi@orangepi:~$ sudo orangepi-config
```

- b. Then select **System**

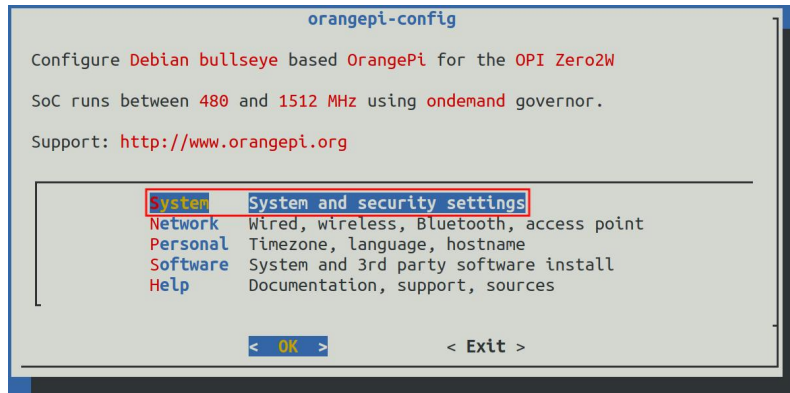


- c. Then select **Hardware**

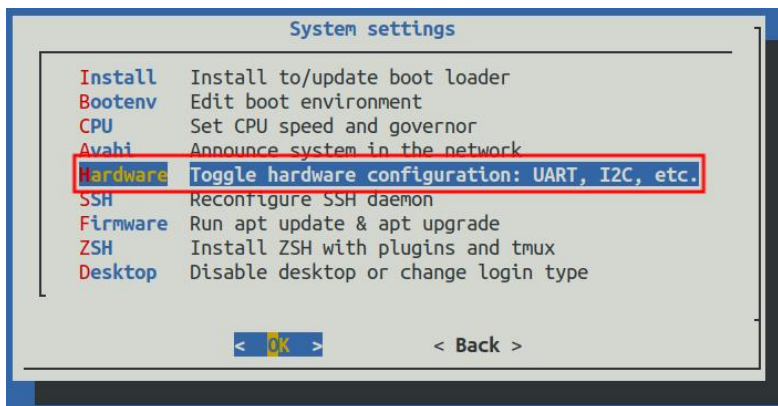


- d. Then use the keyboard's arrow keys to locate the location shown in the picture below, and then use the space to select **usb0-host**




- e. Then select **<Save>** to save

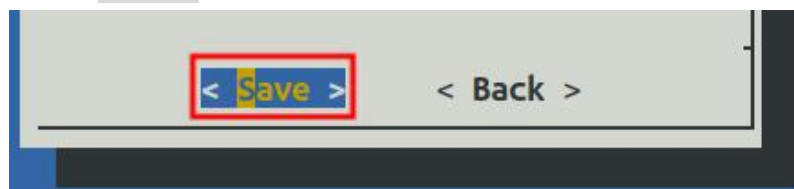

- f. Then select **<Back>**

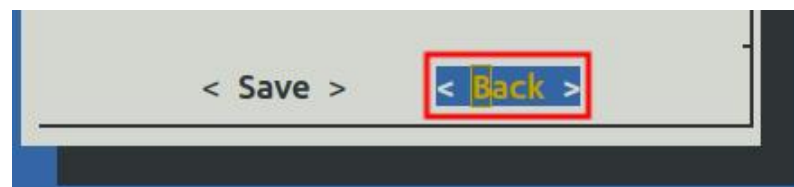

- g. Then select **<Reboot>** to restart the system to make the configuration take effect.

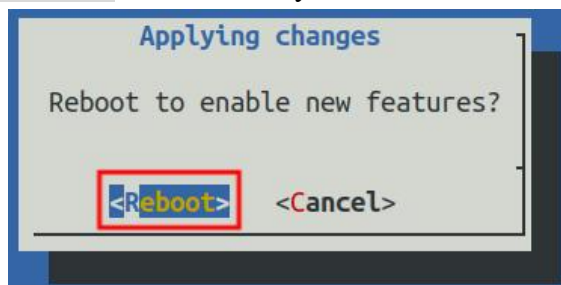

- h. After restarting, USB0 can use USB devices such as mouse and keyboard normally.

3. 13. 3. Connect USB mouse or keyboard to test

- 1) Insert the USB interface keyboard into the USB interface of the Orange Pi development board



2) Connect the Orange Pi development board to the HDMI display

3) If the mouse or keyboard can operate the operating system normally, it means that the USB interface is working normally (the mouse can only be used in the desktop version of the system)

3. 13. 4. Connect USB storage device for testing

1) First insert the U disk or USB mobile hard disk into the USB interface of the Orange Pi development board

2) Execute the following command. If you can see the output of sdX, it means the USB disk is successfully recognized.

```
orangepi@orangepi:~$ cat /proc/partitions | grep "sd*"
major minor #blocks name
 8         0  30044160 sda
 8         1  30043119 sda1
```

3) Use the mount command to mount the U disk to **/mnt**, and then you can view the files in the U disk

```
orangepi@orangepi:~$ sudo mount /dev/sda1 /mnt/
orangepi@orangepi:~$ ls /mnt/
test.txt
```

4) After mounting, you can check the capacity usage and mount point of the U disk through the **df -h** command.

```
orangepi@orangepi:~$ df -h | grep "sd"
/dev/sda1      29G  208K   29G   1% /mnt
```

3. 13. 5. USB Ethernet card test

1) The **currently tested** and usable USB Ethernet cards are as follows. Among them, the RTL8153 USB Gigabit network card can be used normally when inserted into the USB 2.0 Host interface of the development board for testing, but the speed cannot reach Gigabit. Please note this.

serial number	model
1	RTL8152B USB 100M network card
2	RTL8153 USB Gigabit network card



2) First insert the USB network card into the USB interface of the development board, and then insert the network cable into the USB network card to ensure that the network cable can access the Internet normally. If you can see the following log information through the **dmesg** command, it means that the USB network card is recognized normally.

```
orangepi@orangepi:~$ dmesg | tail
[ 121.985016] usb 3-1: USB disconnect, device number 2
[ 126.873772] sunxi-ehci 5311000.ehci3-controller: ehci_irq: highspeed device connect
[ 127.094054] usb 3-1: new high-speed USB device number 3 using sunxi-ehci
[ 127.357472] usb 3-1: reset high-speed USB device number 3 using sunxi-ehci
[ 127.557960] r8152 3-1:1.0 eth1: v1.08.9
[ 127.602642] r8152 3-1:1.0 enx00e04c362017: renamed from eth1
[ 127.731874] IPv6: ADDRCONF(NETDEV_UP): enx00e04c362017: link is not ready
[ 127.763031] IPv6: ADDRCONF(NETDEV_UP): enx00e04c362017: link is not ready
[ 129.892465] r8152 3-1:1.0 enx00e04c362017: carrier on
[ 129.892583] IPv6: ADDRCONF(NETDEV_CHANGE): enx00e04c362017: link becomes ready
```

3) Then you can see the device node of the USB network card and the automatically assigned IP address through the **ifconfig** command

```
orangepi@orangepi:~$ sudo ifconfig
enx00e04c362017: flags=4163<UP,BROADCAST,RUNNING,MULTICAST>    mtu
1500
    inet 192.168.1.177  netmask 255.255.255.0  broadcast 192.168.1.255
    inet6 fe80::681f:d293:4bc5:e9fd  prefixlen 64  scopeid 0x20<link>
    ether 00:e0:4c:36:20:17  txqueuelen 1000  (Ethernet)
    RX packets 1849  bytes 134590 (134.5 KB)
    RX errors 0  dropped 125  overruns 0  frame 0
    TX packets 33  bytes 2834 (2.8 KB)
    TX errors 0  dropped 0 overruns 0  carrier 0  collisions 0
```

4) The command to test network connectivity is as follows

```
orangepi@orangepi:~$ ping www.baidu.com -I enx00e04c362017
PING www.a.shifen.com (14.215.177.38) from 192.168.1.12 eth0: 56(84) bytes of data.
```



```
64 bytes from 14.215.177.38 (14.215.177.38): icmp_seq=1 ttl=56 time=6.74 ms
64 bytes from 14.215.177.38 (14.215.177.38): icmp_seq=2 ttl=56 time=6.80 ms
64 bytes from 14.215.177.38 (14.215.177.38): icmp_seq=3 ttl=56 time=6.26 ms
64 bytes from 14.215.177.38 (14.215.177.38): icmp_seq=4 ttl=56 time=7.27 ms
^C
--- www.a.shifen.com ping statistics ---
4 packets transmitted, 4 received, 0% packet loss, time 3002ms
rtt min/avg/max/mdev = 6.260/6.770/7.275/0.373 ms
```

3. 13. 6. USB camera test

1) First insert the USB camera into the USB interface of the Orange Pi development board

2) Then you can see through the `lsmod` command that the kernel automatically loads the following modules

```
orangepi@orangepi:~$ lsmod
Module                Size  Used by
uvcvideo              106496  0
```

3) Through the `v4l2-ctl` command, you can see that the device node information of the USB camera is `/dev/video0`

```
orangepi@orangepi:~$ sudo apt update
orangepi@orangepi:~$ sudo apt install -y v4l-utils
orangepi@orangepi:~$ v4l2-ctl --list-devices
USB 2.0 Camera (usb-sunxi-ehci-1):
    /dev/video0
```

Note that the l in v4l2 is the lowercase letter l, not the number 1.

In addition, the serial number of the video may not always be video0, please refer to what you actually see.

4) Use `fswebcam` to test the USB camera

a. Install `fswebcam`

```
orangepi@orangepi:~$ sudo apt update
orangepi@orangepi:~$ sudo apt-get install -y fswebcam
```

b. After installing `fswebcam`, you can use the following command to take pictures



- a) -d Option to specify the device node of the USB camera
- b) --no-banner Used to remove watermarks from photos
- c) -r option is used to specify the resolution of the photo
- d) -S Option to skip previous frames
- e) ./image.jpg Used to set the name and path of the generated photo

```
orange@orange:~$ sudo fswebcam -d /dev/video0 \
--no-banner -r 1280x720 -S 5 ./image.jpg
```

- c. In the server version of Linux system, after taking the picture, you can use the scp command to transfer the taken picture to the Ubuntu PC for mirror viewing.

```
orange@orange:~$ scp image.jpg test@192.168.1.55:/home/test (Modify the IP
address and path according to the actual situation)
```

- d. In the desktop version of Linux system, you can directly view the captured pictures through the HDMI display

5) Use mjpg-streamer to test the USB camera

- a. Download mjpg-streamer
 - a) Github download address:

```
orange@orange:~$ git clone https://github.com/jacksonliam/mjpg-streamer
```

- b) The image download address of Gitee is:

```
orange@orange:~$ git clone https://gitee.com/leeboby/mjpg-streamer
```

- b. Install dependent software packages
 - a) Ubuntu system

```
orange@orange:~$ sudo apt-get install -y cmake libjpeg8-dev
```

- b) Debian system

```
orange@orange:~$ sudo apt-get install -y cmake libjpeg62-turbo-dev
```

- c. Compile and install mjpg-streamer

```
orange@orange:~$ cd mjpg-streamer/mjpg-streamer-experimental
orange@orange:~/mjpg-streamer/mjpg-streamer-experimental$ make -j4
orange@orange:~/mjpg-streamer/mjpg-streamer-experimental$ sudo make install
```


- d. Then enter the following command to start mjpg_streamer

Note that the serial number of the video is not always video0, please refer to what you actually see.

```
orange@orange:~/mjpg-streamer/mjpg-streamer-experimental$ export LD_LIBRARY_PATH=.
orange@orange:~/mjpg-streamer/mjpg-streamer-experimental$ sudo ./mjpg_streamer -i "/input_uvc.so -d \
/dev/video0 -u -f 30" -o "/output_http.so -w ./www"
```



- e. Then enter [the IP address of the development board: 8080] in the Ubuntu PC or Windows PC or mobile phone browser on the same LAN as the development board to see the video output by the camera.

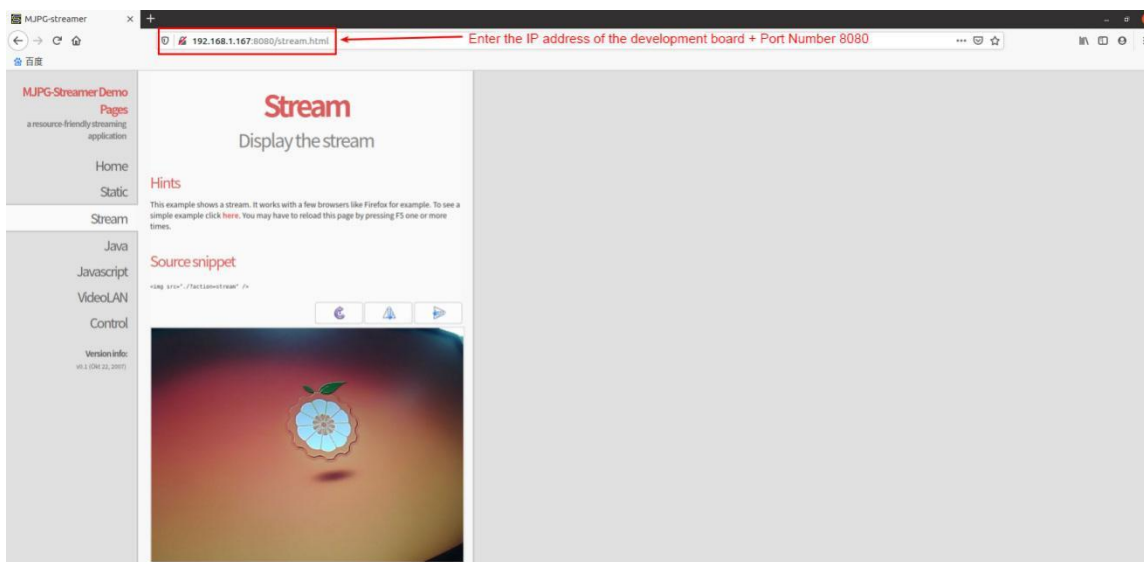


3. 14. Audio test

3. 14. 1. How to play audio using the command line

3. 14. 1. 1. Headphone interface audio playback test

- 1) There is no headphone interface on the main board of the development board. We can expand it through a 24pin expansion board.

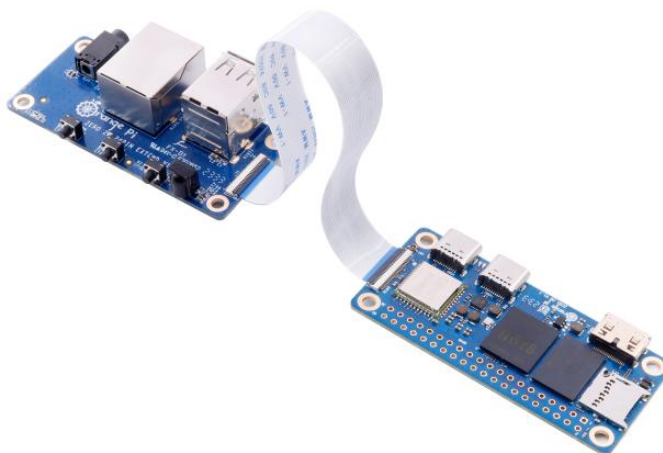



- 2) Use the **aplay -l** command to view the sound card devices supported by the Linux system
 - a. The output of the linux5.4 system is as follows, where **card 0: audiocodec** is the sound card device required for headphone playback

```
root@orangepi:~# aplay -l
**** List of PLAYBACK Hardware Devices ****
card 0: audiocodec [audiocodec], device 0: soc@3000000:codec_plat-5096000.codec
5096000.codec-0 []
Subdevices: 1/1
Subdevice #0: subdevice #0
```

- b. The output of the b.linux6.1 system is as follows, where **audiocodec** is the sound card device required for headphone playback.

```
root@orangepi:~# aplay -l
**** List of PLAYBACK Hardware Devices ****
card 0: audiocodec [audiocodec], device 0: CDC PCM Codec-0 [CDC PCM
Codec-0]
Subdevices: 1/1
Subdevice #0: subdevice #0
```

- 3) Then use the **aplay** command to play the audio, and the sound can be heard through the headphones

```
root@orangepi:~# aplay -D hw:0,0 /usr/share/sounds/alsa/audio.wav
Playing WAVE 'audio.wav' : Signed 16 bit Little Endian, Rate 44100 Hz, Stereo
```

If there is noise during the headphone test, please pull out some of the headphones and do not plug them all the way in.

3. 14. 1. 2. HDMI audio playback test


- 1) First use the Mini HDMI to HDMI cable to connect the Orange Pi development board to the TV (other HDMI displays need to ensure that they can play audio)
- 2) HDMI audio playback does not require other settings, just use the **aplay** command to play directly

```
root@orangepi:~# aplay -D hw:2,0 /usr/share/sounds/alsa/audio.wav
```




3. 14. 2. Test audio methods on desktop systems


1) First open the file manager

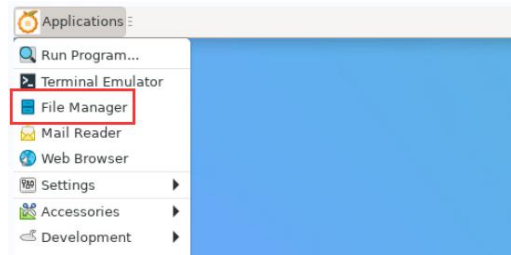

2) Then find the following file (if there is no such audio file in the system, you can upload an audio file to the system yourself)

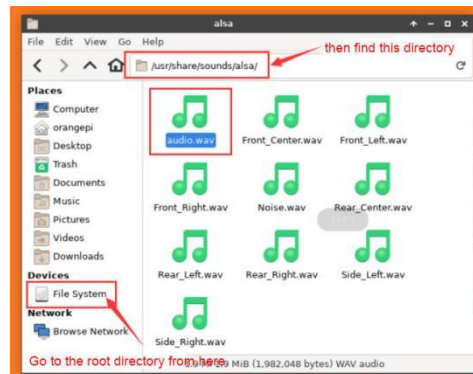


3) Then select the audio.wav file, right-click and select open with vlc to start playing.

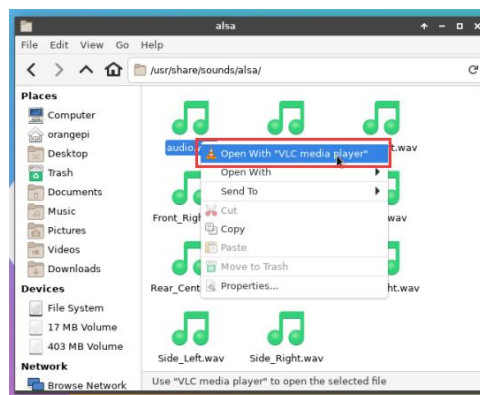


4) How to switch between different audio devices such as HDMI playback and headphone playback

a. First open the volume control interface

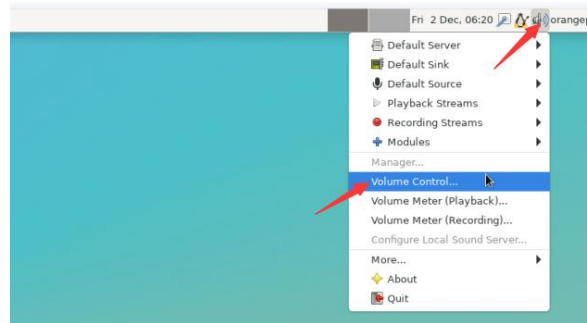


- b. When playing audio, the audio device options that can be used by the **Playback** software will be displayed in **Playback**, as shown in the figure below. Here you can set which audio device needs to be played.

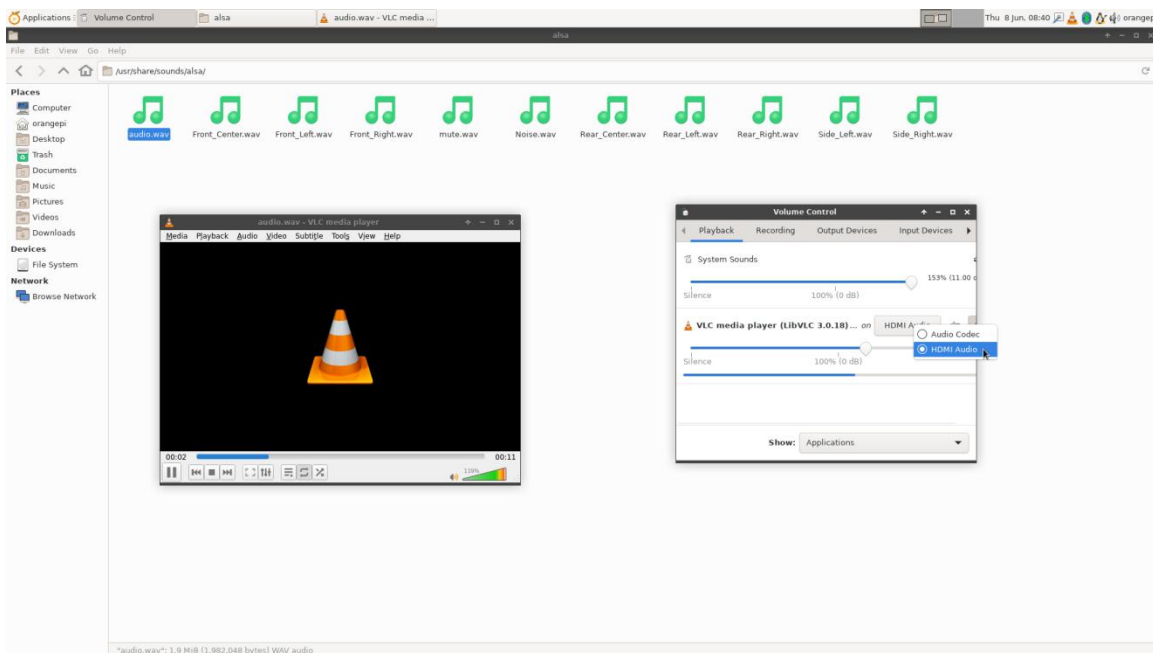

3. 15. Infrared reception test

- 1) There is no infrared receiver on the main board of the development board. We can expand it through a 24pin expansion board.

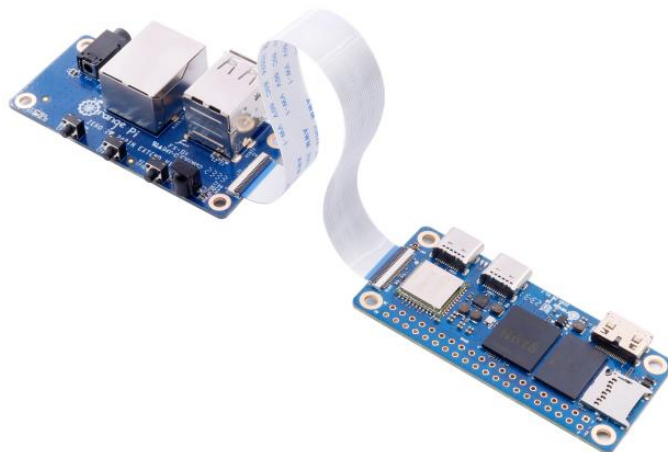

2) Install ir-keytable infrared test software

```
orangepi@orangepi:~$ sudo apt update  
orangepi@orangepi:~$ sudo apt-get install -y ir-keytable
```

3) Then execute ir-keytable to view the information of the infrared device

a. linux5.4 system output is as follows

```
orangepi@orangepi:~$ ir-keytable  
Found /sys/class/rc/rc0/ with:  
  Name: sunxi-ir  
  Driver: sunxi-rc-recv  
  Default keymap: rc_map_sunxi  
  Input device: /dev/input/event1  
  LIRC device: /dev/lirc0  
  Attached BPF protocols: Operation not permitted  
  Supported kernel protocols: lirc nec  
  Enabled kernel protocols: lirc nec  
  bus: 25, vendor/product: 0001:0001, version: 0x0100  
  Repeat delay = 500 ms, repeat period = 125 ms
```

b. The output of the linux6.1 system is as follows

```
orangepi@orangepi:~$ ir-keytable  
Found /sys/class/rc/rc0/ with:  
  Name: sunxi-ir  
  Driver: sunxi-ir  
  Default keymap: rc-empty
```



```

Input device: /dev/input/event5
LIRC device: /dev/lirc0
Attached BPF protocols: Operation not permitted
Supported kernel protocols: lirc rc-5 rc-5-sz jvc sony nec sanyo mce_kbd rc-6 sharp
xmp imon rc-mm
Enabled kernel protocols: lirc
bus: 25, vendor/product: 0001:0001, version: 0x0100
Repeat delay = 500 ms, repeat period = 125 ms

```

4) Before testing the infrared reception function, you need to prepare an Orange Pi-specific infrared remote control. **Other remote controls do not support it.**



5) Then enter the **ir-keytable -t** command in the terminal, and then use the infrared remote control to press the button against the infrared receiver of the Orange Pi development board to see the received key code in the terminal.

a. linux5.4 system output is as follows

```

orangeypi@orangeypi:~$ sudo ir-keytable -t
Testing events. Please, press CTRL-C to abort.
1598339152.260376: event type EV_MSC(0x04): scancode = 0xfb0413
1598339152.260376: event type EV_SYN(0x00).
1598339152.914715: event type EV_MSC(0x04): scancode = 0xfb0410

```

b. linux6.1 system output is as follows

```

orangeypi@orangeypi:~$ sudo ir-keytable -c -p NEC -t
Old keytable cleared
Protocols changed to nec
Testing events. Please, press CTRL-C to abort.
202.063219: lirc protocol(nec): scancode = 0x45c
202.063249: event type EV_MSC(0x04): scancode = 0x45c
202.063249: event type EV_SYN(0x00).

```



3. 16. Temperature sensor

3. 16. 1. How to check the temperature in linux5.4 system

H618 has a total of 4 temperature sensors. The command to view the temperature is as follows:

The displayed temperature value needs to be divided by 1000, and the unit is Celsius.

- a. sensor0: CPU temperature sensor, the first command is used to view the type of temperature sensor, the second command is used to view the value of the temperature sensor

```
orangepi@orangepi:~$ cat /sys/class/thermal/thermal_zone0/type
cpu_thermal_zone
orangepi@orangepi:~$ cat /sys/class/thermal/thermal_zone0/temp
57734
```

- b. sensor1: DDR temperature sensor, the first command is used to view the type of temperature sensor, the second command is used to view the value of the temperature sensor

```
orangepi@orangepi:~$ cat /sys/class/thermal/thermal_zone1/type
ddr_thermal_zone
orangepi@orangepi:~$ cat /sys/class/thermal/thermal_zone1/temp
57410
```

- c. sensor2: GPU temperature sensor, the first command is used to view the type of temperature sensor, the second command is used to view the value of the temperature sensor

```
orangepi@orangepi:~$ cat /sys/class/thermal/thermal_zone2/type
gpu_thermal_zone
orangepi@orangepi:~$ cat /sys/class/thermal/thermal_zone2/temp
59273
```

- d. sensor3: VE's temperature sensor. The first command is used to view the type of temperature sensor, and the second command is used to view the value of the temperature sensor.

```
orangepi@orangepi:~$ cat /sys/class/thermal/thermal_zone3/type
ve_thermal_zone
orangepi@orangepi:~$ cat /sys/class/thermal/thermal_zone3/temp
```



58949

3. 16. 2. How to check the temperature in linux6.1 system

```
orangepi@orangepi:~$ sensors
cpu_thermal-virtual-0
Adapter: Virtual device
temp1:          +47.4°C (crit = +110.0°C)

gpu_thermal-virtual-0
Adapter: Virtual device
temp1:          +48.7°C (crit = +110.0°C)

ddr_thermal-virtual-0
Adapter: Virtual device
temp1:          +47.8°C (crit = +110.0°C)

ve_thermal-virtual-0
Adapter: Virtual device
temp1:          +47.2°C (crit = +110.0°C)
```

3. 17. 40 Pin Interface pin description

Note: The pin header on the 40pin interface is not soldered by default, and you need to solder it yourself before it can be used.

1) For the order of the 40 Pin interface pins of the Orange Pi Zero 2w development board, please refer to the silk screen diagram on the development board.





2) The functions of the 40 Pin interface pins on the development board are as shown in the table below

GPIO序号	GPIO	Function	pin
		3.3V	1
264	PI8	TWI1-SDA	3
263	PI7	TWI1-SCL	5
269	PI13	PWM3/UART4_TX	7
		GND	9
226	PH2	UART5_TX	11
227	PH3	UART5_RX	13
261	PI5	TWI0_SCL/UART2_TX	15
		3.3V	17
231	PH7	SPI1_MOSI	19
232	PH8	SPI1_MISO	21
230	PH6	SPI1_CLK	23
		GND	25
266	PI10	TWI2-SDA/UART3_RX	27
256	PI0		29
271	PI15		31
268	PI12	PWM2	33
258	PI2		35
272	PI16		37
		GND	39

pin	Function	GPIO	GPIO NO.
2	5V		
4	5V		
6	GND		
8	UART0_TX	PH0	224
10	UART0_RX	PH1	225
12		PI1	257
14	GND		
16	PWM4/UART4_RX	PI14	270
18		PH4	228
20	GND		
22	TWI0_SDA/UART2_RX	PI6	262
24	SPI1_CS0	PH5	229
26	SPI1_CS1	PH9	233
28	TWI2-SCL/UART3_TX	PI9	265
30	GND		
32	PWM1	PI11	267
34	GND		
36		PC12	76
38		PI4	260
40		PI3	259

3) There are a total of 28 GPIO ports in the 40pin interface. The high-level voltage of all GPIO ports is **3.3v**

3. 18. How to install wiringOP

Note that wiringOP is already pre-installed in the linux image released by Orange Pi. Unless the wiringOP code is updated, there is no need to re-download, compile and install, you can just use it directly.

The storage path of the compiled wiringOP deb package in orangepi-build is:

**orange-pi-build/external/cache/debs/arm64/wiringpi_x.xx.deb**

After entering the system, you can run the `gpio readall` command. If you can see the following output, it means that wiringOP has been pre-installed and can be used normally.

```
orangepi@orangezero2w:~$ gpio readall
```

ZERO2W											
GPIO	wPi	Name	Mode	V	Physical	V	Mode	Name	wPi	GPIO	
		3.3V			1	2		5V			
264	0	SDA.1	OFF	0	3	4		5V			
263	1	SCL.1	OFF	0	5	6		GND			
269	2	PWM3	OFF	0	7	8	0	ALT2	TXD.0	3	224
		GND			9	10	0	ALT2	RXD.0	4	225
226	5	TXD.5	OFF	0	11	12	0	OFF	PI01	6	257
227	7	RXD.5	OFF	0	13	14		GND			
261	8	TXD.2	OFF	0	15	16	0	OFF	PWM4	9	270
		3.3V			17	18	0	OFF	PH04	10	228
231	11	MOSI.1	OFF	0	19	20		GND			
232	12	MISO.1	OFF	0	21	22	0	OFF	RXD.2	13	262
230	14	SCLK.1	OFF	0	23	24	0	OFF	CE.0	15	229
		GND			25	26	0	ALT3	CE.1	16	233
266	17	SDA.2	OFF	0	27	28	0	OFF	SCL.2	18	265
256	19	PI00	OFF	0	29	30		GND			
271	20	PI15	OFF	0	31	32	0	OFF	PWM1	21	267
268	22	PI12	OFF	0	33	34		GND			
258	23	PI02	OFF	0	35	36	1	OUT	PC12	24	76
272	25	PI16	OFF	0	37	38	0	OFF	PI04	26	260
		GND			39	40	0	OFF	PI03	27	259

```
orangepi@orangezero2w:~$
```

1) Download the code of wiringOP

```
orangepi@orangepi:~$ sudo apt update
```

```
orangepi@orangepi:~$ sudo apt install -y git
```

```
orangepi@orangepi:~$ git clone https://github.com/orangepi-xunlong/wiringOP.git -b next
```

Note that the source code needs to download the code of wiringOP next branch. Please don't miss the `-b next` parameter.

If there is a problem downloading the code from GitHub, you can directly use the wiringOP source code that comes with the Linux image. The storage location is: `/usr/src/wiringOP`.



2) Compile and install wiringOP

```

orange@orange:~$ cd wiringOP
orange@orange:~/wiringOP$ sudo ./build clean
orange@orange:~/wiringOP$ sudo ./build

```

3) The output of the test gpio readall command is as follows

```

orange@orangezero2w:~$ gpio readall
+-----+-----+-----+-----+-----+-----+ ZER02W +-----+-----+-----+-----+
| GPIO | wPi | Name | Mode | V | Physical | V | Mode | Name | wPi | GPIO |
+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
| 264 | 0 | 3.3V | OFF | 0 | 1 | 2 | | 5V | | | |
| 263 | 1 | SDA.1 | OFF | 0 | 3 | 4 | | 5V | | |
| 269 | 2 | SCL.1 | OFF | 0 | 5 | 6 | | GND | | |
| | | PWM3 | OFF | 0 | 7 | 8 | 0 | ALT2 | TXD.0 | 3 | 224 |
| | | GND | | 9 | 10 | 0 | ALT2 | RXD.0 | 4 | 225 |
| 226 | 5 | TXD.5 | OFF | 0 | 11 | 12 | 0 | OFF | PI01 | 6 | 257 |
| 227 | 7 | RXD.5 | OFF | 0 | 13 | 14 | | | GND | | |
| 261 | 8 | TXD.2 | OFF | 0 | 15 | 16 | 0 | OFF | PWM4 | 9 | 270 |
| | | 3.3V | | 17 | 18 | 0 | OFF | PH04 | 10 | 228 |
| 231 | 11 | MOSI.1 | OFF | 0 | 19 | 20 | | | GND | | |
| 232 | 12 | MISO.1 | OFF | 0 | 21 | 22 | 0 | OFF | RXD.2 | 13 | 262 |
| 230 | 14 | SCLK.1 | OFF | 0 | 23 | 24 | 0 | OFF | CE.0 | 15 | 229 |
| | | GND | | 25 | 26 | 0 | ALT3 | CE.1 | 16 | 233 |
| 266 | 17 | SDA.2 | OFF | 0 | 27 | 28 | 0 | OFF | SCL.2 | 18 | 265 |
| 256 | 19 | PI00 | OFF | 0 | 29 | 30 | | | GND | | |
| 271 | 20 | PI15 | OFF | 0 | 31 | 32 | 0 | OFF | PWM1 | 21 | 267 |
| 268 | 22 | PI12 | OFF | 0 | 33 | 34 | | | GND | | |
| 258 | 23 | PI02 | OFF | 0 | 35 | 36 | 1 | OUT | PC12 | 24 | 76 |
| 272 | 25 | PI16 | OFF | 0 | 37 | 38 | 0 | OFF | PI04 | 26 | 260 |
| | | GND | | 39 | 40 | 0 | OFF | PI03 | 27 | 259 |
+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
| GPIO | wPi | Name | Mode | V | Physical | V | Mode | Name | wPi | GPIO |
+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
orange@orangezero2w:~$

```

3. 19. 40pin interface GPIO, I2C, UART, SPI and PWM testing

Note: The pin header on the 40pin interface is not soldered by default, and you need to solder it yourself before it can be used.

3. 19. 1. 40pin GPIO port test

1) The following uses pin No. 7 - corresponding to GPIO PI13 - corresponding to wPi serial number 2 - as an example to demonstrate how to set the high and low levels of the GPIO port.



```
orange@orangezero2w:~$ gpio readall
```

GPIO	wPi	Name	Mode	V	Physical	V	Mode	Name	wPi	GPIO
		3.3V			1	2		5V		
264	0	SDA.1	OFF	0	3	4		5V		
263	1	SCL.1	OFF	0	5	6		GND		
269	2	PWM3	OFF	0	7	8	0	ALT2	3	224
		GND			9	10	0	ALT2	4	225

2) First set the GPIO port to output mode, and the third parameter needs to be the serial number of the wPi corresponding to the input pin.

```
root@orange:~/wiringOP# gpio mode 2 out
```

3) Then set the GPIO port to output a low level. After setting, you can use a multimeter to measure the voltage value of the pin. If it is 0v, it means the low level is set successfully.

```
root@orange:~/wiringOP# gpio write 2 0
```

4) Then set the GPIO port to output a high level. After setting, you can use a multimeter to measure the voltage value of the pin. If it is 3.3v, it means the setting of the high level is successful.

```
root@orange:~/wiringOP# gpio write 2 1
```

5) The setting method for other pins is similar. You only need to modify the serial number of wPi to the serial number corresponding to the pin.

3. 19. 2. How to set the pull-down resistor of 40 Pin GPIO port

1) The following uses pin No. 7—corresponding to GPIO PI13—corresponding to wPi serial number 2—as an example to demonstrate how to set the pull-up and pull-down resistors of the GPIO port.

```
orange@orangezero2w:~$ gpio readall
```

GPIO	wPi	Name	Mode	V	Physical	V	Mode	Name	wPi	GPIO
		3.3V			1	2		5V		
264	0	SDA.1	OFF	0	3	4		5V		
263	1	SCL.1	OFF	0	5	6		GND		
269	2	PWM3	OFF	0	7	8	0	ALT2	3	224
		GND			9	10	0	ALT2	4	225

2) First, you need to set the GPIO port to input mode, and the third parameter needs to be



the serial number of the wPi corresponding to the input pin.

```
root@orangeypi:~/wiringOP# gpio mode 2 in
```

3) After setting to input mode, execute the following command to set the GPIO port to pull-up mode.

```
root@orangeypi:~/wiringOP# gpio mode 2 up
```

4) Then enter the following command to read the level of the GPIO port. If the level is 1, it means that the pull-up mode is set successfully.

```
root@orangeypi:~/wiringOP# gpio read 2
1
```

5) Then execute the following command to set the GPIO port to pull-down mode

```
root@orangeypi:~/wiringOP# gpio mode 2 down
```

6) Then enter the following command to read the level of the GPIO port. If the level is 0, it means that the pull-down mode is set successfully.

```
root@orangeypi:~/wiringOP# gpio read 2
0
```

3. 19. 3. 40pin SPI test

1) As can be seen from the table below, the spi available for the 40pin interface is spi1, and there are two chip select pins cs0 and cs1

GPIO序号	GPIO	Function	pin
		3. 3V	1
264	PI8	TWI1-SDA	3
263	PI7	TWI1-SCL	5
269	PI13	PWM3/UART4_TX	7
		GND	9
226	PH2	UART5_TX	11
227	PH3	UART5_RX	13
261	PI5	TWI0_SCL/UART2_TX	15
		3. 3V	17
231	PH7	SPI1_MOSI	19
232	PH8	SPI1_MISO	21
230	PH6	SPI1_CLK	23

pin	Function	GPIO	GPIO序号
2	5V		
4	5V		
6	GND		
8	UART0_TX	PH0	224
10	UART0_RX	PH1	225
12		PI1	257
14	GND		
16	PWM4/UART4_RX	PI14	270
18		PH4	228
20	GND		
22	TWI0_SDA/UART2_RX	PI6	262
24	SPI1_CS0	PH5	229



		GND	25
266	PI10	TWI2-SDA/UART3_RX	27
256	PI0		29
271	PI15		31
268	PI12	PWM2	33
258	PI2		35
272	PI16		37
		GND	39


26	SPI1_CS1	PH9	233
28	TWI2-SCL/UART3_TX	PI9	265
30	GND		
32	PWM1	PI11	267
34	GND		
36		PC12	76
38		PI4	260
40		PI3	259

2) In Linux systems, spil is turned off by default and needs to be turned on manually before it can be used. The opening steps are as follows:


- a. First run **orange-pi-config**. Ordinary users remember to add **sudo** permissions.

```
orange-pi@orange-pi:~$ sudo orange-pi-config
```

- b. Then select **System**

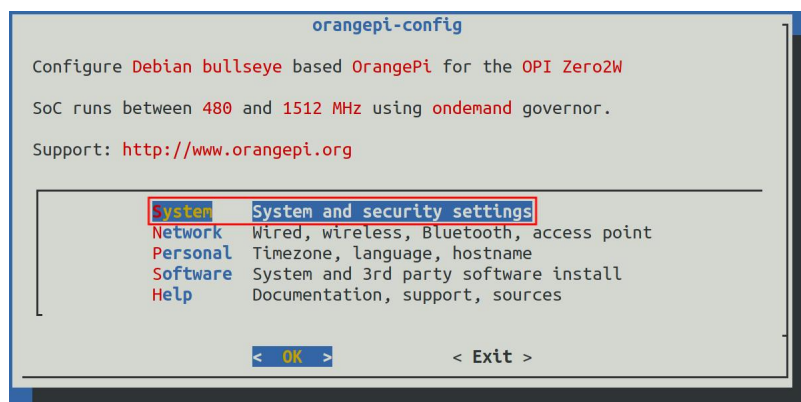

- c. Then select **Hardware**

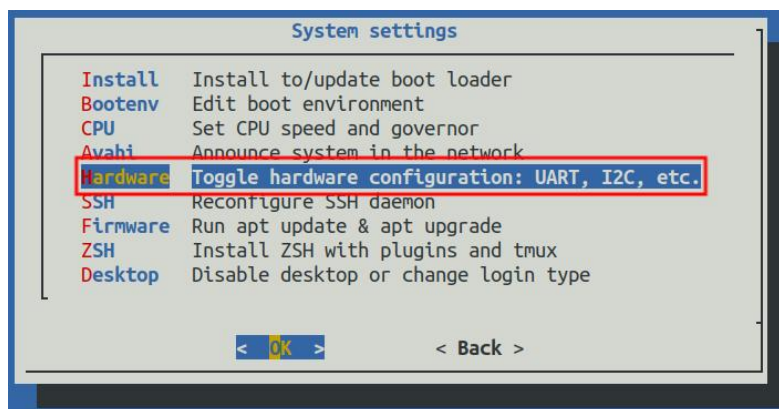


- d. Then use the keyboard's arrow keys to locate the position shown in the figure below, and then use the **space** to select the dtbo configuration of the SPI you




want to open.


dtbo configuration	illustrate
spi1-cs0-cs1-spidev	Open cs0 and cs1 of spi1 at the same time
spi1-cs0-spidev	Only open cs0 of spi1
spi1-cs1-spidev	Only open cs1 of spi1

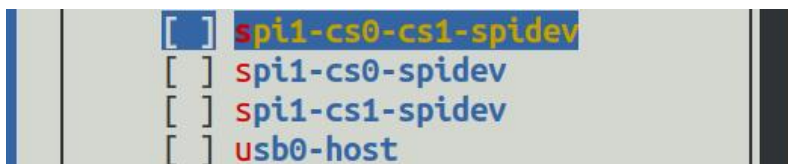


- e. Then select **<Save>** to save

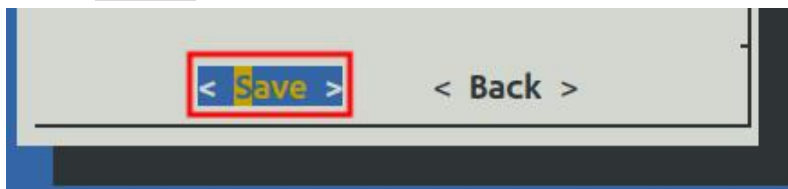

- f. Then select **<Back>**

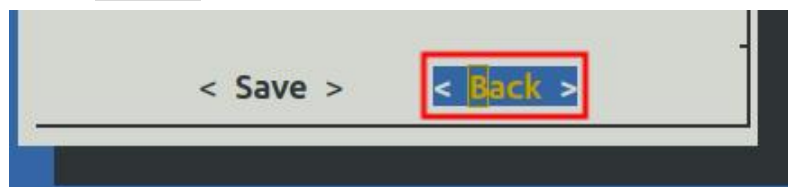

- g. Then select **<Reboot>** to restart the system to make the configuration take effect.

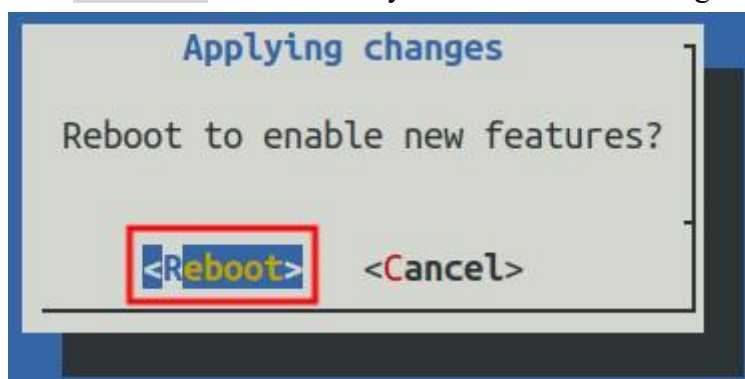

- 3) Then check whether there is a **spidev1.x** device node in the Linux system. If it exists, it means that the SPI1 configuration has taken effect.

```
orangepi@orangepi:~$ ls /dev/spidev1*
/dev/spidev1.0  /dev/spidev1.1
```



Note that only when you open spi1-cs0-cs1-spidev, you will see the device nodes of the two spi.

4) Next, start the spi loopback test. Do not short-circuit the mosi and miso pins of SPI1 first. The output result of running spidev_test is as follows. You can see that the data of TX and RX are inconsistent.

```
orangepi@orangepi:~$ sudo spidev_test -v -D /dev/spidev1.0
spi mode: 0x0
bits per word: 8
max speed: 500000 Hz (500 KHz)
TX | FF FF FF FF FF FF 40 00 00 00 00 95 FF FF FF FF FF FF FF FF FF FF FF FF
FF FF FF FF FF F0 0D | .....@.....
RX | FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF
FF FF FF FF FF FF FF FF | .....
```

5) Then short-circuit the two pins of SPI1 mosi (pin 19 in the 40pin interface) and miso (pin 21 in the 40pin interface) and then run spidev_test. The output is as follows. You can see the sending and receiving The data is the same, indicating that the loopback test passed.

```
orangepi@orangepi:~$ sudo spidev_test -v -D /dev/spidev1.0
spi mode: 0x0
bits per word: 8
max speed: 500000 Hz (500 KHz)
TX | FF FF FF FF FF FF 40 00 00 00 00 95 FF FF FF FF FF FF FF FF FF FF FF FF
FF FF FF FF FF F0 0D | .....@.....
RX | FF FF FF FF FF FF 40 00 00 00 00 95 FF FF FF FF FF FF FF FF FF FF FF FF
FF FF FF FF FF F0 0D | .....@.....
```

3. 19. 4. 40pin I2C test

1) As can be seen from the table below, the i2c available for the 40pin interface are i2c0, i2c1 and i2c2

GPI0序号	GPI0	Function	pin
		3. 3V	1
264	PI8	TWI1-SDA	3
263	PI7	TWI1-SCL	5

pin	Function	GPI0	GPI0 NO.
2	5V		
4	5V		
6	GND		




269	PI13	PWM3/UART4_TX	7	8	UART0_TX	PH0	224
		GND	9	10	UART0_RX	PH1	225
226	PH2	UART5_TX	11	12		PI1	257
227	PH3	UART5_RX	13	14	GND		
261	PI5	TWI0_SCL/UART2_TX	15	16	PWM4/UART4_RX	PI14	270
		3.3V	17	18		PH4	228
231	PH7	SPI1_MOSI	19	20	GND		
232	PH8	SPI1_MISO	21	22	TWI0_SDA/UART2_RX	PI6	262
230	PH6	SPI1_CLK	23	24	SPI1_CS0	PH5	229
		GND	25	26	SPI1_CS1	PH9	233
266	PI10	TWI2-SDA/UART3_RX	27	28	TWI2-SCL/UART3_TX	PI9	265
256	PI0		29	30	GND		
271	PI15		31	32	PWM1	PI11	267
268	PI12	PWM2	33	34	GND		
258	PI2		35	36		PC12	76
272	PI16		37	38		PI4	260
		GND	39	40		PI3	259

2) i2c is turned off by default in Linux systems and needs to be turned on manually to use it. The opening steps are as follows:


- a. First run **orange-pi-config**. Ordinary users remember to add **sudo** permissions.

```
orange-pi@orange-pi:~$ sudo orange-pi-config
```

- b. Then select **System**

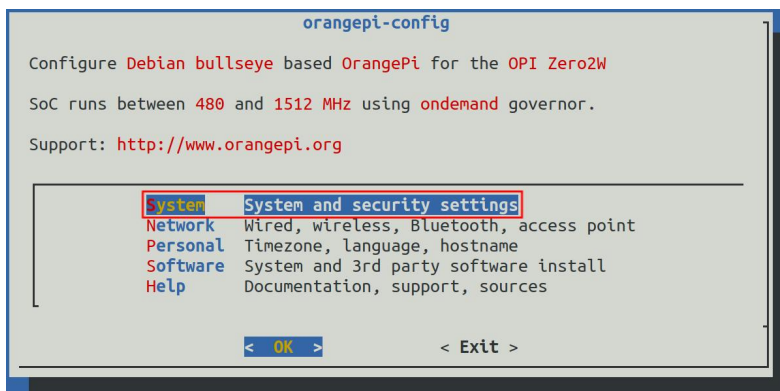


- c. Then select **Hardware**

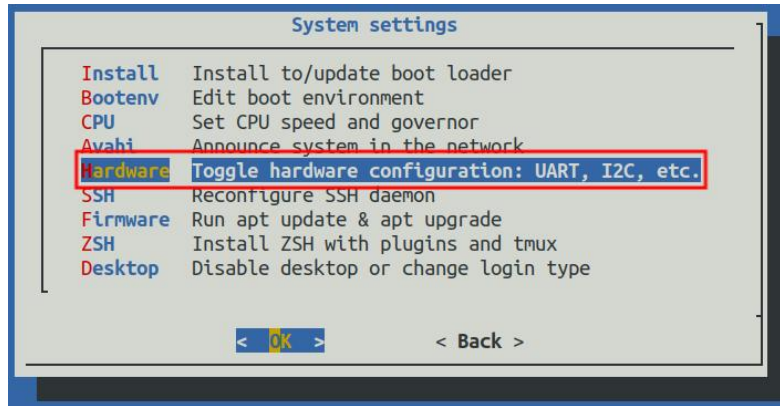


- d. Then use the keyboard's arrow keys to locate the position shown in the picture below, and then use the **space** to select the corresponding i2c configuration in the picture below.


Multiplexing function in 40pin	Corresponding dtbo configuration
40pin - i2c0	pi-i2c0
40pin - i2c1	pi-i2c1
40pin - i2c2	pi-i2c2

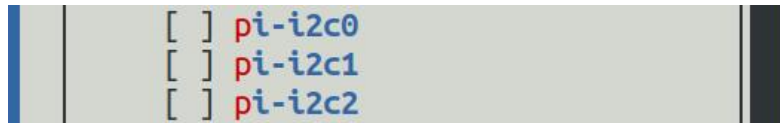


- e. Then select **<Save>** to save

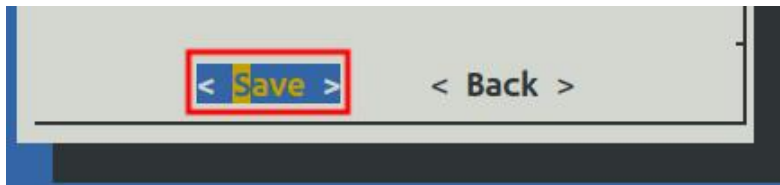

- f. Then select **<Back>**

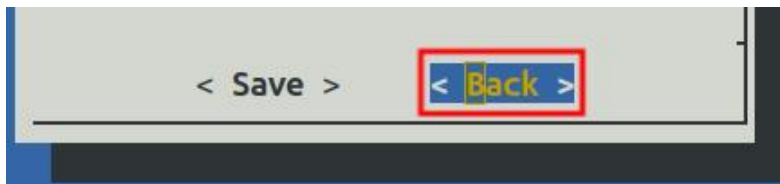

- g. Then select **<Reboot>** to restart the system to make the configuration take effect.

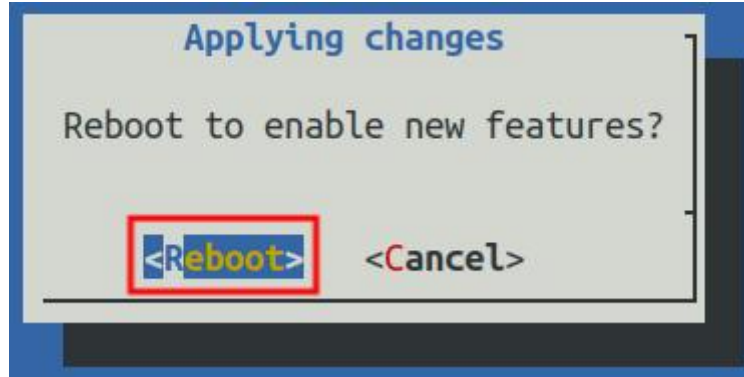

3) After starting the Linux system, first confirm that there is an open i2c device node under `/dev`

```
orangepi@orangepi:~$ ls /dev/i2c-*
/dev/i2c-*
```

Sometimes the i2c device node and the i2c bus serial number do not correspond one to one. For example, the i2c device node of the i2c1 bus may be `/dev/i2c-3`.

The method to accurately confirm the device node under `/dev` corresponding to the i2c bus is:

a. First run the following command to check the corresponding relationship of i2c

```
orangepi@orangepizero2w:~$ ls /sys/devices/platform/soc*/*/i2c-* | grep "i2c-[0-9]"
```

```
/sys/devices/platform/soc/5002000.i2c/i2c-0:
```

```
/sys/devices/platform/soc/5002400.i2c/i2c-3:
```

```
/sys/devices/platform/soc/5002800.i2c/i2c-4:
```

```
/sys/devices/platform/soc/5002c00.i2c/i2c-5:
```

```
/sys/devices/platform/soc/6000000.hdmi/i2c-2:
```

```
/sys/devices/platform/soc/7081400.i2c/i2c-1:
```

b. In the above output

a) 5002000 is the register base address of the i2c0 bus, and i2c-0 shown behind it is its corresponding i2c device node

b) 5002400 is the register base address of the i2c1 bus, and i2c-3 shown behind it is its corresponding i2c device node

c) 5002800 is the register base address of the i2c2 bus, and i2c-4 shown behind it is its corresponding i2c device node



4) Then start testing i2c, first install i2c-tools

```
orange_pi@orange_pi:~$ sudo apt-get update
orange_pi@orange_pi:~$ sudo apt-get install -y i2c-tools
```

5) Then connect an i2c device to the i2c pin of the 40pin connector

6) Then use the **i2cdetect -y x** command. If the address of the connected i2c device can be detected, it means that i2c can be used normally.

Note that x in the i2cdetect -y x command needs to be replaced with the serial number of the device node corresponding to the i2c bus.

Different i2c device addresses are different. The 0x50 address in the picture below is just an example. Please refer to what you actually see.

```
root@orange_pi:~# i2cdetect -y 3
   0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00:  -- -- -- -- -- -- -- -- -- -- -- -- -- --
10:  -- -- -- -- -- -- -- -- -- -- -- -- -- --
20:  -- -- -- -- -- -- -- -- -- -- -- -- -- --
30:  -- -- -- -- -- -- -- -- -- -- -- -- -- --
40:  -- -- -- -- -- -- -- -- -- -- -- -- -- --
50:  50 -- -- -- -- -- -- -- -- -- -- -- -- -- --
60:  -- -- -- -- -- -- -- -- -- -- -- -- -- --
70:  -- -- -- -- -- -- -- -- -- -- -- -- -- --
```

3. 19. 5. 40pin UART test

1) As can be seen from the table below, the available uarts are uart2, uart3, uart4 and uart5. Please note that uart0 is set as a debugging serial port by default. Please do not use uart0 as a normal serial port.

GPI0 NO.	GPI0	Function	pin
		3.3V	1
264	PI8	TWI1-SDA	3
263	PI7	TWI1-SCL	5
269	PI13	PWM3/UART4_TX	7
		GND	9
226	PH2	UART5_TX	11
227	PH3	UART5_RX	13
261	PI5	TWI0_SCL/UART2_TX	15
		3.3V	17
231	PH7	SPI1_MOSI	19
232	PH8	SPI1_MISO	21

pin	Function	GPI0	GPI0 NO.
2	5V		
4	5V		
6	GND		
8	UART0_TX	PH0	224
10	UART0_RX	PH1	225
12		PI1	257
14	GND		
16	PWM4/UART4_RX	PI14	270
18		PH4	228
20	GND		
22	TWI0_SDA/UART2_RX	PI6	262




230	PH6	SPI1_CLK	23	24	SPI1_CS0	PH5	229
		GND	25	26	SPI1_CS1	PH9	233
266	PI10	TWI2-SDA/UART3_RX	27	28	TWI2-SCL/UART3_TX	PI9	265
256	PI0		29	30	GND		
271	PI15		31	32	PWM1	PI11	267
268	PI12	PWM2	33	34	GND		
258	PI2		35	36		PC12	76
272	PI16		37	38		PI4	260
		GND	39	40		PI3	259

2) In Linux systems, uart is turned off by default and needs to be turned on manually before it can be used. The opening steps are as follows:


- a. First run **orangepi-config**. Ordinary users remember to add **sudo** permissions.

```
orangepi@orangepi:~$ sudo orangepi-config
```

- b. Then select **System**

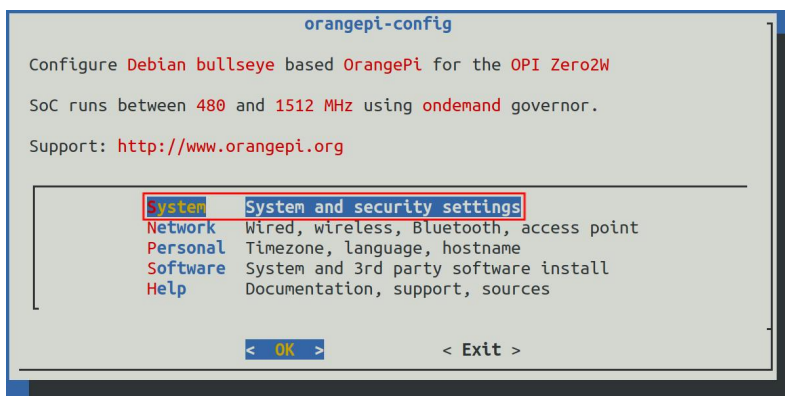

- c. Then select **Hardware**

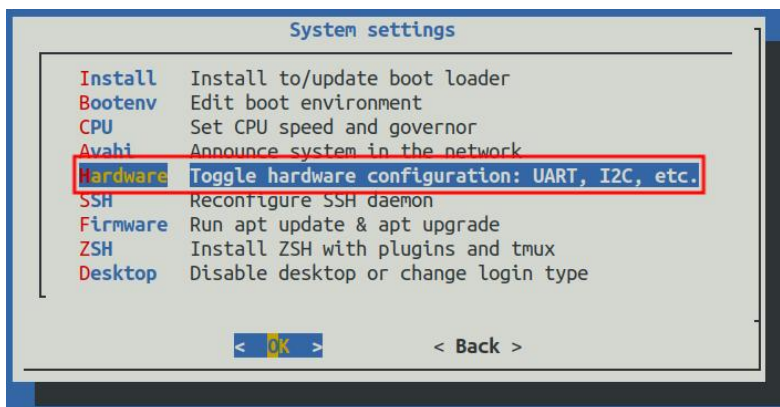


- d. Then use the keyboard's arrow keys to locate the position shown in the picture




below, and then use the **space** to select the serial port you want to open.


Multiplexing function in 40pin	Corresponding dtbo configuration
40pin - uart2	pi-uart2
40pin - uart3	pi-uart3
40pin - uart4	pi-uart4
40pin - uart5	ph-uart5

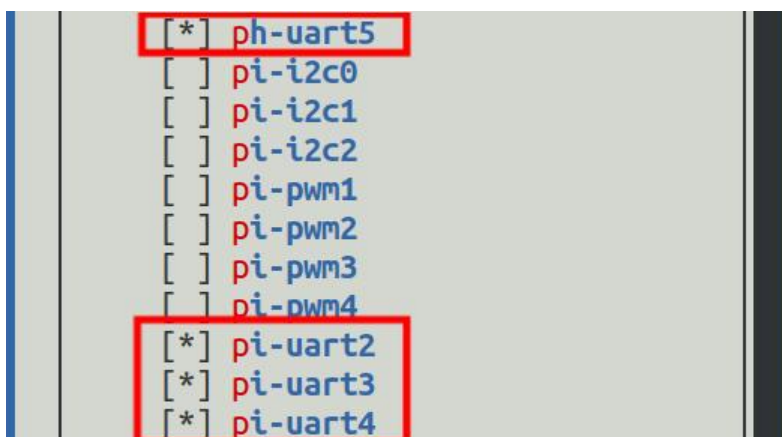


- e. Then select **<Save>** to save

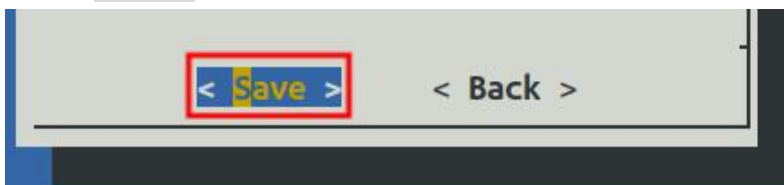

- f. Then select **<Back>**

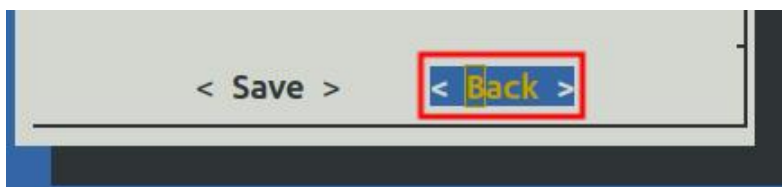

- g. Then select **<Reboot>** to restart the system to make the configuration take effect.

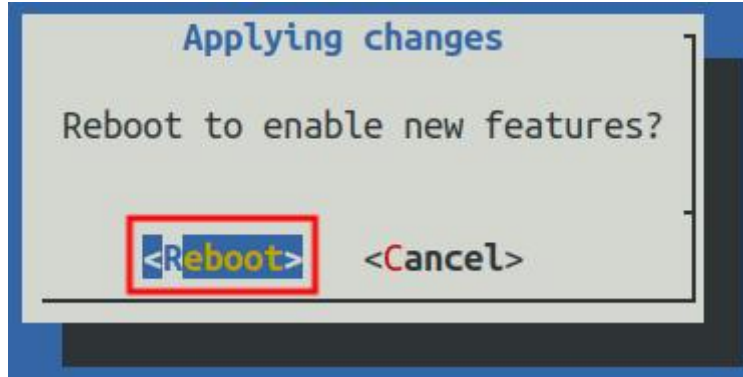

3) After entering the Linux system, first confirm whether there is a `uart5` device node under `/dev`

Note that the linux5.4 system is `/dev/ttyASx`.

```
orange_pi@orange_pi:~$ ls /dev/ttyS*
/dev/ttySx
```

4) Then start testing the uart interface. First use Dupont wire to short-circuit the rx and tx pins of the uart interface to be tested.

5) Use the **gpio** command in wiringOP to test the loopback function of the serial port as shown below. If you can see the following print, it means the serial port communication is normal.

Note that the last x in the `gpio serial /dev/ttySx` command needs to be replaced with the serial number of the corresponding uart device node.

```
orange_pi@orange_pi:~$ gpio serial /dev/ttySx          # linux-6.1 test command
orange_pi@orange_pi:~$ gpio serial /dev/ttyASx         # linux-5.4 test command
```

```
Out:  0:  ->  0
Out:  1:  ->  1
Out:  2:  ->  2
Out:  3:  -> 3^C
```

3. 19. 6. PWM test method

1) As can be seen from the following table, the available pwm are pwm1, pwm2, pwm3 and pwm4.

GPIO NO.	GPIO	Function	Pin
		3.3V	1

Pin	Function	GPIO	GPIO NO.
2	5V		



264	PI8	TWI1-SDA	3
263	PI7	TWI1-SCL	5
269	PI13	PWM3/UART4_TX	7
		GND	9
226	PH2	UART5_TX	11
227	PH3	UART5_RX	13
261	PI5	TWI0_SCL/UART2_TX	15
		3.3V	17
231	PH7	SPI1_MOSI	19
232	PH8	SPI1_MISO	21
230	PH6	SPI1_CLK	23
		GND	25
266	PI10	TWI2-SDA/UART3_RX	27
256	PI0		29
271	PI15		31
268	PI12	PWM2	33
258	PI2		35
272	PI16		37
		GND	39


4	5V		
6	GND		
8	UART0_TX	PH0	224
10	UART0_RX	PH1	225
12		PI1	257
14	GND		
16	PWM4/UART4_RX	PI14	270
18		PH4	228
20	GND		
22	TWI0_SDA/UART2_RX	PI6	262
24	SPI1_CS0	PH5	229
26	SPI1_CS1	PH9	233
28	TWI2-SCL/UART3_TX	PI9	265
30	GND		
32	PWM1	PI11	267
34	GND		
36		PC12	76
38		PI4	260
40		PI3	259

2) pwm is turned off by default in Linux systems and needs to be turned on manually to use it. The opening steps are as follows:


- a. First run **orange-pi-config**. Ordinary users remember to add **sudo** permissions.

```
orange-pi@orange-pi:~$ sudo orange-pi-config
```


- b. Then select **System**

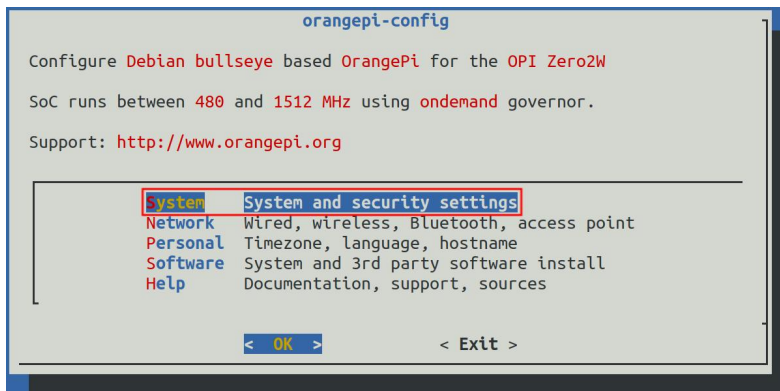


- c. Then select **Hardware**

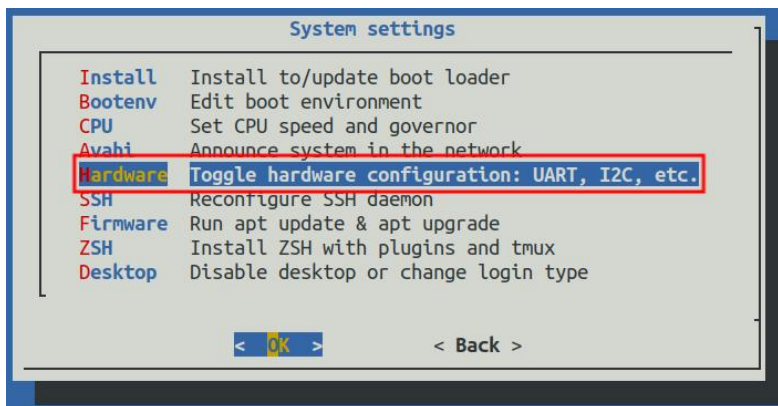


- d. Then use the keyboard's arrow keys to locate the position shown in the figure below, and then use the **space** to select the configuration corresponding to the pwm you want to open.

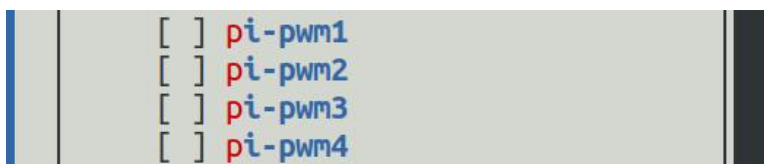


- e. Then select **<Save>** to save

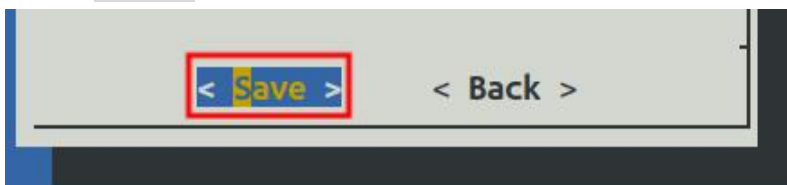

- f. Then select **<Back>**

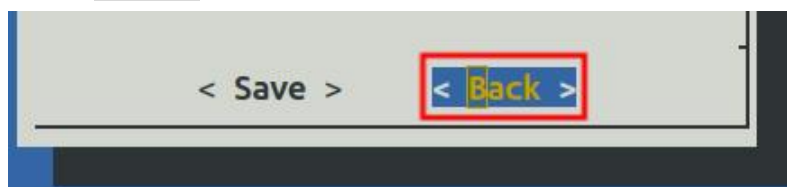

- g. Then select **<Reboot>** to restart the system to make the configuration take effect.

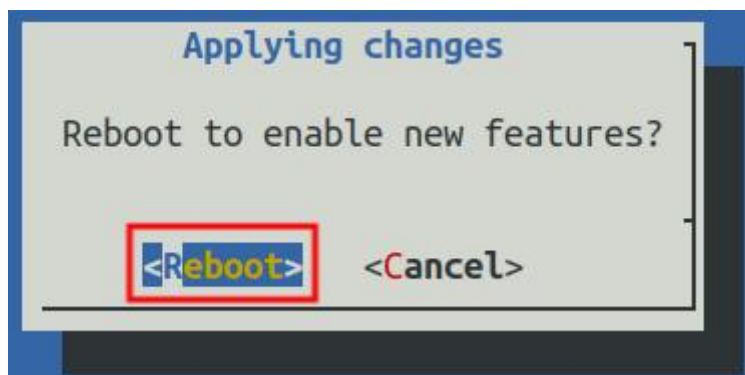



3) After restarting, you can start the PWM test

Please execute the following commands under the root user.

- a. Enter the following command on the command line to make pwm1 output a 50Hz square wave

```
root@orangepi:~# echo 1 > /sys/class/pwm/pwmchip0/export
root@orangepi:~# echo 20000000 > /sys/class/pwm/pwmchip0/pwm1/period
root@orangepi:~# echo 1000000 > /sys/class/pwm/pwmchip0/pwm1/duty_cycle
root@orangepi:~# echo 1 > /sys/class/pwm/pwmchip0/pwm1/enable
```

- b. Enter the following command on the command line to make pwm2 output a 50Hz square wave


```
root@orangepi:~# echo 2 > /sys/class/pwm/pwmchip0/export
root@orangepi:~# echo 20000000 > /sys/class/pwm/pwmchip0/pwm2/period
root@orangepi:~# echo 1000000 > /sys/class/pwm/pwmchip0/pwm2/duty_cycle
root@orangepi:~# echo 1 > /sys/class/pwm/pwmchip0/pwm2/enable
```

- c. Enter the following command on the command line to make pwm3 output a 50Hz square wave

```
root@orangepi:~# echo 3 > /sys/class/pwm/pwmchip0/export
root@orangepi:~# echo 20000000 > /sys/class/pwm/pwmchip0/pwm3/period
root@orangepi:~# echo 1000000 > /sys/class/pwm/pwmchip0/pwm3/duty_cycle
root@orangepi:~# echo 1 > /sys/class/pwm/pwmchip0/pwm3/enable
```

- d. Enter the following command on the command line to make pwm4 output a 50Hz square wave

```
root@orangepi:~# echo 4 > /sys/class/pwm/pwmchip0/export
root@orangepi:~# echo 20000000 > /sys/class/pwm/pwmchip0/pwm4/period
root@orangepi:~# echo 1000000 > /sys/class/pwm/pwmchip0/pwm4/duty_cycle
root@orangepi:~# echo 1 > /sys/class/pwm/pwmchip0/pwm4/enable
```

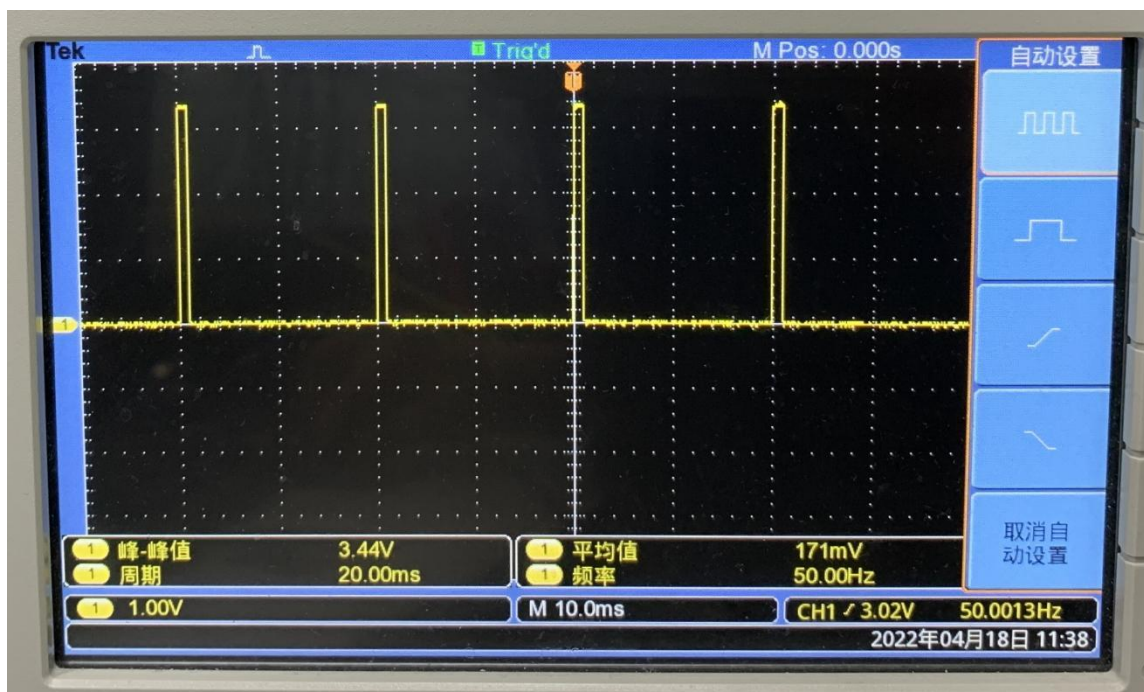


3. 20. How to use wiringOP hardware PWM

Before using the wiringOP hardware PWM function, please download the latest wiringOP source code and then compile and install it. The wiringOP preinstalled in the v1.0.0 version of the Linux image cannot use the hardware PWM function.

For how to download and install wiringOP, please refer to the instructions in the section [How to Install wiringOP](#).

The development board can use up to 4 channels of PWM. The locations of their pins are as shown in the figure below:

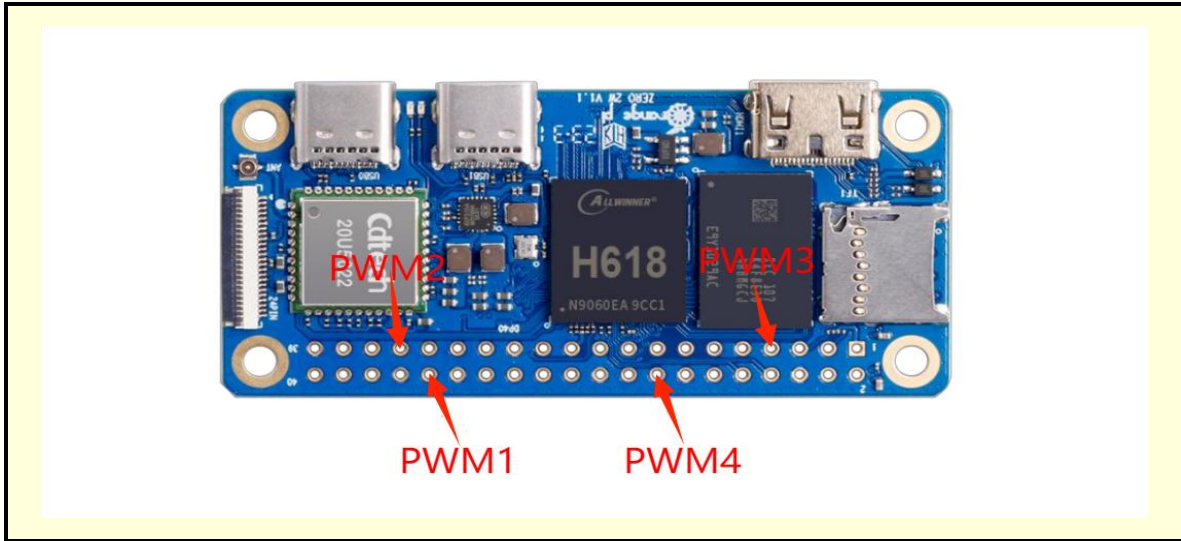

3. 20. 1. How to set PWM using wiringOP' s gpio command

3. 20. 1. 1. Set the corresponding pin to PWM mode


1) The corresponding relationship between the 4 PWM pins and the wPi serial number is as shown in the following table:

PWM pin	wPi serial number
PWM1	21
PWM2	22
PWM3	2
PWM4	9

2) The command to set the pin to PWM mode is as follows, taking PWM1 as an example. The third parameter needs to enter the serial number of the wPi corresponding to the PWM1 pin.

```
orangepi@orangepi:~$ gpio mode 21 pwm
```

3) After the pin is set to PWM mode, it will output a square wave with a frequency of 23475Hz and a duty cycle of 50% by default. At this time, we use an oscilloscope to measure the corresponding PWM pin and you can see the following waveform.

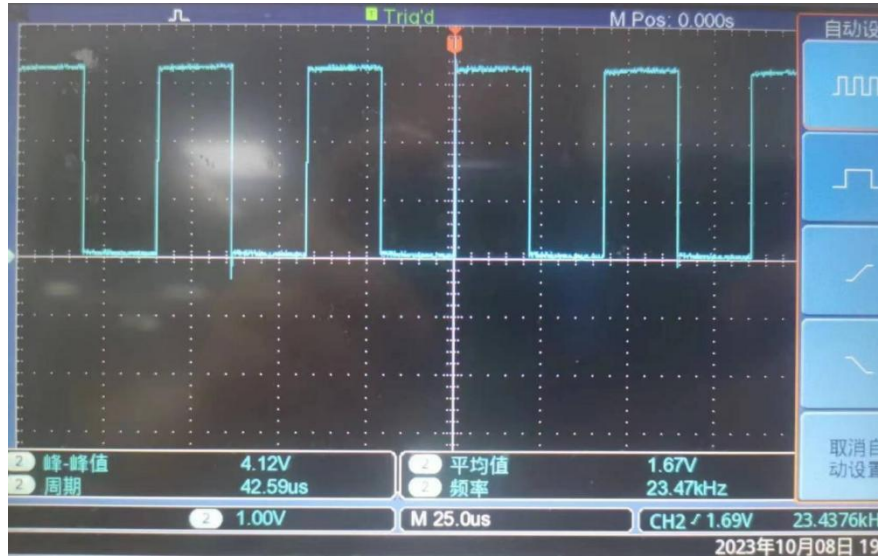

3. 20. 1. 2. Method of adjusting PWM duty cycle

1) The calculation formula of PWM duty cycle is as follows. We can adjust the PWM duty cycle by setting the values of CCR and ARR.

$$\text{PWM duty cycle} = \text{CCR} / \text{ARR}$$

In:

The value range of CCR is 0~65535, and the default value is 512.

The value range of ARR is 1~65536, and the default value is 1024.

It should be noted that the CCR value we set needs to be less than ARR, because the duty cycle cannot be greater than 1. When setting $\text{CCR} > \text{ARR}$, the following error message will be prompted:


val pwmWrite 0 <= X <= 1024

Or you can set new range by yourself by `pwmSetRange(range)`

2) We can use the following command to set the ARR of PWM1 pin to 2048

```
orange@orange:~$ gpio pwmr 21 2048
```


3) After running the above command, you can observe through the oscilloscope that the PWM duty cycle changes from the default 50% (512/1024) to 25% (512/2048)

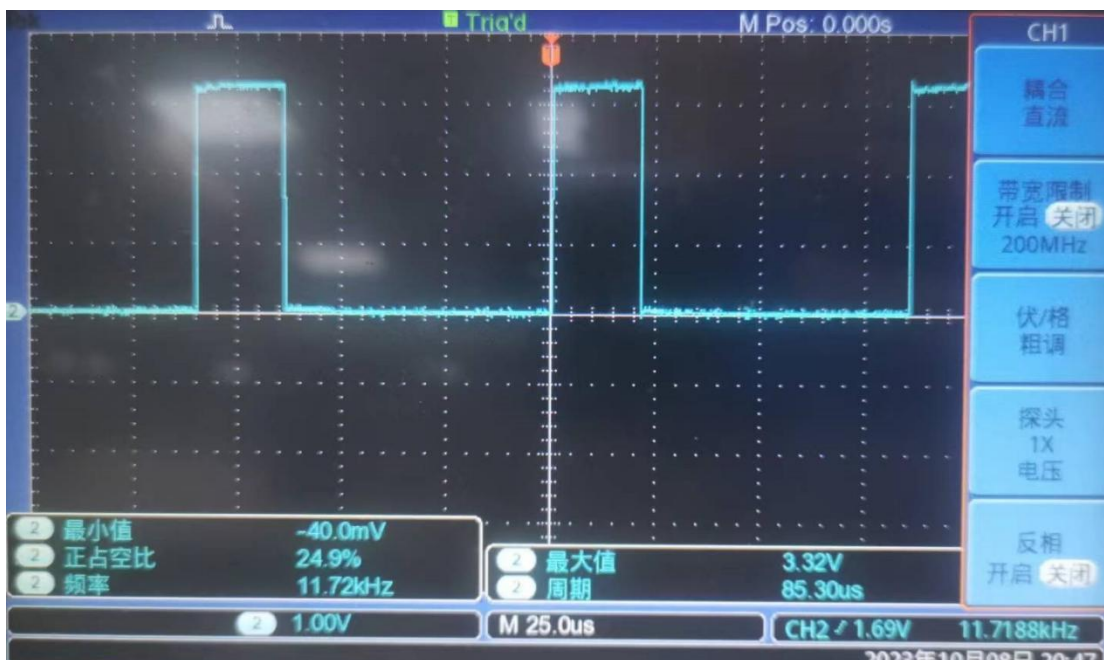

4) We can use the following command to set the CCR of the PWM1 pin to 1024

```
orange@orange:~$ gpio pwm 21 1024
```

5) After running the above command, you can observe through the oscilloscope that the PWM duty cycle changes from 25% (512/2048) to 50% (1024/2048)

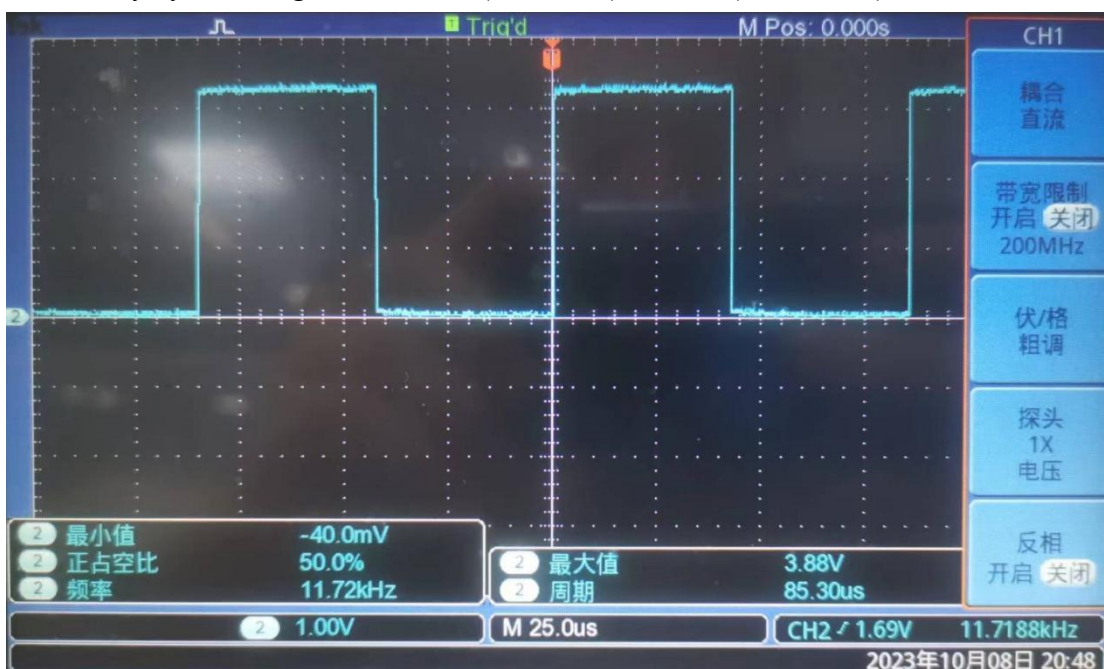



3. 20. 1. 3. Method of adjusting PWM frequency

3. 20. 1. 3. 1. Method to adjust PWM frequency by setting frequency division coefficient


1) After setting the frequency division coefficient, the PWM frequency will become one/one of the frequency division coefficient.

The value range of the frequency division coefficient is 1~256, and the default is 1.

2) For example, you can use the following command to set the frequency division coefficient of the PWM1 pin to 5

```
orangepi@orangepi:~$ gpio pwm 21 5
```

3) The default frequency of PWM is 23475Hz. After dividing by 5, the calculated value is 4695Hz. Through the oscilloscope, it can be observed that the actual value of PWM frequency is 4688Hz, and the error can be ignored.

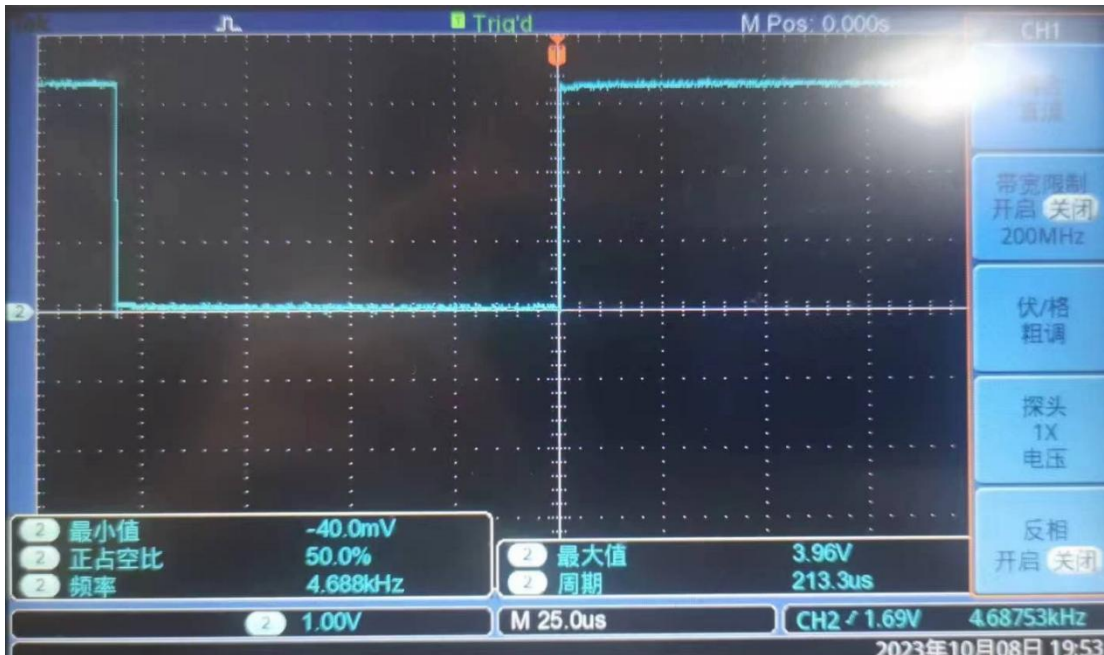



3. 20. 1. 3. 2. Method of directly setting the PWM frequency

1) We can use the `gpio pwmTone` command to set the frequency of the PWM pin. For example, use the following command to set the PWM frequency of the PWM1 pin to 20000Hz.

```
orange@orange:~$ gpio pwmTone 21 20000
```

When setting the PWM frequency, you need to ensure:

Set frequency value $> 24000000 / (65536 * \text{frequency division coefficient})$.

For example, the default frequency division coefficient is 1. If the frequency division coefficient is not modified, the set frequency value should be greater than 366.

If the setting value is too small, the following error will appear:

gpio: range must be between 1 and 65536

2) 然后通过示波器可以观察到 PWM 频率变为 20000Hz 了



3. 20. 2. How to use the PWM test program

1) In the example directory of wiringOP, there is a program named pwm.c. This program demonstrates how to operate PWM using the PWM-related API in wiringOP.



```
orangepi@orangepi:~$ cd wiringOP/examples/  
orangepi@orangepi:~/wiringOP/examples$ ls pwm.c  
pwm.c
```

2) The command to compile **pwm.c** into an executable program is as follows

```
sorangepi@orangepi:~/wiringOP/examples$ gcc -o pwm pwm.c -lwiringPi
```

3) Then you can execute the PWM test program. When executing the PWM test program, you need to specify the PWM pin. For example, you can use the following command to test the PWM1 pin:

```
sorangepi@orangepi:~/wiringOP/examples$ sudo ./pwm 21
```

4) After the pwm program is executed, the following contents will be tested in sequence:

- a. Adjust the PWM duty cycle by setting ARR
- b. Adjust the PWM duty cycle by setting CCR
- c. Adjust the PWM frequency by setting the frequency division coefficient
- d. Directly set the PWM frequency

5) After each test is completed, the PWM waveform output will be stopped for 5 seconds. After all test contents are completed, a new round of testing will be restarted.

6) The detailed execution process of the PWM test program is as follows:

- a. Adjust the PWM duty cycle by setting ARR: You can observe through the oscilloscope that the PWM waveform changes every 0.5 seconds. After changing 8 times, the PWM duty cycle changes from 50% to 25%, maintains it for 5 seconds, and then PWM The waveform changes every 0.5 seconds. After changing 8 times, the PWM duty cycle changes from 25% to 50% and remains for 5 seconds.
- b. Adjust the PWM duty cycle by setting CCR: You can observe through the oscilloscope that the PWM waveform changes every 0.5 seconds. After changing 8 times, the PWM duty cycle changes from 50% to 100%, maintains it for 5 seconds, and then PWM The waveform changes every 0.5 seconds. After changing 8 times, the PWM duty cycle changes from 100% to 50% and remains for 5 seconds.
- c. Adjust the PWM frequency by setting the frequency division coefficient: You



can observe through the oscilloscope that the PWM waveform changes every 0.5 seconds. After changing 9 times, the PWM frequency becomes 1/10 of the default PWM frequency, which is 2347Hz, and remains for 5 seconds. , and then the PWM waveform changes every 0.5 seconds. After changing 9 times, the PWM frequency changes to the default PWM frequency, which is 23475Hz, and remains for 5 seconds.

- d. Directly set the PWM frequency: It can be observed through the oscilloscope that the PWM frequency first changes to 2000Hz, and then the PWM frequency increases by 2000Hz every two seconds. After changing 9 times, the PWM frequency changes to 20000Hz and remains for 5 seconds.

3. 21. How to install and use wiringOP-Python

Note: The pin header on the 40pin interface is not soldered by default, and you need to solder it yourself before it can be used.

wiringOP-Python is the Python language version of wiringOP library, used to operate the development board's GPIO, I2C, SPI, UART and other hardware resources in the Python program

Also please note that all the following commands are operated under the **root user.**

3. 21. 1. How to install wiringOP-Python

- 1) First install dependency packages

```
root@orangepi:~# sudo apt-get update
```

```
root@orangepi:~# sudo apt-get -y install git swig python3-dev python3-setuptools
```

- 2) Then use the following command to download the source code of wiringOP-Python

Note that the following `git clone--recursive` command will automatically download the source code of wiringOP, because wiringOP-Python depends on wiringOP. Please make sure there are no errors during the download process due to network problems.

If there is a problem downloading the code from GitHub, you can directly use the



wiringOP-Python source code that comes with the Linux image. The storage location is:
/usr/src/wiringOP-Python

```
root@orangepi:~# git clone --recursive https://github.com/orangepi-xunlong/wiringOP-Python -b next
root@orangepi:~# cd wiringOP-Python
root@orangepi:~/wiringOP-Python# git submodule update --init --remote
```

3) Then use the following command to compile wiringOP-Python and install it into the Linux system of the development board

```
root@orangepi:~# cd wiringOP-Python
root@orangepi:~/wiringOP-Python# python3 generate-bindings.py > bindings.i
root@orangepi:~/wiringOP-Python# sudo python3 setup.py install
```

4) Then enter the following command. If helpful information is output, it means wiringOP-Python is successfully installed. Press the **q** key to exit the help information interface.

```
root@orangepi:~/wiringOP-Python# python3 -c "import wiringpi; help(wiringpi)"
Help on module wiringpi:

NAME
    wiringpi

DESCRIPTION
    # This file was automatically generated by SWIG (http://www.swig.org).
    # Version 4.0.2
    #
    # Do not make changes to this file unless you know what you are doing--modify
    # the SWIG interface file instead.
```

5) The steps to test whether wiringOP-Python is installed successfully under the python command line are as follows:

- a. First use the python3 command to enter the command line mode of python3

```
root@orangepi:~# python3
```

- b. Then import the python module of wiringpi

```
>>> import wiringpi;
```

- c. Finally, enter the following command to view the help information of



wiringOP-Python. Press the q key to exit the help information interface.

```
>>> help(wiringpi)
Help on module wiringpi:

NAME
    wiringpi

DESCRIPTION
    # This file was automatically generated by SWIG (http://www.swig.org).
    # Version 4.0.2
    #
    # Do not make changes to this file unless you know what you are doing--modify
    # the SWIG interface file instead.

CLASSES
    builtins.object
        GPIO
        I2C
        Serial
        nes

    class GPIO(builtins.object)
        | GPIO(pinmode=0)
        |

>>>
```

3. 21. 2. 40pin GPIO port test

Like wiringOP, wiringOP-Python can also determine which GPIO pin to operate by specifying the wPi number. Because there is no command to view the wPi number in wiringOP-Python, you can only view the board's wPi number and physics through the gpio command in wiringOP Correspondence of pins.



```

orangePi@orangePiZero2w:~$ gpio readall
+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
| GPIO | wPi |   Name   | Mode | V | Physical | V | Mode |   Name   | wPi | GPIO |
+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
|      |     | 3.3V     |      |   | 1 | 2 |      | 5V       |     |      | |
| 264 | 0 | SDA.1     | OFF  | 0 | 3 | 4 |      | 5V       |     |      |
| 263 | 1 | SCL.1     | OFF  | 0 | 5 | 6 |      | GND      |     |      |
| 269 | 2 | PWM3      | OFF  | 0 | 7 | 8 | 0 | ALT2     | TXD.0 | 3 | 224 |
|      |     | GND      |      |   | 9 | 10 | 0 | ALT2     | RXD.0 | 4 | 225 |
| 226 | 5 | TXD.5     | OFF  | 0 | 11 | 12 | 0 | OFF      | PI01  | 6 | 257 |
| 227 | 7 | RXD.5     | OFF  | 0 | 13 | 14 |      | GND      |     |      |
| 261 | 8 | TXD.2     | OFF  | 0 | 15 | 16 | 0 | OFF      | PWM4  | 9 | 270 |
|      |     | 3.3V     |      |   | 17 | 18 | 0 | OFF      | PH04  | 10 | 228 |
| 231 | 11 | MOSI.1    | OFF  | 0 | 19 | 20 |      | GND      |     |      |
| 232 | 12 | MISO.1    | OFF  | 0 | 21 | 22 | 0 | OFF      | RXD.2 | 13 | 262 |
| 230 | 14 | SCLK.1    | OFF  | 0 | 23 | 24 | 0 | OFF      | CE.0  | 15 | 229 |
|      |     | GND      |      |   | 25 | 26 | 0 | ALT3     | CE.1  | 16 | 233 |
| 266 | 17 | SDA.2     | OFF  | 0 | 27 | 28 | 0 | OFF      | SCL.2 | 18 | 265 |
| 256 | 19 | PI00      | OFF  | 0 | 29 | 30 |      | GND      |     |      |
| 271 | 20 | PI15      | OFF  | 0 | 31 | 32 | 0 | OFF      | PWM1  | 21 | 267 |
| 268 | 22 | PI12      | OFF  | 0 | 33 | 34 |      | GND      |     |      |
| 258 | 23 | PI02      | OFF  | 0 | 35 | 36 | 1 | OUT      | PC12  | 24 | 76  |
| 272 | 25 | PI16      | OFF  | 0 | 37 | 38 | 0 | OFF      | PI04  | 26 | 260 |
|      |     | GND      |      |   | 39 | 40 | 0 | OFF      | PI03  | 27 | 259 |
+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
| GPIO | wPi |   Name   | Mode | V | Physical | V | Mode |   Name   | wPi | GPIO |
+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
orangePi@orangePiZero2w:~$

```

1) The following uses pin No. 7 - corresponding to GPIO PI13 - corresponding to wPi serial number 2 - as an example to demonstrate how to set the high and low levels of the GPIO port.

```

orangePi@orangePiZero2w:~$ gpio readall
+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
| GPIO | wPi |   Name   | Mode | V | Physical | V | Mode |   Name   | wPi | GPIO |
+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
|      |     | 3.3V     |      |   | 1 | 2 |      | 5V       |     |      | |
| 264 | 0 | SDA.1     | OFF  | 0 | 3 | 4 |      | 5V       |     |      |
| 263 | 1 | SCL.1     | OFF  | 0 | 5 | 6 |      | GND      |     |      |
| 269 | 2 | PWM3      | OFF  | 0 | 7 | 8 | 0 | ALT2     | TXD.0 | 3 | 224 |
|      |     | GND      |      |   | 9 | 10 | 0 | ALT2     | RXD.0 | 4 | 225 |
+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+

```

2) The steps for testing directly with commands are as follows:

- First set the GPIO port to output mode, where the first parameter of the **pinMode** function is the serial number of the wPi corresponding to the pin, and the second parameter is the GPIO mode.

```

root@orangePi:~/wiringOP-Python# python3 -c "import wiringpi; \
from wiringpi import GPIO; wiringpi.wiringPiSetup(); \
wiringpi.pinMode(2, GPIO.OUTPUT); "

```



- b. Then set the GPIO port to output a low level. After setting, you can use a multimeter to measure the voltage value of the pin. If it is 0v, it means the low level is set successfully.

```
root@orangepi:~/wiringOP-Python# python3 -c "import wiringpi; \
from wiringpi import GPIO; wiringpi.wiringPiSetup() ;\
wiringpi.digitalWrite(2, GPIO.LOW)"
```

- c. Then set the GPIO port to output a high level. After setting, you can use a multimeter to measure the voltage value of the pin. If it is 3.3v, it means the setting of the high level is successful.

```
root@orangepi:~/wiringOP-Python# python3 -c "import wiringpi; \
from wiringpi import GPIO; wiringpi.wiringPiSetup() ;\
wiringpi.digitalWrite(2, GPIO.HIGH)"
```

3) The steps for testing in the command line of python3 are as follows:

- a. First use the python3 command to enter the command line mode of python3

```
root@orangepi:~# python3
```

- b. Then import the python module of wiringpi

```
>>> import wiringpi
>>> from wiringpi import GPIO
```

- c. Then set the GPIO port to output mode, where the first parameter of the **pinMode** function is the serial number of the wPi corresponding to the pin, and the second parameter is the GPIO mode.

```
>>> wiringpi.wiringPiSetup()
0
>>> wiringpi.pinMode(2, GPIO.OUTPUT)
```

- d. Then set the GPIO port to output a low level. After setting, you can use a multimeter to measure the voltage value of the pin. If it is 0v, it means the low level is set successfully.

```
>>> wiringpi.digitalWrite(2, GPIO.LOW)
```

- e. Then set the GPIO port to output a high level. After setting, you can use a multimeter to measure the voltage value of the pin. If it is 3.3v, it means the setting of the high level is successful.

```
>>> wiringpi.digitalWrite(2, GPIO.HIGH)
```

4) For wiringOP-Python to set the GPIO high and low levels in the python code, you can



refer to the **blink.py** test program in the examples. The **blink.py** test program will set the voltage of all GPIO ports in the 40 Pin of the development board to continuously change high and low.

```
root@orangepi:~/wiringOP-Python# cd examples
root@orangepi:~/wiringOP-Python/examples# ls blink.py
blink.py
root@orangepi:~/wiringOP-Python/examples# python3 blink.py
```

3. 21. 3. 40pin SPI test

1) As can be seen from the table below, the spi available for the 40pin interface is spi1, and there are two chip select pins cs0 and cs1

GPIO NO.	GPIO	Function	Pin
		3. 3V	1
264	PI8	TWI1-SDA	3
263	PI7	TWI1-SCL	5
269	PI13	PWM3/UART4_TX	7
		GND	9
226	PH2	UART5_TX	11
227	PH3	UART5_RX	13
261	PI5	TWI0_SCL/UART2_TX	15
		3. 3V	17
231	PH7	SPI1_MOSI	19
232	PH8	SPI1_MISO	21
230	PH6	SPI1_CLK	23
		GND	25
266	PI10	TWI2-SDA/UART3_RX	27
256	PI0		29
271	PI15		31
268	PI12	PWM2	33
258	PI2		35
272	PI16		37
		GND	39

Pin	Function	GPIO	GPIO NO.
2	5V		
4	5V		
6	GND		
8	UART0_TX	PH0	224
10	UART0_RX	PH1	225
12		PI1	257
14	GND		
16	PWM4/UART4_RX	PI14	270
18		PH4	228
20	GND		
22	TWI0_SDA/UART2_RX	PI6	262
24	SPI1_CS0	PH5	229
26	SPI1_CS1	PH9	233
28	TWI2-SCL/UART3_TX	PI9	265
30	GND		
32	PWM1	PI11	267
34	GND		
36		PC12	76
38		PI4	260
40		PI3	259


2) In Linux systems, spi1 is turned off by default and needs to be turned on manually before it can be used. The opening steps are as follows:

- a. First run **orangepi-config**. Ordinary users remember to add **sudo** permissions.




```
orange@orange:~$ sudo orangepi-config
```

- b. Then select **System**

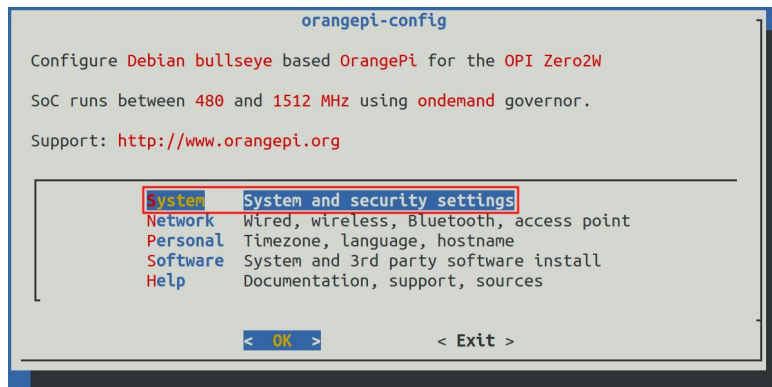


- c. Then select **Hardware**

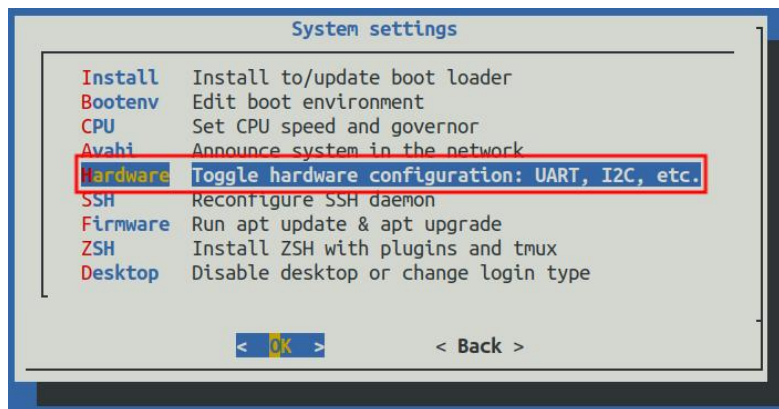


- d. Then use the keyboard's arrow keys to locate the position shown in the figure below, and then use the **space** to select the dtbo configuration of the SPI you want to open.

dtbo configuration	illustrate
spi1-cs0-cs1-spidev	Open cs0 and cs1 of spi1 at the same time
spi1-cs0-spidev	Only open cs0 of spi1
spi1-cs1-spidev	Only open cs1 of spi1


- e. Then select **<Save>** to save

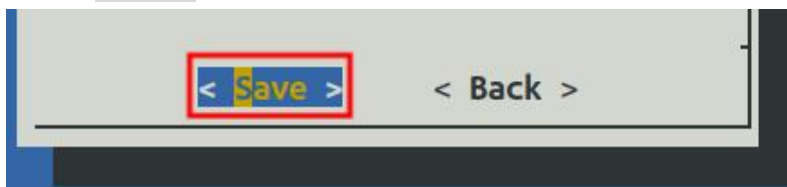

- f. Then select **<Back>**

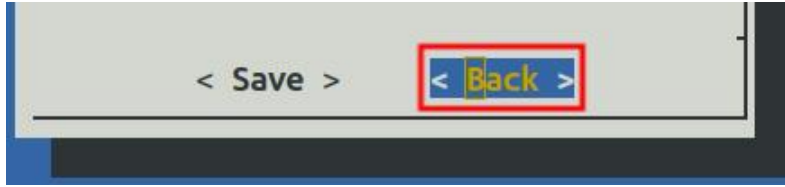

- g. Then select **<Reboot>** to restart the system to make the configuration take effect.

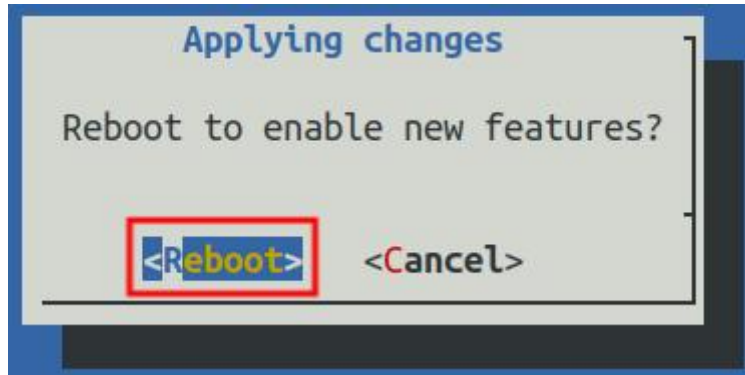

- 3) Then check whether there is a **spidev1.x** device node in the Linux system. If it exists, it means that the SPI1 configuration has taken effect.

```
orangepi@orangepi:~$ ls /dev/spidev1*
/dev/spidev1.0  /dev/spidev1.1
```

Note that only when you open spi1-cs0-cs1-spidev, you will see the device nodes of the two spi.

- 4) Then you can use the **spidev_test.py** program in examples to test the SPI loopback function. The **spidev_test.py** program needs to specify the following two parameters:

- a. **--channel:** Specify the channel number of SPI
- b. **--port:** Specify the port number of the SPI

- 5) Without shorting the mosi and miso pins of SPI1, the output result of running **spidev_test.py** is as follows. You can see that the data of TX and RX are inconsistent.

```
root@orangepi:~/wiringOP-Python# cd examples
root@orangepi:~/wiringOP-Python/examples# python3 spidev_test.py \
--channel 1 --port 0
spi mode: 0x0
max speed: 500000 Hz (500 KHz)
```

```
Opening device /dev/spidev1.1
```

TX		FF FF FF FF FF FF	40 00 00 00 00 95	FF FF FF FF FF FF FF FF FF FF FF FF
		FF FF FF FF FF F0 0D	@.....	
RX		FF FF FF FF FF FF	FF FF FF FF FF FF	FF FF FF FF FF FF FF FF FF FF FF FF
		FF FF FF FF FF FF FF FF		

6) Then use Dupont wire to short-circuit the txd (pin 19 in the 40pin interface) and rxd (pin 21 in the 40pin interface) of SPI1 and then run `spidev_test.py`. The output is as follows, you can see If the data sent and received are the same, it means that the SPI1 loopback test is normal.

```
root@orangepi:~/wiringOP-Python# cd examples
root@orangepi:~/wiringOP-Python/examples# python3 spidev_test.py \
--channel 1 --port 0
spi mode: 0x0
max speed: 500000 Hz (500 KHz)
Opening device /dev/spidev1.1
TX | FF FF FF FF FF FF 40 00 00 00 00 95 FF FF FF FF FF FF FF FF FF FF
FF FF FF FF FF F0 0D |.....@.....|
RX | FF FF FF FF FF FF 40 00 00 00 00 95 FF FF FF FF FF FF FF FF FF FF
FF FF FF FF FF F0 0D |.....@.....|
```

3. 21. 4. 40pin I2C test

1) As can be seen from the table below, the i2c available for the 40pin interface are i2c0, i2c1 and i2c2

GPIO NO.	GPIO	Function	Pin
		3.3V	1
264	PI8	TWI1-SDA	3
263	PI7	TWI1-SCL	5
269	PI13	PWM3/UART4_TX	7
		GND	9
226	PH2	UART5_TX	11
227	PH3	UART5_RX	13
261	PI5	TWI0_SCL/UART2_TX	15
		3.3V	17
231	PH7	SPI1_MOSI	19
232	PH8	SPI1_MISO	21

Pin	Function	GPIO	GPIO NO.
2	5V		
4	5V		
6	GND		
8	UART0_TX	PH0	224
10	UART0_RX	PH1	225
12		PI1	257
14	GND		
16	PWM4/UART4_RX	PI14	270
18		PH4	228
20	GND		
22	TWIO_SDA/UART2_RX	PI6	262




230	PH6	SPI1_CLK	23	24	SPI1_CS0	PH5	229
		GND	25	26	SPI1_CS1	PH9	233
266	PI10	TWI2-SDA/UART3_RX	27	28	TWI2-SCL/UART3_TX	PI9	265
256	PI0		29	30	GND		
271	PI15		31	32	PWM1	PI11	267
268	PI12	PWM2	33	34	GND		
258	PI2		35	36		PC12	76
272	PI16		37	38		PI4	260
		GND	39	40		PI3	259

2) i2c is turned off by default in Linux systems and needs to be turned on manually to use it. The opening steps are as follows:


- a. First run **orangepi-config**. Ordinary users remember to add **sudo** permissions.

```
orangepi@orangepi:~$ sudo orangepi-config
```

- b. Then select **System**

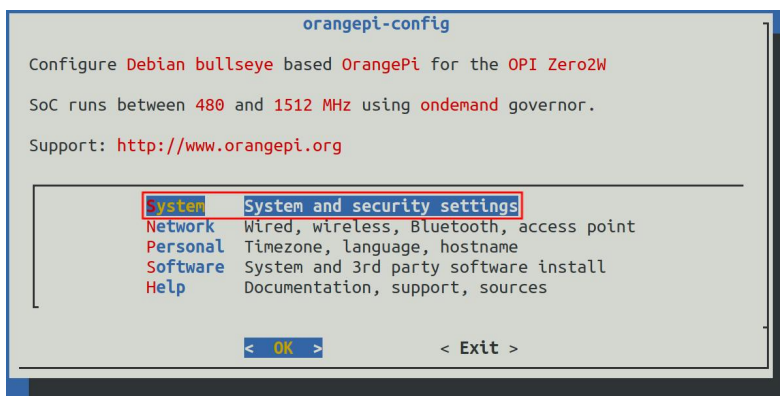

- c. Then select **Hardware**

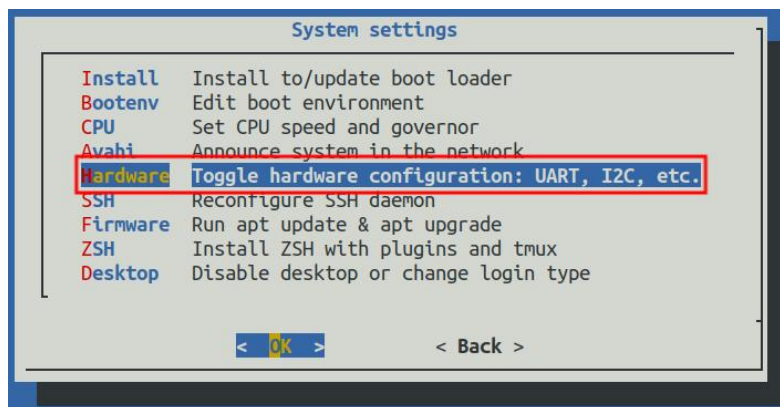


- d. Then use the keyboard's arrow keys to locate the position shown in the picture




below, and then use the **space** to select the corresponding i2c configuration in the picture below.


Multiplexing function in 40pin	Corresponding dtbo configuration
40pin - i2c0	pi-i2c0
40pin - i2c1	pi-i2c1
40pin - i2c2	pi-i2c2

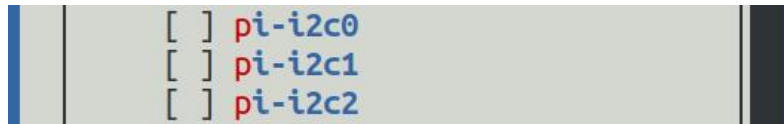


- e. Then select **<Save>** to save

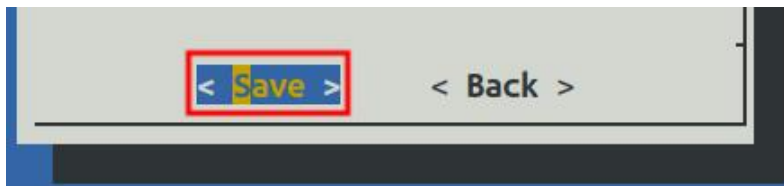

- f. Then select **<Back>**

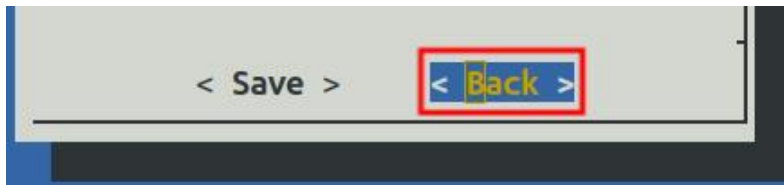

- g. Then select **<Reboot>** to restart the system to make the configuration take effect.

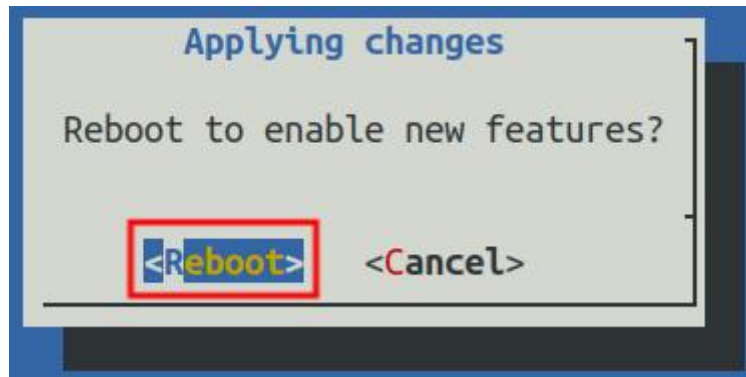

3) After starting the Linux system, first confirm that there is an open i2c device node under **/dev**

```
orangeypi@orangeypi:~$ ls /dev/i2c-*
/dev/i2c-*
```

Sometimes the i2c device node and the i2c bus serial number do not correspond one to one. For example,



the i2c device node of the i2c1 bus may be /dev/i2c-3.

The method to accurately confirm the device node under /dev corresponding to the i2c bus is:

c. First run the following command to check the corresponding relationship of i2c

```
orangepi@orangezero2w:~$ ls /sys/devices/platform/soc*/i2c-* | grep "i2c-[0-9]"
```

```
/sys/devices/platform/soc/5002000.i2c/i2c-0:
```

```
/sys/devices/platform/soc/5002400.i2c/i2c-3:
```

```
/sys/devices/platform/soc/5002800.i2c/i2c-4:
```

```
/sys/devices/platform/soc/5002c00.i2c/i2c-5:
```

```
/sys/devices/platform/soc/6000000.hdm/i2c-2:
```

```
/sys/devices/platform/soc/7081400.i2c/i2c-1:
```

d. In the above output

d) 002000 is the register base address of the i2c0 bus, and i2c-0 shown behind it is its corresponding i2c device node

e) 5002400 is the register base address of the i2c1 bus, and i2c-3 shown behind it is its corresponding i2c device node


f) 5002800 is the register base address of the i2c2 bus, and i2c-4 shown behind it is its corresponding i2c device node

4) Then start testing i2c, first install i2c-tools

```
orangepi@orangepi:~$ sudo apt-get update
```

```
orangepi@orangepi:~$ sudo apt-get install -y i2c-tools
```

5) Then connect an i2c device to the i2c pin of the 40pin connector. Here we take the DS1307 RTC module as an example.

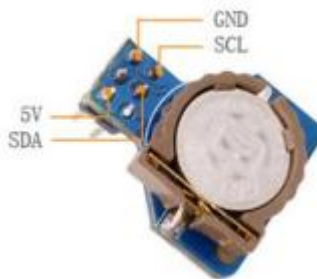

6) Then use the **i2cdetect -y x** command. If the address of the connected i2c device can



be detected, it means that the i2c device is connected correctly.

Note that x in the i2cdetect -y x command needs to be replaced with the serial number of the device node corresponding to the i2c bus.

```
orangepi@orangepi:~$ sudo i2cdetect -y 3
[sudo] password for orangepi:
   0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00:  -- -- -- -- -- -- -- -- -- -- -- -- -- --
10:  -- -- -- -- -- -- -- -- -- -- -- -- -- --
20:  -- -- -- -- -- -- -- -- -- -- -- -- -- --
30:  -- -- -- -- -- -- -- -- -- -- -- -- -- --
40:  -- -- -- -- -- -- -- -- -- -- -- -- -- --
50:  -- -- -- -- -- -- -- -- -- -- -- -- -- --
60:  -- -- -- -- -- -- -- 68 -- -- -- -- -- --
70:  -- -- -- -- -- -- -- -- -- -- -- -- -- --
orangepi@orangepi:~$
```

7) Then you can run the **ds1307.py** test program in **examples** to read the RTC time

Note that the x in i2c-x in the following command needs to be replaced with the serial number of the device node corresponding to the i2c bus.

```
root@orangepi:~/wiringOP-Python# cd examples
root@orangepi:~/wiringOP-Python/examples# python3 ds1307.py --device \
"/dev/i2c-x"
Thu 2022-06-16 04:35:46
Thu 2022-06-16 04:35:47
Thu 2022-06-16 04:35:48
^C
exit
```

3. 21. 5. 40pin UART test

1) As can be seen from the table below, the available uarts are uart2, uart3, uart4 and uart5. Please note that uart0 is set as a debugging serial port by default. Please do not use uart0 as a normal serial port.

GPI0 NO.	GPI0	Function	Pin
		3.3V	1
264	PI8	TWI1-SDA	3
263	PI7	TWI1-SCL	5
269	PI13	PWM3/UART4_TX	7
		GND	9
226	PH2	UART5_TX	11

Pin	Function	GPI0	GPI0 NO.
2	5V		
4	5V		
6	GND		
8	UART0_TX	PH0	224
10	UART0_RX	PH1	225
12		PI1	257



227	PH3	UART5_RX	13
261	PI5	TWI0_SCL/UART2_TX	15
		3.3V	17
231	PH7	SPI1_MOSI	19
232	PH8	SPI1_MISO	21
230	PH6	SPI1_CLK	23
		GND	25
266	PI10	TWI2-SDA/UART3_RX	27
256	PI0		29
271	PI15		31
268	PI12	PWM2	33
258	PI2		35
272	PI16		37
		GND	39


14	GND		
16	PWM4/UART4_RX	PI14	270
18		PH4	228
20	GND		
22	TWI0_SDA/UART2_RX	PI6	262
24	SPI1_CS0	PH5	229
26	SPI1_CS1	PH9	233
28	TWI2-SCL/UART3_TX	PI9	265
30	GND		
32	PWM1	PI11	267
34	GND		
36		PC12	76
38		PI4	260
40		PI3	259

2) In Linux systems, uart is turned off by default and needs to be turned on manually before it can be used. The opening steps are as follows::


- a. First run **orangepi-config**. Ordinary users remember to add **sudo** permissions.

```
orangepi@orangepi:~$ sudo orangepi-config
```

- b. Then select **System**

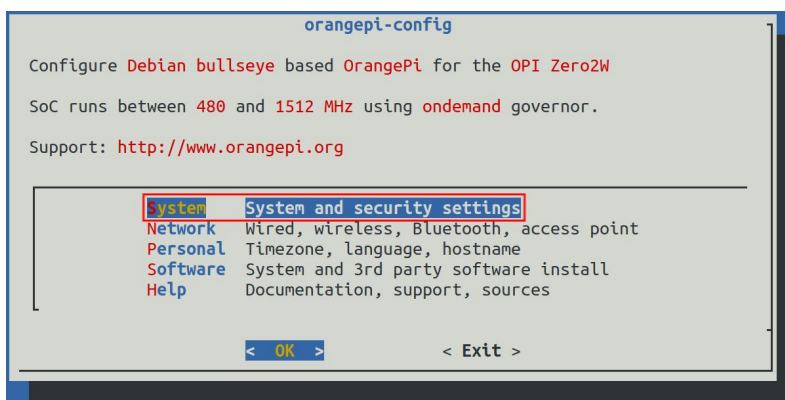


- c. Then select **Hardware**

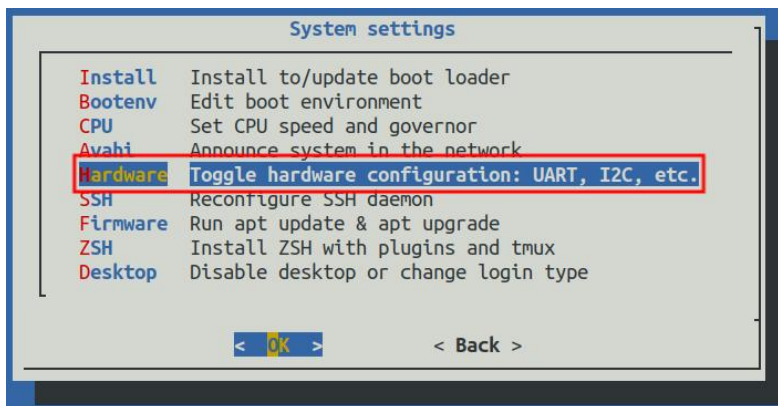


- d. Then use the keyboard's arrow keys to locate the position shown in the picture below, and then use the **space** to select the serial port you want to open.


Multiplexing function in 40pin	Corresponding dtbo configuration
40pin - uart2	pi-uart2
40pin - uart3	pi-uart3
40pin - uart4	pi-uart4
40pin - uart5	ph-uart5

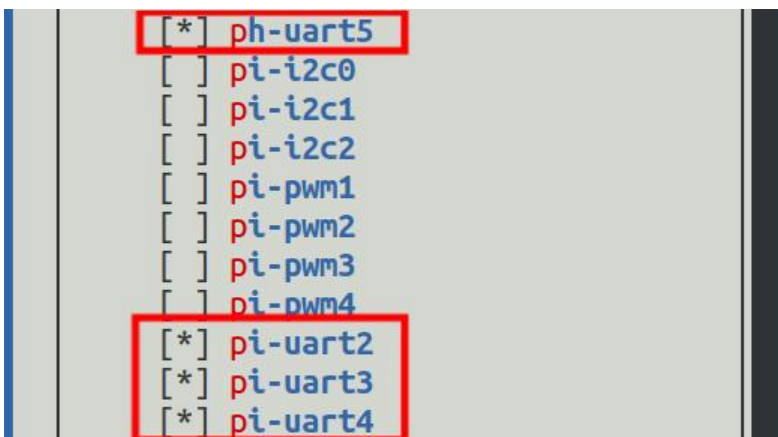


- e. Then select **<Save>** to save

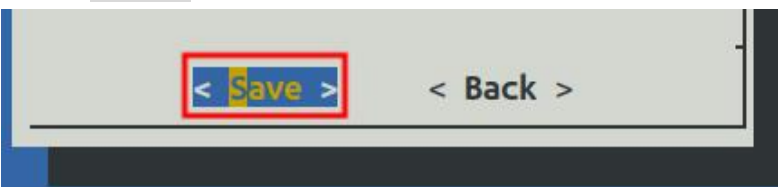

- f. Then select **<Back>**

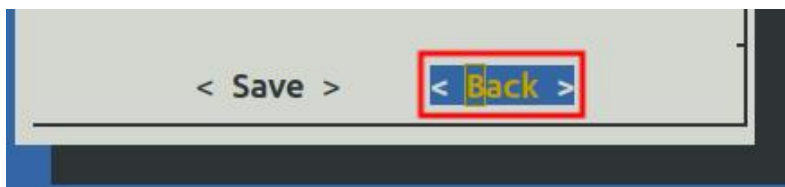

- g. Then select **<Reboot>** to restart the system to make the configuration take effect.

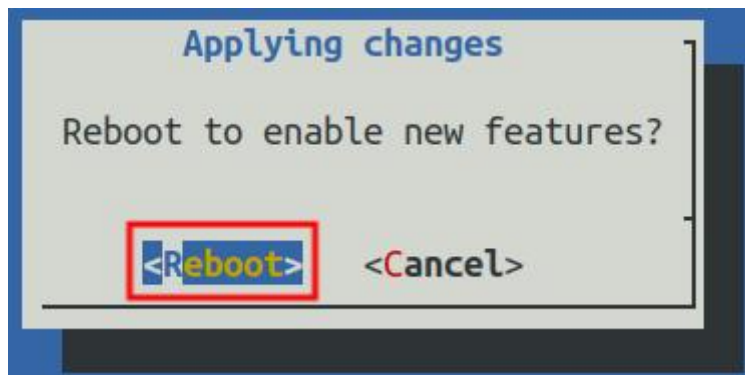

- 3) After entering the Linux system, first confirm whether there is a `uart5` device node under `/dev`

注意，linux5.4 系统为/dev/ttyASx。

```
orange@orange:~$ ls /dev/ttyS*
/dev/ttySx
```

- 4) Then start testing the uart interface. First use Dupont wire to short-circuit the rx and tx pins of the uart interface to be tested.

- 5) Use the **gpio** command in wiringOP to test the loopback function of the serial port as shown below. If you can see the following print, it means the serial port communication is normal.

Note that the last x in the `gpio serial /dev/ttySx` command needs to be replaced with the serial number of the corresponding uart device node.

```
orange@orange:~$ gpio serial /dev/ttySx          # linux-6.1 test command
orange@orange:~$ gpio serial /dev/ttyASx         # linux-5.4 test command

Out:  0:  ->  0
Out:  1:  ->  1
Out:  2:  ->  2
```



```
Out: 3: -> 3^C
```

6) Finally, you can run the **serialTest.py** program in examples to test the loopback function of the serial port. If you can see the following print, it means that the serial port loopback test is normal.

Note that the x in /dev/ttySx or /dev/ttyASx in the command needs to be replaced with the serial number of the corresponding uart device node.

```
root@orangepi:~/wiringOP-Python# cd examples
root@orangepi:~/wiringOP-Python/examples# python3 serialTest.py --device "/dev/ttySx"      # linux6.1 use
root@orangepi:~/wiringOP-Python/examples# python3 serialTest.py --device "/dev/ttyASx"    # linux5.4 use

Out: 0: -> 0
Out: 1: -> 1
Out: 2: -> 2
Out: 3: -> 3
Out: 4: ^C
exit
```

3. 22. Hardware watchdog test

The watchdog_test program is pre-installed in the Linux system released by Orange Pi and can be tested directly.

The method to run the watchdog_test program is as follows:

- The second parameter 10 represents the counting time of the watchdog. If the dog is not fed within this time, the system will restart.
- We can feed the dog by pressing any key on the keyboard (except ESC). After feeding the dog, the program will print a line "keep alive" to indicate that the dog feeding is successful.

```
orangepi@orangepi:~$ sudo watchdog_test 10
open success
options is 33152,identity is sunxi-wdt
put_usr return,if 0,success:0
The old reset time is: 16
return ENOTTY,if -1,success:0
```



```
return ENOTTY,if -1,success:0
put_user return,if 0,success:0
put_usr return,if 0,success:0
keep alive
keep alive
keep alive
```

3. 23. Check the chipid of H618 chip

The command to view the H618 chip chipid is as follows. The chipid of each chip is different, so you can use chipid to distinguish multiple development boards.

```
orangePi@orangePi:~$ cat /sys/class/sunxi_info/sys_info | grep "chipid"
sunxi_chipid      : 338020004c0048080147478824681ed1
```

3. 24. Python related instructions

3. 24. 1. How to compile and install Python source code

If the Python version in the Ubuntu or Debian system software repository you are using does not meet the development requirements and you want to use the latest version of Python, you can use the following method to download the Python source code package to compile and install the latest version of Python.

The following demonstration is to compile and install the latest version of Python 3.9. If you want to compile and install other versions of Python, the method is the same (you need to download the source code corresponding to the Python you want to install).

1) First install the dependency packages needed to compile Python

```
orangePi@orangePi:~$ sudo apt-get update
orangePi@orangePi:~$ sudo apt-get install -y build-essential zlib1g-dev \
libncurses5-dev libgdbm-dev libnss3-dev libssl-dev libsqlite3-dev \
libreadline-dev libffi-dev curl libbz2-dev
```

2) Then download the latest version of Python3.9 source code and unzip it

```
orangePi@orangePi:~$ wget \
```



```
https://www.python.org/ftp/python/3.9.10/Python-3.9.10.tgz
orangepi@orangepi:~$ tar xvf Python-3.9.10.tgz
```

3) Then run the configuration command

```
orangepi@orangepi:~$ cd Python-3.9.10
orangepi@orangepi:~$ ./configure --enable-optimizations
```

4) Then compile and install Python3.9. The compilation time takes about half an hour.

```
orangepi@orangepi:~$ make -j4
orangepi@orangepi:~$ sudo make altinstall
```

5) After installation, you can use the following command to check the version number of the Python you just installed.

```
orangepi@orangepi:~$ python3.9 --version
Python 3.9.10
```

6) Then update pip

```
orangepi@orangepi:~$ /usr/local/bin/python3.9 -m pip install --upgrade pip
```

3. 24. 2. How to replace pip source in Python

The default source used by Linux system pip is the official source of Python. However, accessing the official source of Python in China is very slow, and the installation of Python software packages often fails due to network reasons. So when using pip to install the Python library, please remember to change the pip source.

1) First install **python3-pip**

```
orangepi@orangepi:~$ sudo apt-get update
orangepi@orangepi:~$ sudo apt-get install -y python3-pip
```

2) How to permanently change the pip source under Linux

- First create a new **~/.pip** directory, then add the **pip.conf** configuration file, and set the pip source in it to Tsinghua source.

```
orangepi@orangepi:~$ mkdir -p ~/.pip
orangepi@orangepi:~$ cat <<EOF > ~/.pip/pip.conf
[global]
timeout = 6000
```



```
index-url = https://pypi.tuna.tsinghua.edu.cn/simple
trusted-host = pypi.tuna.tsinghua.edu.cn
EOF
```

b. Then use pip3 to install the Python library very quickly

3) How to temporarily change the pip source under Linux, where **<packagename>** needs to be replaced with a specific package name

```
orange@orange:~$ pip3 install <packagename> -i \
https://pypi.tuna.tsinghua.edu.cn/simple --trusted-host pypi.tuna.tsinghua.edu.cn
```

3. 25. How to install Docker

The Linux image provided by Orange Pi has Docker pre-installed, but the Docker service is not turned on by default. Use the **enable_docker.sh** script to enable the docker service, and then you can start using the docker command, and the docker service will be automatically started the next time you start the system.

```
orange@orange:~$ enable_docker.sh
```

You can use the following command to test docker. If **hello-world** can be run, docker can be used normally.

```
orange@orange:~$ sudo docker run hello-world
Unable to find image 'hello-world:latest' locally
latest: Pulling from library/hello-world
256ab8fe8778: Pull complete
Digest:
sha256:7f0a9f93b4aa3022c3a4c147a449ef11e0941a1fd0bf4a8e6c9408b2600777c5
Status: Downloaded newer image for hello-world:latest

Hello from Docker!
This message shows that your installation appears to be working correctly.
.....
```

When using the docker command, if you are prompted for **permission denied**, please add the current user to the docker user group so that you can run the docker command without sudo.



```
orange@orange:~$ sudo usermod -aG docker $USER
```

Note: You need to log out and log in again to the system to take effect. You can also restart the system.

3. 26. How to install Home Assistant

Note that this article will only provide methods for installing Home Assistant in Ubuntu or Debian systems. For detailed usage of Home Assistant, please refer to the official documentation or corresponding books.

3. 26. 1. Installation via docker

1) First, please install docker and ensure that docker can run normally. For the installation steps of docker, please refer to the instructions in the [How to Install Docker](#) section.

2) Then you can search for the docker image of Home Assistant

```
orange@orange:~$ docker search homeassistant
```

3) Then use the following command to download the Docker image of Home Assistant to your local computer. The image size is about 1GB, and the download time will be relatively long. Please be patient and wait for the download to complete.

```
orange@orange:~$ docker pull homeassistant/home-assistant
Using default tag: latest
latest: Pulling from homeassistant/home-assistant
be307f383ecc: Downloading
5fbc4c07ac88: Download complete
..... (Omit some output)
3cc6a1510c9f: Pull complete
7a4e4d5b979f: Pull complete
Digest:
sha256:81d381f5008c082a37da97d8b08dd8b358dae7ecf49e62ce3ef1eeafc4381bb
Status: Downloaded newer image for homeassistant/home-assistant:latest
docker.io/homeassistant/home-assistant:latest
```



4) Then you can use the following command to view the docker image of Home Assistant you just downloaded

```
orangepi@orangepi:~$ docker images homeassistant/home-assistant
```


REPOSITORY	TAG	IMAGE ID	CREATED	SIZE
homeassistant/home-assistant	latest	bfa0ab9e1cf5	2 months ago	1.17GB

5) At this point you can run the Home Assistant docker container


```
orangepi@orangepi:~$ docker run -d \
  --name homeassistant \
  --privileged \
  --restart=unless-stopped \
  -e TZ=Asia/Shanghai \
  -v /home/orangepi/home-assistant:/config \
  --network=host \
  homeassistant/home-assistant:latest
```

6) Then enter 【the IP address of the development board: 8123】 in the browser to see the Home Assistant interface

It takes a while for the Home Assistant container to start. If the interface below does not display normally, please wait a few seconds before refreshing it. If the following interface is not displayed normally after waiting for more than a minute, it means there is a problem with the Home Assistant installation. At this time, you need to check whether there is a problem with the previous installation and setting process.

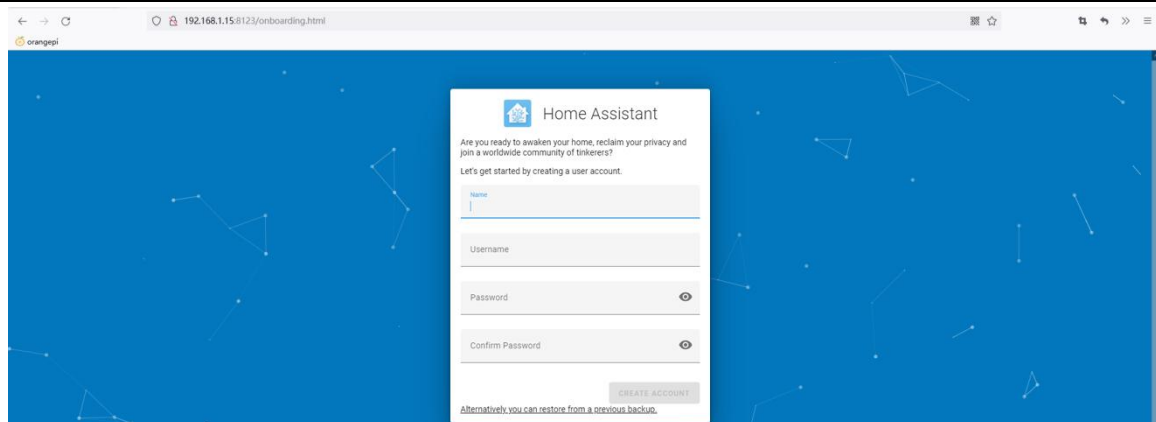

7) Then enter your **name**, **username** and **password** and click **Create Account**

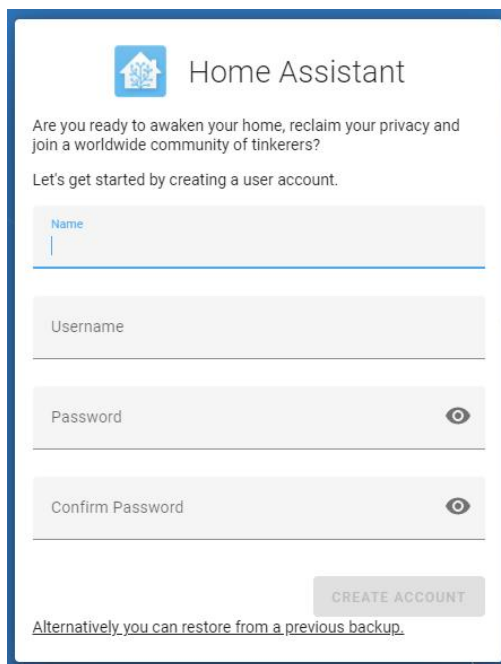

Home Assistant

Are you ready to awaken your home, reclaim your privacy and join a worldwide community of tinkerers?

Let's get started by creating a user account.

Name

Username


Password

Confirm Password

CREATE ACCOUNT

[Alternatively you can restore from a previous backup.](#)

8) Then follow the interface prompts to set according to your own preferences, and then click Next

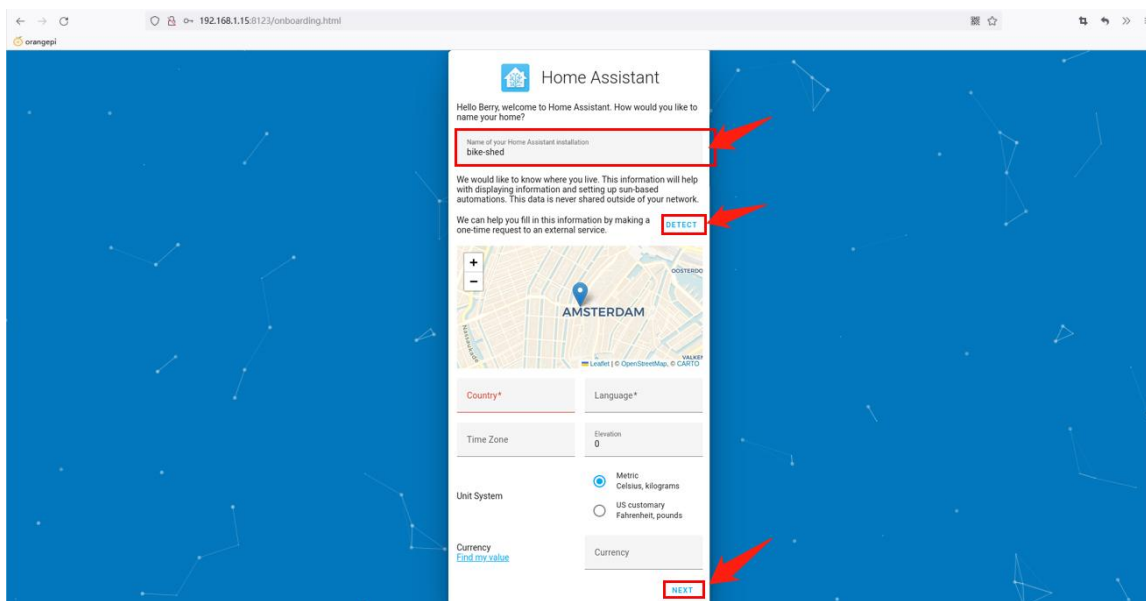

Home Assistant

Hello Berry, welcome to Home Assistant. How would you like to name your home?

Name of your Home Assistant installation
bike-shed

We would like to know where you live. This information will help with displaying information and setting up sun-based automations. This data is never shared outside of your network.

We can help you fill in this information by making a one-time request to an external service. **DETECT**

AMSTERDAM

Country* Language*


Time Zone Elevation 0

Unit System
☒ Metric: Celsius, kilograms
☐ US customary: Fahrenheit, pounds


Currency [Find my value](#)

NEXT


9) Then click Next

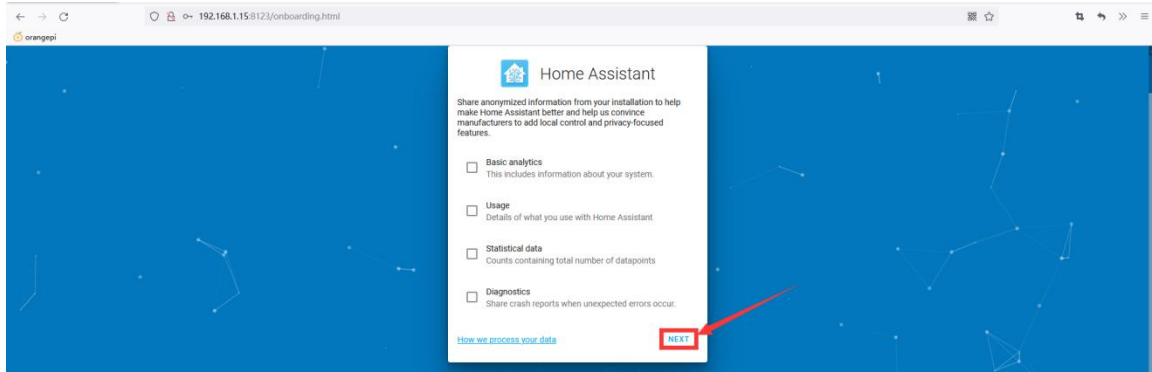

10) Then click Finish

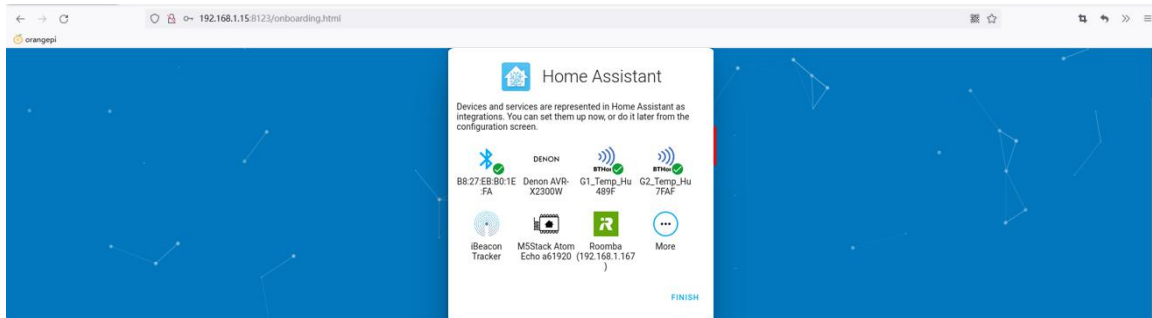

11) The main interface finally displayed by Home Assistant is as shown below

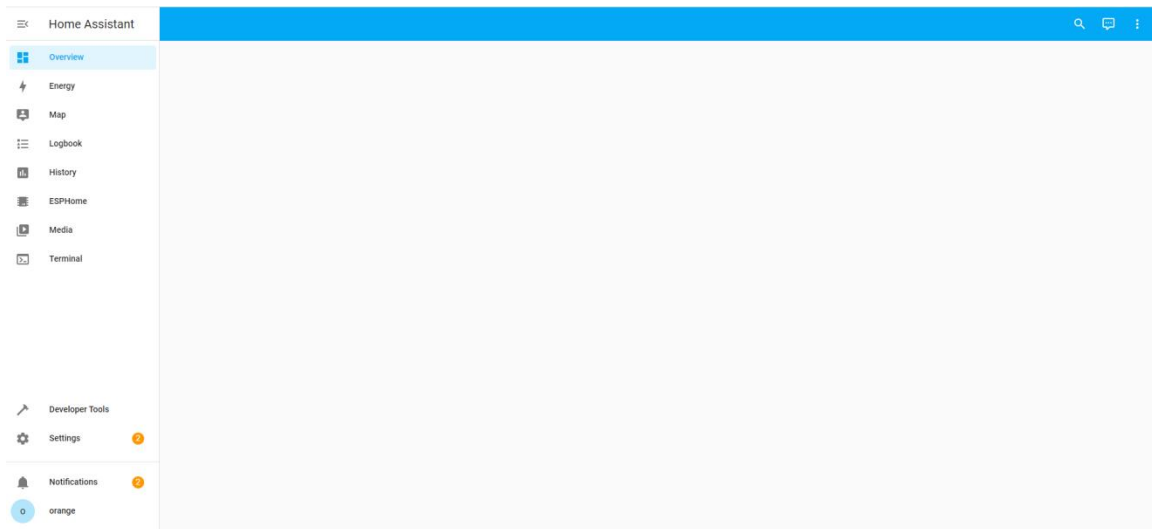

12) Method to stop Home Assistant container

- a. The command to view the docker container is as follows

```
orange@orange:~$ docker ps -a
```

- b. The command to stop the Home Assistant container is as follows



```
orange@orange:~$ docker stop homeassistant
```

c. The command to delete the Home Assistant container is as follows

```
orange@orange:~$ docker rm homeassistant
```

3. 26. 2. Installation via python

Before installation, please change the source of pip to a domestic source to speed up the installation of Python packages. For the configuration method, see the instructions in the section "[How to Change the Pip Source of Python](#)"

1) First install dependency packages

```
orange@orange:~$ sudo apt-get update
orange@orange:~$ sudo apt-get install -y python3 python3-dev python3-venv \
python3-pip libffi-dev libssl-dev libjpeg-dev zlib1g-dev autoconf build-essential \
libopenjp2-7 libtiff5 libturbojpeg0-dev tzdata
```

If it is debian12 or Ubuntu24.04, please use the following command:

```
orange@orange:~$ sudo apt-get update
orange@orange:~$ sudo apt-get install -y python3 python3-dev python3-venv \
python3-pip libffi-dev libssl-dev libjpeg-dev zlib1g-dev autoconf build-essential \
libopenjp2-7 libturbojpeg0-dev tzdata
```

2) Then it is necessary to compile and install Python 3.9 and above versions. Please refer to the section on compiling and installing [Python source code for instructions](#)

The default Python version for Debian Bullseye is Python3.9, so there is no need to compile or install it.

The default Python version for Debian Bookworm is Python3.11, so there is no need to compile or install it.

The default Python version for Ubuntu Jammy is Python3.10, so there is no need to compile or install it.

The default Python version for Ubuntu Noble is Python3.12, so there is no need to compile or install it.

3) Then create a Python virtual environment

In Ubuntu Noble, it is Python 3.12, so please change the Python version number



highlighted in red in the following command to "3.12". For other different Linux versions, please change the corresponding command according to the actual situation.

```
orangePi@orangePi:~$ sudo mkdir /srv/homeassistant
orangePi@orangePi:~$ sudo chown orangePi:orangePi /srv/homeassistant
orangePi@orangePi:~$ cd /srv/homeassistant
orangePi@orangePi:~$ python3.9 -m venv .
orangePi@orangePi:~$ source bin/activate
(homeassistant) orangePi@orangePi:/srv/homeassistant$
```

4) Then install the required Python packages

```
(homeassistant) orangePi@orangePi:/srv/homeassistant$ python3 -m pip install wheel
```

5) Then you can install Home Assistant Core

```
(homeassistant) orangePi@orangePi:/srv/homeassistant$ pip3 install homeassistant
```



6) Then enter the following command to run Home Assistant Core

```
(homeassistant) orangePi@orangePi:/srv/homeassistant$ hass
```

7) Then enter **【development board IP address: 8123】** in the browser to see the Home Assistant interface

When running the hass command for the first time, it will download, install, and cache some necessary libraries and dependency packages for running. This process may take a few minutes. Please note that the Home Assistant interface cannot be seen in the browser at this time. Please wait for a while before refreshing.

The new version of Home Assistant (such as Home Assistant installed in python3.12 environment) will first display the following interface. You need to click "CREATE MY SMART HOME" to enter the steps of creating an account.

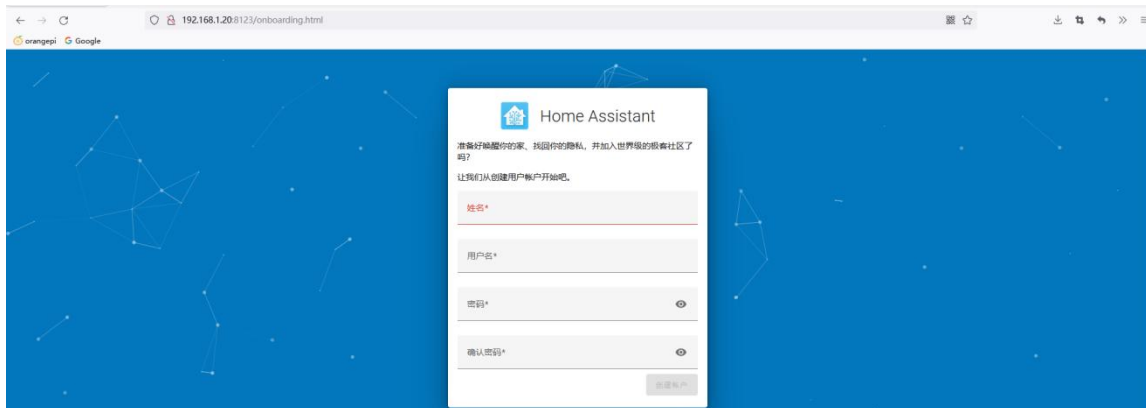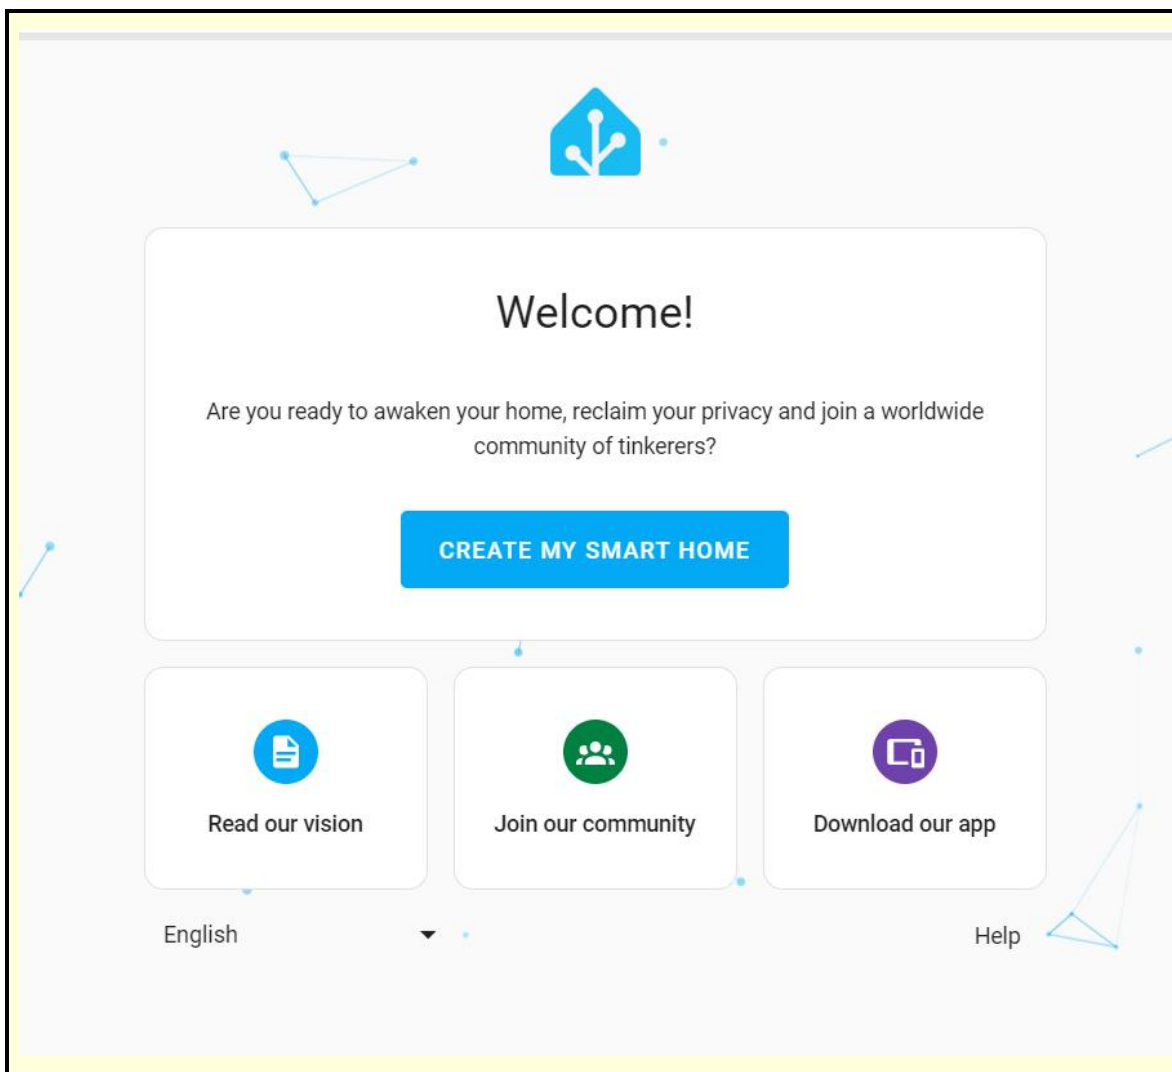



3. 27. OpenCV installation method

3. 27. 1. Use apt to install OpenCV

1) The installation command is as follows

```
orangeypi@orangeypi:~$ sudo apt-get update
orangeypi@orangeypi:~$ sudo apt-get install -y libopencv-dev python3-opencv
```

2) Then use the following command to print the version number of OpenCV. The output is normal, indicating that the OpenCV installation is successful.

a. The version of OpenCV in Ubuntu 24.04 is as follows:

```
orangeypi@orangeypi:~$ python3 -c "import cv2; print(cv2.__version__)"
4.6.0
```

b. The version of OpenCV in Ubuntu22.04 is as follows:

```
orangeypi@orangeypi:~$ python3 -c "import cv2; print(cv2.__version__)"
4.5.4
```

c. The version of OpenCV in Ubuntu20.04 is as follows:

```
orangeypi@orangeypi:~$ python3 -c "import cv2; print(cv2.__version__)"
4.2.0
```

d. The version of OpenCV in Debian11 is as follows:

```
orangeypi@orangeypi:~$ python3 -c "import cv2; print(cv2.__version__)"
4.5.1
```

e. The version of OpenCV in Debian12 is as follows:

```
orangeypi@orangeypi:~$ python3 -c "import cv2; print(cv2.__version__)"
4.6.0
```

3. 28. Set up the Chinese environment and install the Chinese input method

Note, before installing the Chinese input method, please make sure that the Linux system used by the development board is a desktop version.

3. 28. 1. Debian system installation method


1) First set the default **locale** to Chinese

a. Enter the following command to start configuring **locale**


```
orangeypi@orangeypi:~$ sudo dpkg-reconfigure locales
```



- b. Then select **zh_CN.UTF-8 UTF-8** in the pop-up interface (use the up and down keys on the keyboard to move up and down, use the space bar to select, and finally use the Tab key to move the cursor to **<OK>**, and then return Car can be used)

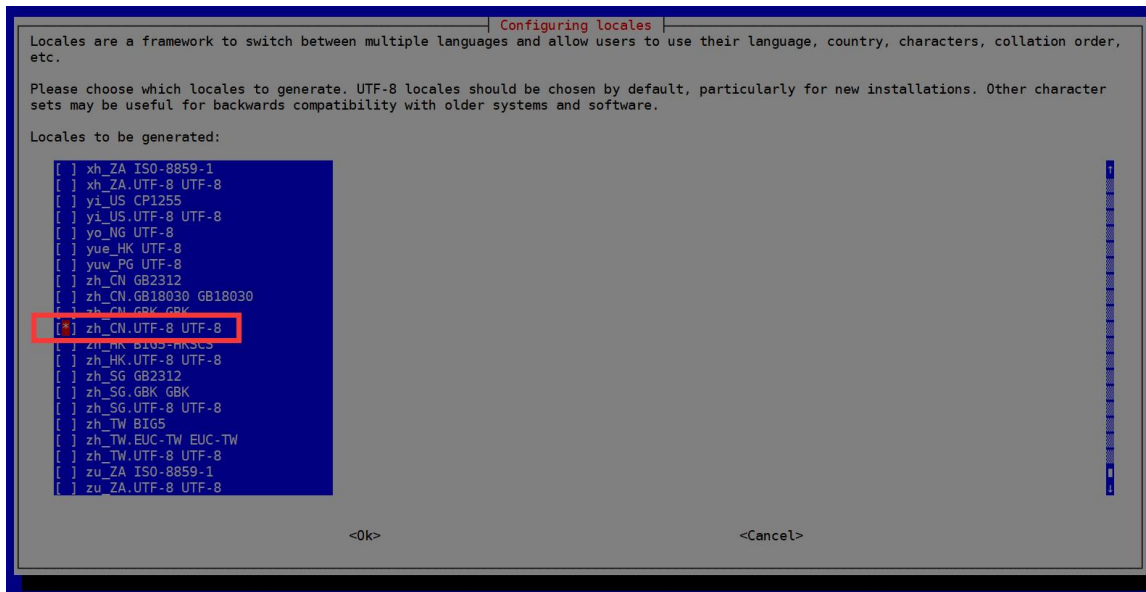


- c. Then set the default **locale** to **zh_CN.UTF-8**

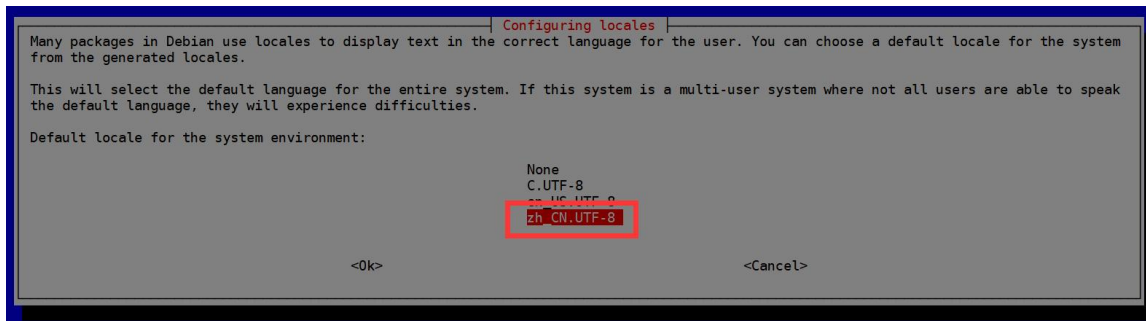


- d. After exiting the interface, the **locale** setting will begin. The output displayed on the command line is as follows:

```
orange@orange:~$ sudo dpkg-reconfigure locales
Generating locales (this might take a while)...
en_US.UTF-8... done
zh_CN.UTF-8... done
Generation complete.
```


- 2) Then open **Input Method**

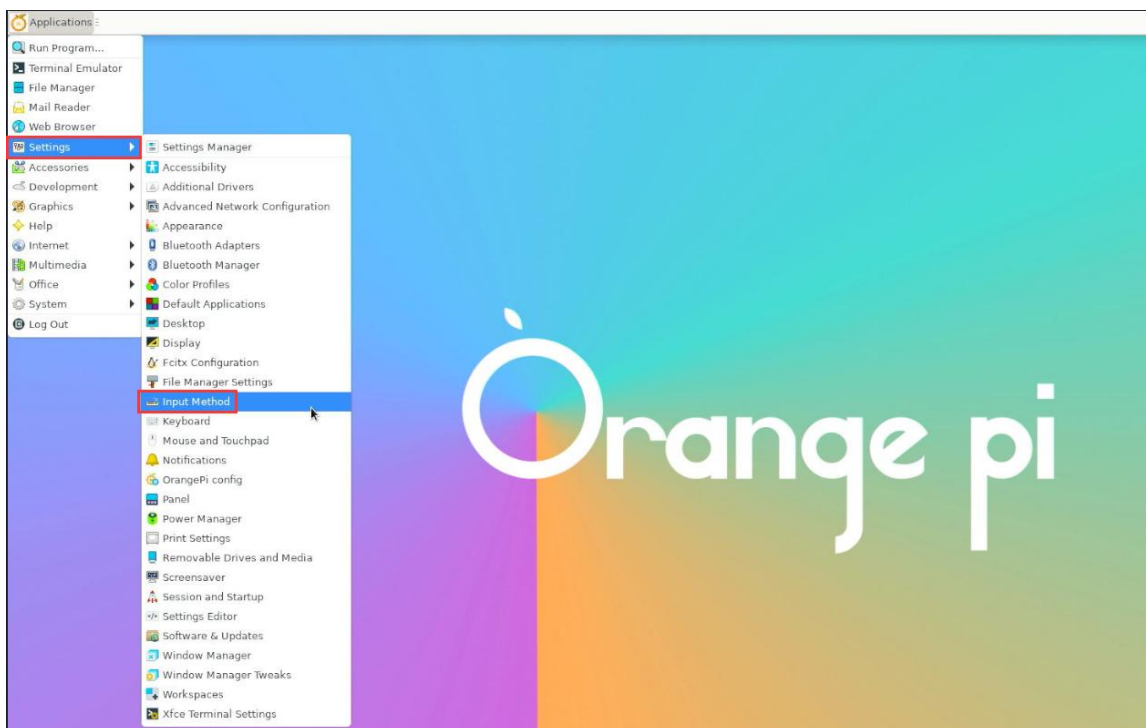


3) Then select **OK**

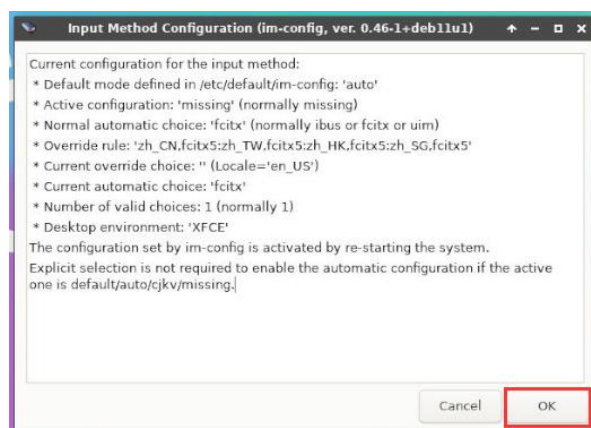

4) Then select **Yes**

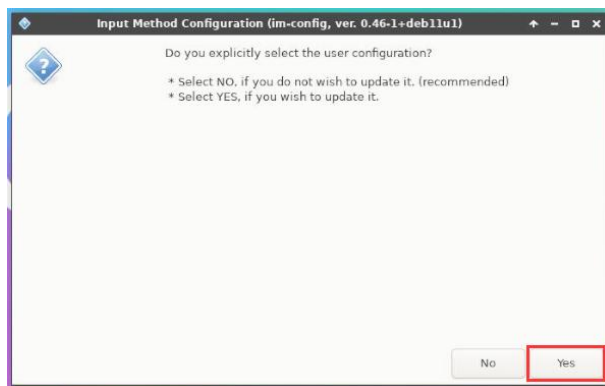

5) Then select **fcitx**

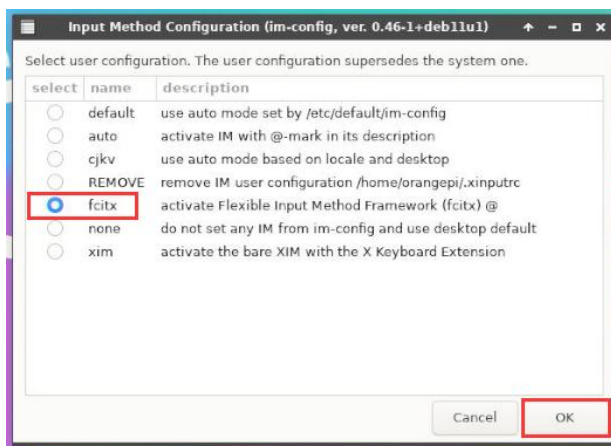


6) Then select **OK**



7) **Then restart the Linux system to make the configuration take effect.**




8) Then open **Fcitx configuration**

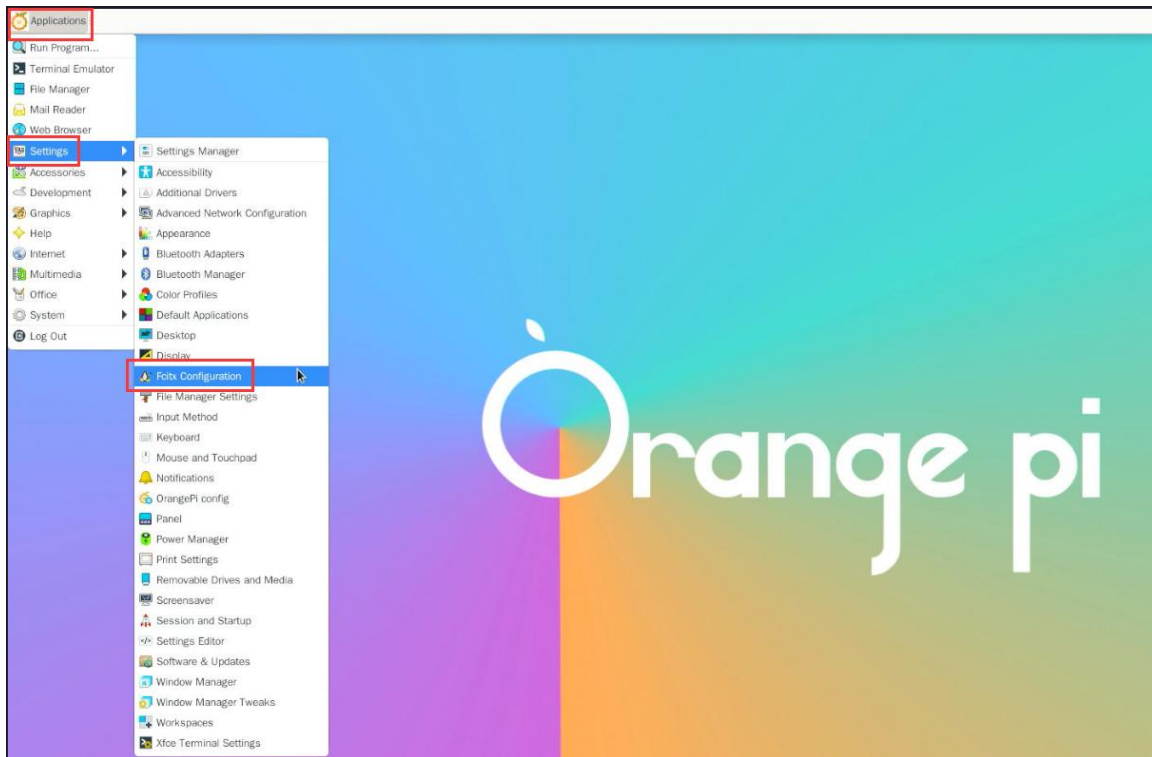



9) Then click the + sign as shown in the picture below



10) Then search **Google Pinyin** and click **OK**

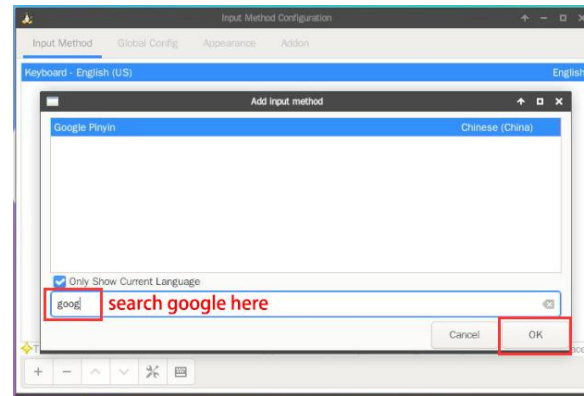


11) Then put **Google Pinyin** on top

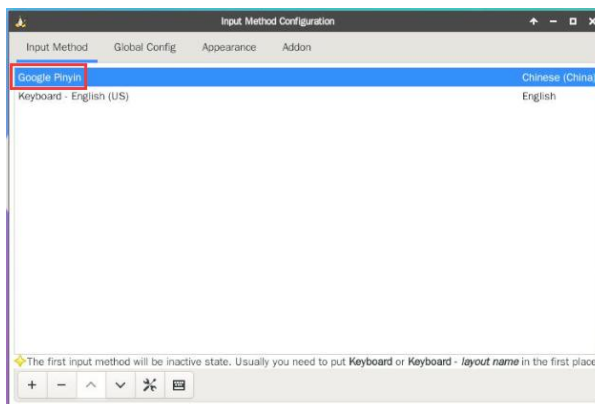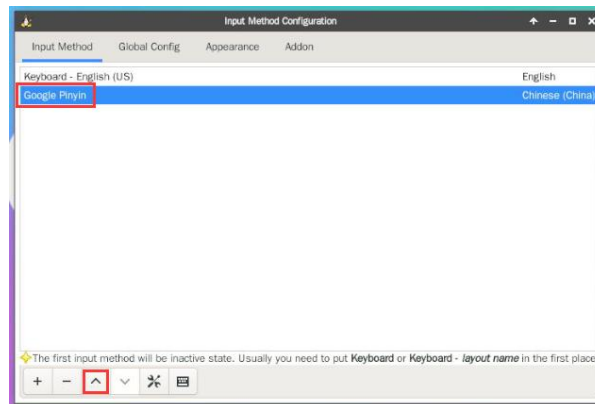

12) Then open the **Geany** editor to test the Chinese input method



13) The Chinese input method test is as follows

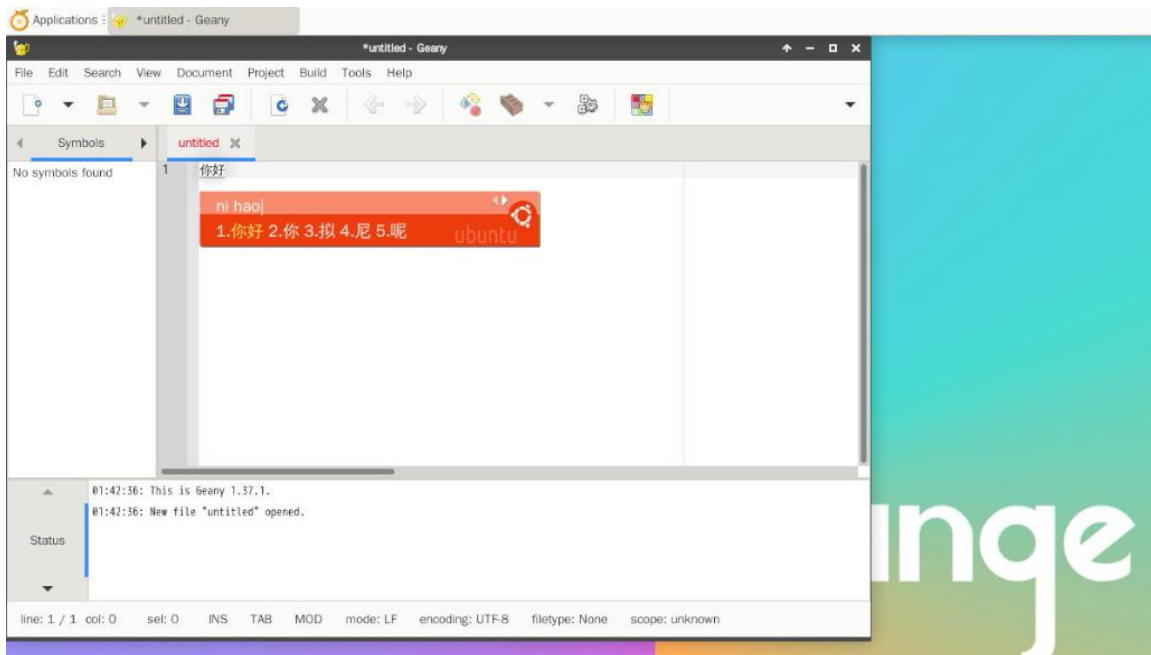

14) You can switch between Chinese and English input methods through the **Ctrl+Space** shortcut key


15) If you need the entire system to be displayed in Chinese, you can set all variables in **/etc/default/locale** to **zh_CN.UTF-8**

```
orange@orange:~$ sudo vim /etc/default/locale
# File generated by update-locale
LC_MESSAGES=zh_CN.UTF-8
LANG=zh_CN.UTF-8
```




LANGUAGE=zh_CN.UTF-8

16) Then **restart the system** and you will see that the system is displayed in Chinese.

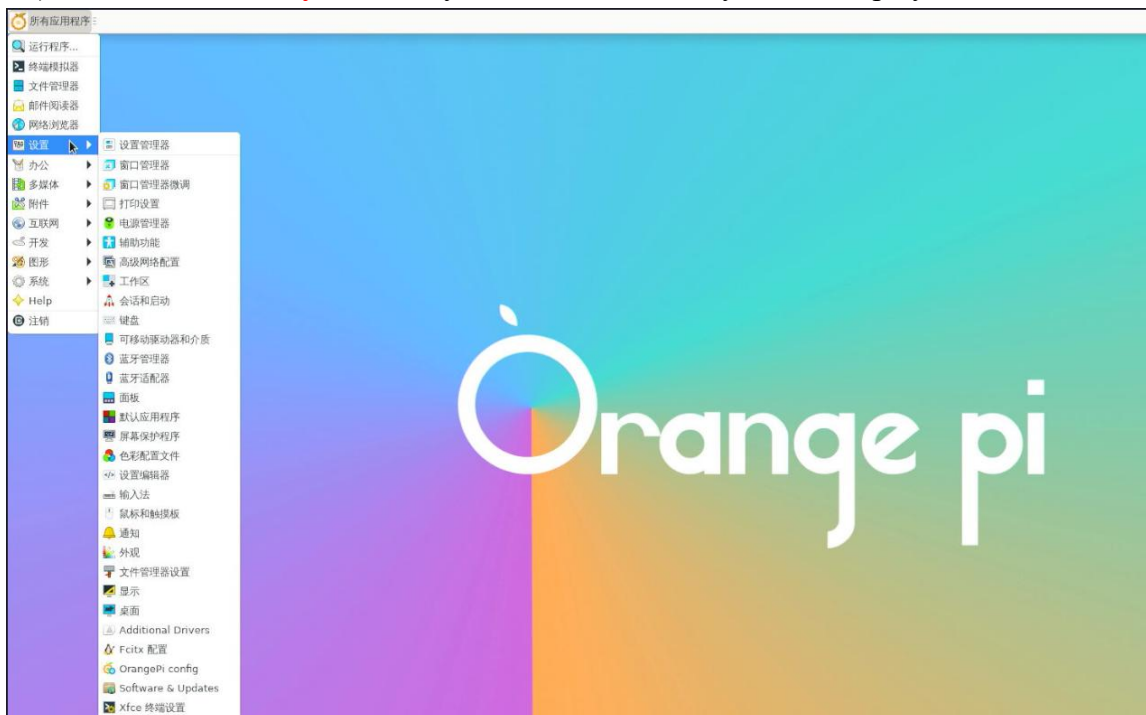


3. 28. 2. Installation method of Ubuntu 20.04 system

1) First open **Language Support**

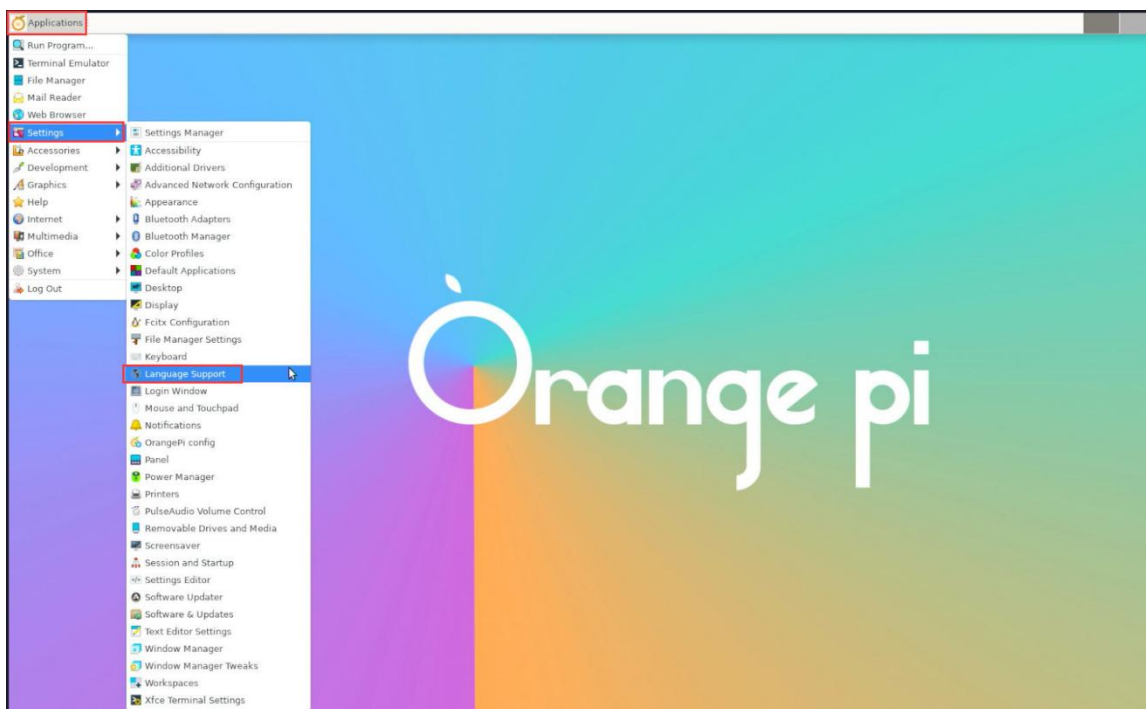




2) Then find the **Chinese (China)** option

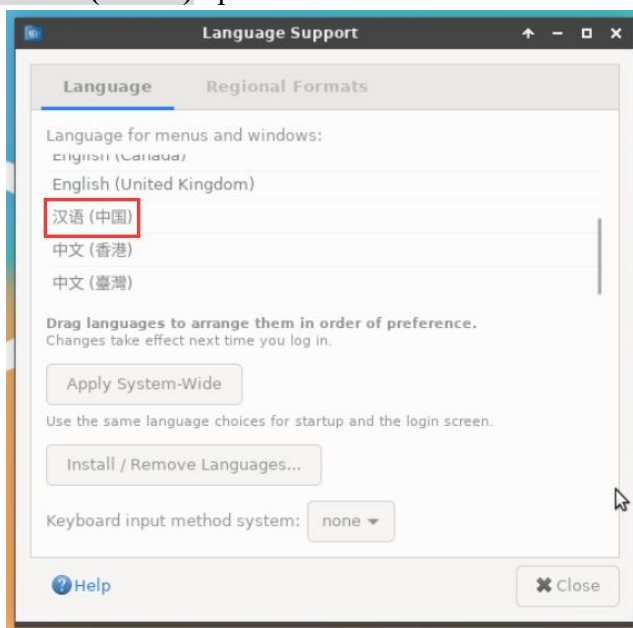


3) Then please use the left button of the mouse to select **Chinese (China)** and hold it down, then drag it up to the starting position. After dragging, the display will be as shown below:

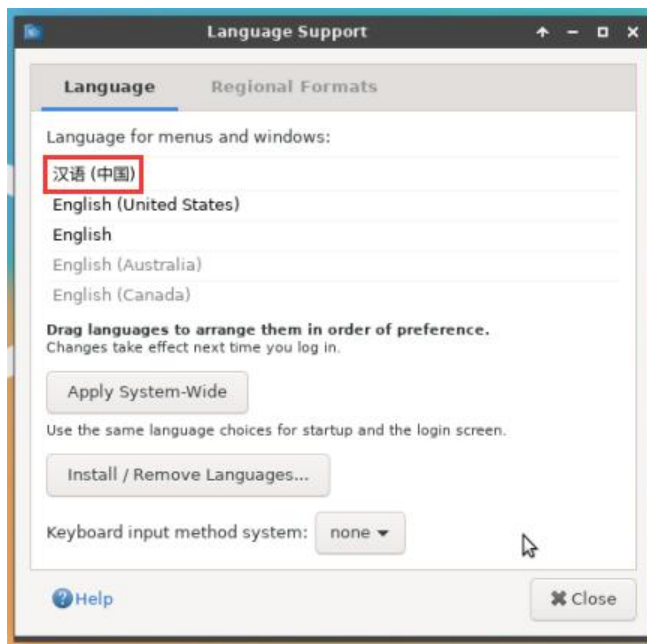


Note that this step is not easy to drag, please be patient and try it a few times.



- 4) Then select **Apply System-Wide** to apply the Chinese settings to the entire system

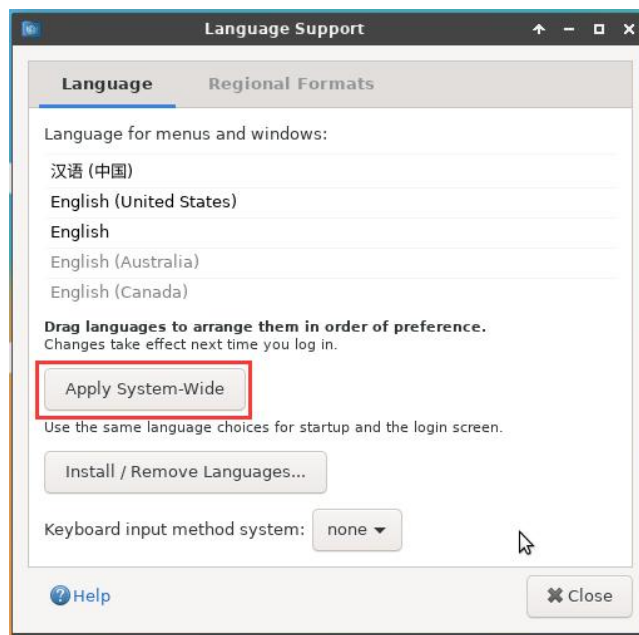

- 5) Then set the **Keyboard input method system** system to **fcitx**

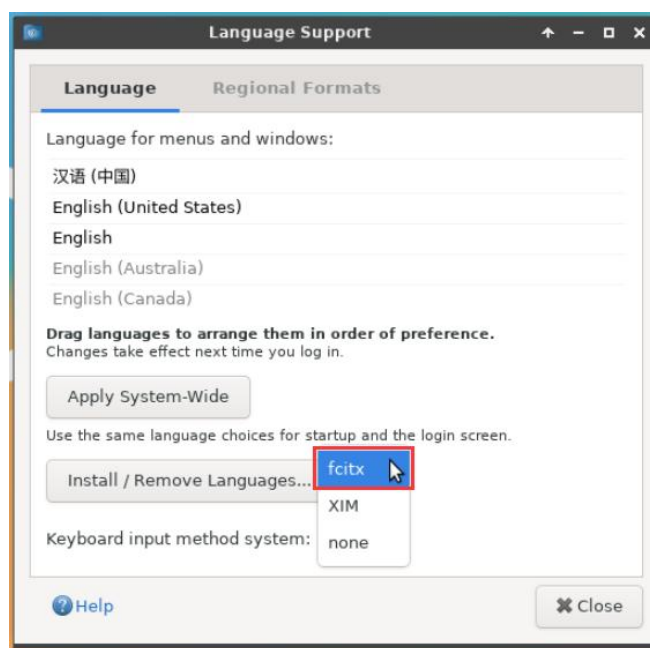

- 6) **Then restart the Linux system to make the configuration take effect**


- 7) After re-entering the system, please select **Do not ask me again** in the following interface, and then please decide according to your own preferences whether the standard




folder should also be updated to Chinese




8) Then you can see that the desktop is displayed in Chinese

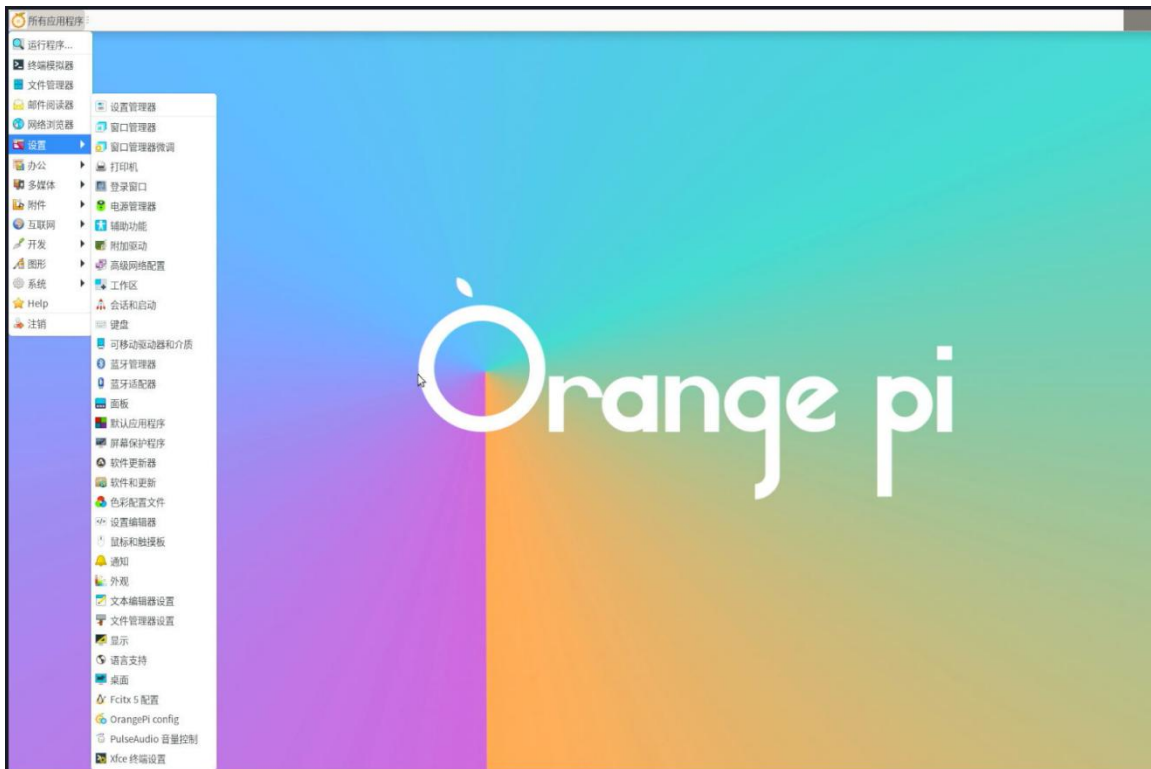

9) Then we can open **Geany** to test the Chinese input method. The opening method is as shown in the figure below

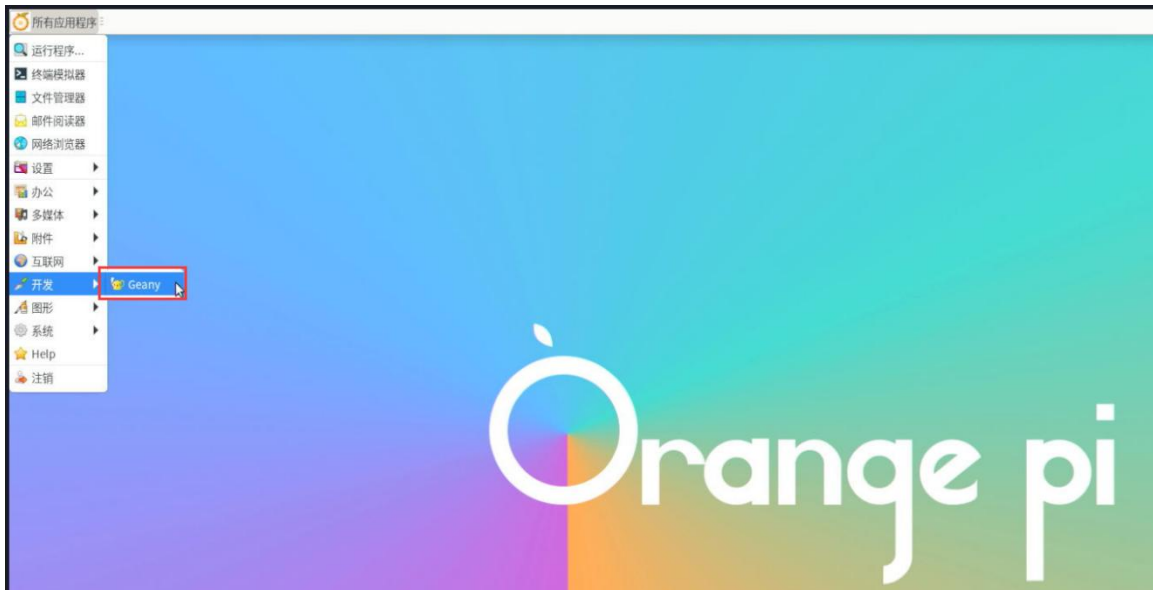


10) After opening **Geany**, the English input method is still the default. We can switch to the Chinese input method through the **Ctrl+Space** shortcut key, and then we can input Chinese.

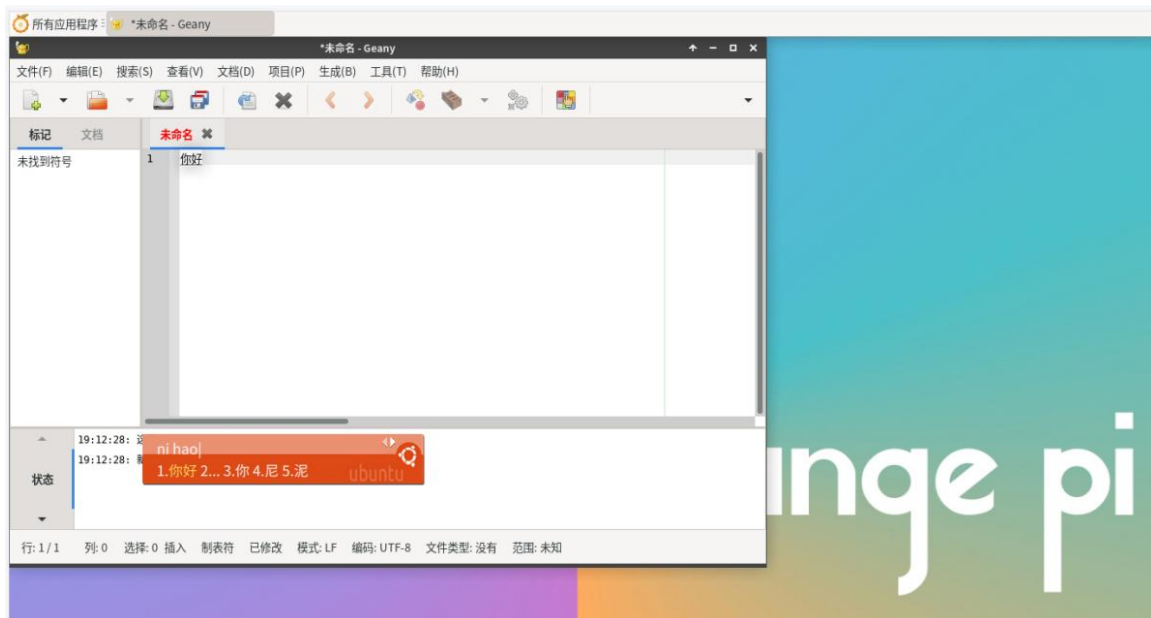


3. 28. 3. Installation method of Ubuntu 22.04 and Ubuntu 24.04 system


1) First open **Language Support**

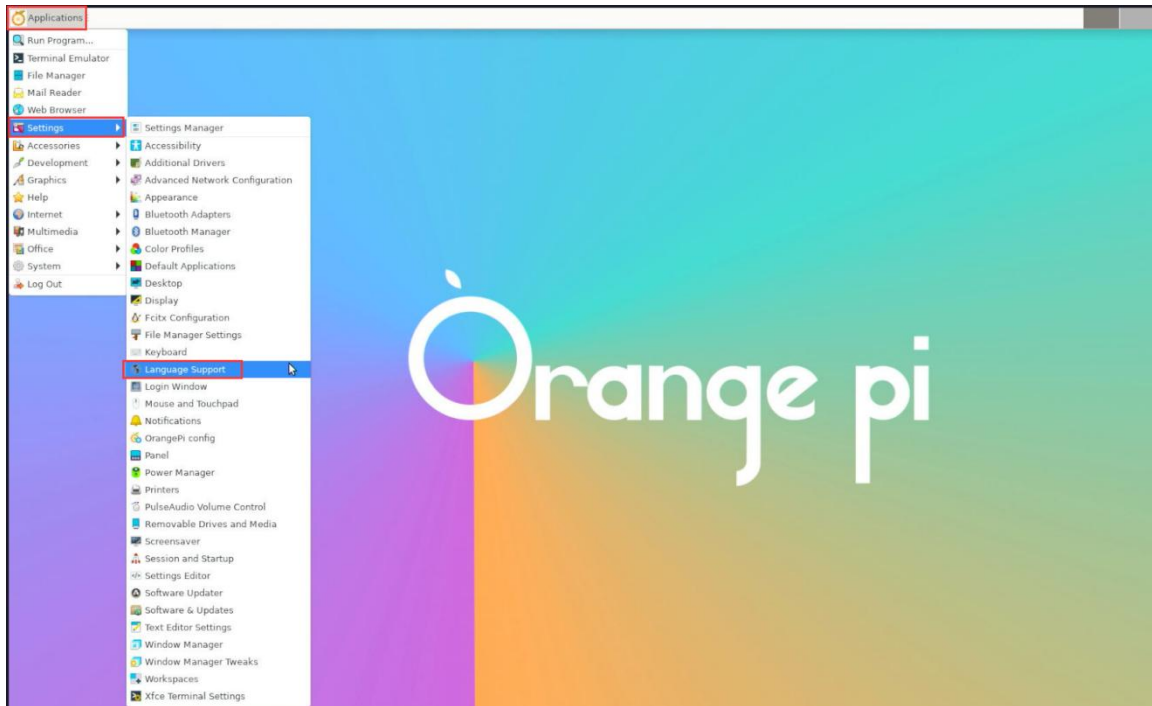

2) Then find the **Chinese (China)** option

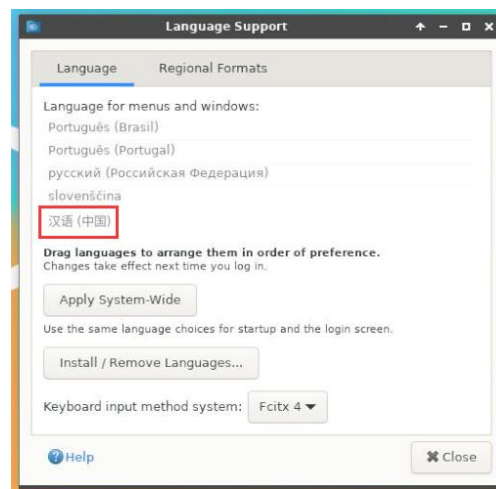


3) Then please use the left button of the mouse to select **Chinese (China)** and hold it down, then drag it up to the starting position. After dragging, the display will be as shown below:

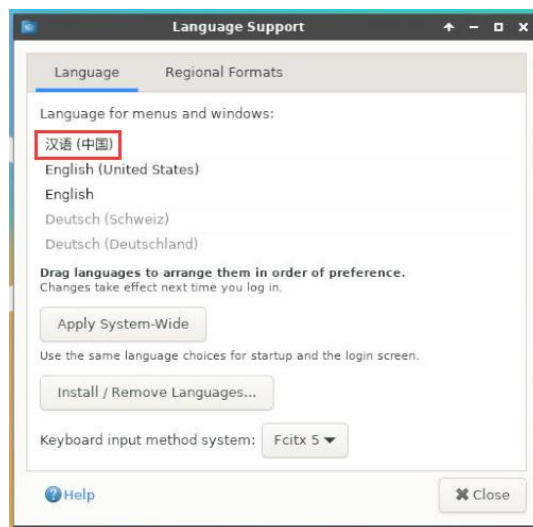

Note that this step is not easy to drag, please be patient and try it a few times.

- 4) Then select **Apply System-Wide** to apply the Chinese settings to the entire system

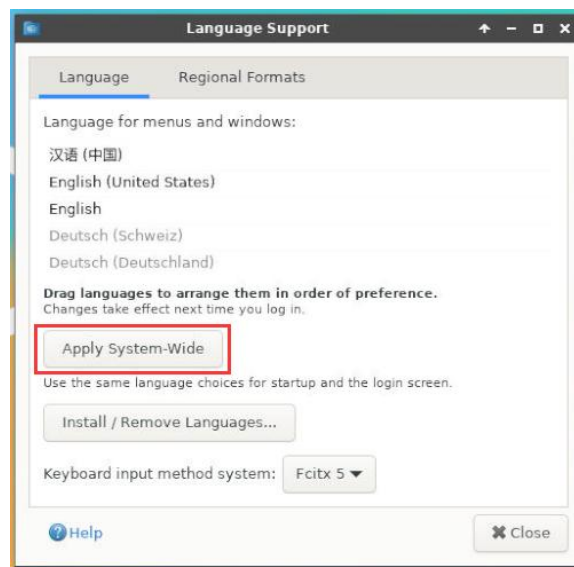


- 5) **Then restart the Linux system to make the configuration take effect**


- 6) After re-entering the system, please select **Do not ask me again** in the following interface, and then please decide whether the standard folder should also be updated to Chinese according to your own preferences.




7) Then you can see that the desktop is displayed in Chinese

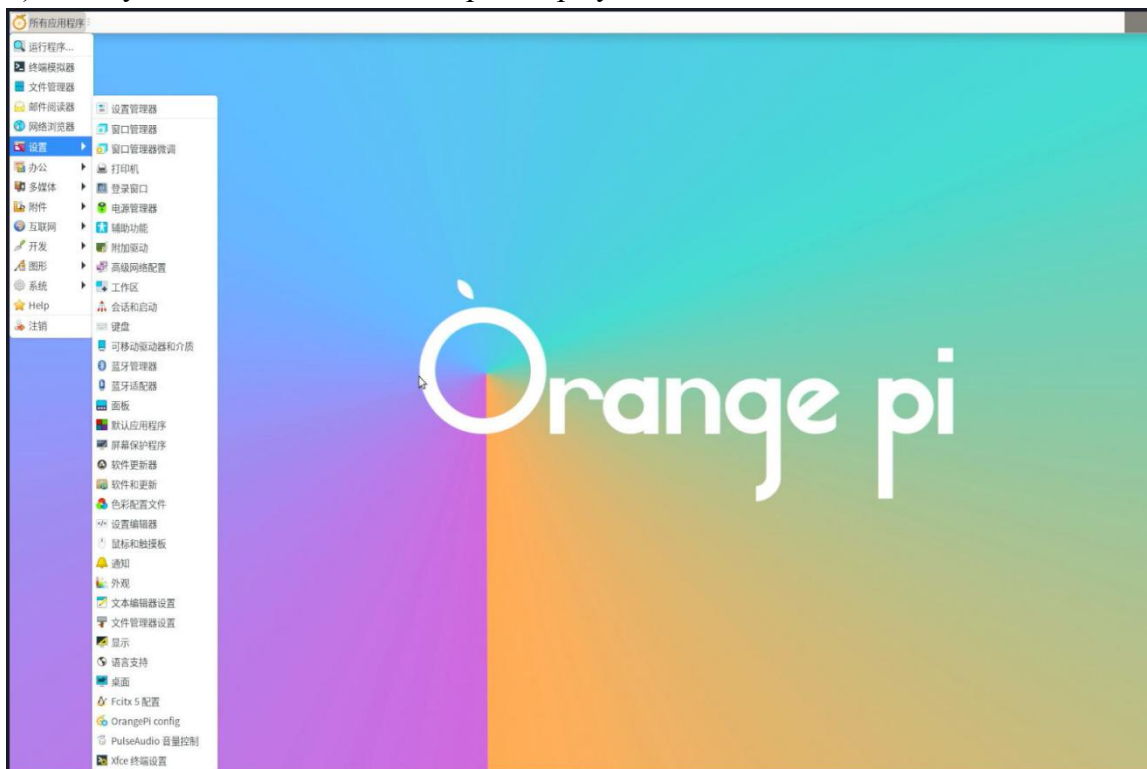


8) Then open the Fciti5 configuration program

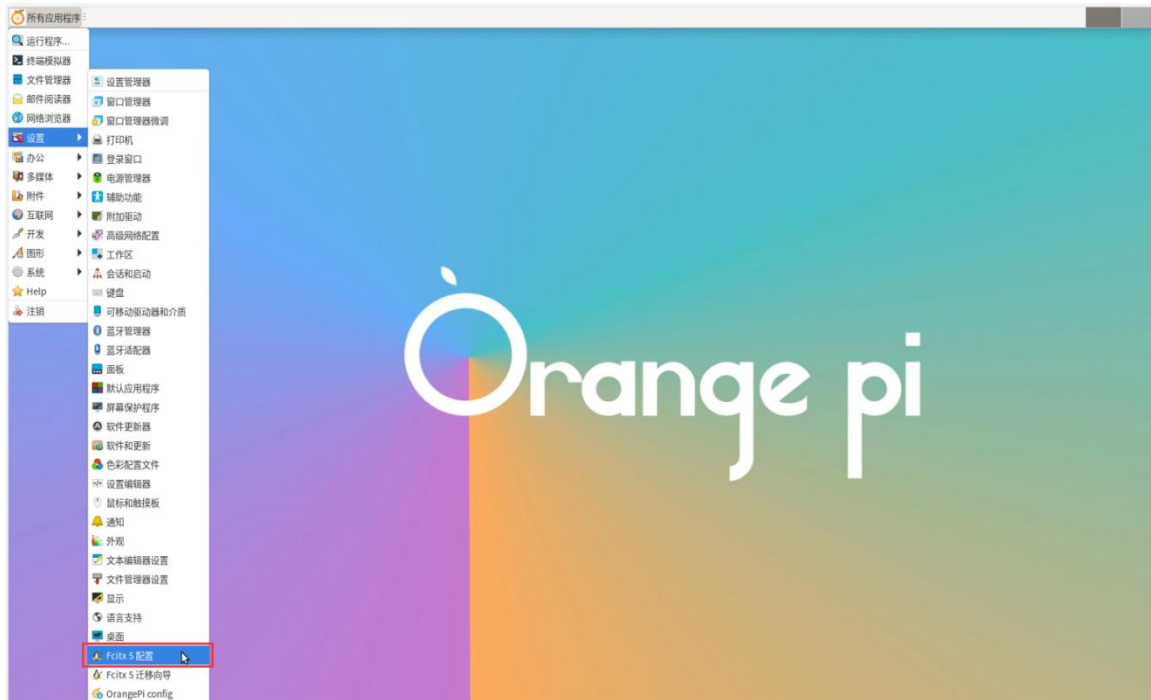


9) Then choose to use Pinyin input method

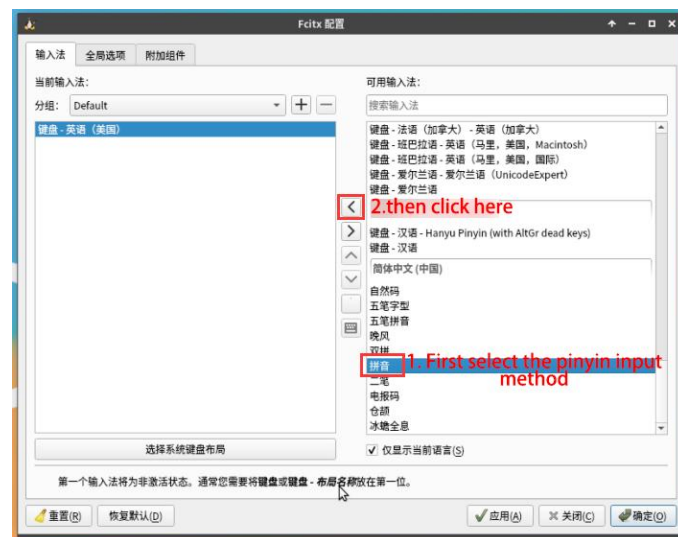


10) The interface after selection is as shown below, then click OK

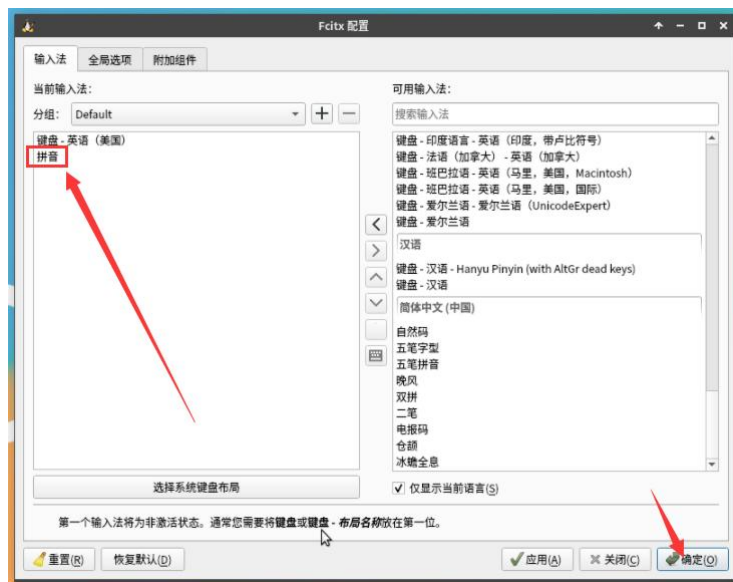

11) Then we can open **Geany** to test the Chinese input method. The opening method is as shown in the figure below

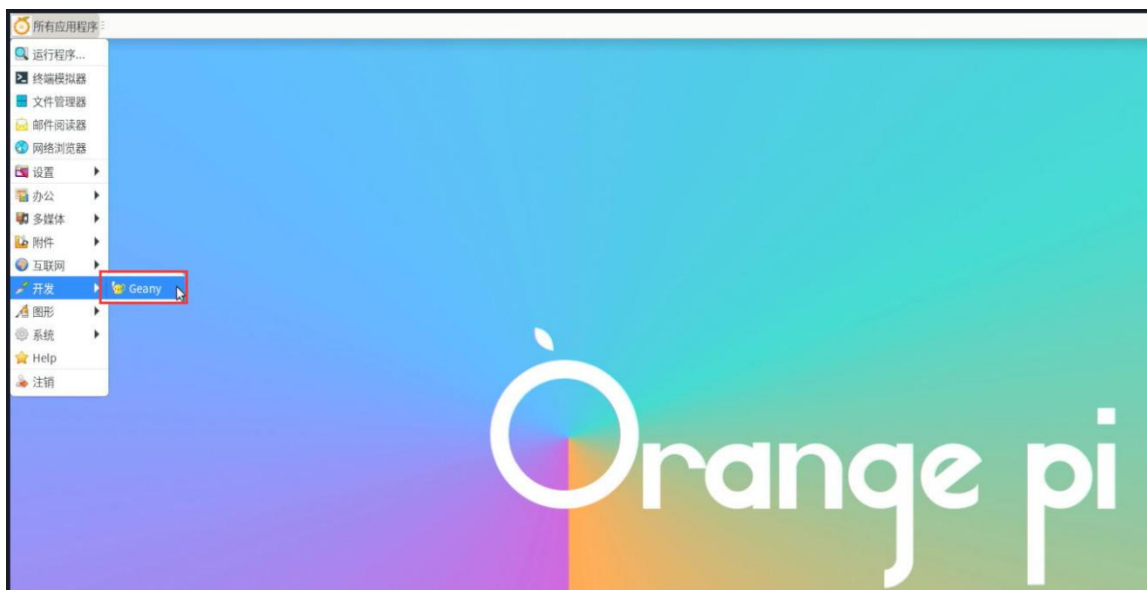

12) After opening **Geany**, the English input method is still the default. We can switch to the Chinese input method through the **Ctrl+Space** shortcut key, and then we can enter Chinese.

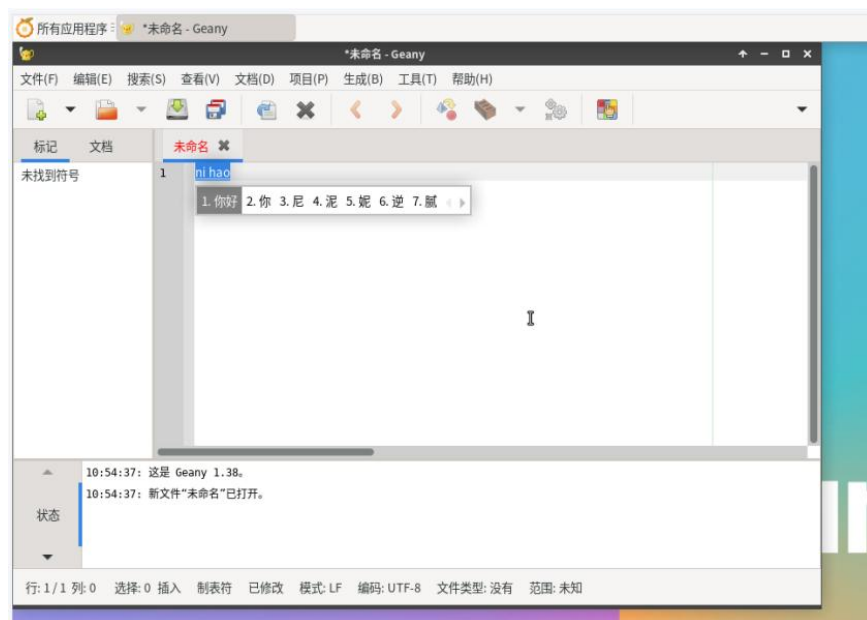

3. 29. How to remotely log in to the Linux system desktop

3. 29. 1. Remote login using NoMachine

Please ensure that the Ubuntu or Debian system installed on the development board is a **desktop version** of the system. In addition, NoMachine also provides detailed usage documentation. It is strongly recommended to read this document thoroughly to become familiar with the use of NoMachine. The document link is as follows:

<https://knowledgebase.nomachine.com/DT10R00166>

NoMachine supports Windows, Mac, Linux, iOS and Android platforms, so we can remotely log in and control the Orange Pi development board through NoMachine on a variety of devices. The following demonstrates how to remotely log in to the Linux system desktop of the Orange Pi development board through NoMachine in Windows. For installation methods on other platforms, please refer to NoMachine's official documentation.

Before operating, please make sure that the Windows computer and the development board are in the same LAN, and that you can log in to the Ubuntu or Debian system of the development board through ssh normally.



1) First download the installation package of the NoMachine software Linux **arm64** deb version, and then install it into the Linux system of the development board

- a. Since H618 is an ARMv8 architecture SOC and the system we use is Ubuntu or Debian, we need to download the **NoMachine for ARM ARMv8 DEB** installation package. The download link is as follows:

Note that this download link may change, please look for the Armv8/Arm64 version of the deb package.

<https://downloads.nomachine.com/download/?id=118&distro=ARM>

Home / Download / NoMachine for ARM - arm64

NoMachine for ARM - **arm64**



Version: 8.5.3_1
Package size: 48.34 MB
Package type: DEB
MD5 signature: 2291f8d8ec76f0a914285acaaa93e34d
For: Ubuntu 14.04/16.04/18.04/20.04, Debian 8/9/10



Although your ARMv8 device may not be listed here, we encourage you to try the packages. Please consult the installation and configuration [notes](#) about Linux for ARM packages for more details about devices and specific distributions we have tested.

Download

- b. In addition, you can also download the **NoMachine** installation package from the official tool.



Official Tools

Downloads

First enter the **remote login software-NoMachine** folder



Remote Login Software-NoMachine

Then download the arm64 version of the deb installation package

- ☐ nomachine_8.5.3_2.dmg
- ☐ nomachine_8.5.3_1_amd64.deb
- ☐ nomachine_8.5.3_1_x64.exe
- ☐ **nomachine_8.5.3_1_arm64.deb**



- c. Then upload the downloaded **nomachine_x.x.x_x_arm64.deb** to the Linux system of the development board
- d. Then use the following command to install **NoMachine** in the Linux system of the development board

```
orange@orange:~$ sudo dpkg -i nomachine_x.x.x_x_arm64_arm64.deb
```

2) Then download the installation package of the Windows version of the NoMachine software. The download address is as follows

Note that this download link may change.

<https://downloads.nomachine.com/download/?id=9>

NoMachine for Windows - 64bit



Version:	8.5.3_1
Package size:	57.4 MB
Package type:	EXE
MD5 signature:	d585ad1e4f341444cacd3ae8add3b6ee
For:	Windows 7/8/8.1/10/11/Windows Server 2008/2012/2016/2019


Download

3) Then install NoMachine in Windows. **Please restart your computer after installation.**

4) Then open **NoMachine** in Window




5) After NoMachine is started, it will automatically scan other devices with NoMachine installed on the LAN. After entering the main interface of NoMachine, you can see that the development board is already in the list of connectable devices, and then click on the location shown in the red box in the picture below You can now log in to the Linux system desktop of the development board.

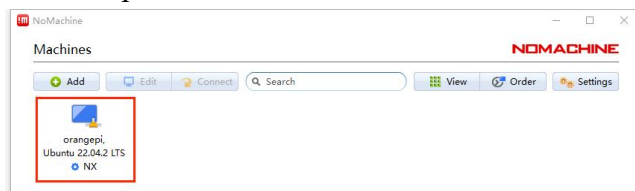




6) Then click **OK**

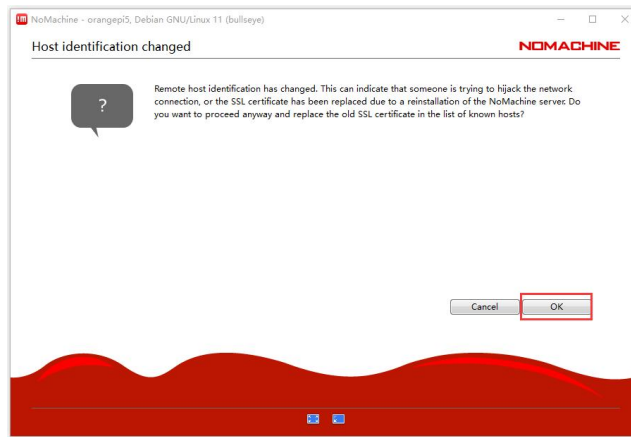

7) Then enter the username and password of the development board Linux system in the corresponding positions in the figure below, and then click OK to start logging in.

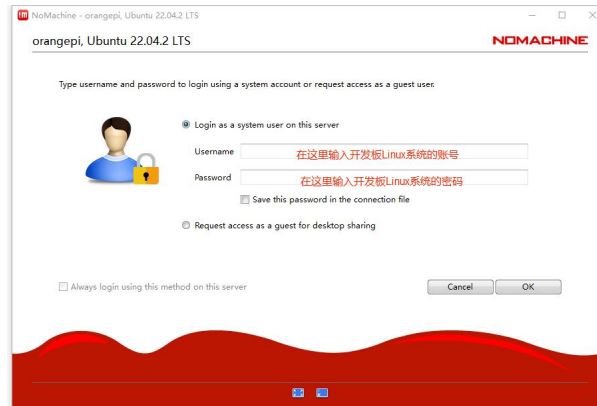

8) Then click OK in the next interface.

9) Finally you can see the desktop of the development board Linux system



3. 29. 2. Remote login using VNC

Before operating, please make sure that the Windows computer and the development board are in the same LAN, and that you can log in to the Ubuntu or Debian system of the development board through ssh normally.

There are many problems with VNC testing in Ubuntu20.04, please do not use this method.

1) First run the `set_vnc.sh` script to set up vnc, **remember to add sudo permissions**

```
orangepi@orangepi:~$ sudo set_vnc.sh
```

You will require a password to access your desktops.

Password: **#Set the vnc password here, 8 characters**

Verify: **#Set the vnc password here, 8 characters**

Would you like to enter a view-only password (y/n)? **n**

xauth: file /root/.Xauthority does not exist

New 'X' desktop is orangepi:1

Creating default startup script /root/.vnc/xstartup

Starting applications specified in /root/.vnc/xstartup

Log file is /root/.vnc/orangepi:1.log

Killing Xtightvnc process ID 3047




New 'X' desktop is orangepi:1

Starting applications specified in /root/.vnc/xstartup


Log file is /root/.vnc/orangepi:1.log

2) The steps to use MobaXterm software to connect to the development board Linux system desktop are as follows:


- a. First click Session, then select VNC, then fill in the IP address and port of the development board, and finally click OK to confirm.

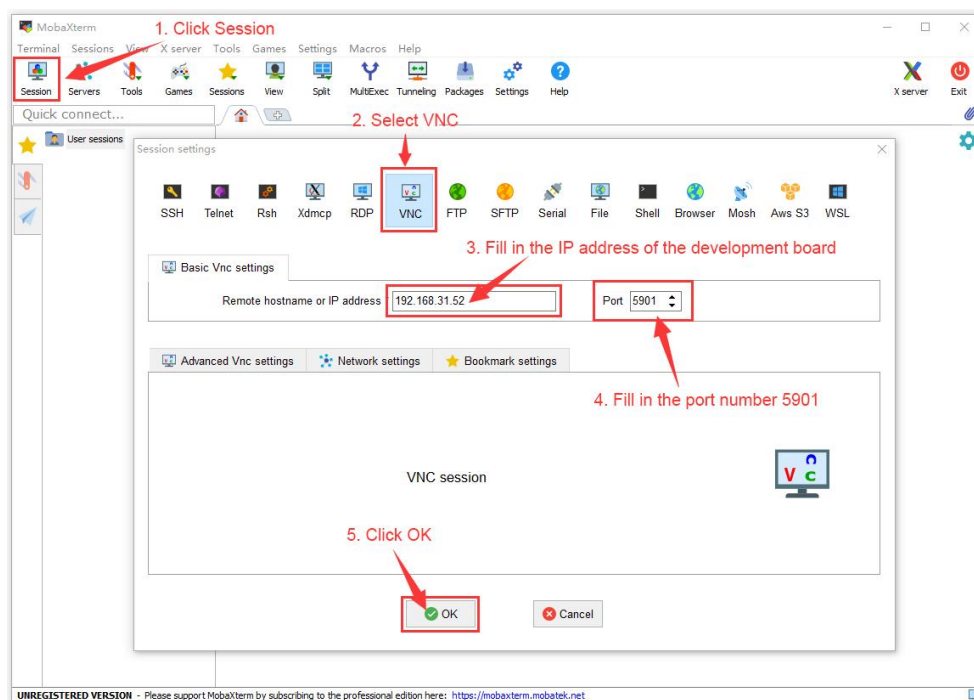

- b. Then enter the VNC password set earlier

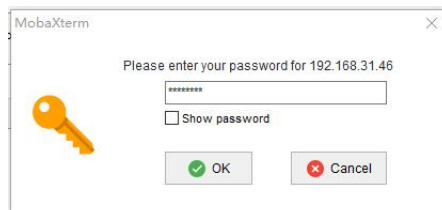

- c. After successful login, the interface is displayed as shown below, and then you can remotely operate the desktop of the development board Linux system.

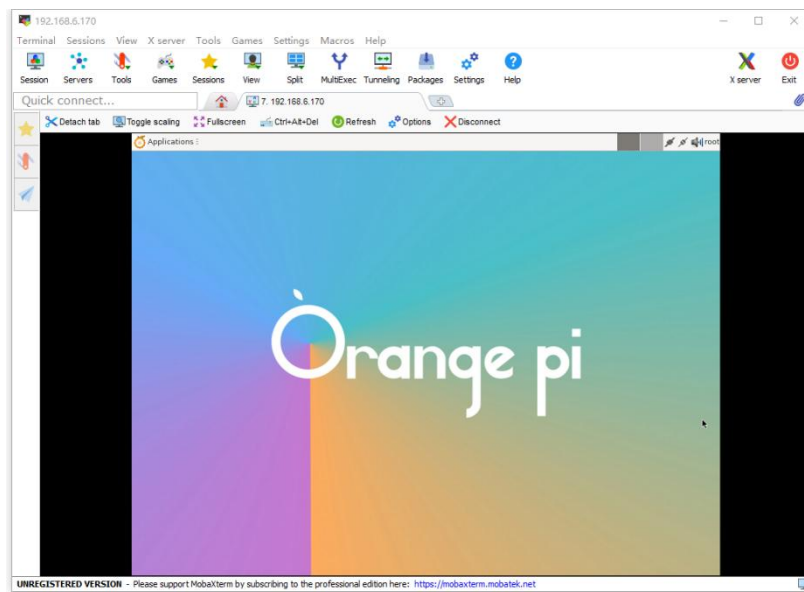

3. 30. QT installation method

At present, testing has found that on the Ubuntu 24.04 system, if QT projects need to be compiled, the memory should not be less than 1.5GB. To ensure a good user experience, it is recommended to use the 4G version, otherwise it is easy to encounter insufficient memory and run abnormally.

1) Use the following script to install QT5 and QT Creator

```
orange_pi@orange_pi:~$ install_qt.sh
```

2) After installation, the QT version number will be automatically printed.

a. The qt version that comes with Ubuntu20.04 is **5.12.8**

```
orange_pi@orange_pi:~$ install_qt.sh
```

```
.....
```

```
QMake version 3.1
```

```
Using Qt version 5.12.8 in /usr/lib/aarch64-linux-gnu
```

b. The QT version that comes with Ubuntu22.04 is **5.15.3**

```
orange_pi@orange_pi:~$ install_qt.sh
```

```
.....
```

```
QMake version 3.1
```

```
Using Qt version 5.15.3 in /usr/lib/aarch64-linux-gnu
```

c. The QT version that comes with Ubuntu 24.04 is **5.15.13**



```
orangepi@orangepi:~$ install_qt.sh
```

```
.....
```

```
QMake version 3.1
```

```
Using Qt version 5.15.13 in /usr/lib/aarch64-linux-gnu
```

d. The QT version that comes with Debian11 is **5.15.2**

```
orangepi@orangepi:~$ install_qt.sh
```

```
.....
```

```
QMake version 3.1
```

```
Using Qt version 5.15.2 in /usr/lib/aarch64-linux-gnu
```

e. The QT version that comes with Debian12 is **5.15.8**


```
orangepi@orangepi:~$ install_qt.sh
```

```
.....
```

```
QMake version 3.1
```

```
Using Qt version 5.15.8 in /usr/lib/aarch64-linux-gnu
```


3) Then you can see the QT Creator startup icon in **Applications**

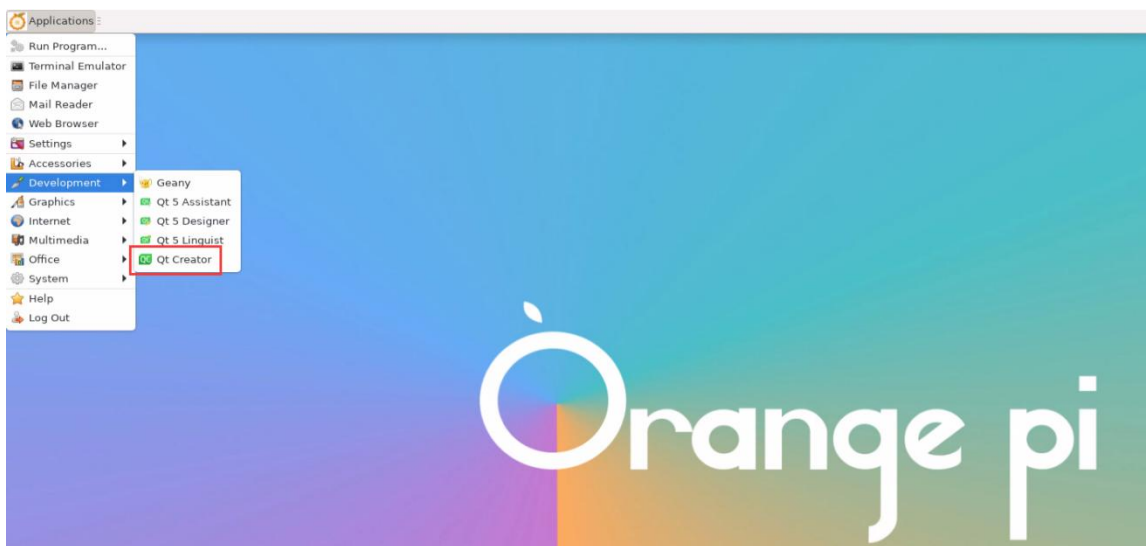

You can also use the following command to open QT Creator


```
orangepi@orangepi:~$ qtcreator
```

4) The interface after QT Creator is opened is as follows

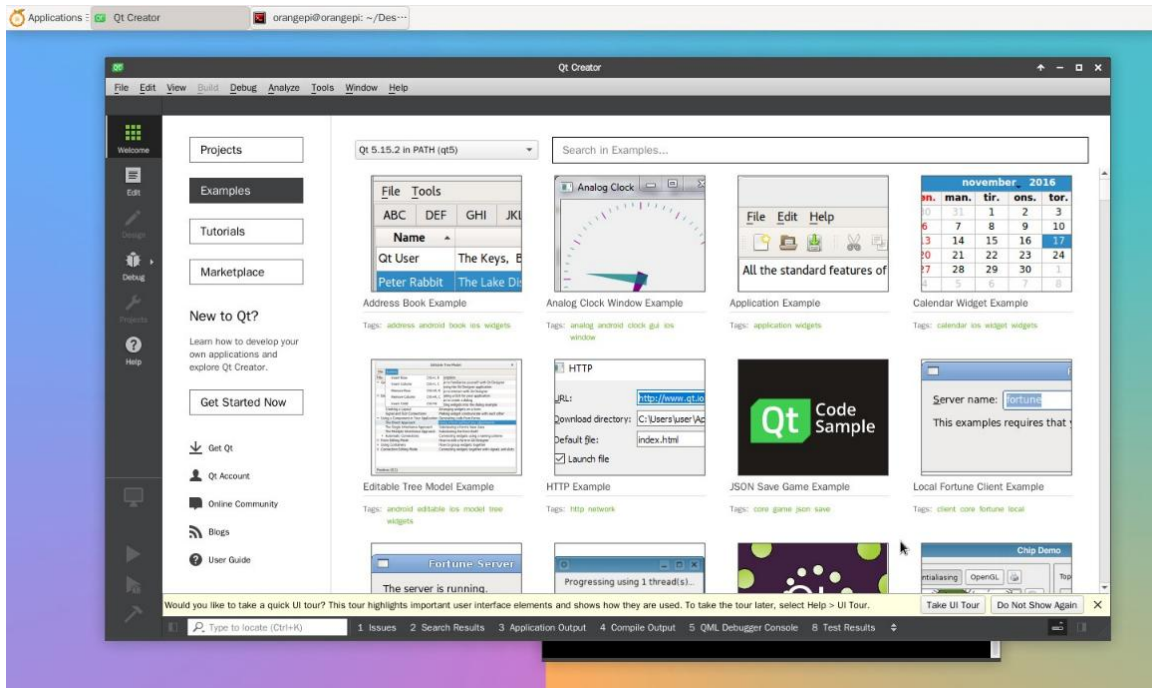


5) The version of QT Creator is as follows


a. The default version of QT Creator in **Ubuntu20.04** is as follows

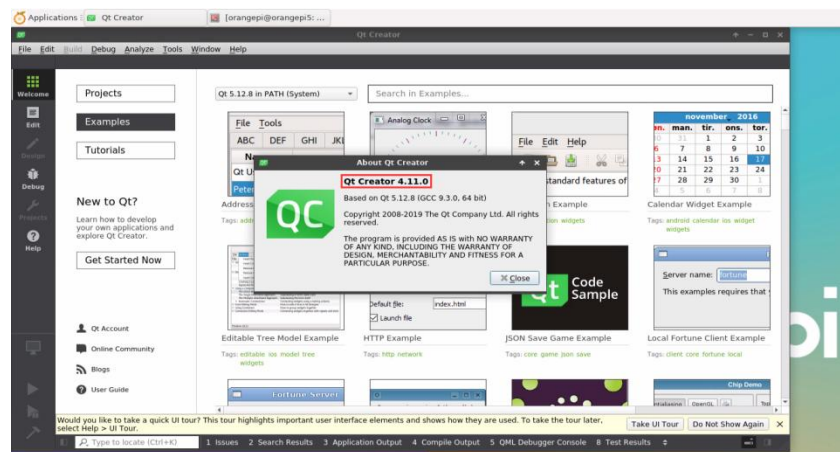


b. The default version of QT Creator in **Ubuntu22.04** is as follows

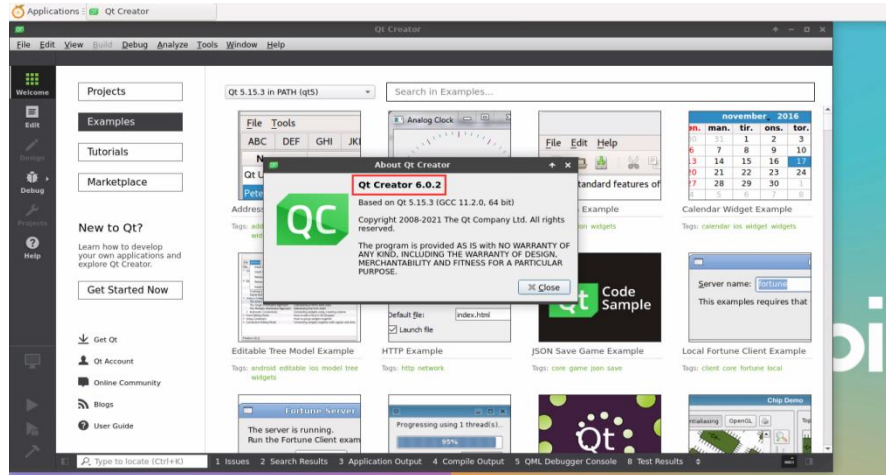


c. The default version of QT Creator in **Ubuntu24.04** is as follows

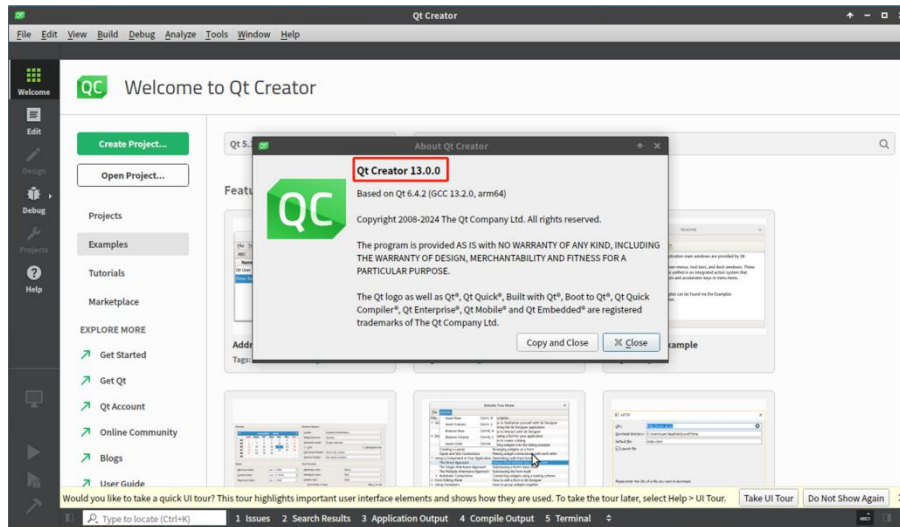

d. The default version of QT Creator in **Debian11** is as follows

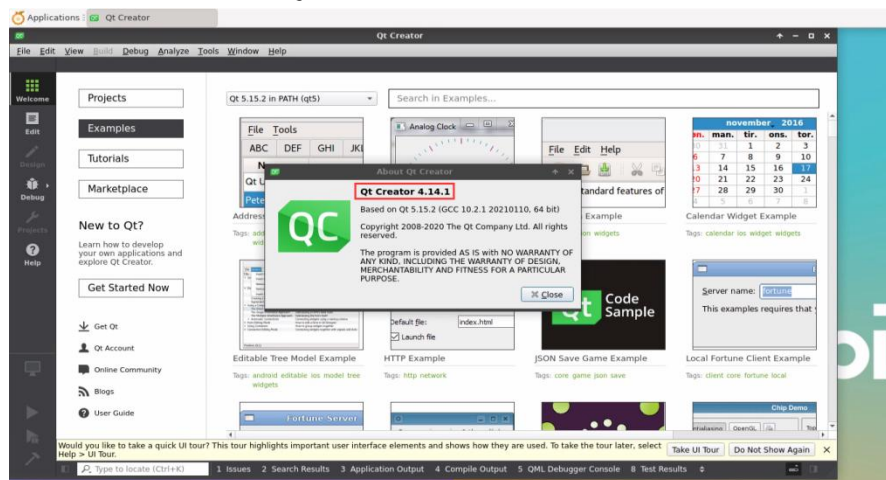


e. The default version of QT Creator in **Debian12** is as follows

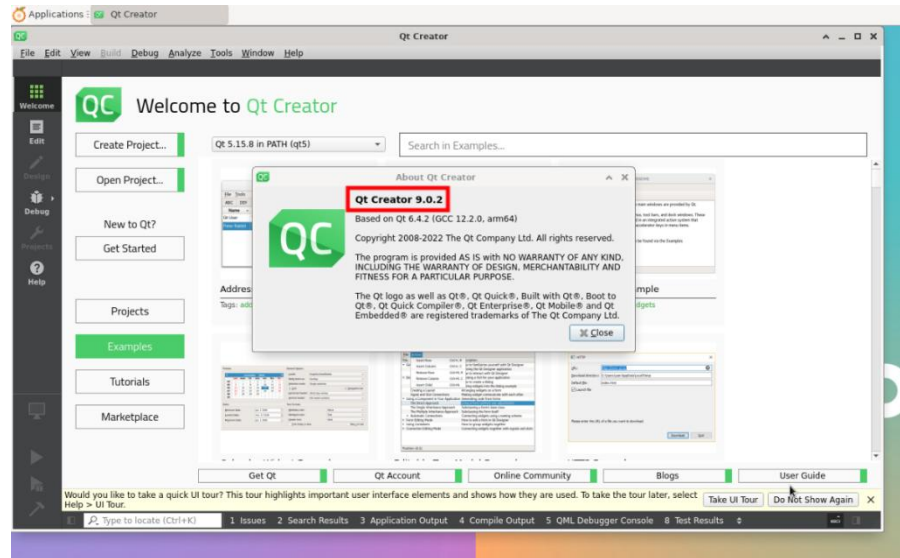


6) Then set up QT

a. First open **Help->About Plugins...**

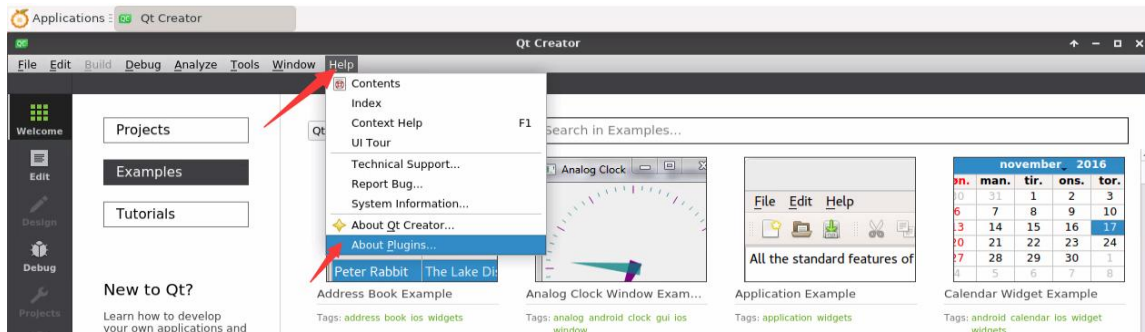

b. Then remove the check mark of **ClangCodeModel**

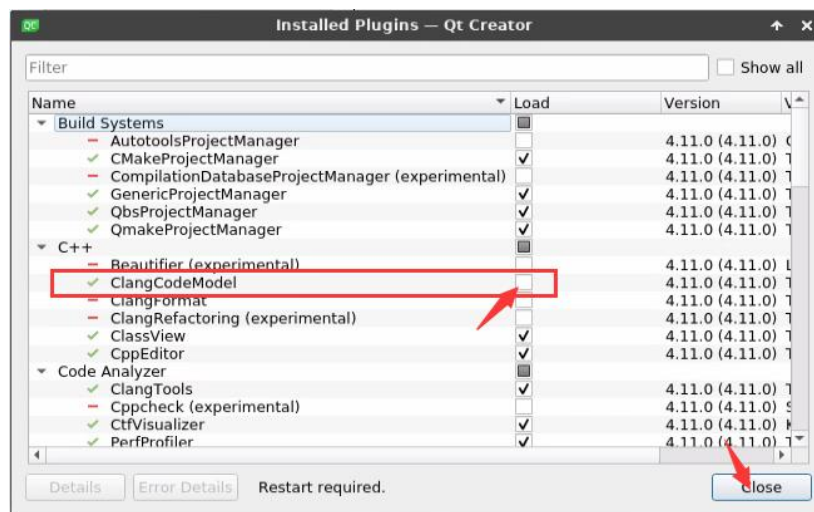



c. **After setting up, you need to restart QT Creator**

d. Then make sure the GCC compiler used by QT Creator. If the default is Clang,




please change it to GCC.


Debian12 and Ubuntu24.04 please skip this step.

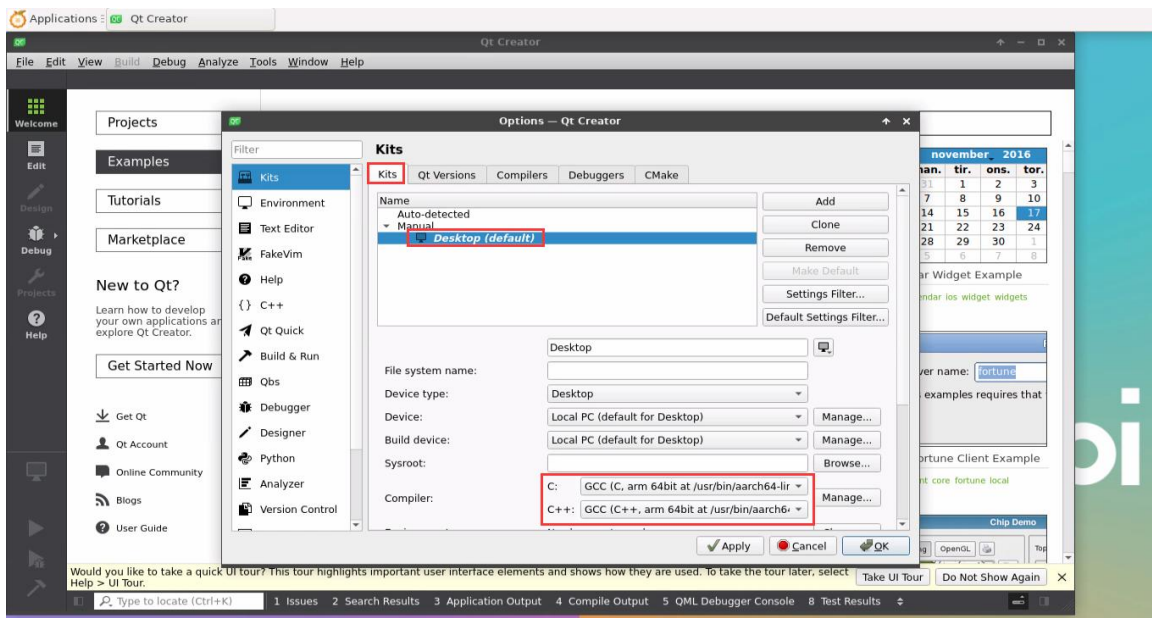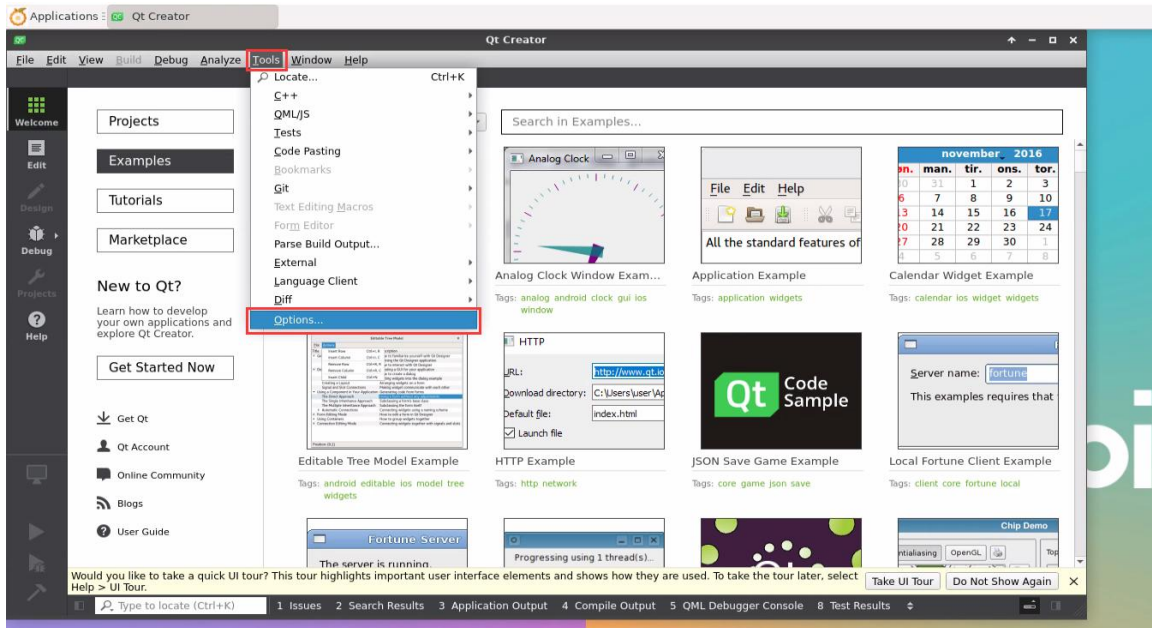


7) Then you can open a sample code

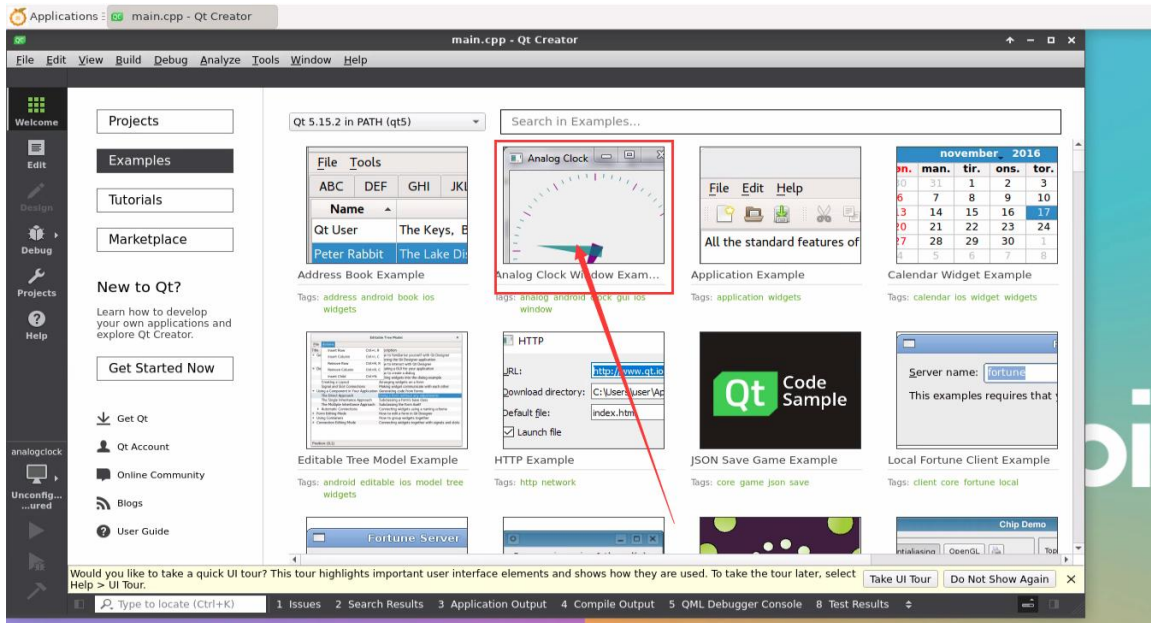


8) After clicking on the sample code, the corresponding instruction document will automatically open. You can read the instructions carefully.

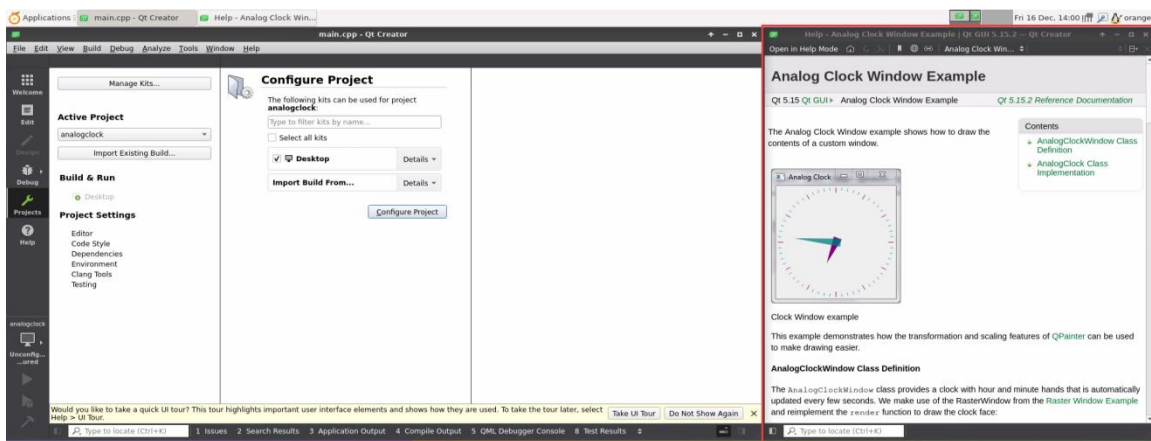


9) Then click **Configure Project**

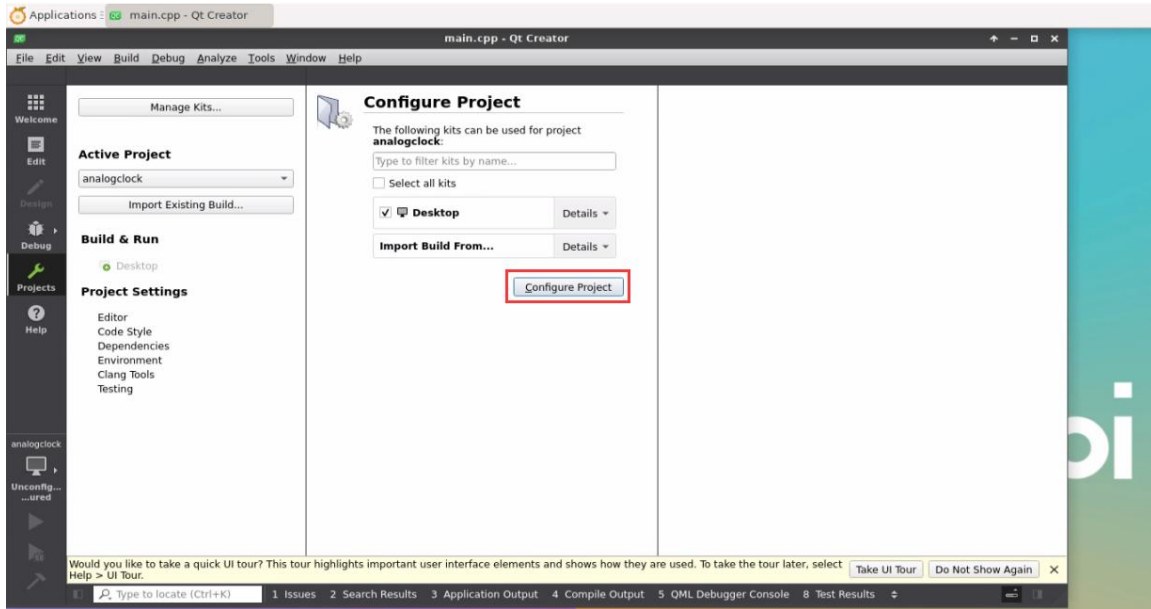

10) Then click the green triangle in the lower left corner to compile and run the sample code

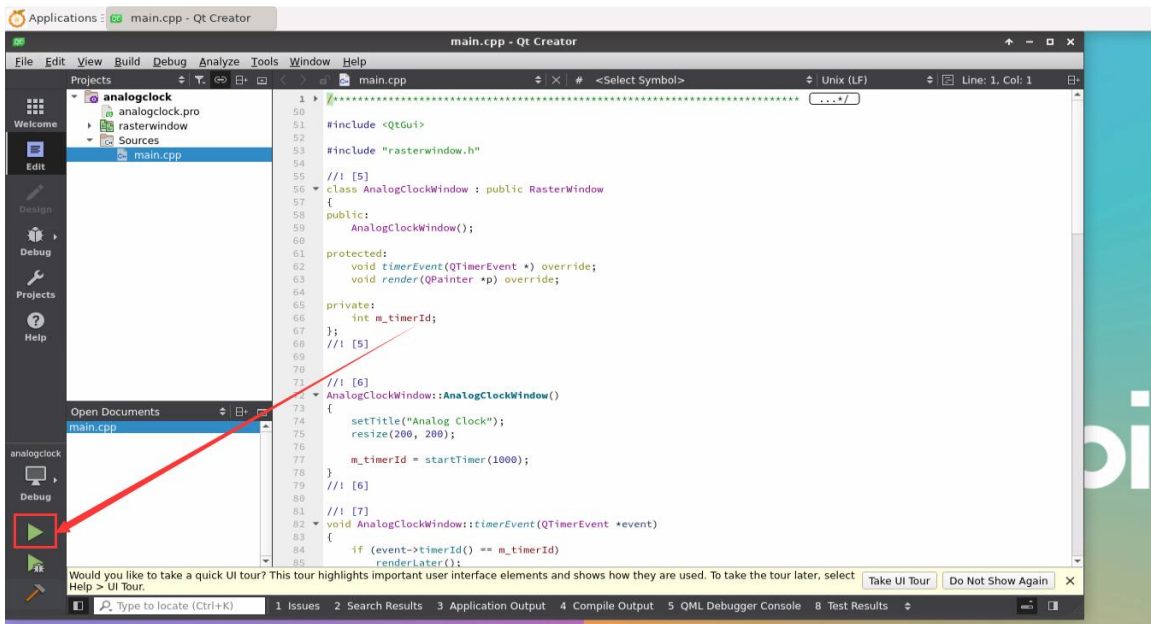

11) After waiting for a period of time, the interface shown in the figure below will pop up, which means that QT can compile and run normally.

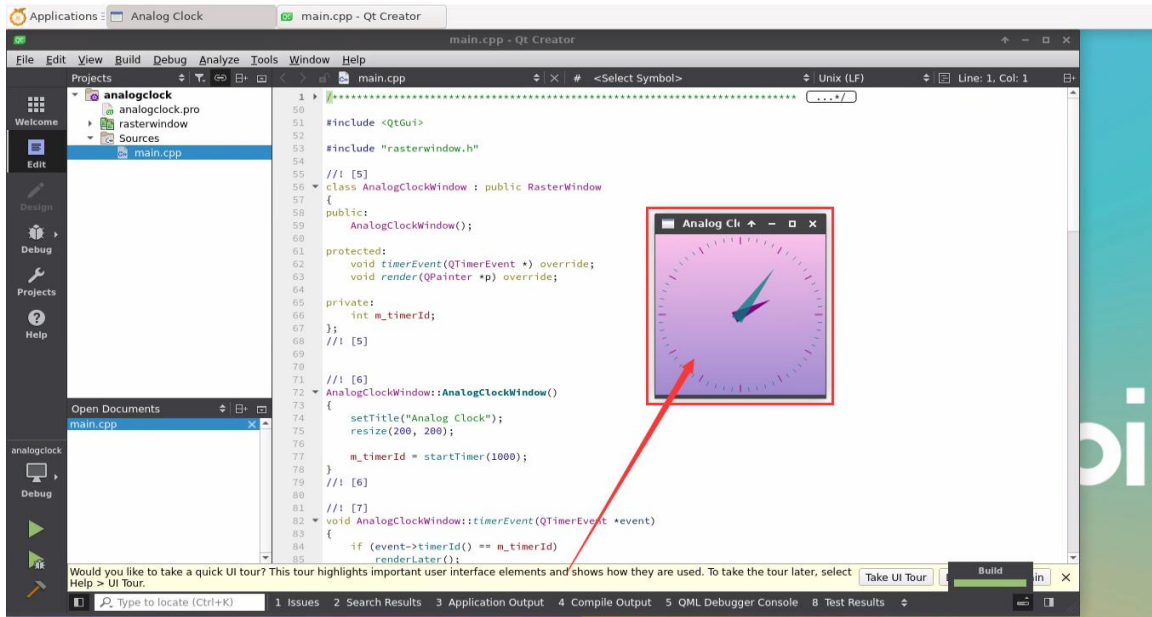

12) References

https://wiki.qt.io/Install_Qt_5_on_Ubuntu

<https://download.qt.io/archive/qtcreator>

<https://download.qt.io/archive/qt>

3. 31. ROS installation method

3. 31. 1. How to install ROS 1 Noetic on Ubuntu20.04

1) The currently active version of ROS 1 is as follows, the recommended version is **Noetic Ninjemys**

Active ROS 1 distributions

Recommended





Distro	Release date	Poster	Tuturtle, turtle in tutorial	EOL date
ROS Noetic Ninjemys (Recommended)	May 23rd, 2020			May, 2025 (Focal EOL)
ROS Melodic Morenia	May 23rd, 2018			May, 2023 (Bionic EOL)

<http://docs.ros.org>

<https://wiki.ros.org/Distributions>

2) The link to the official installation documentation of ROS 1 **Noetic Ninjemys** is as follows:

<http://wiki.ros.org/noetic/Installation/Ubuntu>

3) In the official installation documentation of ROS **Noetic Ninjemys**, Ubuntu recommends using Ubuntu20.04, so please ensure that the system used by the development board is **Ubuntu20.04 desktop system**.

<http://wiki.ros.org/noetic/Installation>

Select Your Platform

Supported:



Ubuntu

Focal

amd64

armhf

arm64



Debian

Buster

amd64

arm64

[Source installation](#)

4) Then use the script below to install ros1

```
orangeypi@orangeypi:~$ install_ros.sh ros1
```

5) Before using the ROS tool, you first need to initialize rosdep. Then when compiling the source code, you can quickly install some system dependencies and some core



components in ROS.

Note that when running the following command, you need to ensure that the development board can access github normally, otherwise an error will be reported due to network problems.

The `install_ros.sh` script will try to modify `/etc/hosts` and automatically run the following commands. However, this method cannot guarantee that github can be accessed normally every time. If `install_ros.sh` prompts the following error after installing `ros1`, please find other ways to allow the linux system of the development board to access github normally, and then manually run the following Order.

<https://raw.githubusercontent.com/ros/rosdistro/master/rosdep/osx-homebrew.yaml>

Hit <https://raw.githubusercontent.com/ros/rosdistro/master/rosdep/base.yaml>

ERROR: error loading sources list:

The read operation timed out

```
orangepi@orangepi:~$ source /opt/ros/noetic/setup.bash
```

```
orangepi@orangepi:~$ sudo rosdep init
```

```
Wrote /etc/ros/rosdep/sources.list.d/20-default.list
```

```
Recommended: please run
```

```
rosdep update
```

```
orangepi@orangepi:~$ rosdep update
```

```
reading in sources list data from /etc/ros/rosdep/sources.list.d
```

```
Hit https://raw.githubusercontent.com/ros/rosdistro/master/rosdep/osx-homebrew.yaml
```

```
Hit https://raw.githubusercontent.com/ros/rosdistro/master/rosdep/base.yaml
```

```
Hit https://raw.githubusercontent.com/ros/rosdistro/master/rosdep/python.yaml
```

```
Hit https://raw.githubusercontent.com/ros/rosdistro/master/rosdep/ruby.yaml
```

```
Hit https://raw.githubusercontent.com/ros/rosdistro/master/releases/fuerte.yaml
```

```
Query rosdistro index
```

```
https://raw.githubusercontent.com/ros/rosdistro/master/index-v4.yaml
```

```
Skip end-of-life distro "ardent"
```

```
Skip end-of-life distro "bouncy"
```

```
Skip end-of-life distro "crystal"
```

```
Skip end-of-life distro "dashing"
```

```
Skip end-of-life distro "eloquent"
```




```
Add distro "foxy"  
Add distro "galactic"  
Skip end-of-life distro "groovy"  
Add distro "humble"  
Skip end-of-life distro "hydro"  
Skip end-of-life distro "indigo"  
Skip end-of-life distro "jade"  
Skip end-of-life distro "kinetic"  
Skip end-of-life distro "lunar"  
Add distro "melodic"  
Add distro "noetic"  
Add distro "rolling"  
updated cache in /home/orangepi/.ros/rosdep/sources.cache
```


6) Then open a command line terminal window on the **desktop**, and then use the **test_ros.sh** script to start a small turtle routine to test whether ROS can be used normally.

```
orangepi@orangepi:~$ test_ros.sh
```


7) After running the **test_ros.sh** script, a small turtle as shown in the picture below will pop up.

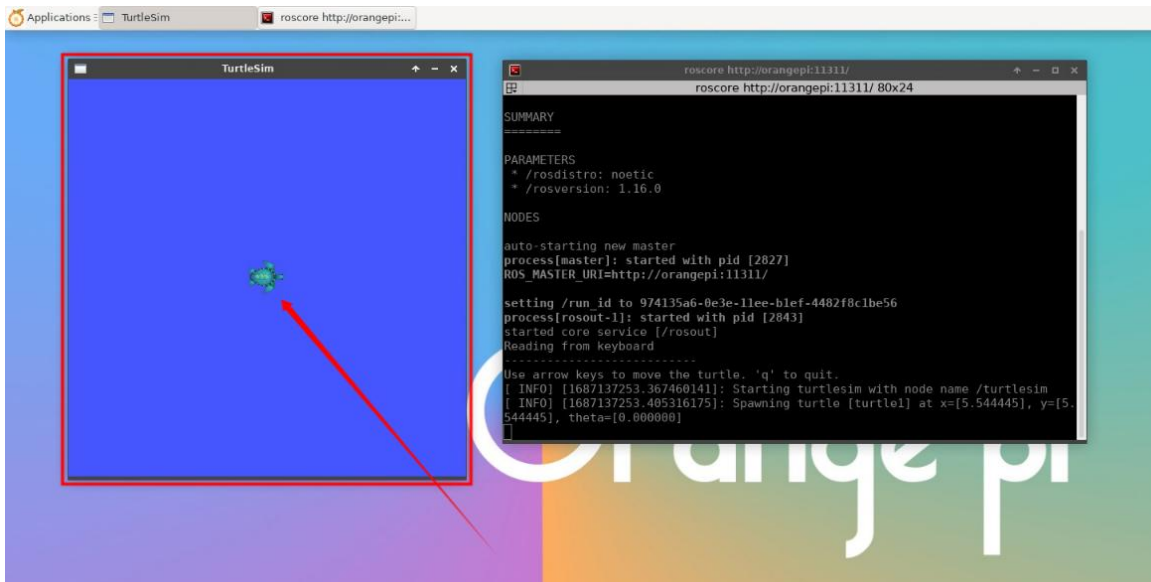

8) Then please keep the terminal window you just opened at the top

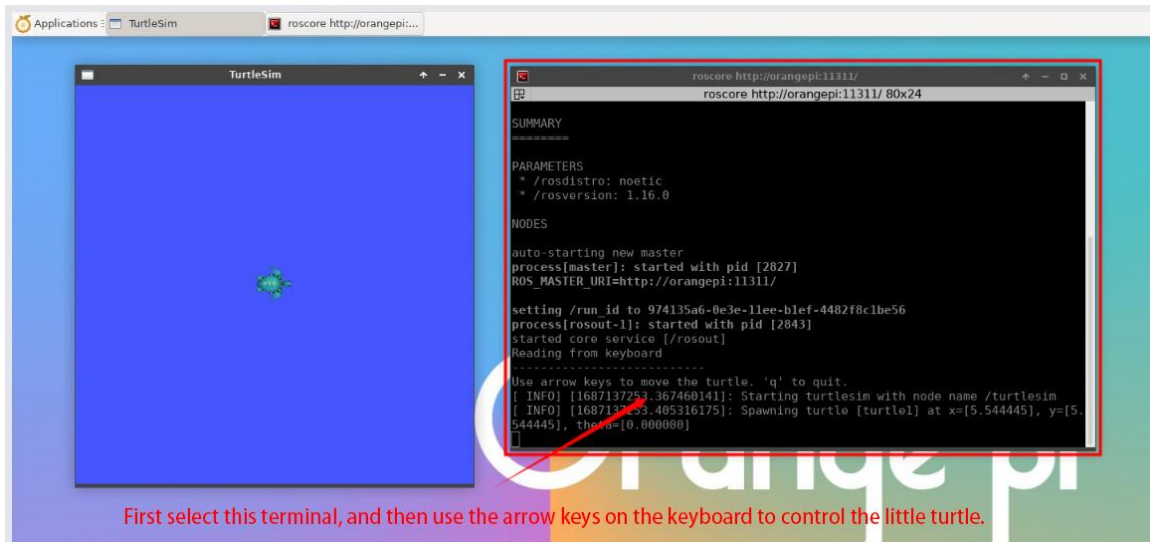


9) At this time, press the direction keys on the keyboard to control the little turtle to move up, down, left, and right.

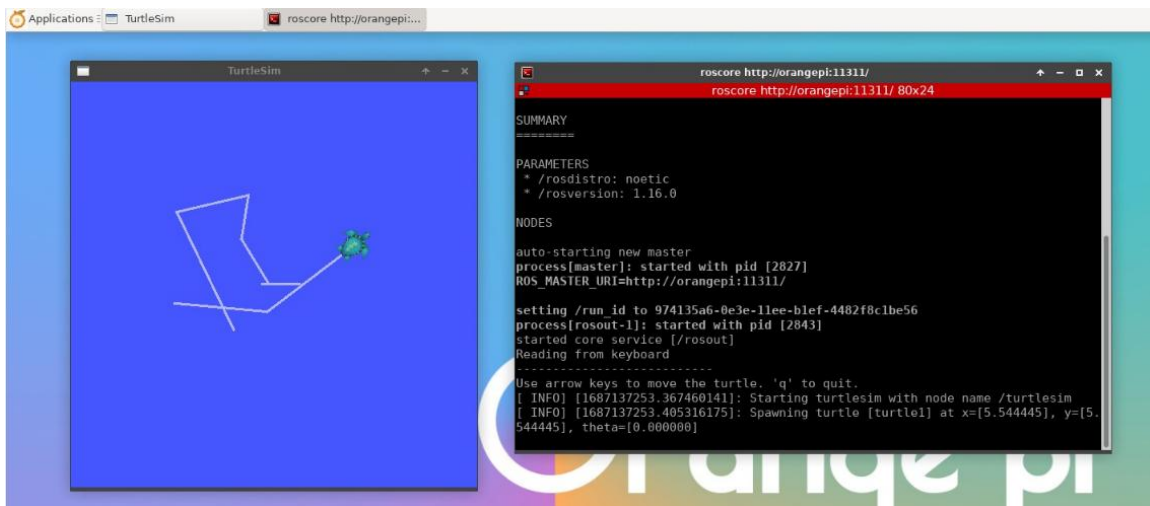

3. 31. 2. How to install ROS 2 Galactic on Ubuntu20.04

1) The currently active version of ROS 2 is as follows, the recommended version is **Galactic Geochelone**

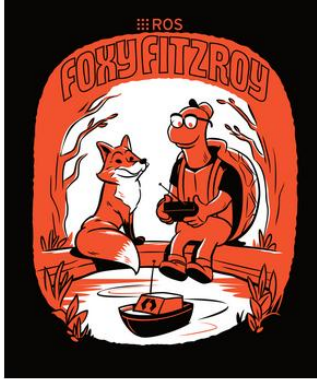**Active ROS 2 distributions****Recommended****Development**

Distro	Release date	Logo	EOL date
Humble Hawksbill	May 23rd, 2022		May 2027
Galactic Geochelone	May 23rd, 2021		November 2022
Foxy Fitzroy	June 5th, 2020		May 2023

<http://docs.ros.org>
<http://docs.ros.org/en/galactic/Releases.html>

2) The link to the official installation documentation of ROS 2 **Galactic Geochelone** is as follows:

docs.ros.org/en/galactic/Installation.html
<http://docs.ros.org/en/galactic/Installation/Ubuntu-Install-Debians.html>

3) In the official installation documentation of ROS 2 **Galactic Geochelone**, Ubuntu Linux recommends using Ubuntu20.04, so please ensure that the system used by the development board is the **Ubuntu20.04 desktop system**. There are several ways to install ROS 2. The following demonstrates how to install ROS 2 **Galactic Geochelone** through

**Debian packages.**

4) Use the **install_ros.sh** script to install ros2

```
orange@orange:~$ install_ros.sh ros2
```

5) The **install_ros.sh** script will automatically run the **ros2 -h** command after installing ros2. If you can see the following print, it means that the ros2 installation is complete.

```
usage: ros2 [-h] Call `ros2 <command> -h` for more detailed usage. ...
```

```
ros2 is an extensible command-line tool for ROS 2.
```

```
optional arguments:
```

```
  -h, --help            show this help message and exit
```

```
Commands:
```

```
  action      Various action related sub-commands
  bag         Various rosbag related sub-commands
  component   Various component related sub-commands
  daemon      Various daemon related sub-commands
  doctor      Check ROS setup and other potential issues
  interface   Show information about ROS interfaces
  launch      Run a launch file
  lifecycle   Various lifecycle related sub-commands
  multicast   Various multicast related sub-commands
  node        Various node related sub-commands
  param       Various param related sub-commands
  pkg         Various package related sub-commands
  run         Run a package specific executable
  security    Various security related sub-commands
  service     Various service related sub-commands
  topic       Various topic related sub-commands
  wtf         Use `wtf` as alias to `doctor`
```

```
Call `ros2 <command> -h` for more detailed usage.
```

6) Then you can use the **test_ros.sh** script to test whether ROS 2 is installed successfully.




If you can see the following print, it means ROS 2 can run normally.

```
orangepi@orangepi:~$ test_ros.sh
[INFO] [1671174101.200091527] [talker]: Publishing: 'Hello World: 1'
[INFO] [1671174101.235661048] [listener]: I heard: [Hello World: 1]
[INFO] [1671174102.199572327] [talker]: Publishing: 'Hello World: 2'
[INFO] [1671174102.204196299] [listener]: I heard: [Hello World: 2]
[INFO] [1671174103.199580322] [talker]: Publishing: 'Hello World: 3'
[INFO] [1671174103.204019965] [listener]: I heard: [Hello World: 3]
```

7) Run the following command to open rviz2

```
orangepi@orangepi:~$ source /opt/ros/galactic/setup.bash
orangepi@orangepi:~$ ros2 run rviz2 rviz2
```

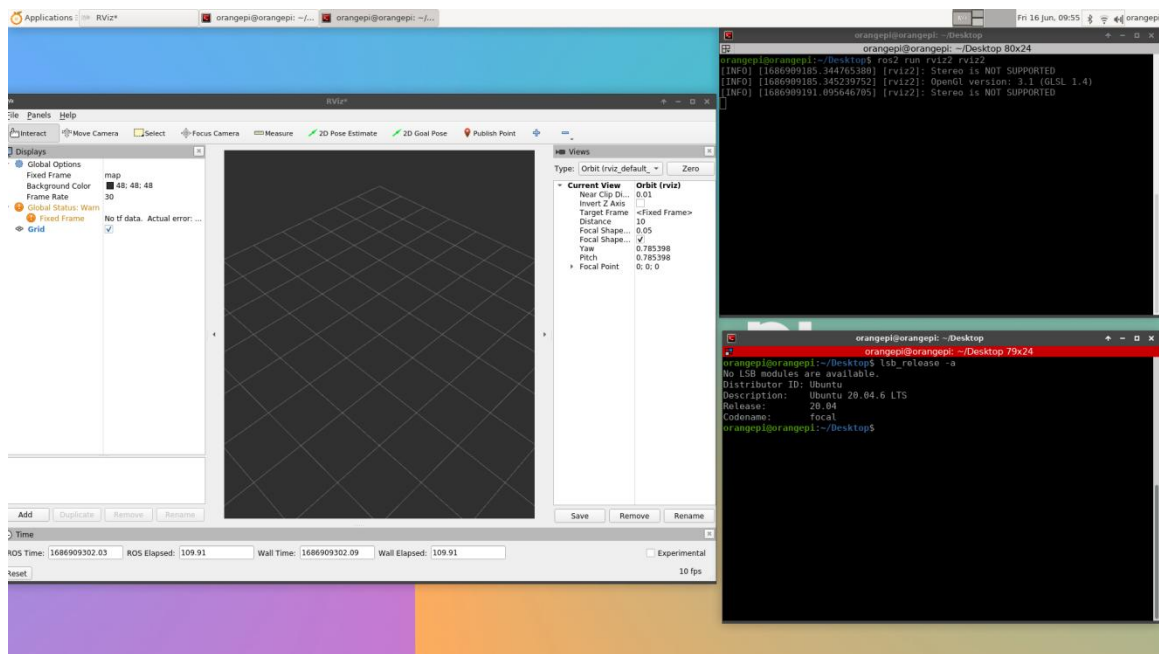

8) For how to use ROS, please refer to the documentation of ROS 2.

<http://docs.ros.org/en/galactic/Tutorials.html>

3. 31. 3. How to install ROS 2 Humble on Ubuntu22.04

1) Use the install_ros.sh script to **install_ros.sh**

```
orangepi@orangepi:~$ install_ros.sh ros2
```

2) The **install_ros.sh** script will automatically run the **ros2 -h** command after installing ros2. If you can see the following print, it means that the ros2 installation is complete.



usage: ros2 [-h] Call `ros2 <command> -h` for more detailed usage. ...

ros2 is an extensible command-line tool for ROS 2.

optional arguments:

-h, --help show this help message and exit

Commands:

action	Various action related sub-commands
bag	Various rosbag related sub-commands
component	Various component related sub-commands
daemon	Various daemon related sub-commands
doctor	Check ROS setup and other potential issues
interface	Show information about ROS interfaces
launch	Run a launch file
lifecycle	Various lifecycle related sub-commands
multicast	Various multicast related sub-commands
node	Various node related sub-commands
param	Various param related sub-commands
pkg	Various package related sub-commands
run	Run a package specific executable
security	Various security related sub-commands
service	Various service related sub-commands
topic	Various topic related sub-commands
wtf	Use `wtf` as alias to `doctor`

Call `ros2 <command> -h` for more detailed usage.

3) Then you can use the **test_ros.sh** script to test whether ROS 2 is successfully installed. If you can see the following print, it means ROS 2 can run normally.

```
orangepi@orangepi:~$ test_ros.sh
```


```
[INFO] [1671174101.200091527] [talker]: Publishing: 'Hello World: 1'
[INFO] [1671174101.235661048] [listener]: I heard: [Hello World: 1]
[INFO] [1671174102.199572327] [talker]: Publishing: 'Hello World: 2'
[INFO] [1671174102.204196299] [listener]: I heard: [Hello World: 2]
[INFO] [1671174103.199580322] [talker]: Publishing: 'Hello World: 3'
```



```
[INFO] [1671174103.204019965] [listener]: I heard: [Hello World: 3]
```

4) Run the following command to open rviz2

```
orangePi@orangePi:~$ source /opt/ros/humble/setup.bash
orangePi@orangePi:~$ ros2 run rviz2 rviz2
```

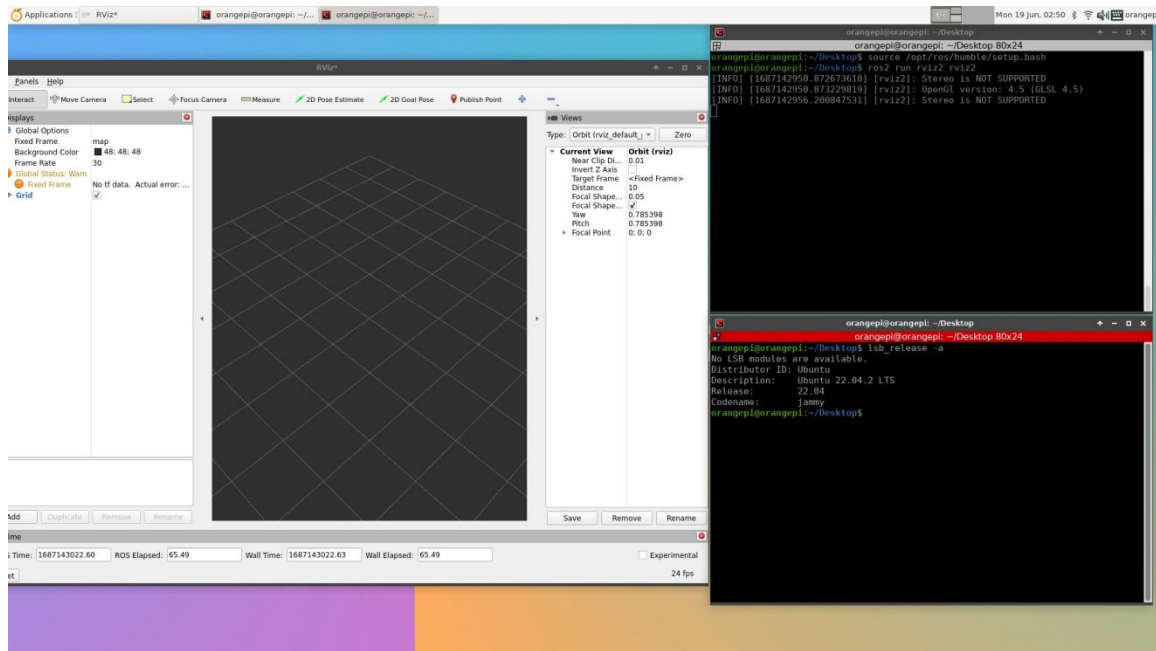

5) Reference documentation

<http://docs.ros.org/en/humble/index.html>

<http://docs.ros.org/en/humble/Installation/Ubuntu-Install-Debians.html>

3. 31. 4. Ubuntu24.04 Method for Installing ROS 2 Jazzy

6) The `install_ros.sh` script can be used to install ros2

```
orangePi@orangePi:~$ install_ros.sh ros2
```

7) After installing ros2, the `install_ros.sh` script will run the following command. If you can see the print below, it means that ros2 installation is complete

```
orangePi@orangePi:~$ source /opt/ros/jazzy/setup.bash
orangePi@orangePi:~$ ros2 -h
usage: ros2 [-h] Call `ros2 <command> -h` for more detailed usage. ...

ros2 is an extensible command-line tool for ROS 2.
```



optional arguments:

-h, --help show this help message and exit

Commands:

action Various action related sub-commands
 bag Various rosbag related sub-commands
 component Various component related sub-commands
 daemon Various daemon related sub-commands
 doctor Check ROS setup and other potential issues
 interface Show information about ROS interfaces
 launch Run a launch file
 lifecycle Various lifecycle related sub-commands
 multicast Various multicast related sub-commands
 node Various node related sub-commands
 param Various param related sub-commands
 pkg Various package related sub-commands
 run Run a package specific executable
 security Various security related sub-commands
 service Various service related sub-commands
 topic Various topic related sub-commands
 wtf Use `wtf` as alias to `doctor`

Call `ros2 <command> -h` for more detailed usage.

8) Then you can use the **test_ros.sh** script to test whether ROS 2 is installed successfully.


If you can see the print below, it means ROS 2 can run normally

```
orangeypi@orangeypi:~$ test_ros.sh
[INFO] [1671174101.200091527] [talker]: Publishing: 'Hello World: 1'
[INFO] [1671174101.235661048] [listener]: I heard: [Hello World: 1]
[INFO] [1671174102.199572327] [talker]: Publishing: 'Hello World: 2'
[INFO] [1671174102.204196299] [listener]: I heard: [Hello World: 2]
[INFO] [1671174103.199580322] [talker]: Publishing: 'Hello World: 3'
[INFO] [1671174103.204019965] [listener]: I heard: [Hello World: 3]
```

9) Running the following command can open rviz2



```
orange_pi@orange_pi:~$ source /opt/ros/jazzy/setup.bash
orange_pi@orange_pi:~$ ros2 run rviz2 rviz2
```

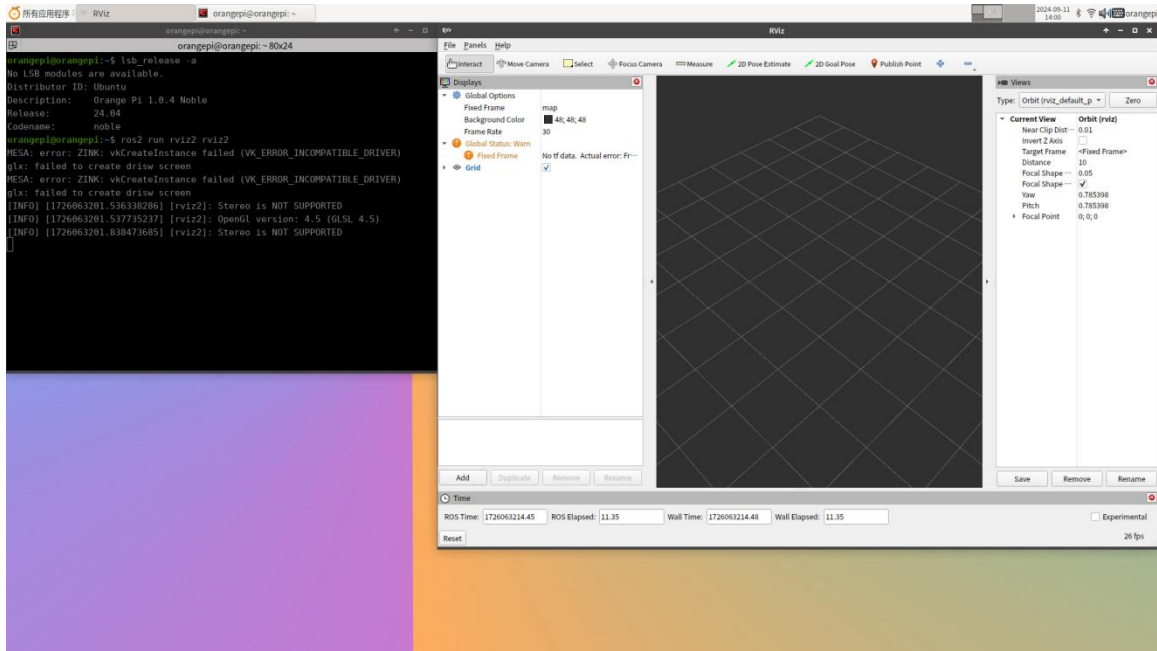

10) Reference Documents

<http://docs.ros.org/en/jazzy/index.html>

<http://docs.ros.org/en/jazzy/Installation/Ubuntu-Install-Debians.html>

3. 32. How to install kernel header files

Debian11 system with **Linux6.1** kernel will report GCC error when compiling kernel module. So if you want to compile the kernel module, please use Debian12 or Ubuntu22.04.

1) The Linux image released by OPI comes with the deb package of the kernel header file by default, and the storage location is **/opt/**

```
orange_pi@orange_pi:~$ ls /opt/linux-headers*
/opt/linux-headers-xxx-sun50iw9_x.x.x_arm64.deb
```

2) Use the following command to install the deb package of the kernel header file

```
orange_pi@orange_pi:~$ sudo dpkg -i /opt/linux-headers*.deb
```



3) After installation, you can see the folder where the kernel header file is located under **/usr/src**.

```
orange@orange:~$ ls /usr/src
linux-headers-x.x.x
```

4) Then you can compile the source code of the hello kernel module that comes with the Linux image. The source code of the hello module is in **/usr/src/hello**. After entering this directory, then use the make command to compile.

```
orange@orange:~$ cd /usr/src/hello/
orange@orange:/usr/src/hello$ sudo make
make -C /lib/modules/5.4.125/build M=/usr/src/hello modules
make[1]: Entering directory '/usr/src/linux-headers-5.4.125'
  CC [M]  /usr/src/hello/hello.o
  Building modules, stage 2.
  MODPOST 1 modules
  CC [M]  /usr/src/hello/hello.mod.o
  LD [M]  /usr/src/hello/hello.ko
make[1]: Leaving directory '/usr/src/linux-headers-5.4.125'
```

5) After compilation, the **hello.ko** kernel module will be generated

```
orange@orange:/usr/src/hello$ ls *.ko
hello.ko
```

6) Use the **insmod** command to insert the **hello.ko** kernel module into the kernel

```
orange@orange:/usr/src/hello$ sudo insmod hello.ko
```

7) Then use the **dmesg** command to view the output of the **hello.ko** kernel module. If you can see the following output, it means that the **hello.ko** kernel module is loaded correctly.

```
orange@orange:/usr/src/hello$ dmesg | grep "Hello"
[ 2871.893988] Hello Orange Pi -- init
```

8) Use the **rmmod** command to uninstall the **hello.ko** kernel module

```
orange@orange:/usr/src/hello$ sudo rmmod hello
orange@orange:/usr/src/hello$ dmesg | grep "Hello"
```



```
[ 2871.893988] Hello Orange Pi -- init  
[ 3173.800892] Hello Orange Pi -- exit
```

3.33. Testing of some programming languages supported by Linux system

3.33.1. Debian Bullseye system

1) Debian Bullseye is installed with the gcc compilation tool chain by default, which can directly compile C language programs in the Linux system of the development board.

a. The version of a.gcc is as follows

```
orangepi@orangepi:~$ gcc --version  
gcc (Debian 10.2.1-6) 10.2.1 20210110  
Copyright (C) 2020 Free Software Foundation, Inc.  
This is free software; see the source for copying conditions. There is NO  
warranty; not even for MERCHANTABILITY or FITNESS FOR A PARTICULAR  
PURPOSE.
```

b. Write the **hello_world.c** program in C language

```
orangepi@orangepi:~$ vim hello_world.c  
#include <stdio.h>  
  
int main(void)  
{  
    printf("Hello World!\n");  
  
    return 0;  
}
```

c. Then compile and run **hello_world.c**

```
orangepi@orangepi:~$ gcc -o hello_world hello_world.c  
orangepi@orangepi:~$ ./hello_world  
Hello World!
```

2) Debian Bullseye has Python3 installed by default

a. The specific version of Python is as follows

```
orangepi@orangepi:~$ python3  
Python 3.9.2 (default, Feb 28 2021, 17:03:44)
```



```
[GCC 10.2.1 20210110] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

Use the Ctrl+D shortcut key to exit python's interactive mode.

- b. Write the **hello_world.py** program in Python language

```
orangepi@orangepi:~$ vim hello_world.py
print('Hello World!')
```

- c. The result of running **hello_world.py** is as follows

```
orangepi@orangepi:~$ python3 hello_world.py
Hello World!
```

3) Debian Bullseye does not install Java compilation tools and operating environment by default.

- a. You can use the following command to install openjdk. The latest version in Debian Bullseye is openjdk-17

```
orangepi@orangepi:~$ sudo apt install -y openjdk-17-jdk
```

- b. After installation, you can check the Java version.

```
orangepi@orangepi:~$ java --version
```

- c. Write the Java version of **hello_world.java**

```
orangepi@orangepi:~$ vim hello_world.java
public class hello_world
{
    public static void main(String[] args)
    {
        System.out.println("Hello World!");
    }
}
```

- d. Then compile and run **hello_world.java**

```
orangepi@orangepi:~$ javac hello_world.java
orangepi@orangepi:~$ java hello_world
Hello World!
```

3.33.2. Debian Bookworm system

1) Debian Bookworm is installed with the gcc compilation tool chain by default, which can directly compile C language programs in the Linux system of the development board.

- a. The version of a.gcc is as follows



```
orangepi@orangepi:~$ gcc --version
gcc (Debian 12.2.0-14) 12.2.0
Copyright (C) 2022 Free Software Foundation, Inc.
This is free software; see the source for copying conditions.  There is NO
warranty; not even for MERCHANTABILITY or FITNESS FOR A PARTICULAR
PURPOSE.
```

- b. Write the **hello_world.c** program in C language

```
orangepi@orangepi:~$ vim hello_world.c
#include <stdio.h>

int main(void)
{
    printf("Hello World!\n");

    return 0;
}
```

- c. Then compile and run **hello_world.c**

```
orangepi@orangepi:~$ gcc -o hello_world hello_world.c
orangepi@orangepi:~$ ./hello_world
Hello World!
```

2) Debian Bookworm has Python3 installed by default

- a. The specific version of Python is as follows

```
orangepi@orangepi:~$ python3
Python 3.11.2 (main, Mar 13 2023, 12:18:29) [GCC 12.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

Use the Ctrl+D shortcut key to exit python's interactive mode.

- b. Write the **hello_world.py** program in Python language

```
orangepi@orangepi:~$ vim hello_world.py
print('Hello World!')
```

- c. The result of running **hello_world.py** is as follows

```
orangepi@orangepi:~$ python3 hello_world.py
Hello World!
```



3) Debian Bookworm does not install Java compilation tools and operating environment by default.

- a. You can use the following command to install openjdk. The latest version in Debian Bookworm is openjdk-17

```
orangePi@orangePi:~$ sudo apt install -y openjdk-17-jdk
```

- b. After installation, you can check the Java version.

```
orangePi@orangePi:~$ java --version
```

- c. Write the Java version of **hello_world.java**

```
orangePi@orangePi:~$ vim hello_world.java
public class hello_world
{
    public static void main(String[] args)
    {
        System.out.println("Hello World!");
    }
}
```

- d. Then compile and run **hello_world.java**

```
orangePi@orangePi:~$ javac hello_world.java
orangePi@orangePi:~$ java hello_world
Hello World!
```

3.33.3. Ubuntu Focal system

1) Ubuntu Focal is installed with the gcc compilation tool chain by default, which can directly compile C language programs in the Linux system of the development board.

- a. The version of a.gcc is as follows

```
orangePi@orangePi:~$ gcc --version
gcc (Ubuntu 9.4.0-1ubuntu1~20.04.1) 9.4.0
Copyright (C) 2019 Free Software Foundation, Inc.
This is free software; see the source for copying conditions.  There is NO
warranty; not even for MERCHANTABILITY or FITNESS FOR A PARTICULAR
PURPOSE.
```

- b. Write the **hello_world.c** program in C language

```
orangePi@orangePi:~$ vim hello_world.c
#include <stdio.h>

int main(void)
```



```
{  
    printf("Hello World!\n");  
  
    return 0;  
}
```

- c. Then compile and run **hello_world.c**

```
orange@orange:~$ gcc -o hello_world hello_world.c  
orange@orange:~$ ./hello_world  
Hello World!
```

2) Ubuntu Focal has Python3 installed by default

- a. The specific version of Python3 is as follows

```
orange@orange:~$ python3  
Python 3.8.10 (default, Nov 14 2022, 12:59:47)  
[GCC 9.4.0] on linux  
Type "help", "copyright", "credits" or "license" for more information.  
>>>
```

Use the Ctrl+D shortcut key to exit python's interactive mode.

- b. Write the **hello_world.py** program in Python language

```
orange@orange:~$ vim hello_world.py  
print('Hello World!')
```

- c. The result of running **hello_world.py** is as follows

```
orange@orange:~$ python3 hello_world.py  
Hello World!
```

3) Ubuntu Focal does not have Java compilation tools and running environment installed by default.

- a. You can use the following command to install openjdk-17

```
orange@orange:~$ sudo apt install -y openjdk-17-jdk
```

- b. After installation, you can check the Java version.

```
orange@orange:~$ java --version  
openjdk 17.0.2 2022-01-18  
OpenJDK Runtime Environment (build 17.0.2+8-Ubuntu-120.04)  
OpenJDK 64-Bit Server VM (build 17.0.2+8-Ubuntu-120.04, mixed mode, sharing)
```

- c. Write the Java version of **hello_world.java**



```
orangePi@orangePi:~$ vim hello_world.java
public class hello_world
{
    public static void main(String[] args)
    {
        System.out.println("Hello World!");
    }
}
```

d. Then compile and run **hello_world.java**

```
orangePi@orangePi:~$ javac hello_world.java
orangePi@orangePi:~$ java hello_world
Hello World!
```

3.33.4. Ubuntu Jammy system

1) Ubuntu Jammy is installed with the gcc compilation tool chain by default, which can directly compile C language programs in the Linux system of the development board.

a. The version of a.gcc is as follows

```
orangePi@orangePi:~$ gcc --version
gcc (Ubuntu 11.4.0-1ubuntu1~22.04) 11.4.0
Copyright (C) 2021 Free Software Foundation, Inc.
This is free software; see the source for copying conditions. There is NO
warranty; not even for MERCHANTABILITY or FITNESS FOR A PARTICULAR
PURPOSE.
```

b. Write the **hello_world.c** program in C language

```
orangePi@orangePi:~$ vim hello_world.c
#include <stdio.h>

int main(void)
{
    printf("Hello World!\n");

    return 0;
}
```

c. Then compile and run **hello_world.c**

```
orangePi@orangePi:~$ gcc -o hello_world hello_world.c
orangePi@orangePi:~$ ./hello_world
```



```
Hello World!
```

2) Ubuntu Jammy has Python3 installed by default

- a. The specific version of Python3 is as follows

```
orangepi@orangepi:~$ python3
Python 3.10.6 (main, May 29 2023, 11:10:38) [GCC 11.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

Use the Ctrl+D shortcut key to exit python's interactive mode.

- b. Write the **hello_world.py** program in Python language

```
orangepi@orangepi:~$ vim hello_world.py
print('Hello World!')
```

- c. The result of running **hello_world.py** is as follows

```
orangepi@orangepi:~$ python3 hello_world.py
Hello World!
```

3) Ubuntu Jammy does not install Java compilation tools and operating environment by default.

- a. You can use the following command to install openjdk-18

```
orangepi@orangepi:~$ sudo apt install -y openjdk-18-jdk
```

- b. After installation, you can check the Java version.

```
orangepi@orangepi:~$ java --version
openjdk 18.0.2-ea 2022-07-19
OpenJDK Runtime Environment (build 18.0.2-ea+9-Ubuntu-222.04)
OpenJDK 64-Bit Server VM (build 18.0.2-ea+9-Ubuntu-222.04, mixed mode, sharing)
```

- c. Write the Java version of **hello_world.java**

```
orangepi@orangepi:~$ vim hello_world.java
public class hello_world
{
    public static void main(String[] args)
    {
        System.out.println("Hello World!");
    }
}
```

- d. Then compile and run **hello_world.java**



```
orange@orange:~$ javac hello_world.java
orange@orange:~$ java hello_world
Hello World!
```

3.33.5. Ubuntu Noble System

1) Ubuntu Jammy comes with the gcc compilation toolchain installed by default, which allows direct compilation of C language programs on the Linux system of the development board

a. The version of gcc is as follows

```
orange@orange:~$ gcc --version
gcc (Ubuntu 13.2.0-23ubuntu4) 13.2.0
Copyright (C) 2023 Free Software Foundation, Inc.
This is free software; see the source for copying conditions. There is NO
warranty; not even for MERCHANTABILITY or FITNESS FOR A PARTICULAR
PURPOSE.
```

b. Write a C language program called **hello_world.c**

```
orange@orange:~$ vim hello_world.c
#include <stdio.h>

int main(void)
{
    printf("Hello World!\n");

    return 0;
}
```

c. Then compile and run **hello_world.c**

```
orange@orange:~$ gcc -o hello_world hello_world.c
orange@orange:~$ ./hello_world
Hello World!
```

2) Ubuntu Noble comes with Python3 installed by default

a. The specific version of Python3 is as follows

```
orange@orange:~$ python3
Python 3.12.3 (main, Jul 31 2024, 17:43:48) [GCC 13.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
```



```
>>>
```

Use the Ctrl+D shortcut key to exit Python's interactive mode.

- b. Write the **hello_world.py** program in Python language

```
orangepi@orangepi:~$ vim hello_world.py
print('Hello World!')
```

- c. The result of running **hello_world.py** is as follows

```
orangepi@orangepi:~$ python3 hello_world.py
Hello World!
```

3) Ubuntu Noble does not have Java compilation tools and runtime environment installed by default

- a. You can use the following command to install openjdk-21

```
orangepi@orangepi:~$ sudo apt install -y openjdk-21-jdk
```

- b. After installation, you can check the version of Java

```
orangepi@orangepi:~$ java --version
openjdk 21.0.4 2024-07-16
OpenJDK Runtime Environment (build 21.0.4+7-Ubuntu-1ubuntu224.04)
OpenJDK 64-Bit Server VM (build 21.0.4+7-Ubuntu-1ubuntu224.04, mixed mode,
sharing)
```

- c. Write a Java version of **hello_world.java**

```
orangepi@orangepi:~$ vim hello_world.java
public class hello_world
{
    public static void main(String[] args)
    {
        System.out.println("Hello World!");
    }
}
```

- d. Then compile and run **hello_world.java**

```
orangepi@orangepi:~$ javac hello_world.java
orangepi@orangepi:~$ java hello_world
Hello World!
```



3. 34. Method of uploading files to the development board Linux system

3. 34. 1. Method to upload files to the development board Linux system in Ubuntu PC

3. 34. 1. 1. How to upload files using scp command

1) Use the scp command to upload files to the Linux system of the development board in Ubuntu PC. The specific command is as follows

- a. **file_path**: Needs to be replaced with the path of the file to be uploaded
- b. **orangeypi**: This is the user name of the development board's Linux system. It can also be replaced with something else, such as root.
- c. **192.168.xx.xx**: This is the IP address of the development board. Please modify it according to the actual situation.
- d. **/home/orangeypi**: The path in the development board Linux system can also be modified to other paths.

```
test@test:~$ scp file_path orangeypi@192.168.xx.xx:/home/orangeypi/
```

2) If you want to upload a folder, you need to add the -r parameter

```
test@test:~$ scp -r dir_path orangeypi@192.168.xx.xx:/home/orangeypi/
```

3) There are more usages of scp, please use the following command to view the man manual

```
test@test:~$ man scp
```

3. 34. 1. 2. How to upload files using filezilla

1) First install filezilla in Ubuntu PC


```
test@test:~$ sudo apt install -y filezilla
```

2) Then use the following command to open filezilla

```
test@test:~$ filezilla
```



3) The interface after opening filezilla is as shown below. At this time, the remote site on the right is empty.

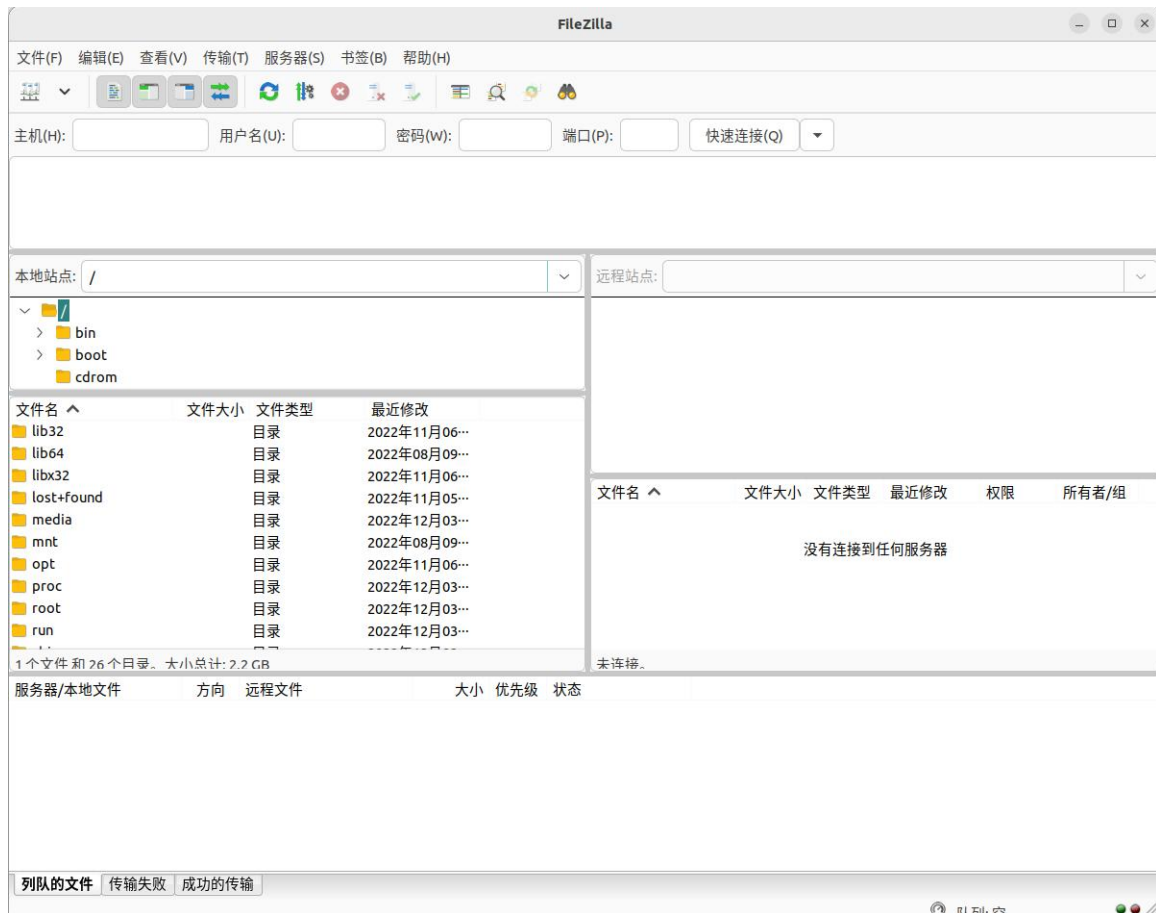

4) The method of connecting the development board is as shown in the figure below




5) Then choose to **save the password** and click **OK**



6) Then select **Always trust this host** and click **OK**




7) After the connection is successful, you can see the directory structure of the development board's Linux file system on the right side of the filezilla software.

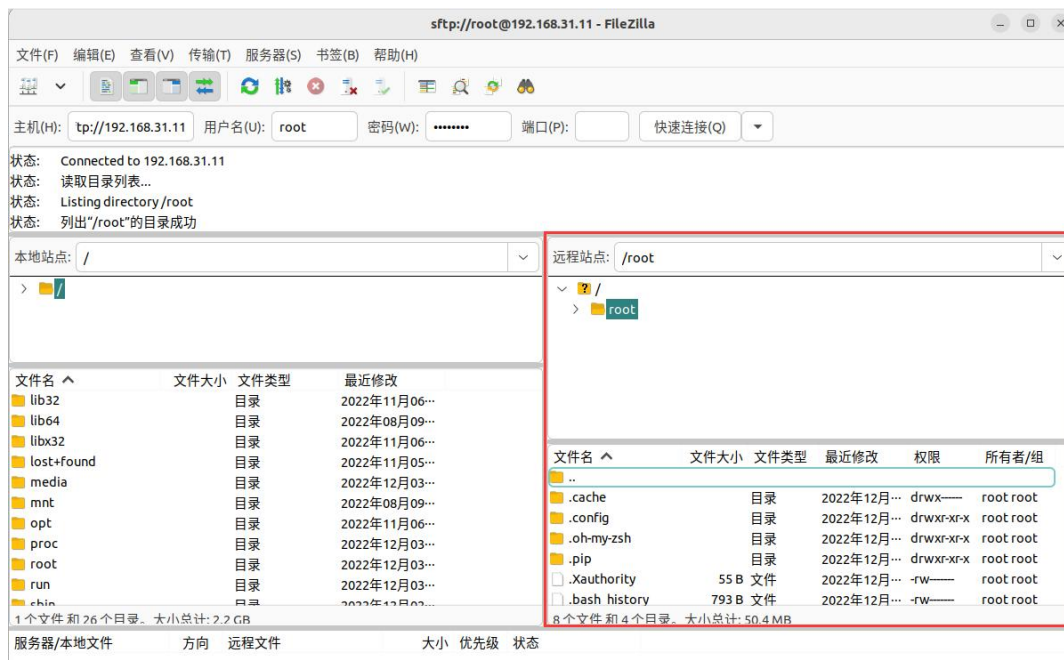

8) Then select the path to be uploaded to the development board on the right side of the



filezilla software, select the file to be uploaded in Ubuntu PC on the left side of the filezilla software, right-click the mouse, and then click the upload option to start uploading the file to the development board.

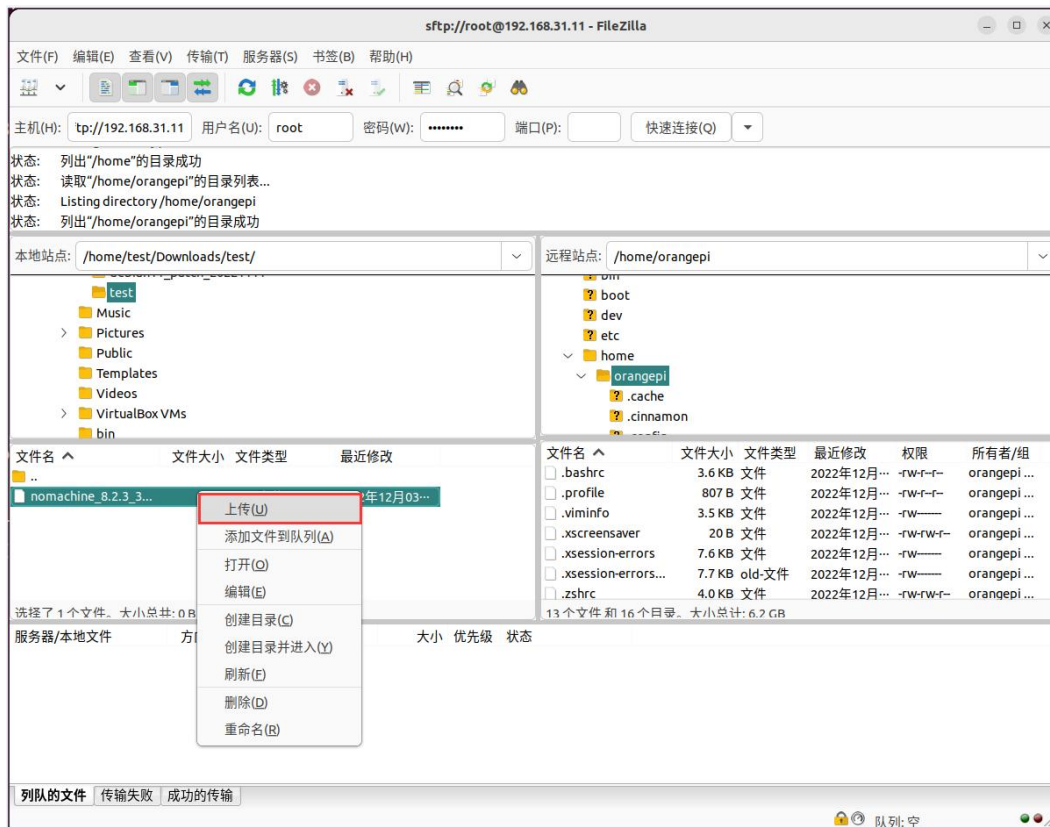

9) After the upload is completed, you can go to the corresponding path in the development board Linux system to view the uploaded file.



10) The method of uploading a folder is the same as the method of uploading a file, so I won't go into details here.

3. 34. 2. Method to upload files from Windows PC to development board Linux system

3. 34. 2. 1. How to upload files using filezilla

1) First download the installation file of the Windows version of the filezilla software. The download link is as follows


<https://filezilla-project.org/download.php?type=client>

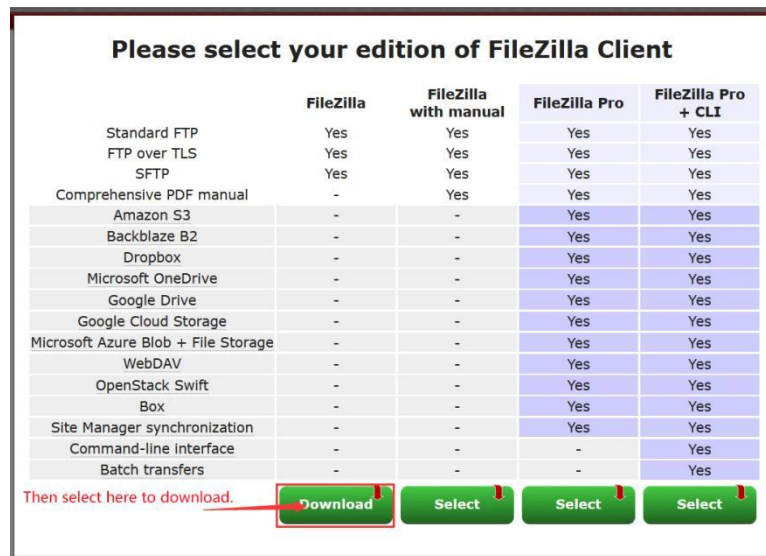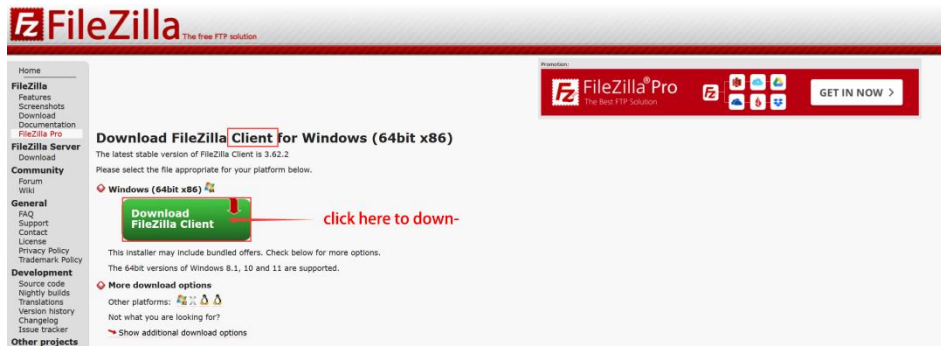


2) The downloaded installation package is as shown below, then double-click to install it directly

FileZilla_Server_1.5.1_win64-setup.exe

During the installation process, please select **Decline** on the following installation interface, and then select **Next>**

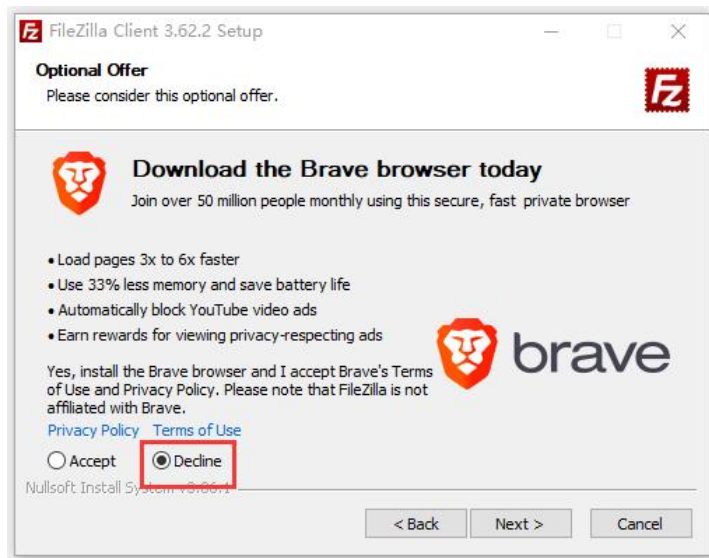

3) The interface after opening filezilla is as shown below. At this time, the remote site on the right is empty.

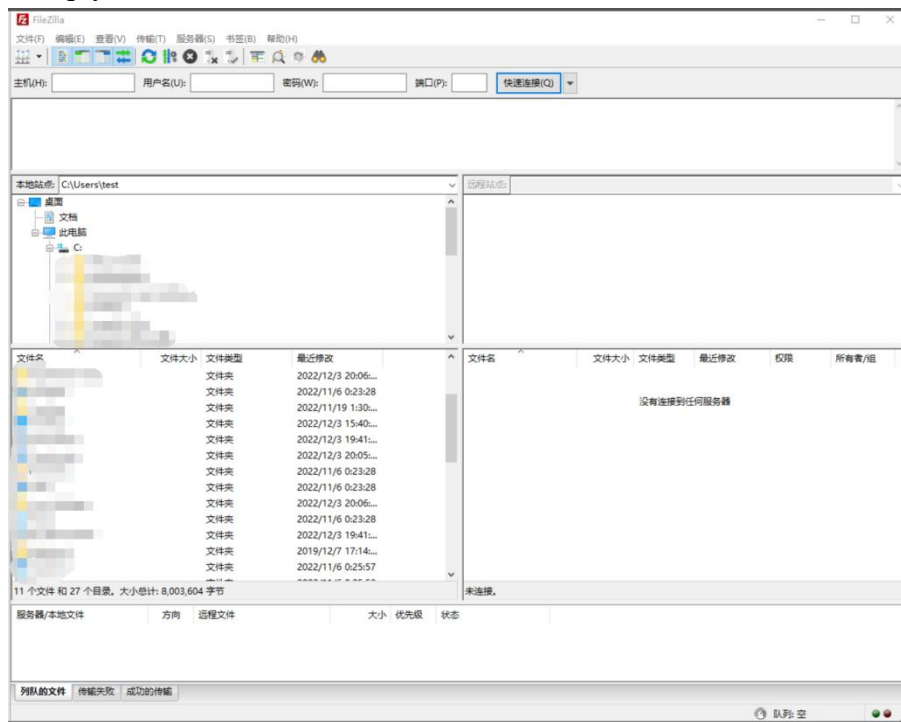


4) The method of connecting the development board is as shown in the figure below:




5) Then choose to **save the password** and click **OK**




6) Then select **Always trust this host** and click **OK**

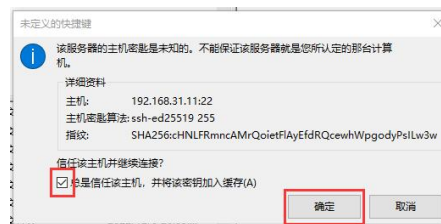

7) After the connection is successful, you can see the directory structure of the development board's Linux file system on the right side of the filezilla software.

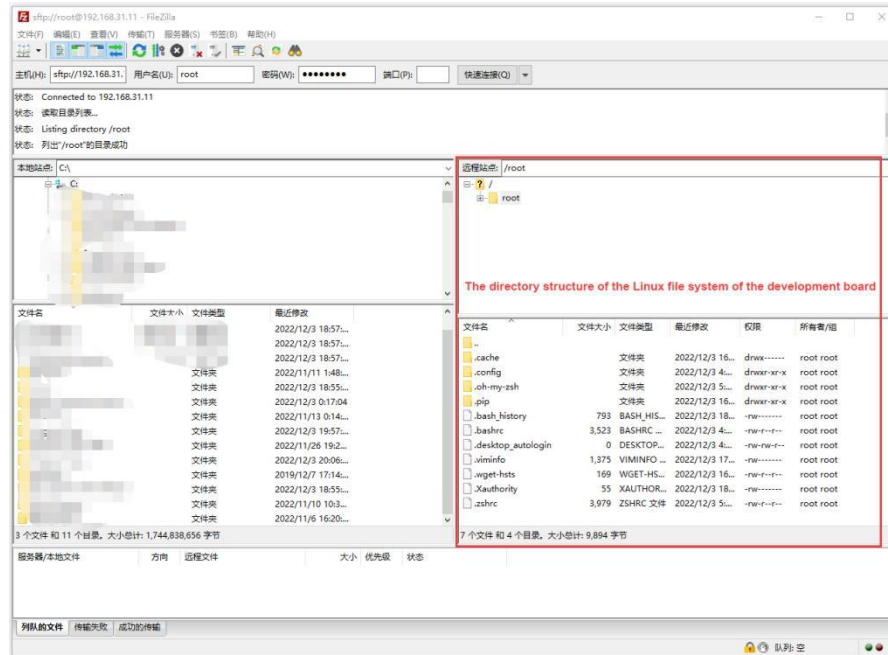

8) Then select the path to be uploaded to the development board on the right side of the filezilla software, select the file to be uploaded on the Windows PC on the left side of the filezilla software, right-click the mouse, and then click the upload option to start uploading the file to the development board.

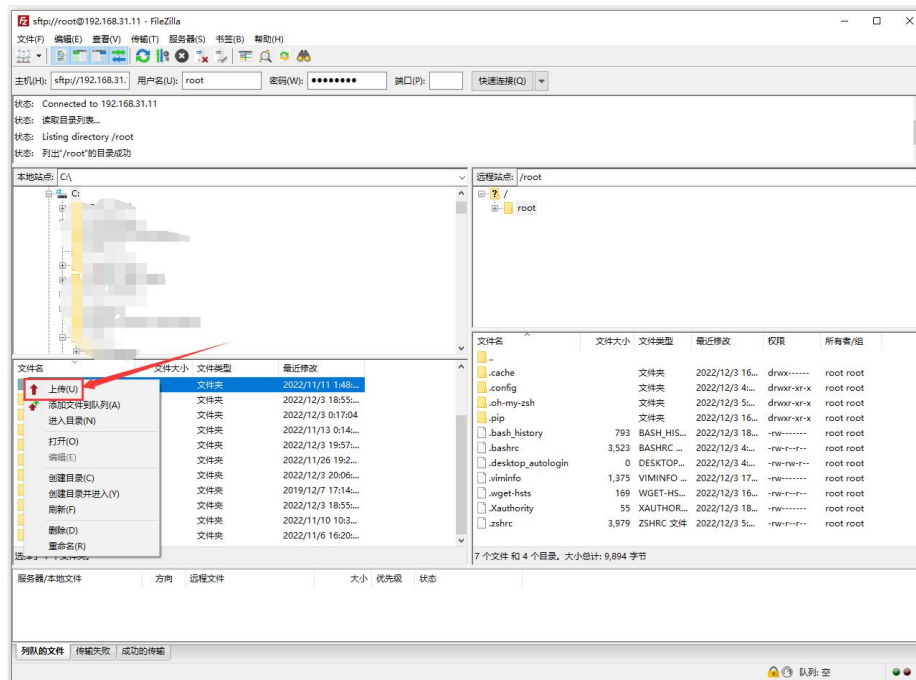

9) After the upload is completed, you can go to the corresponding path in the



development board Linux system to view the uploaded file.

10) The method of uploading a folder is the same as the method of uploading a file, so I won't go into details here.

3. 35. Instructions for using the logo on and off the machine

1) The power on/off logo will only be displayed on the desktop version of the system by default.

2) Set the **bootlogo** variable to **false** in **/boot/orangepiEnv.txt** to turn off the switch logo.

```
orangepi@orangepi:~$ sudo vim /boot/orangepiEnv.txt
verbosity=1
bootlogo=false
```

3) Set the **bootlogo** variable to **true** in **/boot/orangepiEnv.txt** to enable the power on/off logo.

```
orangepi@orangepi:~$ sudo vim /boot/orangepiEnv.txt
verbosity=1
bootlogo=true
```

4) The location of the boot logo picture in the Linux system is

```
/usr/share/plymouth/themes/orangepi/watermark.png
```

5) After replacing the boot logo image, you need to run the following command to take effect

```
orangepi@orangepi:~$ sudo update-initramfs -u
```

3. 36. How to turn on the power button in Linux5.4

There is no power on/off button on the main board of the development board. We can expand it through a 24pin expansion board. The location of the power on/off button on the expansion board is as follows:




The power on/off button of the Linux 6.1 image is turned on by default, but the power on/off button of the Linux 5.4 kernel image is turned off by default and needs to be turned on manually for normal use. The steps are as follows:


1) First run **orangepi-config**. Ordinary users remember to add **sudo** permissions.

```
orangepi@orangepi:~$ sudo orangepi-config
```

2) Then select **System**

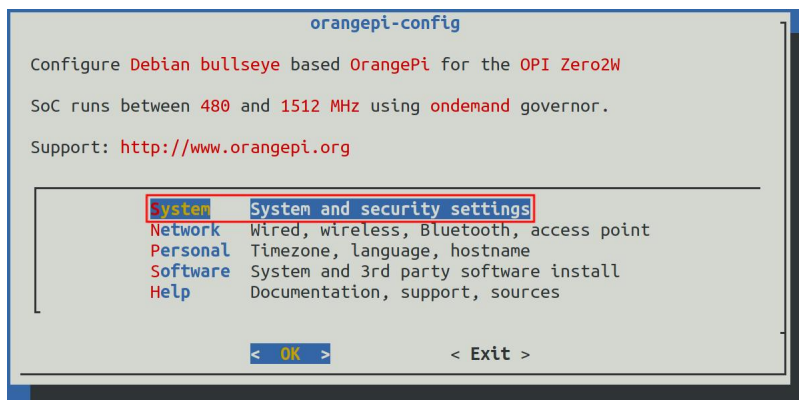


3) Then select **Hardware**

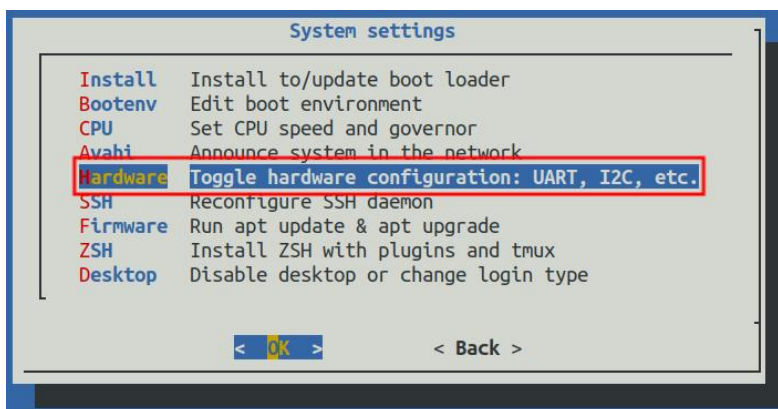


4) Then use the keyboard's arrow keys to locate the position shown in the picture below, and then use the **space** to select the dtbo configuration of the SPI you want to open.




5) Then select **<Save>** to save

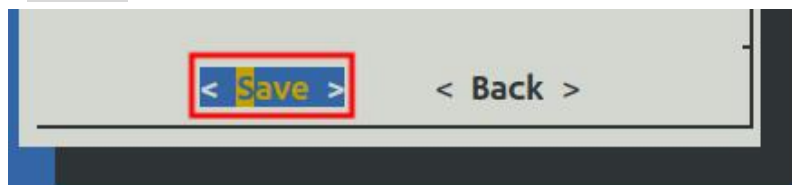

6) Then select **<Back>**

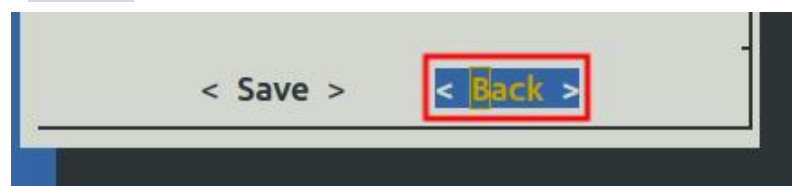

7) Then select **<Reboot>** to restart the system to make the configuration take effect.

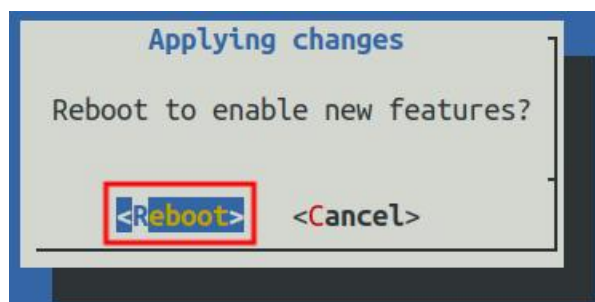

3. 37. How to shut down and restart the development board

1) During the running of the Linux system, if you directly unplug the power supply, it may cause the file system to lose some data. It is recommended to use the **poweroff** command to shut down the Linux system of the development board before powering off, and then unplug the power supply.

```
orange_pi@orange_pi:~$ sudo poweroff
```

Note that after turning off the development board, you need to unplug and



replug the power supply before it can be turned on.

2) In addition to using the poweroff command to shut down, you can also use the power on/off button on the expansion board to shut down.



Note that Linux 5.4 requires manual configuration of the power on/off button before it can be used. For the opening method, please refer to [the method of opening the power button in Linux5.4](#).

3) Use the **reboot** command to restart the Linux system in the development board

```
orange@orange:~$ sudo reboot
```

4. Linux SDK——orange@orange-build usage instructions

4. 1. Compilation system requirements

The Linux SDK, **orange@orange-build**, only supports running on X64 computers with **Ubuntu 22.04** installed. Therefore, before downloading orange@orange-build, please first ensure that the Ubuntu version installed on your computer is Ubuntu 22.04. The command to check the Ubuntu version installed on the computer is as follows. If the Release field does not display **22.04**, it means that the Ubuntu version currently used does not meet the requirements. Please change the system before performing the following operations.



```
test@test:~$ lsb_release -a
No LSB modules are available.
Distributor ID: Ubuntu
Description:    Ubuntu 22.04 LTS
Release:        22.04
Codename:       jammy
```

If the computer is installed with a Windows system and does not have Ubuntu 22.04 installed on it, you can consider using **VirtualBox** or **VMware** to install an Ubuntu 22.04 virtual machine in the Windows system. But please note, do not compile orangepi-build on the WSL virtual machine, because orangepi-build has not been tested in the WSL virtual machine, so there is no guarantee that orangepi-build can be used normally in WSL. In addition, please do not compile the Linux system on the development board. Use orangepi-build. The installation image download address of Ubuntu 22.04 amd64 version is:

<https://mirrors.tuna.tsinghua.edu.cn/ubuntu-releases/22.04/ubuntu-22.04-desktop-amd64.iso>

After installing Ubuntu 22.04 on your computer or virtual machine, please first set the software source of Ubuntu 22.04 to Tsinghua source (or other domestic sources that you think is fast), otherwise it is easy to make errors due to network reasons when installing the software later. The steps to replace Tsinghua Source are as follows:

- a. For the method of replacing Tsinghua Source, please refer to the instructions on this page.

<https://mirrors.tuna.tsinghua.edu.cn/help/ubuntu/>

- b. Note that the Ubuntu version needs to be switched to 22.04.

Ubuntu 镜像使用帮助

Ubuntu 的软件源配置文件是 `/etc/apt/sources.list`。将系统自带的该文件做个备份，将该文件替换为下面内容，即可使用 TUNA 的软件源镜像。

选择你的ubuntu版本:

22.04 LTS

```
# 默认注释了源码镜像以提高 apt update 速度，如有需要可自行取消注释
deb https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy main restricted universe multiverse
# deb-src https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy main restricted universe multiverse
deb https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-updates main restricted universe multiverse
# deb-src https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-updates main restricted universe multiverse
deb https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-backports main restricted universe multiverse
# deb-src https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-backports main restricted universe multiverse
deb https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-security main restricted universe multiverse
# deb-src https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-security main restricted universe multiverse

# 预发布软件源，不建议启用
# deb https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-proposed main restricted universe multiverse
# deb-src https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-proposed main restricted universe multiverse
```



- c. The contents of the `/etc/apt/sources.list` file that need to be replaced are:

```
test@test:~$ sudo mv /etc/apt/sources.list cat /etc/apt/sources.list.bak
test@test:~$ sudo vim /etc/apt/sources.list

# The source code image is commented by default to improve apt update speed. You can uncomment it yourself if
necessary.

deb https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy main restricted universe multiverse
# deb-src https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy main restricted universe multiverse
deb https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-updates main restricted universe multiverse
# deb-src https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-updates main restricted universe multiverse
deb https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-backports main restricted universe multiverse
# deb-src https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-backports main restricted universe multiverse
deb https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-security main restricted universe multiverse
# deb-src https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-security main restricted universe multiverse

# Pre-release software source, not recommended to be enabled
# deb https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-proposed main restricted universe multiverse
# deb-src https://mirrors.tuna.tsinghua.edu.cn/ubuntu/ jammy-proposed main restricted universe multiverse
```

- d. After the replacement, you need to update the package information and ensure that no errors are reported.

```
test@test:~$ sudo apt-get update
```

- e. In addition, since the source code of the kernel and Uboot are stored on GitHub, it is very important to ensure that the computer can download the code from GitHub normally when compiling the image.**

4. 2. Obtain the source code of linux sdk


4. 2. 1. Download orangepi-build from github

Linux sdk refers to the orangepi-build set of codes. Orangepi-build is modified based on the armbian build compilation system. Multiple versions of Linux images can be compiled using orangepi-build. Use the following command to download the orangepi-build code:

```
test@test:~$ sudo apt-get update
test@test:~$ sudo apt-get install -y git
test@test:~$ git clone https://github.com/orangepi-xunlong/orangepi-build.git -b next
```



Note that when using the H618 Soc development board, you need to download the source code of the **next branch of orangepi-build. The above git clone command needs to specify the branch of the orangepi-build source code as next.**

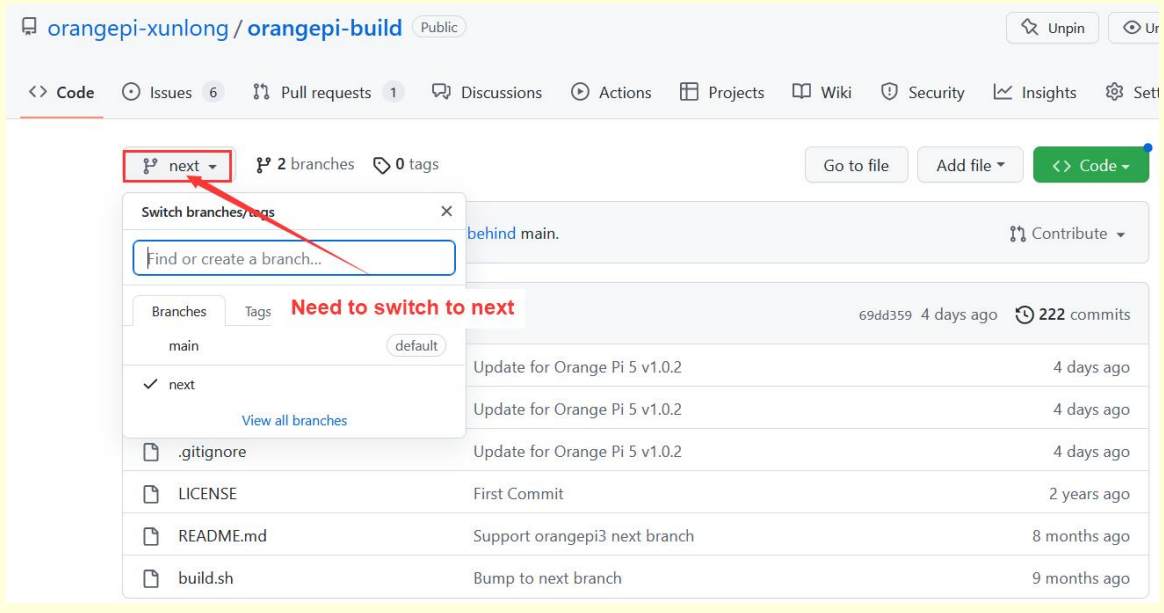

When downloading the orangepi-build code through the git clone command, you do not need to enter the user name and password of the github account (the same is true for downloading other codes in this manual). If after entering the git clone command, Ubuntu PC prompts you to enter the user name of the github account. The name and password are usually entered incorrectly in the address of the orangepi-build warehouse behind git clone. Please carefully check whether there are any errors in the spelling of the command, rather than thinking that we have forgotten to provide the username and password of the github account.

The u-boot and linux kernel versions currently used by the H618 series development boards are as follows:

branch	u-boot Version	linux Kernel version
current	u-boot v2018.05	linux5.4
next	u-boot v2021.07	linux6.1

The branch mentioned here is not the same thing as the branch of orangepi-build source code, please don't get confused. This branch is mainly used to



distinguish different kernel source code versions.

We define the linux5.4 bsp kernel currently provided by Allwinner as the current branch. The latest linux6.1 LTS kernel is defined as the next branch.

After downloading, the following files and folders will be included:

- a. **build.sh**: Compile startup script
- b. **external**: Contains configuration files needed to compile the image, specific scripts, and source code of some programs, etc.
- c. **LICENSE**: GPL 2 license file
- d. **README.md**: orangepi-build documentation
- e. **scripts**: Common script for compiling linux images

```
test@test:~/orangepi-build$ ls
build.sh  external  LICENSE  README.md  scripts
```

If you downloaded the orangepi-build code from github, after downloading, you may find that orangepi-build does not contain the source code of u-boot and linux kernel, and there is no cross-compilation tool required to compile u-boot and linux kernel. chain, this is normal, because these things are stored in other separate github repositories or some servers (their addresses will be detailed below). Orangepi-build will specify the addresses of u-boot, Linux kernel and cross-compilation tool chain in the script and configuration file. When running orangepi-build, when it finds that these things are not available locally, it will automatically download them from the corresponding places.

4. 2. 2. Download the cross-compilation tool chain

When orangepi-build is run for the first time, it will automatically download the cross-compilation **toolchain** and put it in the **toolchains** folder. Every time you run orangepi-build's build.sh script, it will check whether the cross-compilation toolchain in toolchains exists. If it does not exist, the download will be restarted. If it exists, it will be used directly without repeated downloading.



```

[o.k.] Checking for external GCC compilers
[....] downloading using http(s) network [ gcc-linaro-aarch64-none-elf-4.8-2013.11_linux.tar.xz ]
#8d7029 16MiB/24MiB(65%) CN:1 DL:7.9MiB ETA:1s]
[o.k.] Verified [ PGP ]
[....] decompressing
[....] gcc-linaro-aarch64-none-elf-4.8-2013.11_linux.tar.xz: 24.9MiB [14.4MiB/s] [=====] 100%
[....] downloading using http(s) network [ gcc-linaro-arm-none-eabi-4.8-2014.04_linux.tar.xz ]
#e30eec 17MiB/33MiB(50%) CN:1 DL:10MiB ETA:1s]
[o.k.] Verified [ PGP ]
[....] decompressing
[....] gcc-linaro-arm-none-eabi-4.8-2014.04_linux.tar.xz: 33.9MiB [9.6MiB/s] [=====] 100%
[....] downloading using http(s) network [ gcc-linaro-arm-linux-gnueabi-4.8-2014.04_linux.tar.xz ]
#041c24 48MiB/48MiB(99%) CN:1 DL:2.7MiB]
[o.k.] Verified [ PGP ]
[....] decompressing
[....] gcc-linaro-arm-linux-gnueabi-4.8-2014.04_linux.tar.xz: 48.8MiB [13.0MiB/s] [=====] 100%
[....] downloading using http(s) network [ gcc-linaro-4.9.4-2017.01-x86_64_arm-linux-gnueabi.tar.xz ]
#3dec3e 72MiB/76MiB(93%) CN:1 DL:3.7MiB ETA:1s]
[o.k.] Verified [ MD5 ]
[....] decompressing
[....] gcc-linaro-4.9.4-2017.01-x86_64_arm-linux-gnueabi.tar.xz: 77.0MiB [14.2MiB/s] [=====] 100%
[....] downloading using http(s) network [ gcc-linaro-7.4.1-2019.02-x86_64_arm-linux-gnueabi.tar.xz ]
#42e728 104MiB/104MiB(99%) CN:1 DL:2.0MiB]
[o.k.] Verified [ MD5 ]
[....] decompressing
[....] gcc-linaro-7.4.1-2019.02-x86_64_arm-linux-gnueabi.tar.xz: 104MiB [13.9MiB/s] [=====] 100%
[....] downloading using http(s) network [ gcc-linaro-7.4.1-2019.02-x86_64_aarch64-linux-gnu.tar.xz ]
#2c065e 108MiB/111MiB(97%) CN:1 DL:3.9MiB]
[o.k.] Verified [ MD5 ]
[....] decompressing
[....] gcc-linaro-7.4.1-2019.02-x86_64_aarch64-linux-gnu.tar.xz: 111MiB [13.4MiB/s] [=====] 100%
[....] downloading using http(s) network [ gcc-arm-9.2-2019.12-x86_64-arm-none-linux-gnueabi.tar.xz ]
#d232ee 250MiB/251MiB(99%) CN:1 DL:2.0MiB]
[o.k.] Verified [ MD5 ]
[....] decompressing
[....] gcc-arm-9.2-2019.12-x86_64-arm-none-linux-gnueabi.tar.xz: 251MiB [13.7MiB/s] [=====] 100%
[....] downloading using http(s) network [ gcc-arm-9.2-2019.12-x86_64-aarch64-none-linux-gnu.tar.xz ]
#88b441 268MiB/269MiB(99%) CN:1 DL:0.9MiB]
[o.k.] Verified [ MD5 ]
[....] decompressing

```

The mirror URL of the cross-compilation tool chain in China is the open source software mirror site of Tsinghua University:

https://mirrors.tuna.tsinghua.edu.cn/armbian-releases/_toolchain/

After toolchains is downloaded, it will contain multiple versions of cross-compilation **toolchain**:

```

test@test:~/orange-pi-build$ ls toolchains/
gcc-arm-11.2-2022.02-x86_64-aarch64-none-linux-gnu
gcc-linaro-4.9.4-2017.01-x86_64_aarch64-linux-gnu
gcc-linaro-7.4.1-2019.02-x86_64_arm-linux-gnueabi
gcc-arm-11.2-2022.02-x86_64-arm-none-linux-gnueabi
gcc-linaro-4.9.4-2017.01-x86_64_arm-linux-gnueabi
gcc-linaro-aarch64-none-elf-4.8-2013.11_linux
gcc-arm-9.2-2019.12-x86_64-aarch64-none-linux-gnu
gcc-linaro-5.5.0-2017.10-x86_64_arm-linux-gnueabi
gcc-linaro-arm-linux-gnueabi-4.8-2014.04_linux
gcc-arm-9.2-2019.12-x86_64-arm-none-linux-gnueabi
gcc-linaro-7.4.1-2019.02-x86_64_aarch64-linux-gnu
gcc-linaro-arm-none-eabi-4.8-2014.04_linux

```

The cross-compilation tool chain used to compile the H618 Linux kernel source code is:

- a. linux5.4



```
gcc-arm-11.2-2022.02-x86_64-aarch64-none-linux-gnu
```

b. linux6.1

```
gcc-arm-11.2-2022.02-x86_64-aarch64-none-linux-gnu
```

The cross-compilation tool chain used to compile the H618 u-boot source code is:

a. v2018.05

```
gcc-linaro-7.4.1-2019.02-x86_64_arm-linux-gnueabi
```

b. v2021.07

```
gcc-arm-11.2-2022.02-x86_64-aarch64-none-linux-gnu
```

4. 2. 3. orangepi-build complete directory structure description

1) After downloading, the orangepi-build warehouse does not contain the source code of the linux kernel, u-boot and cross-compilation tool chain. The source code of the linux kernel and u-boot is stored in an independent git warehouse.

a. The git warehouse where the linux kernel source code is stored is as follows.

Please note that the branch of the linux-orangepi warehouse is switched to

a) Linux5.4

```
https://github.com/orangepi-xunlong/linux-orangepi/tree/orange-pi-5.4-sun50iw9
```

b) Linux6.1

```
https://github.com/orangepi-xunlong/linux-orangepi/tree/orange-pi-6.1-sun50iw9
```

b. The git warehouse where the u-boot source code is stored is as follows. Please note that the branch of the u-boot-orangepi warehouse is switched to

a) v2018.05

```
https://github.com/orangepi-xunlong/u-boot-orangepi/tree/v2018.05-h618
```

b) v2021.07

```
https://github.com/orangepi-xunlong/u-boot-orangepi/tree/v2021.07-sunxi
```

2) When orangepi-build is run for the first time, it will download the cross-compilation tool chain, u-boot and linux kernel source code. After successfully compiling a linux image, the files and folders that can be seen in orangepi-build are:

- a. **build.sh**: Compile startup script
- b. **external**: Contains the configuration files needed to compile the image, scripts for specific functions, and the source code of some programs. The rootfs compressed package cached during the image compilation process is also stored in external.
- c. **kernel**: Store the source code of the linux kernel



- d. **LICENSE**: GPL 2 license file
- e. **README.md**: orangepi-build documentation
- f. **output**: Store compiled u-boot, linux and other deb packages, compilation logs, and compiled images and other files
- g. **scripts**: Common script for compiling linux images
- h. **toolchains**: Store cross-compilation tool chain
- i. **u-boot**: Store the source code of u-boot
- j. **userpatches**: Store the configuration files needed to compile the script


```
test@test:~/orangepi-build$ ls
build.sh  external  kernel  LICENSE  output  README.md  scripts  toolchains
u-boot   userpatches
```

4. 3. Compile u-boot


- 1) Run the build.sh script, remember to add sudo permissions

```
test@test:~/orangepi-build$ sudo ./build.sh
```

- 2) Select **U-boot package** and press Enter

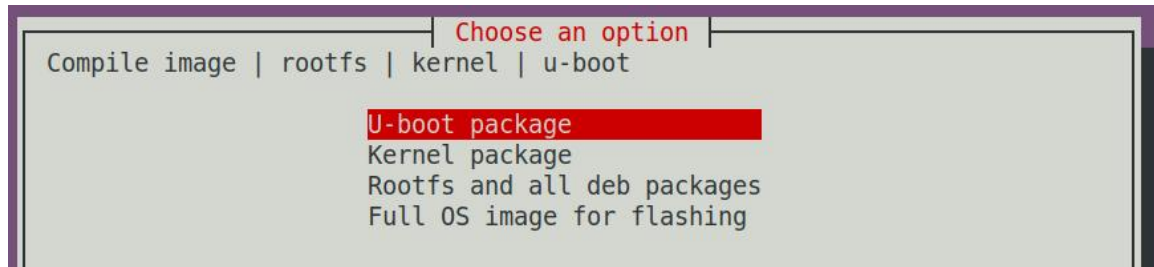


- 3) Then select the model of the development board

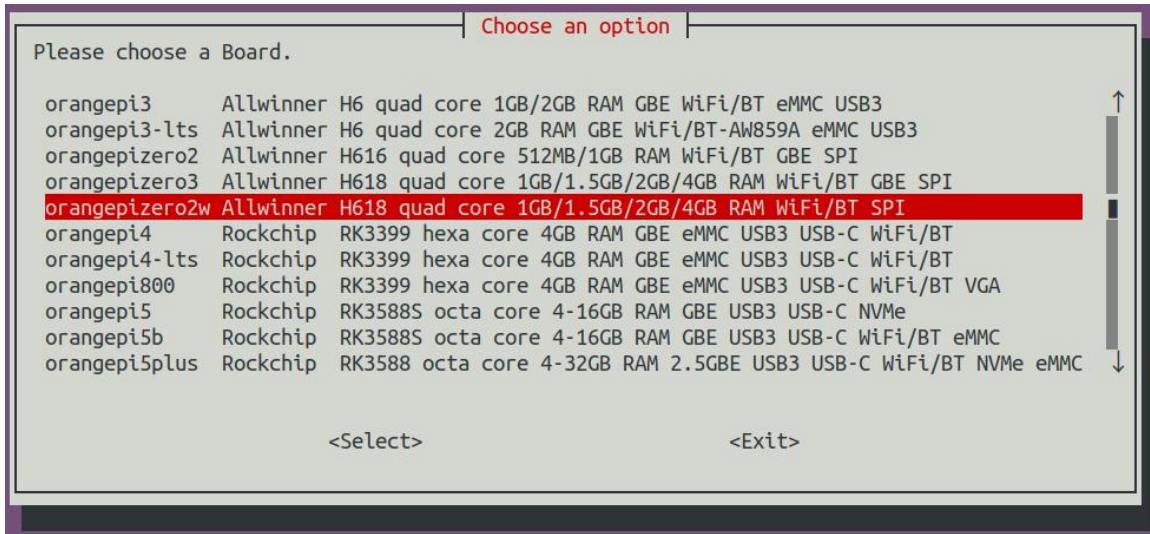


4) Then select the branch type of u-boot

- The current branch will compile the u-boot v2018.05 version code that needs to be used by the linux5.4 image.
- The next branch will compile the u-boot v2021.07 version code that needs to be used by the linux6.1 image.

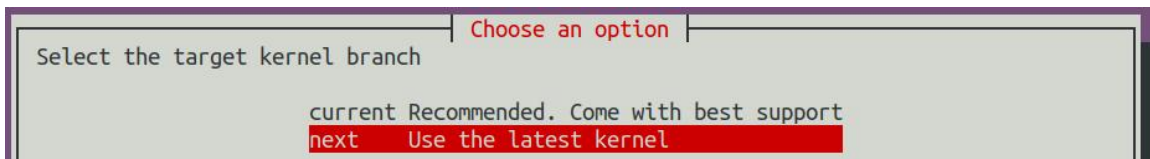

5) If you select the next branch, you will also be prompted to select the memory size, and you do not need to select the current branch.

- If the development board you purchased has a memory size of 1.5GB, please select the first option.
- If the development board you purchased has 1GB or 2GB or 4GB memory size, please choose the second option.

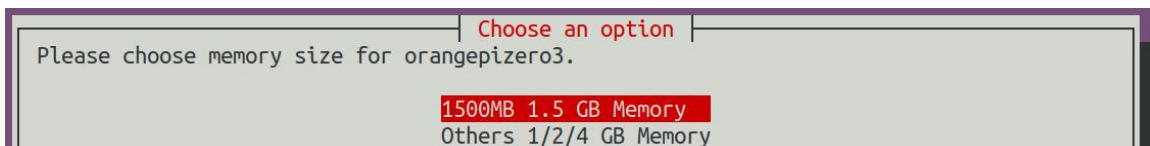

6) Then it will start to compile u-boot. Some of the information prompted when compiling the next branch is as follows:



- a. Version of u-boot source code

[o.k.] Compiling u-boot [**v2021.07**]

- b. Version of the cross-compilation tool chain

[o.k.] Compiler version [**aarch64-linux-gnu-gcc 11**]

- c. Path to the compiled u-boot deb package

[o.k.] Target directory [**orange-pi-build/output/debs/u-boot**]

- d. The package name of the compiled u-boot deb package

[o.k.] File name [**linux-u-boot-next-orangepi-zero2w_x.x.x_arm64.deb**]

- e. Compilation time

[o.k.] Runtime [**1 min**]

- f. Repeat the command to compile u-boot. Use the following command without selecting through the graphical interface. You can start compiling u-boot directly.

[o.k.] Repeat Build Options [**sudo ./build.sh BOARD=orangepi-zero2w
BRANCH=next BUILD_OPT=u-boot**]

7) View the compiled u-boot deb package

```
test@test:~/orange-pi-build$ ls output/debs/u-boot/  
linux-u-boot-next-orangepi-zero2w_x.x.x_arm64.deb
```

8) When the orange-pi-build compilation system compiles the u-boot source code, it will first synchronize the u-boot source code with the u-boot source code of the github server. Therefore, if you want to modify the u-boot source code, you first need to turn off the download and update function of the source code. (**You need to completely compile u-boot before you can turn off this function, otherwise it will prompt that the source code of u-boot cannot be found**), otherwise the modifications will be restored. The method is as follows:

Set the IGNORE_UPDATES variable in **userpatches/config-default.conf** to "yes"

```
test@test:~/orange-pi-build$ vim userpatches/config-default.conf
```

```
.....  
IGNORE_UPDATES="yes"  
.....
```

9) When debugging u-boot code, you can use the following method to update u-boot in the linux image for testing

- a. First upload the compiled deb package of u-boot to the Linux system of the



development board.

```
test@test:~/orange-pi-build$ cd output/debs/u-boot
test@test:~/orange-pi-build/output/debs/u-boot$ scp \
linux-u-boot-next-orangepi2w_x.x.x_arm64.deb root@192.168.1.xxx:/root
```


b. Install the new u-boot deb package just uploaded

```
orangepi@orangepi:~$ sudo dpkg -i linux-u-boot-next-orangepi2w_x.x.x_arm64.deb
```


c. Then run the nand-sata-install script

```
orangepi@orangepi:~$ sudo nand-sata-install
```


d. Then select **5 Install/Update the bootloader on SD/eMMC**

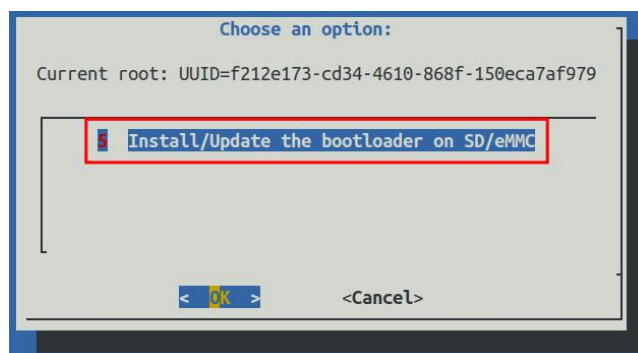

e. After pressing the Enter key, a Warning will pop up first.

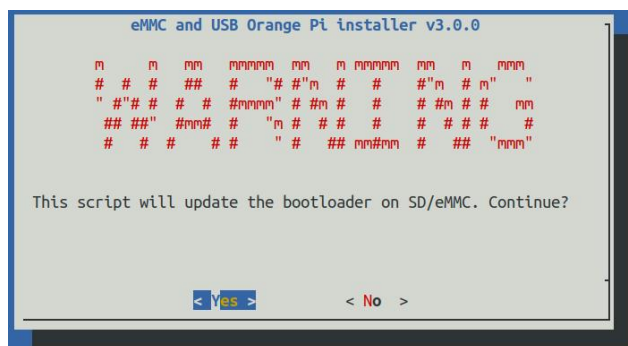

f. Press the Enter key again to start updating u-boot. After the update is completed, the following information will be displayed.

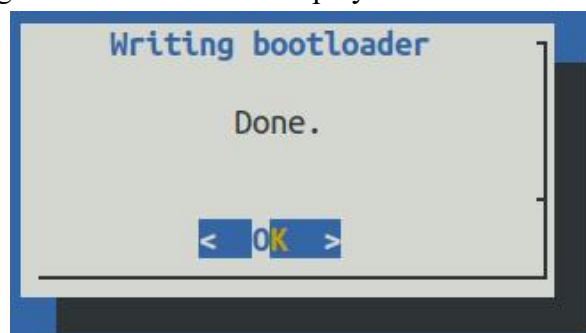




- g. Then you can restart the development board to test whether the u-boot modification has taken effect.

4. 4. Compile the linux kernel


- 1) Run the **build.sh** script, remember to add sudo permissions

```
test@test:~/orangepi-build$ sudo ./build.sh
```


- 2) Select **Kernel package** and press Enter

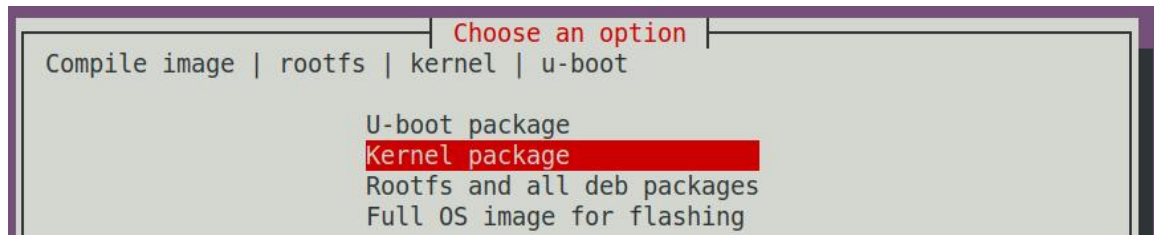


- 3) Then you will be prompted whether you need to display the kernel configuration interface. If you do not need to modify the kernel configuration, select the first one. If you need to modify the kernel configuration, select the second one.

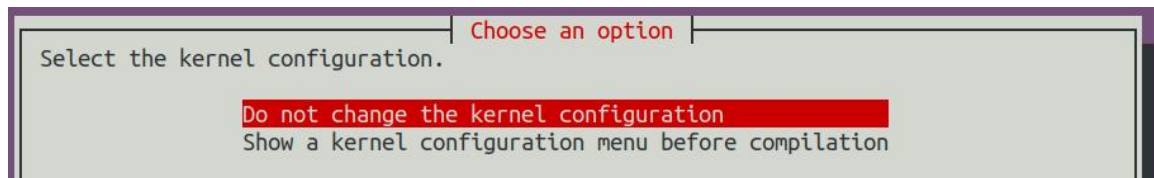


- 4) Then select the model of the development board

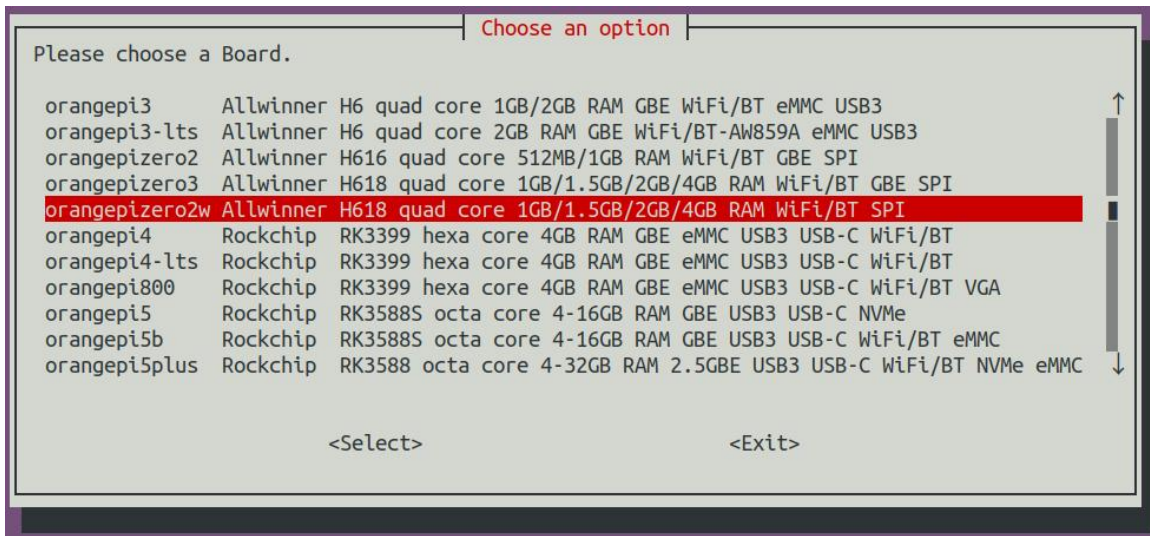

- 5) Then select the branch type of the kernel source code
- The current branch will compile the linux5.4 kernel source code
 - The next branch will compile the linux6.1 kernel source code

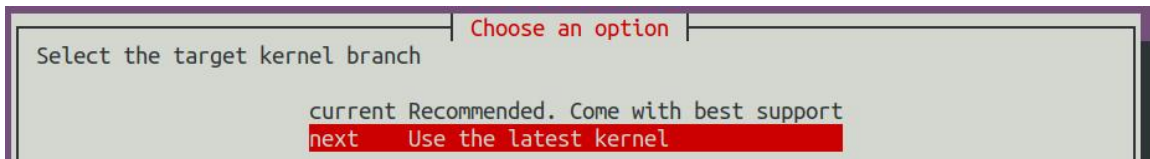

- 6) If you choose to display the kernel configuration menu (the second option) in step 3), the kernel configuration interface opened through **make menuconfig** will pop up. At this time, you can directly modify the kernel configuration. After modification, save and exit. Yes, compilation of the kernel source code will begin after exiting.

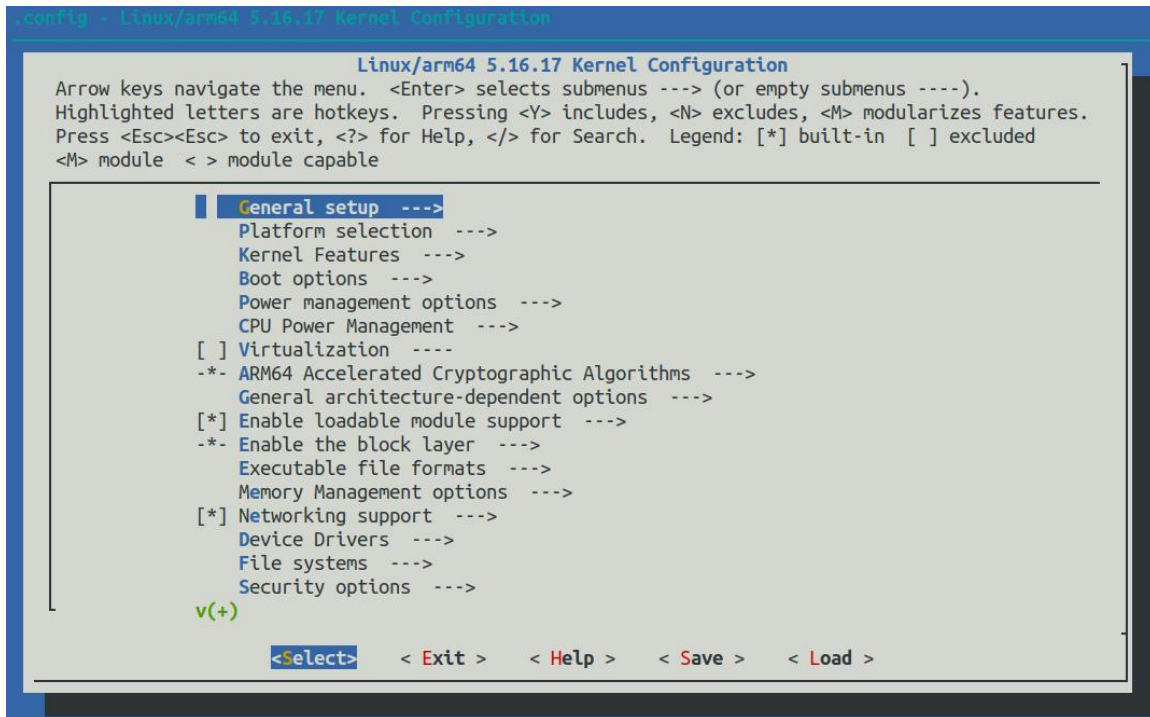

- a. If you do not need to modify the kernel configuration options, when running the build.sh script, pass **KERNEL_CONFIGURE=no** to temporarily block the pop-up of the kernel configuration interface.

```
test@test:~/orange-pi-build$ sudo ./build.sh KERNEL_CONFIGURE=no
```

- b. You can also set **KERNEL_CONFIGURE=no** in the `orange-pi-build/userpatches/config-default.conf` configuration file to permanently disable this function.
- c. If the following error is prompted when compiling the kernel, it is because the Ubuntu PC terminal interface is too small, causing the `make menuconfig` interface to be unable to be displayed. Please increase the Ubuntu PC terminal to the maximum size, and then rerun the build.sh script.

```
HOSTCC scripts/kconfig/mconf.o
HOSTCC scripts/kconfig/lxdialog/checklist.o
HOSTCC scripts/kconfig/lxdialog/util.o
HOSTCC scripts/kconfig/lxdialog/inputbox.o
HOSTCC scripts/kconfig/lxdialog/textbox.o
HOSTCC scripts/kconfig/lxdialog/yesno.o
HOSTCC scripts/kconfig/lxdialog/menubox.o
HOSTLD scripts/kconfig/mconf
scripts/kconfig/mconf Kconfig
Your display is too small to run Menuconfig!
It must be at least 19 lines by 80 columns.
scripts/kconfig/Makefile:28: recipe for target 'menuconfig' failed
make[1]: *** [menuconfig] Error 1
Makefile:560: recipe for target 'menuconfig' failed
make: *** [menuconfig] Error 2
[ error ] ERROR in function compile_kernel [ compilation.sh:376 ]
[ error ] Error kernel menuconfig failed
[ o.k. ] Process terminated
```



7) Part of the information prompted when compiling the next branch kernel source code is explained as follows:

- a. Version of the linux kernel source code

[o.k.] Compiling current kernel [**6.1.31**]

- b. The version of the cross-compilation tool chain used

[o.k.] Compiler version [**aarch64-linux-gnu-gcc 11**]

- c. The default configuration file used by the kernel and the path where it is stored are as follows

[o.k.] Using kernel config file

[**orangeypi-build/external/config/kernel/linux-6.1-sun50iw9-next.config**]

- d. The path to the kernel-related deb package generated by compilation

[o.k.] Target directory [**output/debs/**]

- e. The package name of the kernel image deb package generated by compilation

[o.k.] File name [**linux-image-next-sun50iw9_x.x.x_arm64.deb**]

- f. Compilation time

[o.k.] Runtime [**10 min**]

- g. Finally, the compilation command to repeatedly compile the last selected kernel will be displayed. Use the following command without selecting through the graphical interface, and you can directly start compiling the kernel source code.

[o.k.] Repeat Build Options [**sudo ./build.sh BOARD=orangepizero2w
BRANCH=next BUILD_OPT=kernel KERNEL_CONFIGURE=no**]

8) View the kernel-related deb package generated by compilation

- a. **linux-dtb-next-sun50iw9_x.x.x_arm64.deb** Contains dtb files used by the kernel
- b. **linux-headers-next-sun50iw9_x.x.x_arm64.deb** Contains kernel header files
- c. **linux-image-next-sun50iw9_x.x.x_arm64.deb** Contains kernel images and kernel modules

```
test@test:~/orangeypi-build$ ls output/debs/linux-*
output/debs/linux-dtb-next-sun50iw9_x.x.x_arm64.deb
output/debs/linux-headers-next-sun50iw9_x.x.x_arm64.deb
output/debs/linux-image-next-sun50iw9_x.x.x_arm64.deb
```

9) When the orangeypi-bulid compilation system compiles the linux kernel source code, it will first synchronize the linux kernel source code with the linux kernel source code of



the github server. Therefore, if you want to modify the linux kernel source code, you first need to turn off the update function of the source code (**it needs to be completely compiled once This function can only be turned off after obtaining the Linux kernel source code, otherwise it will prompt that the source code of the Linux kernel cannot be found**), otherwise the modifications will be restored. The method is as follows:

Set the IGNORE_UPDATES variable in **userpatches/config-default.conf** to "yes"

```
test@test:~/orange-pi-build$ vim userpatches/config-default.conf
IGNORE_UPDATES="yes"
```

10) If the kernel is modified, you can use the following method to update the kernel and kernel module of the development board Linux system

- a. Upload the compiled deb package of the Linux kernel to the Linux system of the development board

```
test@test:~/orange-pi-build$ cd output/debs
test@test:~/orange-pi-build/output/debs$ scp \
linux-image-next-sun50iw9_x.x.x_arm64.deb root@192.168.1.xxx:/root
```

- b. Install the deb package of the new linux kernel just uploaded.

```
orange-pi@orange-pi:~$ sudo dpkg -i linux-image-next-sun50iw9_x.x.x_arm64.deb
```

- c. Then restart the development board and check whether the kernel-related modifications have taken effect.

```
orange-pi@orange-pi:~$ sudo reboot
```

4.5. Compile rootfs

- 1) Run the build.sh script, remember to add sudo permissions

```
test@test:~/orange-pi-build$ sudo ./build.sh
```


- 2) Select **Rootfs and all deb packages** and press Enter

```

Choose an option
Compile image | rootfs | kernel | u-boot


U-boot package
Kernel package
Rootfs and all deb packages
Full OS image for flashing
```

- 3) Then select the model of the development board

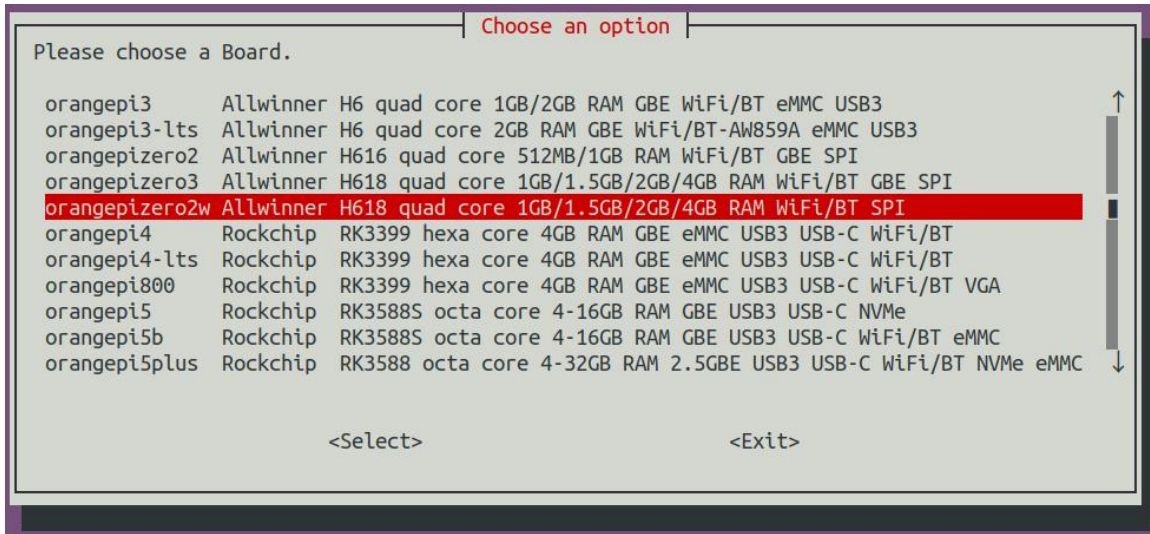


4) Then select the branch type of the kernel source code. Different versions of the kernel source code maintain different rootfs types.

- In the current branch, you can see three options: debian11, ubuntu20.04, and ubuntu22.04.
- In the next branch, you can see three options: debian11, debian12, and ubuntu22.04.

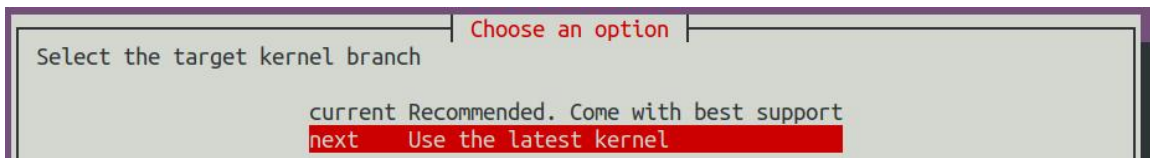

5) Then select the type of rootfs

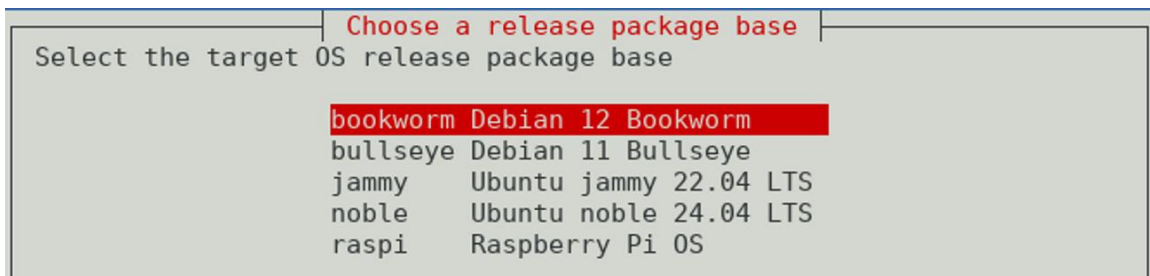


6) Then select the type of image


- Image with console interface (server)** Represents the image of the server version, which is relatively small in size.
- Image with desktop environment** Represents an image with a desktop, which





is relatively large in size.

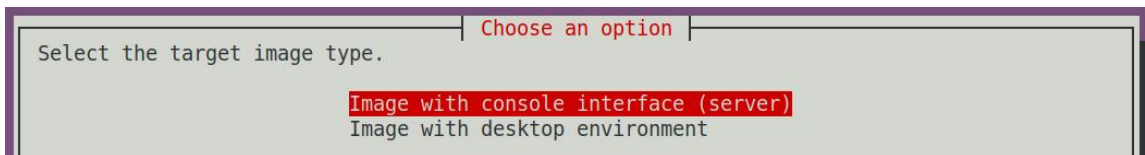


7) If you are compiling the server version of the image, you can also choose to compile the Standard version or the Minimal version. The Minimal version will have much less pre-installed software than the Standard version (**please do not choose the Minimal version without special needs, because many things are not pre-installed by default. Some functions may not be available**)

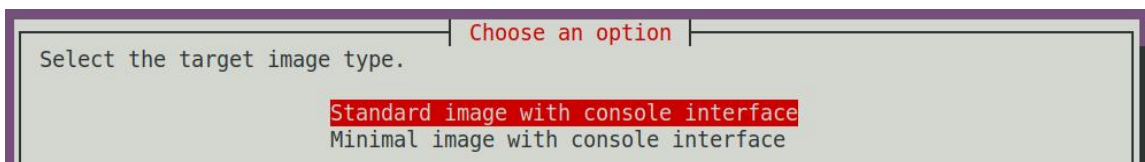

8) If you are compiling a desktop version of the image, you also need to select the type of desktop environment. Currently, only XFCE is maintained, so please select an XFCE type desktop.

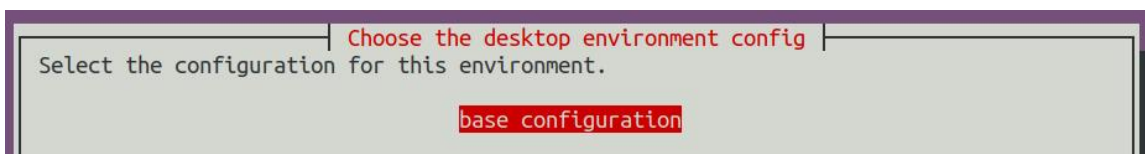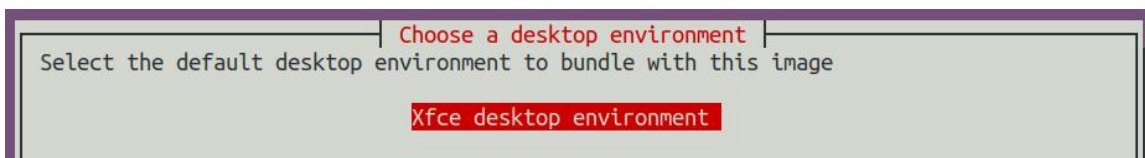

You can then select additional packages that need to be installed. Please press the Enter key here to skip directly.

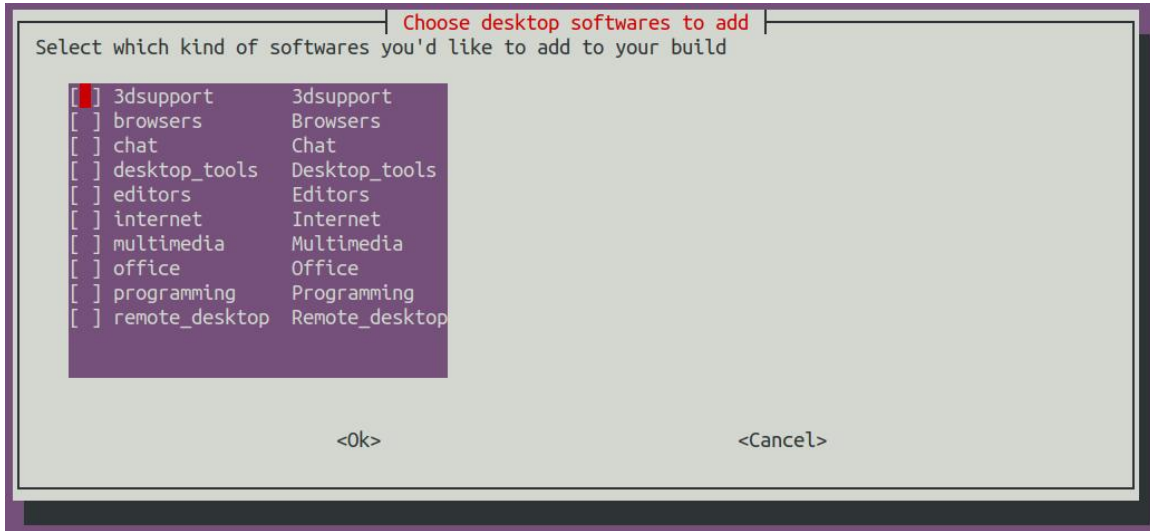

9) Then the compilation of rootfs will start. Some of the information prompted during compilation are as follows:

a. Type of rootfs

```
[ o.k. ] local not found [ Creating new rootfs cache for bullseye ]
```

b. The storage path of the compiled rootfs compressed package

```
[ o.k. ] Target directory [ orange-pi-build/external/cache/rootfs ]
```

c. The name of the rootfs compressed package generated by compilation

```
[ o.k. ] File name [ bullseye-xfce-arm64.5250ec7002de9e81a41de169f1f89721.tar.lz4 ]
```

10) View the compiled rootfs compressed package

a. **bullseye-xfce-arm64.5250ec7002de9e81a41de169f1f89721.tar.lz4** It is a compressed package of rootfs. The meaning of each field in the name is

a) **bullseye** represents the type of Linux distribution of rootfs

b) **xfce** indicates that the rootfs is the desktop version, and if it is cli, it indicates the server version.

c) **arm64** represents the architecture type of rootfs

d) **5250ec7002de9e81a41de169f1f89721** is the MD5 hash value generated by the package names of all software packages installed by rootfs. As long as the list of software packages installed by rootfs is not modified, this value will not change. The compilation script will use this MD5 hash value. Determine whether rootfs needs to be recompiled

b. **bullseye-xfce-arm64.5250ec7002de9e81a41de169f1f89721.tar.lz4.list** Lists the



package names of all packages installed by rootfs

```
test@test:~/orange-pi-build$ ls external/cache/rootfs/  
bullseye-xfce-arm64.5250ec7002de9e81a41de169f1f89721.tar.lz4  
bullseye-xfce-arm64.5250ec7002de9e81a41de169f1f89721.tar.lz4.current  
bullseye-xfce-arm64.5250ec7002de9e81a41de169f1f89721.tar.lz4.list
```


11) If the required rootfs already exists under **external/cache/rootfs**, then compiling the rootfs again will directly skip the compilation process and will not restart the compilation. When compiling the image, it will also go to **external/cache/rootfs** to check whether it already exists. There is a cached rootfs available. If it is available, use it directly. This can save a lot of download and compilation time.

4. 6. Compile linux image


1) Run the **build.sh** script, remember to add sudo permissions

```
test@test:~/orange-pi-build$ sudo ./build.sh
```

2) Select **Full OS image for flashing** and press Enter

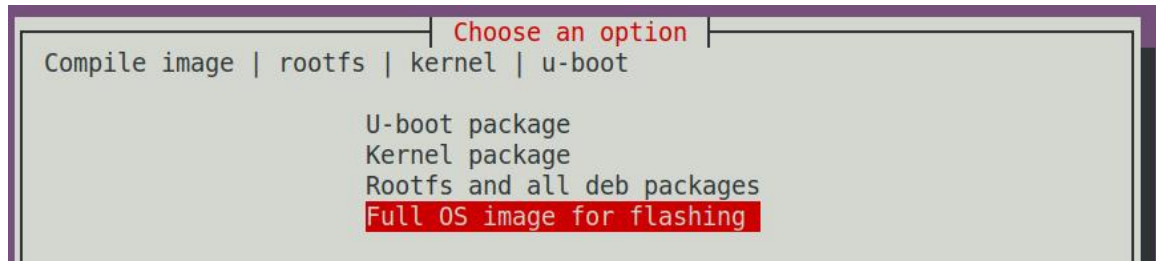


3) Then select the model of the development board

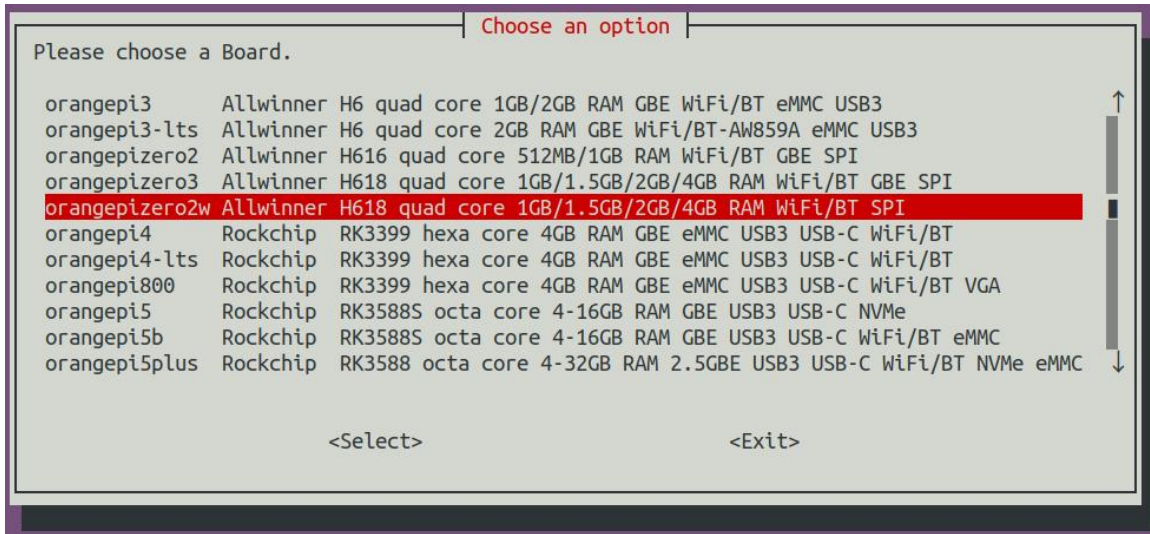


4) Then select the branch type of the kernel source code. Different versions of the kernel source code maintain different rootfs types.

- In the current branch, you can see three options: debian11, ubuntu20.04, and ubuntu22.04.
- In the next branch, you can see three options: debian11, debian12, and ubuntu22.04.

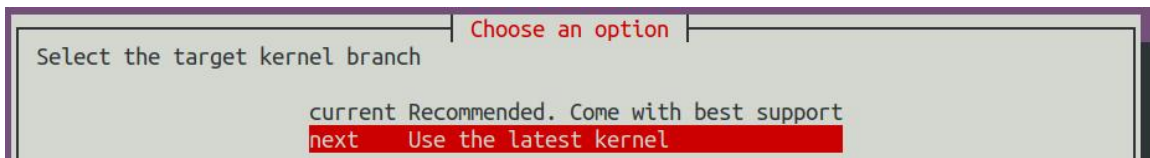


5) If you select the next branch, you will also be prompted to select the memory size, and you do not need to select the current branch.

- If the development board you purchased has a memory size of 1.5GB, please select the first option.
- If the development board you purchased has 1GB or 2GB or 4GB memory size, please choose the second option.

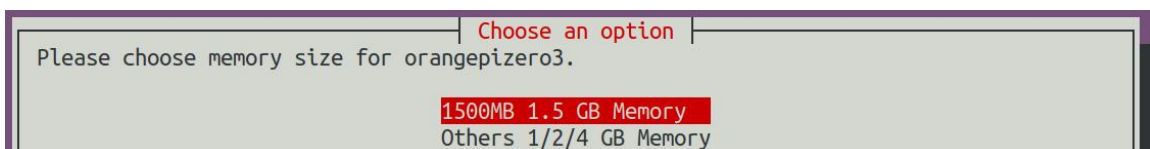


6) Then select the type of rootfs

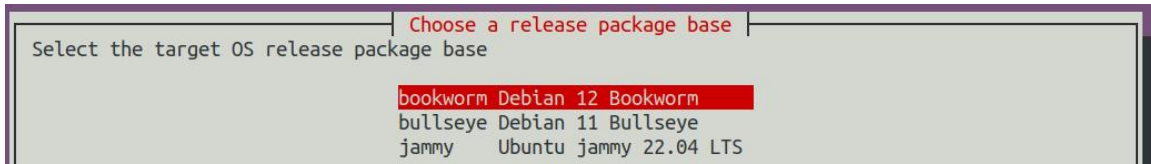


7) Then select the type of image



- c. **Image with console interface (server)** Represents the image of the server version, which is relatively small in size.
- d. **Image with desktop environment** Represents an image with a desktop, which is relatively large in size.

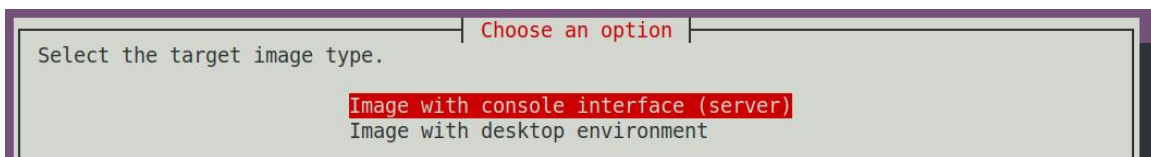

8) If you are compiling the server version of the image, you can also choose to compile the Standard version or the Minimal version. The Minimal version will have much less pre-installed software than the Standard version (**please do not choose the Minimal version without special needs, because many things are not pre-installed by default. Some functions may not be available**)

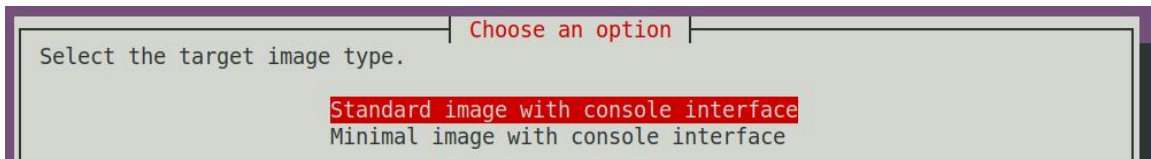


9) If you are compiling a desktop version of the image, you also need to select the type of desktop environment. Currently, only XFCE is maintained, so please select an XFCE type desktop.

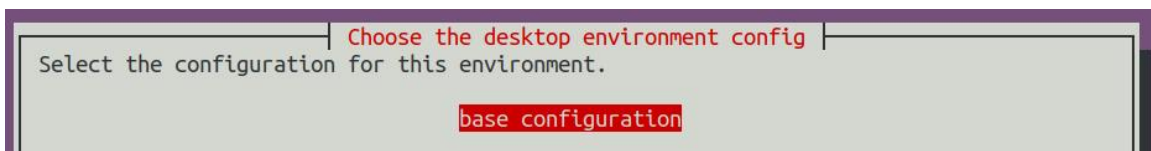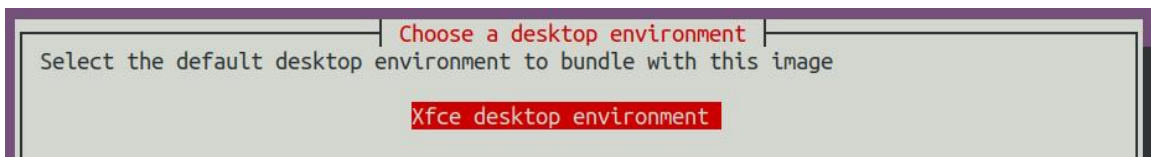



You can then select additional packages that need to be installed. Please press the Enter key here to skip directly.

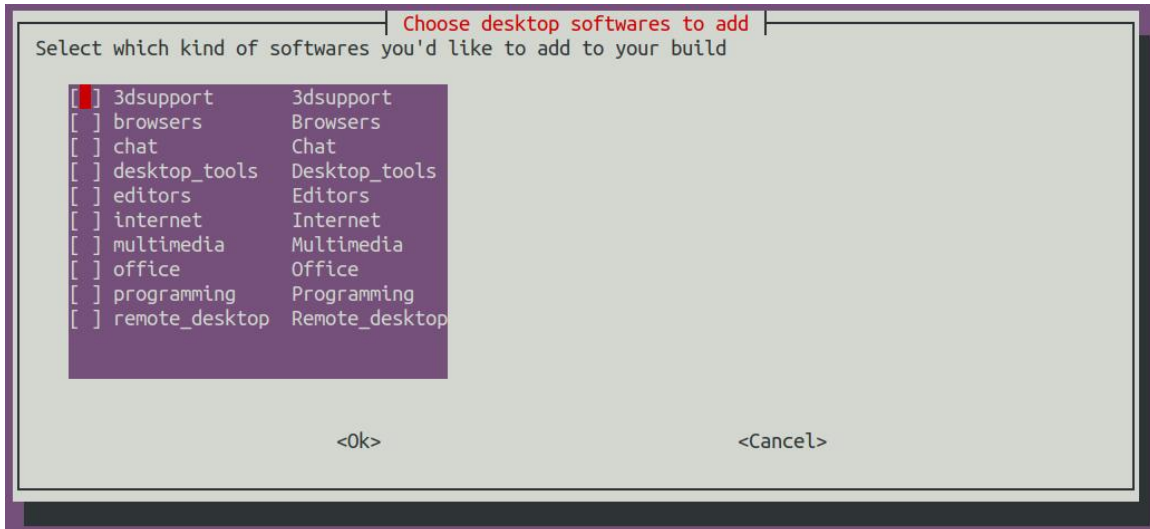

10) Then the compilation of the linux image will begin. The general process of compilation is as follows

a. Initialize the compilation environment of Ubuntu PC and install the software packages required for the compilation process.

b. Download the source code of u-boot and linux kernel (if already cached, only update the code)

c. Compile u-boot source code and generate u-boot deb package

d. Compile linux source code and generate linux-related deb packages

e. Make the deb package of linux firmware

f. Make the deb package of orangepi-config tool

g. Create a deb package with board-level support

h. If you compile the desktop version image, you will also create a desktop-related deb package.

i. Check whether rootfs has been cached. If not, re-create rootfs. If it has been cached, decompress it directly and use it.

j. Install the deb package generated previously into rootfs

k. Make some specific settings for different development boards and different types of images, such as pre-installing additional software packages, modifying system configurations, etc.

l. Then create the image file and format the partition. The default type is ext4.



- m. Then copy the configured rootfs to the mirror partition.
 - n. Then update initramfs
 - o. Finally, write the bin file of u-boot into the image through the dd command.
- 11) After compiling the image, the following message will be displayed
- a. The storage path of the compiled image

```
[ o.k. ] Done building  
[ output/images/orangepi2w_x.x.x_debian_bullseye_linux6.1.xx_xfce_desktop/or  
angepi2w_x.x.x_debian_bullseye_linux6.1.xx_xfce_desktop.img ]
```

- b. Compilation time

```
[ o.k. ] Runtime [ 19 min ]
```

- c. Repeat the command to compile the image. Use the following command to start compiling the image directly without selecting it through the graphical interface.

```
[ o.k. ] Repeat Build Options [ sudo ./build.sh BOARD=orangepi2w  
BRANCH=next BUILD_OPT=image RELEASE=bullseye BUILD_MINIMAL=no  
BUILD_DESKTOP=no KERNEL_CONFIGURE=yes ]
```



5. Instructions for using the Orange Pi OS Arch system

5.1. Orange Pi OS Arch system function adaptation status

Motherboard functions	OPi OS Arch
HDMI video	OK
HDMI Audio	OK
Type-C USB2.0 x 2	OK
TF Card Startup	OK
WIFI	OK
Bluetooth	OK
LED Light	OK
40pin GPIO	OK
40pin I2C	OK
40pin SPI	OK
40pin UART	OK
40pin PWM	OK
Temperature Sensor	OK
Hardware watchdog	OK
Mali GPU	NO
Video codec	NO

24pin expansion board function	OPi OS Arch
100M network port	OK
100M Ethernet port light	OK
USB2.0 HOST x 2	OK
Infrared reception	OK
Headphone audio playback	OK
On/off button	OK
LRADC Custom buttons x 2	OK



TV-OUT


NO

5.2. Orange Pi OS Arch System User Guide Instructions


First of all, please note that the OPi OS Arch system does not have a default orangepi user and password, so you cannot directly log in remotely through the serial port and ssh after the system is started after burning (not even the root user). This is different from Ubuntu and Debian systems.

When the OPi OS Arch system is started for the first time, you need to connect an HDMI display and then initialize the system settings through the user wizard (including creating a new user name and setting a password). The setup steps of the user wizard are as follows:


a) After burning the system, when you start it for the first time and enter the desktop, you will see the user wizard program shown in the figure below.

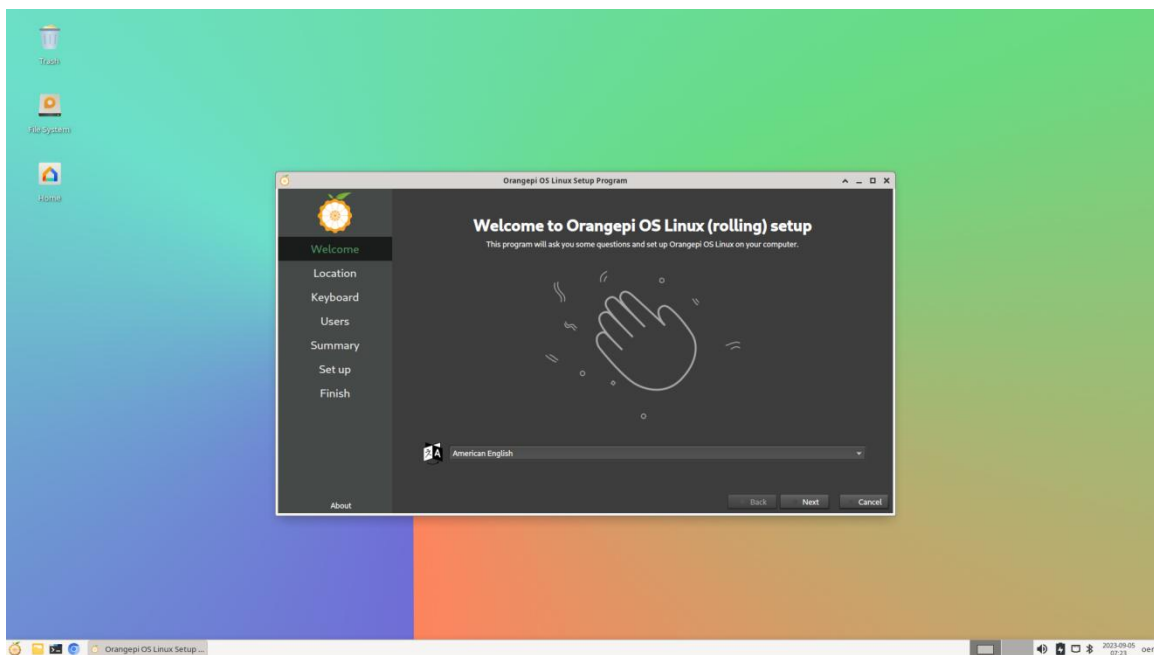


b) First you need to select the language you want

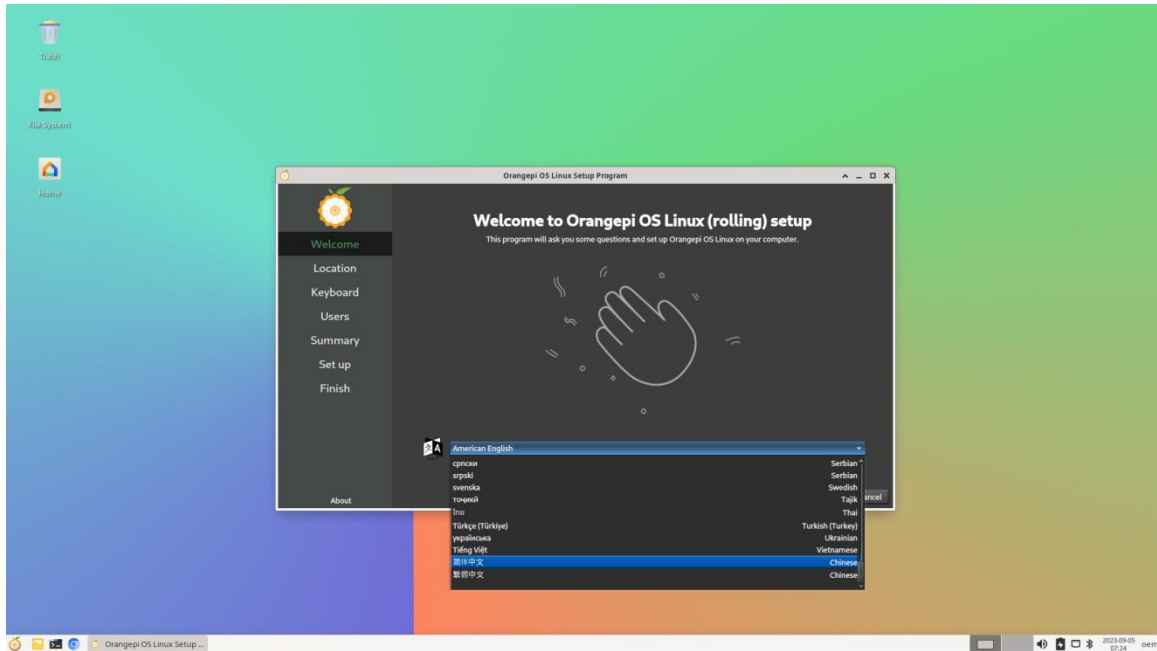


c) After selecting the language, the user wizard will immediately switch to the corresponding language interface, as shown below in Chinese

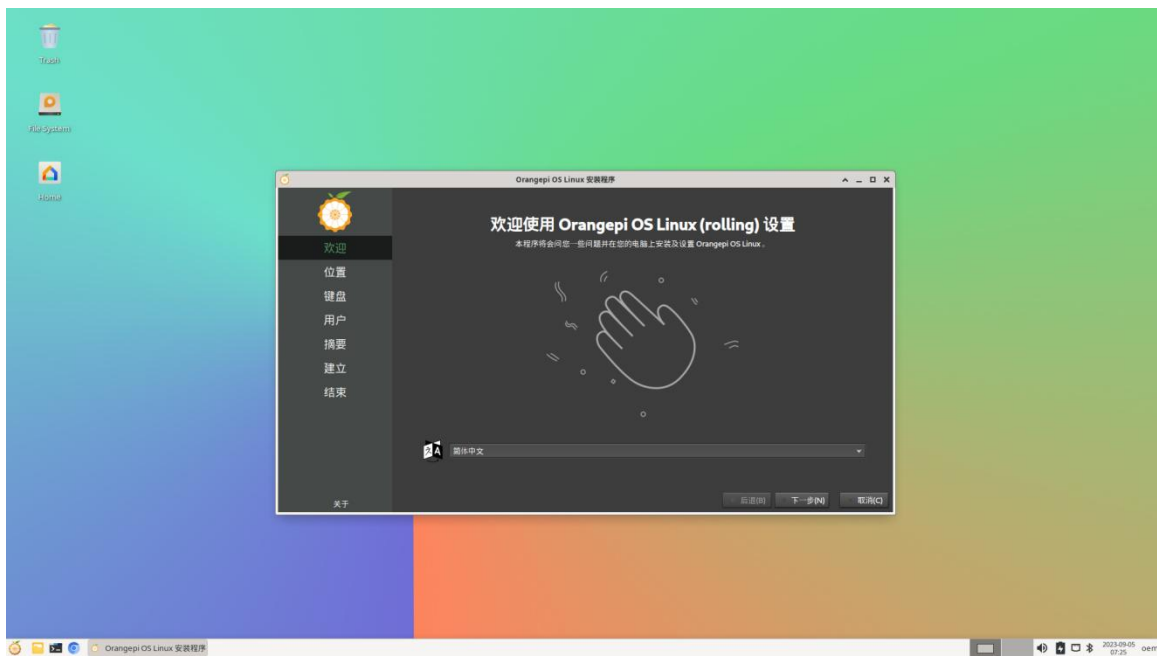


d) Then select the area

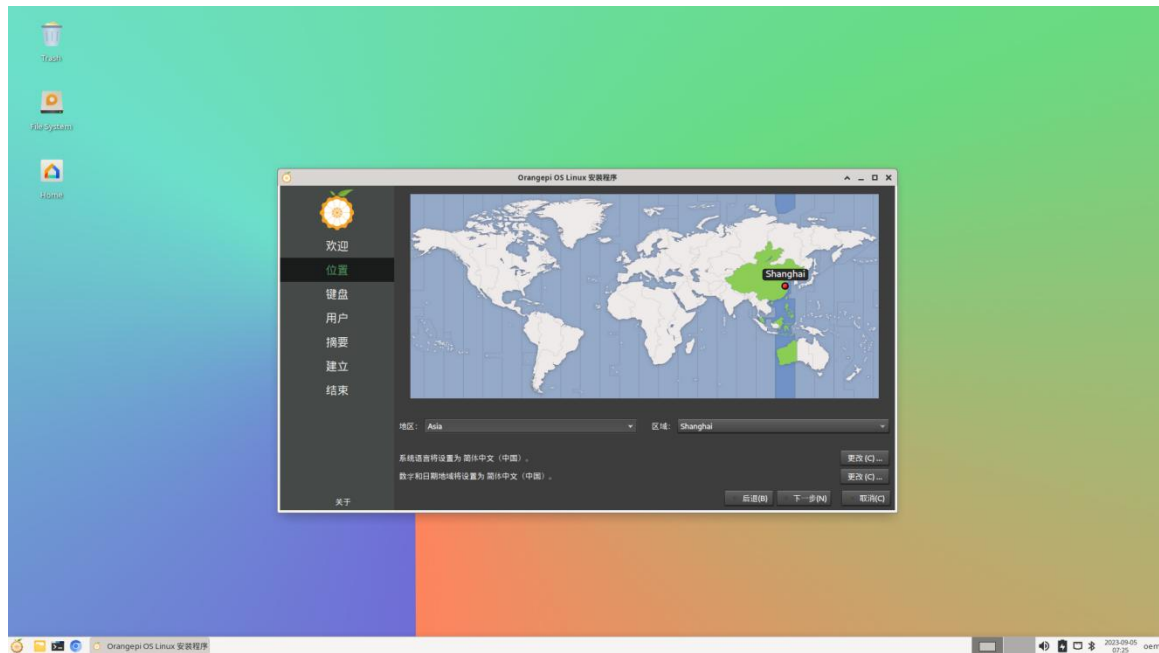

e) Then select the keyboard model

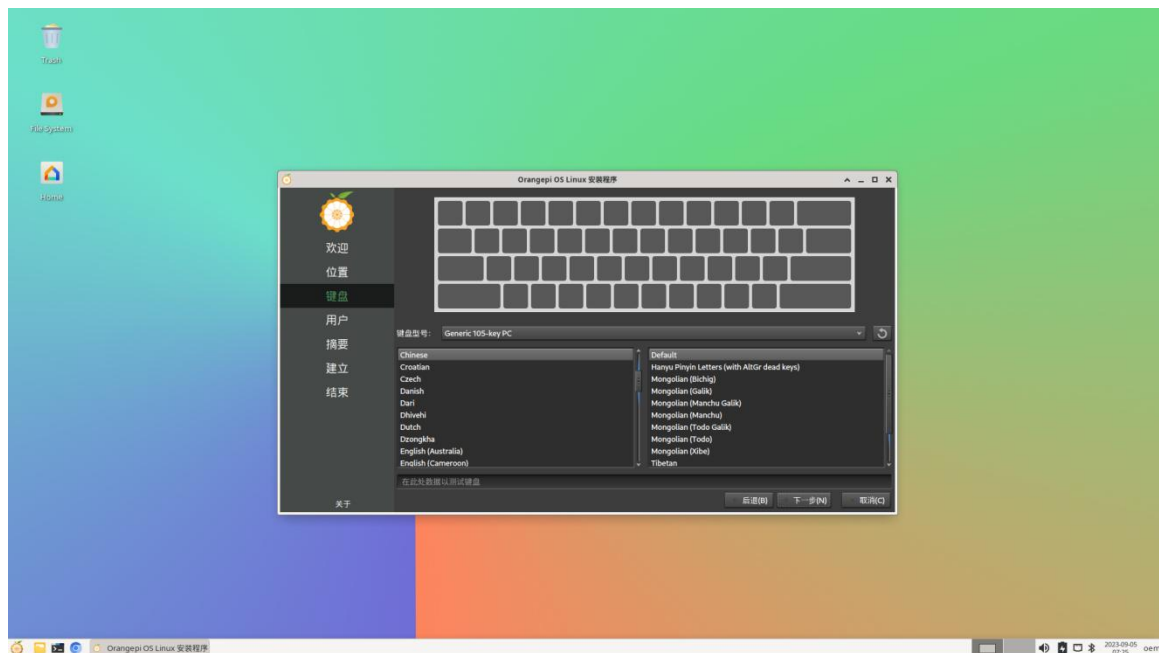


f) Then create a new username and set a password

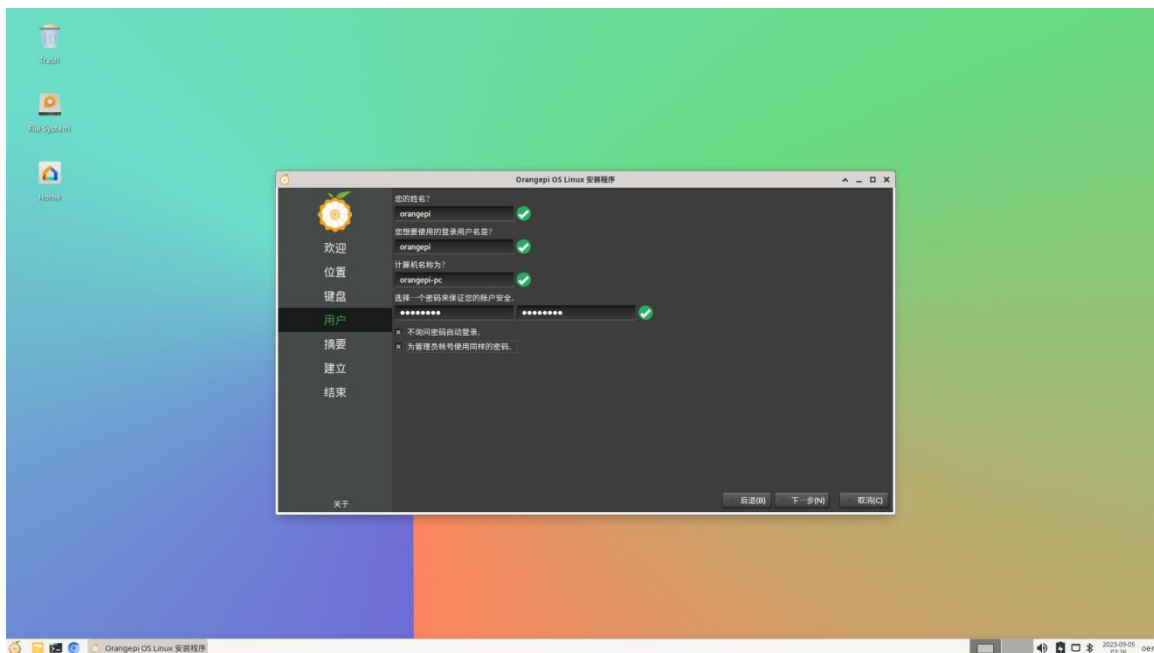


g) Then make sure there is no problem with the selection, and then click the install


button

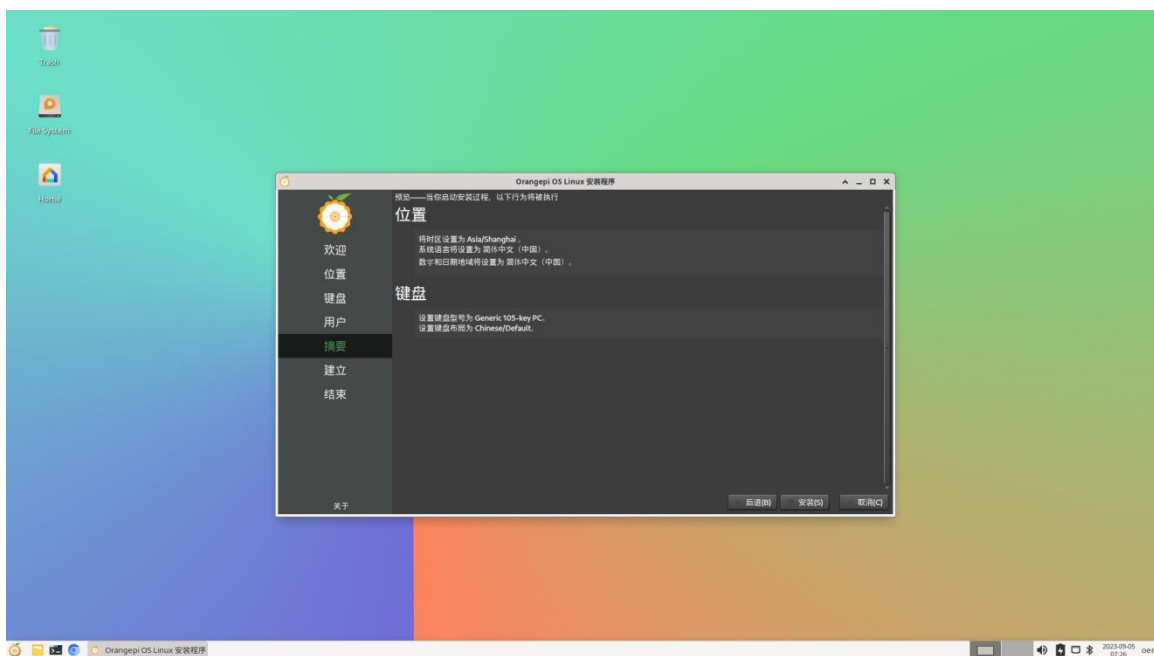

h) Then wait for the installation to complete

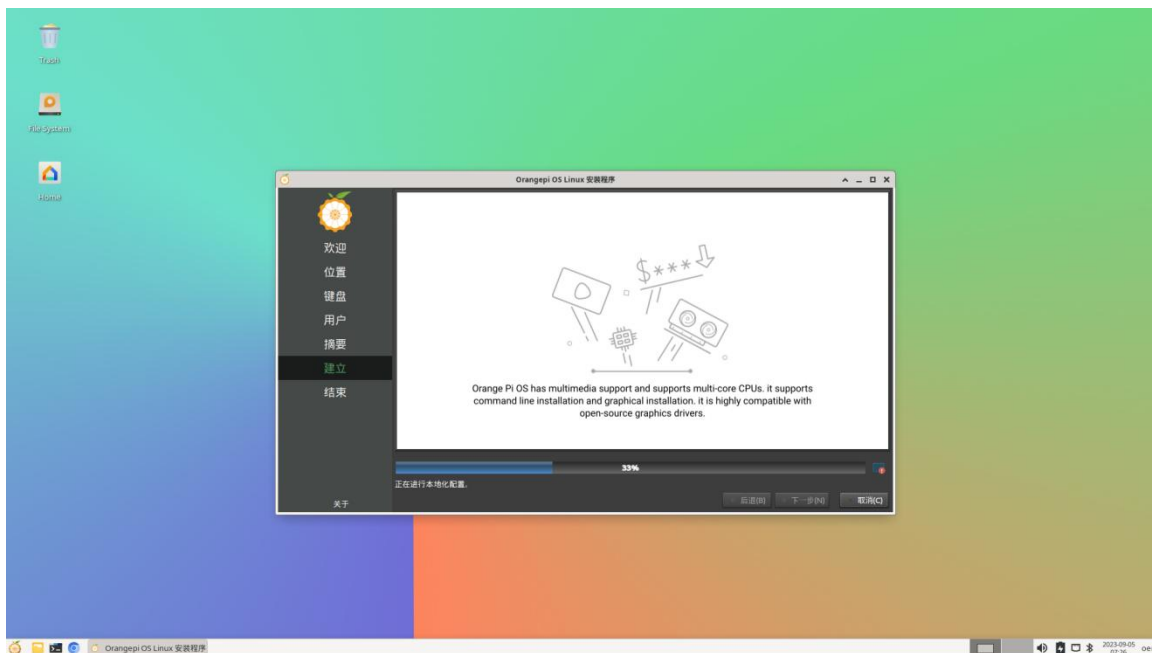

i) After the installation is complete, you need to click the **Finish** button to restart the system.

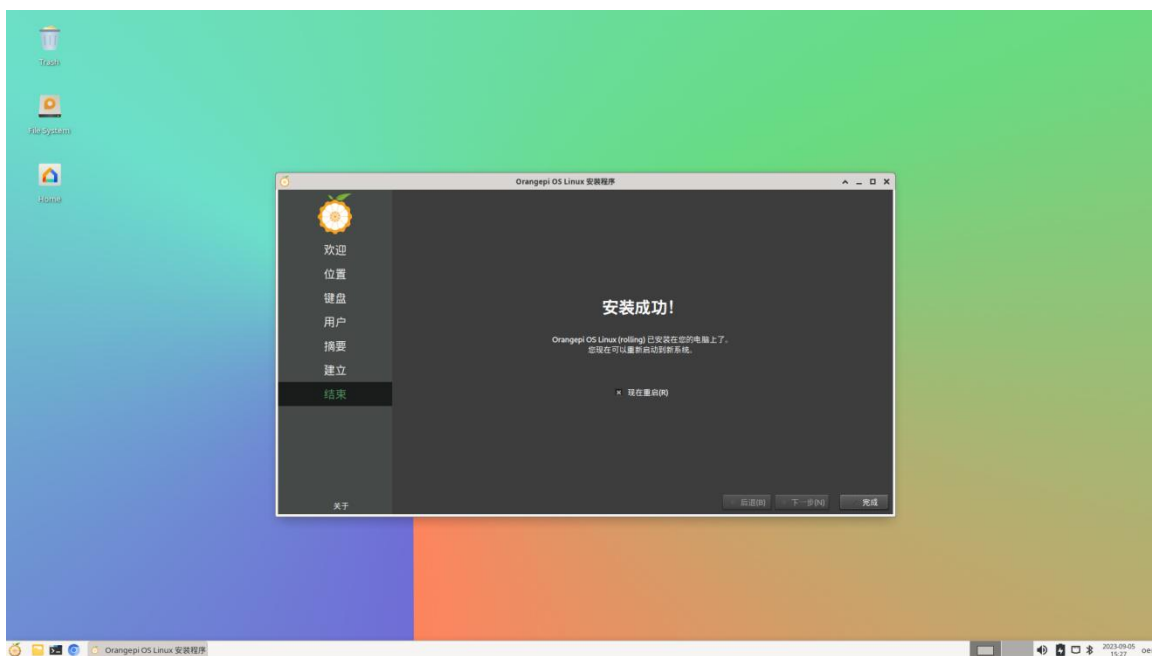

j) The Orange Pi Hello program will automatically start after restarting. At this time, you need to remove the check **mark of Start on startup** in the lower right corner, otherwise you need to manually close the Orange Pi Hello program every time you start it.



At this point, you can use the newly created username and password to log in to the OPi OS system through the serial port or ssh.

5.3. How to set DT overlays

The multiplexing functions such as I2C/SPI/UART/PWM in the 40-pin development board are turned off by default in the kernel's dts, and the corresponding DT overlays need to be manually turned on before they can be used.

The method to open DT overlays in OPi OS Arch system is as follows:

- 1) First open the `/boot/extlinux/extlinux.conf` configuration file

```
[orangepi@orangepi-pc ~]$ sudo vim /boot/extlinux/extlinux.conf
```

- 2) Then open the corresponding configuration by adding **FDTOVERLAYS** `/dtbs/allwinner/overlay/xxx.dtbo` in `/boot/extlinux/extlinux.conf`

Note that `xxx.dtbo` in `FDTOVERLAYS /dtbs/allwinner/overlay/xxx.dtbo` needs to be replaced with the specific dtbo configuration, please do not copy it.

```
[orangepi@orangepi-pc ~]$ sudo vim /boot/extlinux/extlinux.conf
LABEL Orange Pi
```



```

KERNEL /Image
FDT /dtbs/allwinner/sun50i-h616-orangepi-zero2w.dtb
FDTOVERLAYS /dtbs/allwinner/overlay/xxx.dtbo      #Configuration that needs to
be added

```

3) The storage path of xxx.dtbo in the OPI OS Arch image is as follows. Please note that not all dtbo under this path can be used.

```
/boot/dtbs/allwinner/overlay/
```

4) The DT overlays configuration that can be used by the development board is as follows

Functions on the development board	Corresponding DT overlays configuration
40pin - i2c0	sun50i-h616-pi-i2c0.dtbo
40pin - i2c1	sun50i-h616-pi-i2c1.dtbo
40pin - i2c2	sun50i-h616-pi-i2c2.dtbo
40pin - uart2	sun50i-h616-pi-uart2.dtbo
40pin - uart3	sun50i-h616-pi-uart3.dtbo
40pin - uart4	sun50i-h616-pi-uart4.dtbo
40pin - uart5	sun50i-h616-ph-uart5.dtbo
40pin - pwm1	sun50i-h616-pi-pwm1.dtbo
40pin - pwm2	sun50i-h616-pi-pwm2.dtbo
40pin - pwm3	sun50i-h616-pi-pwm3.dtbo
40pin - pwm4	sun50i-h616-pi-pwm4.dtbo
40pin - spi1 cs0	sun50i-h616-spi1-cs0-spidev.dtbo
40pin - spi1 cs1	sun50i-h616-spi1-cs1-spidev.dtbo
40pin - spi1 cs0 cs1	sun50i-h616-spi1-cs0-cs1-spidev.dtbo
设 Set USB0 to Host mode	sun50i-h616-usb0-host.dtbo
Turn off the green LED light	sun50i-h616-zero2w-disable-led.dtbo
How to close the UART0 debugging serial port	sun50i-h616-disable-uart0.dtbo

5) If you need to open multiple configurations at the same time, just add the paths of multiple configurations directly after **FDTOVERLAYS**. For example, the configuration of opening i2c1 and uart5 at the same time is as follows



```
[orangepi@orangepi-pc ~]$ sudo vim /boot/extlinux/extlinux.conf  
LABEL Orange Pi  
KERNEL /Image  
FDT /dtbs/allwinner/sun50i-h616-orangepi-zero2w.dtb  
FDTOVERLAYS /dtbs/allwinner/overlay/sun50i-h616-pi-i2c1.dtbo /dtbs/allwinner/overlay/sun50i-h616-ph-uart5.dtbo
```

6) After setting, you need to restart the system for the configuration to take effect.

```
[orangepi@orangepi-pc ~]$ sudo reboot
```

5. 4. How to install software

You can use the pacman package management tool to install software that is not available in OPi OS. For example, the command to install the vim editor is as follows. If you want to install other software, you only need to replace vim with the package name of the software you want to install.

```
[orangepi@orangepi-pc ~]$ sudo pacman -Syy vim
```



6. OpenWRT System User Manual

6.1. OpenWRT version

OpenWRT version	Kernel version
OpenWrt SNAPSHOT	Linux6.1.74

6.2. OpenWRT Adaptation situation

Function	OpenWRT
USB2.0 x 2	OK
Debug UART	OK
TF card startup	OK
100Mbps Ethernet port	OK
LED lights	OK
RTL8821CU USB network card	OK
RTL8723BU USB network card	OK

6.3. First time boot expansion rootfs

1) When starting the OpenWRT system for the first time, the **resize-rootfs.sh** script will be executed to expand rootfs, and it will automatically restart after the expansion is completed

2) After logging into the system, you can use the **df -h** command to check the size of rootfs. If it matches the actual capacity of the storage device (TF card, eMMC, or NVME SSD), it indicates that the automatic expansion is running correctly

```
root@OpenWrt:~# df -h
```

Filesystem	Size	Used	Available	Use%	Mounted on
/dev/root	14.8G	14.7G	91.6M	99%	/
tmpfs	495.5M	6.1M	489.4M	1%	/tmp
tmpfs	512.0K	0	512.0K	0%	/dev
/dev/root	14.8G	14.7G	91.6M	99%	/opt/docker


```
test@ubuntu:~$ ssh root@192.168.2.1
```

4) The display after successfully logging into the system is shown in the following figure

```
BusyBox v1.36.1 (2024-07-23 12:04:10 UTC) built-in shell (ash)  
  
-----  
|_| W I R E L E S S   F R E E D O M  
-----  
  
OpenWrt SNAPSHOT, r24896+1-d094c3fbce  
-----  
  
=== WARNING! =====  
There is no root password defined on this device!  
Use the "passwd" command to set up a new password  
in order to prevent unauthorized SSH logins.  
-----
```

5) If the computer is installed with Windows system, you can refer to the method introduced in the section of **SSH remote login development board under Windows to log in**

6. 4. 3. Login to LuCI Management Interface

Please note that in the OpenWrt system of Orange Pi Zero 2w, the network port of the expansion board is configured as a LAN port by default.

- 1) Firstly, connect the LAN port of the board to the network port of the computer using an Ethernet cable, so that the network port of the computer can obtain the IP address through DHCP

2) The default LAN port IP of the board is set to **192.168.2.1**, so the computer can obtain IP addresses starting with **192.168.2** at this time

3) You can log in to the LuCI interface by entering the IP address **192.168.2.1** in the browser on your computer



4) **The OpenWrt system does not have a password set by default**, so simply click the **login** button. After successful login, the interface will display as shown in the following figure

OpenWrt 状态 ▾ 系统 ▾ 服务 ▾ 网络 ▾ 统计 ▾ 退出 刷新

未设置密码!
尚未设置密码。请为 root 用户设置密码以保护主机并启用。跳转到密码配置页...

状态

系统

主机名	OpenWrt
型号	OrangePi Zero2 W
架构	ARMv8 Processor rev 4
目标平台	sunxi/cortexa53
固件版本	OpenWrt SNAPSHOT r24896+1-d094c3fbce / LuCI Master 24.201.48886~b3ea37c
内核版本	6.1.74
本地时间	2024-07-23 12:29:32
运行时间	0h 24m 6s
平均负载	0.00, 0.00, 0.00

内存

可用数	1.83 GiB / 1.95 GiB (93%)
已使用	152.31 MiB / 1.95 GiB (7%)
已缓冲	2.65 MiB / 1.95 GiB (0%)

6. 4. 4. Log in to the terminal through the LuCI management interface

Please note that in the OpenWrt system of Orange Pi Zero 2w, the network port of the expansion board is configured as a LAN port by default.


1) Firstly, connect the LAN port of the board to the network port of the computer using an Ethernet cable, so that the network port of the computer can obtain the IP address



through DHCP

2) The default LAN port IP of the board is set to **192.168.2.1**, so the computer can obtain IP addresses starting with **192.168.2** at this time


3) You can log in to the LuCI interface by entering the IP address **192.168.2.1** in the browser on your computer

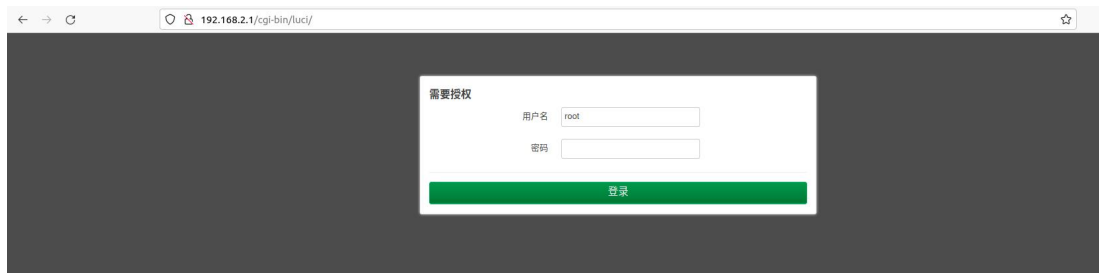


4) Select **"Terminal"** in the **"Services"** column of the navigation bar and click to enter



5) At this point, the terminal interface is shown in the following figure

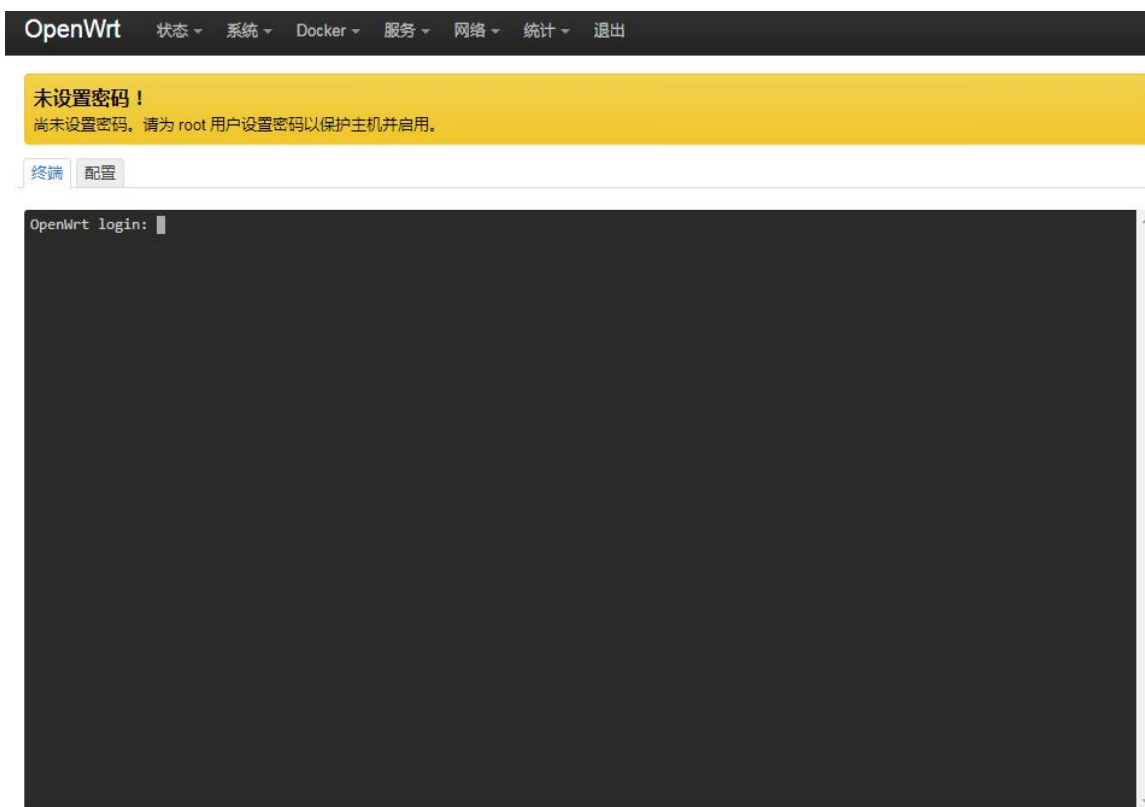

6) Enter the username root to log in

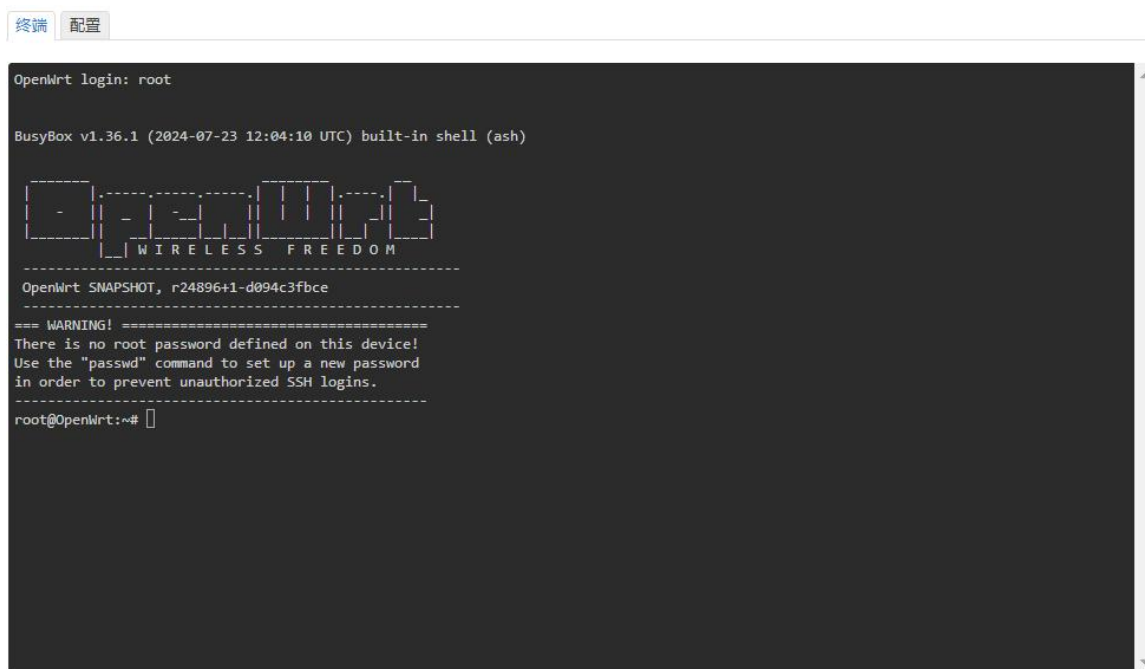




6. 4. 5. Login to the terminal using IP address and port number

Please note that in the OpenWrt system of Orange Pi Zero 2w, the network port of the expansion board is configured as a LAN port by default.

- 1) Firstly, connect the LAN port of the board to the network port of the computer using an Ethernet cable, so that the network port of the computer can obtain the IP address through DHCP
- 2) The default LAN port IP of the board is set to **192.168.2.1**, so the computer can obtain IP addresses starting with **192.168.2** at this time
- 3) Then enter **192.168.2.1:7681** in the browser to log in to the OpenWRT terminal

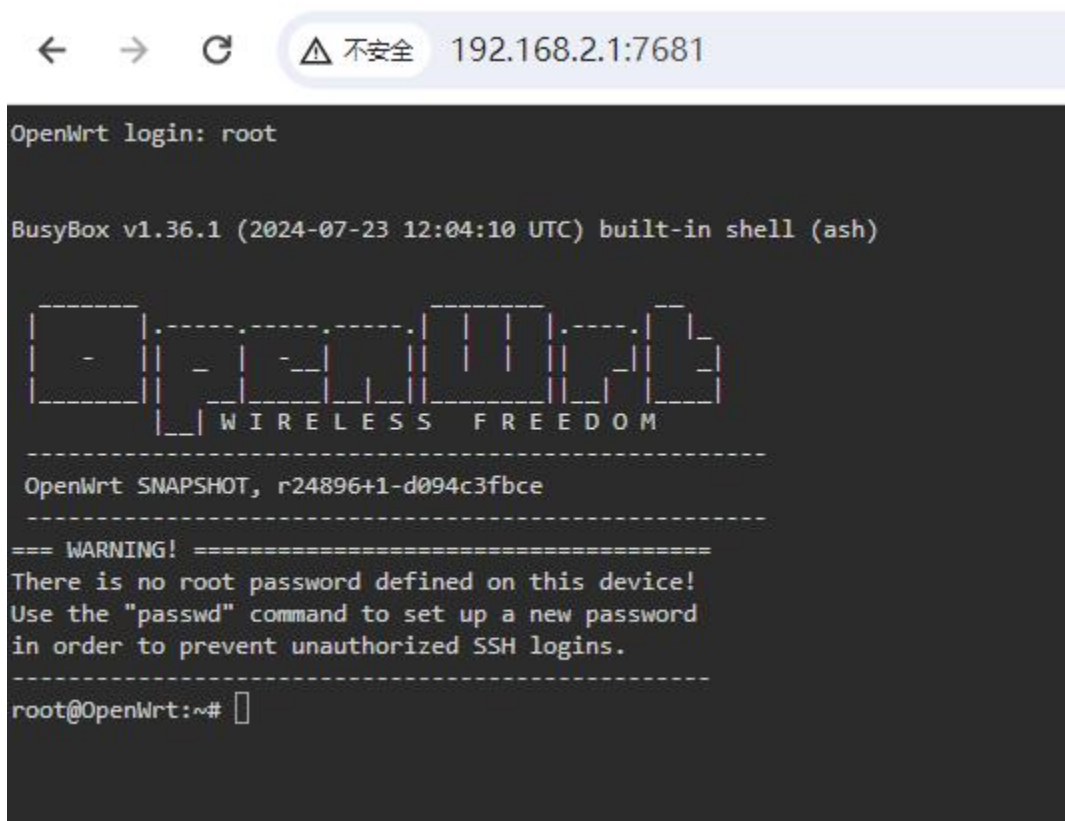

6. 5. Method of modifying LAN port IP address through command line

- 1) In the OpenWrt system, a command-line tool uci is provided, which can easily modify,



add, delete, and read the contents of configuration files. For detailed instructions, please refer to the [official documentation](#)

2) First, use the following command to obtain the network configuration. The corresponding configuration file is `/etc/config/network`, and you can see that the value of `network.lan.ipaddr` is **192.168.2.1**

```
root@OpenWrt:~# uci show network
...
network.lan=interface
network.lan.device='br-lan'
network.lan.proto='static'
network.lan.ipaddr='192.168.2.1'
network.lan.netmask='255.255.255.0'
network.lan.ip6assign='60'
....
```

3) Then enter the following command to modify the `network.lan.ipaddr` option

```
root@OpenWrt:~# uci set network.lan.ipaddr='192.168.100.1'
```

4) Then enter the following command to complete the submission, which is written to the configuration file

```
root@OpenWrt:~# uci commit
```

If the IP address in red font matches the one to be set, it indicates that the modification was successful

```
root@OpenWrt:~# cat /etc/config/network
...
config interface 'lan'
    option device 'br-lan'
    option proto 'static'
    option netmask '255.255.255.0'
    option ip6assign '60'
    option ipaddr '192.168.100.1'
...
```



5) Restart the network through Ubuntu. Please refer to the [official documentation](#) for instructions on how to use Ubuntu

```
root@OpenWrt:~# ubus call network restart
```

6) At this point, entering the command shows that the IP address of the LAN port is already **192.168.100.1**

```
root@OpenWrt:~# ifconfig br-lan
br-lan    Link encap:Ethernet  HWaddr FE:55:13:A3:EF:E7
          inet addr:192.168.100.1  Bcast:192.168.100.255  Mask:255.255.255.0
          inet6 addr: fd60:c4cd:1033::1/60 Scope:Global
          UP BROADCAST MULTICAST  MTU:1500  Metric:1
          RX packets:0 errors:0 dropped:0 overruns:0 frame:0
          TX packets:3 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:0 (0.0 B)  TX bytes:370 (370.0 B)
```

6. 6. Method for changing root password

6. 6. 1. Modify via Command Line

1) Firstly, enter `passwd root` in the system command line, and the following prompt message will appear. At this time, you can enter the password you want to set and press Enter to confirm

```
root@OpenWrt:/# passwd root
Enter new UNIX password:
```

2) Next, you will be prompted to re-enter the password. At this point, enter the password again to confirm and press Enter

```
Retype password:
```

3) The successfully modified display is as follows

```
passwd: password for root changed by root
```

6. 6. 2. Modify through LuCI management interface

1) Firstly, refer to the [login LuCI management](#) interface to enter the OpenWRT management interface



2) Then follow the steps below to change the password

- Find the **"System"** option in the navigation bar and click on it
- In the vertical bar options below the system, select **"Management Rights"** and click

The screenshot shows the OpenWrt web interface. At the top, there is a navigation bar with the following items: OpenWrt, 状态 (Status), 系统 (System), 服务 (Services), 网络 (Network), 统计 (Statistics), and 退出 (Logout). The '系统' (System) menu is open, showing a list of options: 系统 (System), 管理权 (Management Rights), 软件包 (Software Packages), 启动项 (Startup Items), 计划任务 (Scheduled Tasks), 挂载点 (Mount Points), LED 配置 (LED Configuration), 备份与升级 (Backup and Upgrade), 自定义命令 (Custom Commands), and 重启 (Restart). A red arrow points to the '管理权' (Management Rights) option. Below the navigation bar, there is a yellow banner with the text '未设置密码!' (Password not set!) and '尚未设置密码。请为 root 用户设置密码以保护主机并启用。' (No password has been set. Please set a password for the root user to protect the host and enable it.). To the right of the banner is a button labeled '跳转到密码配置页...' (Jump to password configuration page...). Below the banner, there is a section titled '状态' (Status) and '系统' (System). The '系统' section contains a table with the following information: 主机名 (Hostname): OpenWrt, 型号 (Model): OrangePi Zero2 W, 架构 (Architecture): ARMv8 Processor rev 4, 目标平台 (Target Platform): sunxi/cortexa53, 固件版本 (Firmware Version): OpenWrt SNAPSHOT r24896+1-d094c3fbce / LuCI Master 24.201.48886~b3ea37c, 内核版本 (Kernel Version): 6.1.74, 本地时间 (Local Time): 2024-07-23 12:31:59, 运行时间 (Uptime): 0h 26m 34s, 平均负载 (Average Load): 0.08, 0.02, 0.01. Below the '系统' section, there is a section titled '内存' (Memory). The '内存' section contains two rows: 可用数 (Available): 1.83 GiB / 1.95 GiB (93%), and 已使用 (Used): 154.65 MiB / 1.95 GiB (7%).

- Select the **'Router Password'** option on the Tab page

The screenshot shows the OpenWrt web interface. At the top, there is a navigation bar with the following items: OpenWrt, 状态 (Status), 系统 (System), Docker, 服务 (Services), 网络 (Network), 统计 (Statistics), and 退出 (Logout). Below the navigation bar, there is a yellow banner with the text '未设置密码!' (Password not set!) and '尚未设置密码。请为 root 用户设置密码以保护主机并启用。' (No password has been set. Please set a password for the root user to protect the host and enable it.). Below the banner, there is a section titled '路由器密码' (Router Password). The '路由器密码' section contains a sub-section titled '更改访问设备的管理员密码' (Change the administrator password for the device you are accessing). Below this sub-section, there are two input fields: 密码 (Password) and 确认密码 (Confirm Password). Both input fields have a '*' icon on the right side. Below the input fields, there is a green button labeled '保存' (Save).

3) Change and save router password

- Enter the password you have set in the **"Password"** and **"Confirm Password"** dialog boxes (if unsure if the password is entered correctly, click the "*" icon)



behind the dialog box to display the input characters)

- b. Click 'Save' to save the newly modified password

Note: In the "Password" and "Confirm Password" dialog boxes, the password entered twice needs to be consistent.

- 4) After the password is successfully changed, a pop-up message saying "System password has been changed successfully" will appear. At this time, logging into OpenWRT requires a password to log in

6. 7. USB interface testing

6. 7. 1. Mounting USB Storage Devices at the Command Line

- 1) Firstly, insert the USB drive into the USB interface of the Orange Pi development board



2) If you can see the output of sdX by executing the following command, it indicates that the USB drive recognition is successful

```
root@OpenWrt:~# cat /proc/partitions | grep "sd*"
major minor  #blocks  name
    8         0   15126528 sda
```

3) You can use the mount command to mount the USB drive to /mnt, and then you can view the files on the USB drive

```
root@OpenWrt:~# mount /dev/sda /mnt/
root@OpenWrt:~# ls /mnt/
test.txt
```

4) After mounting, you can use the df -h command to view the capacity usage and mounting points of the USB flash drive

```
root@OpenWrt:~# df -h | grep "sd"
/dev/sda          14.4G      187.2M      14.2G      1% /mnt
```

6. 7. 2. Mounting USB Storage Devices in LuCI Management Interface

1) Firstly, connect the USB flash drive (or other storage device) to the development board via USB 2.0

2) Then follow the [login LuCI management](#) interface to enter the LuCI management interface

3) Then, in the LuCI management interface, click on "System ->Mount Point" to enter the configuration interface of the mount point



The screenshot shows the OpenWrt web interface. At the top, there's a navigation bar with 'OpenWrt', '状态', '系统', '服务', '网络', '统计', and '退出'. Below this, a yellow banner says '未设置密码! 尚未设置密码。请为 root 用户设置密码。' with a button '跳转到密码配置页...'. The '系统' (System) menu is open, showing options like '系统', '管理权', '软件包', '启动项', '计划任务', '挂载点', 'LED 配置', '备份与升级', '自定义命令', and '重启'. A red arrow points to '挂载点'. Below the menu, the '状态' (Status) section shows system information: 主机名 (hostname), 型号 (model: OrangePi Zero2 W), 架构 (architecture: ARMv8 Processor rev 4), 目标平台 (target platform: sunxi/cortexa53), 固件版本 (firmware version: OpenWrt SNAPSHOT r24896+1-d094c3fbce / LuCI Master 24.201.48886-b3ea37c), 内核版本 (kernel version: 6.1.74), 本地时间 (local time: 2024-07-23 12:34:09), 运行时间 (uptime: 0h 28m 44s), and 平均负载 (average load: 0.06, 0.03, 0.00). The '内存' (Memory) section shows 可用数 (available: 1.83 GiB / 1.95 GiB (93%)) and 已使用 (used: 153.32 MiB / 1.95 GiB (7%)).

4) Then follow the steps below to add a mounting point

- Find '**Mount Point**' below the **global settings interface** for mount points
- Below the **mounting point**, select the "Add" button and click to enter

挂载点

配置存储设备挂载到文件系统的位置和参数

已启用	设备	挂载点	文件系统	挂载选项	文件系统检查	
☐	UUID: 84173db5-fa99-e35a-95c6-28613cc70ea9 (/dev/mmcblk1p1, 64.00 MiB)	/mnt/mmcblk1p1	auto (ext4)	defaults	否	☐ 编辑 删除
☐	UUID: ff313567-e9f1-5a5d-9805-3ba130b4a864 (/dev/mmcblk1p2, 29.61 GiB)	/	auto (ext4)	defaults	否	☐ 编辑 删除
添加						

- Next, a pop-up window will appear below



挂载点 - 存储区

常规设置 高级设置

已启用 ☒

UUID -- 根据 UUID 匹配 --
 ? 如果指定, 则通过 UUID 而不是固定的设备文件来挂载设备

卷标 -- 根据标签匹配 --
 ? 如果指定, 则通过分区卷标而不是固定的设备文件来挂载设备

设备 未指定
 ? 存储器或分区的设备文件 (例如: /dev/sda1)

挂载点 -- 请选择 --
 ? 指定设备的挂载目录

关闭 保存

- d. Then you can start mounting the storage device
 - a) Check '**Enabled**'
 - b) Select the actual connected device /dev/sda in the UUID column of the general settings (choose according to your own device)
 - c) Select "**Custom**" in the mount point column and fill in the target directory to be mounted to. Taking the **/mnt** directory as an example, fill in and press **Enter** to confirm
 - d) Then click the "**Save**" button in the bottom right corner

挂载点 - 存储区

常规设置 高级设置

已启用 ☒

UUID CE4B-C491 (/dev/sda, 59.48 GiB)
 ? 如果指定, 则通过 UUID 而不是固定的设备文件来挂载设备

挂载点 -- 请选择 --
 -- 请选择 --
 作为根文件系统使用 (/)
 作为外部 overlay 使用 (/overlay)
 /mnt

关闭 保存

- 5) Then you will return to the mount point global settings page and click "**Save and Apply**" in the bottom left corner of the page to make the mount point effective



挂载点
配置存储设备挂载到文件系统中的位置和参数

已启用	设备	挂载点	文件系统	挂载选项	文件系统检查	
☐	UUID: 84173db5-fa99-e35a-95c6-28613cc79ea9 (/dev/mmcblk1p1, 64.00 MiB)	/mnt/mmcblk1p1	auto (ext4)	defaults	否	☐ 编辑 删除
☐	UUID: #313567-e9f1-5a5d-9895-3ba130b4a864 (/dev/mmcblk1p2, 29.61 GiB)	/	auto (ext4)	defaults	否	☐ 编辑 删除
☒	UUID: ce4b-c491 (/dev/sda, 59.48 GiB)	/mnt	auto (vfat)	defaults	否	☐ 编辑 删除

[添加](#)

交换分区
如果物理内存不足，闲置数据可自动移到交换设备暂存，以增加可用的 RAM。请注意：数据交换的过程会非常慢，因为交换设备无法像 RAM 那样的高速地访问。

已启用	设备
尚无任何配置	

[添加](#)

[保存并应用](#) [保存](#) [复位](#)

6) After saving, you can see in the **"Mounted File System"** that the storage device has been successfully mounted

已挂载的文件系统

文件系统	挂载点	可用	已使用	卸载分区
/dev/root	/	28.93 GiB / 29.25 GiB	1.04% (310.21 MiB)	-
tmpfs	/tmp	7.67 GiB / 7.68 GiB	0.06% (4.69 MiB)	-
tmpfs	/dev	512.00 KiB / 512.00 KiB	0.00% (0 B)	-
/dev/root	/opt/docker	28.93 GiB / 29.25 GiB	1.04% (310.21 MiB)	卸载分区
/dev/sda	/mnt	59.46 GiB / 59.46 GiB	0.00% (640.00 KiB)	卸载分区

挂载点
配置存储设备挂载到文件系统中的位置和参数

6.8. USB Wireless Network Card Test

The currently tested USB wireless network cards that can be used are shown below. For other models of USB wireless network cards, please test them yourself. If they cannot be used, you need to port the corresponding USB wireless network card driver.

Serial number	model



1	RTL8723BU Support 2.4G WIFI	
2	RTL8821CU Support 2.4G +5G WIFI	

6.8.1. Method of connecting WIFI hotspot using USB wireless network card

1) Insert the USB wireless network card into the USB port of the development board, and then connect the power supply to power on the development board.

2) After the system startup is complete, click on **Network -> Wireless** to enter the wireless WiFi configuration interface.



3) The default wireless configuration of OpenWRT system is **Master** mode. For the convenience of the next operation, we will remove the default wireless connection.

无线概况



4) Then click on the bottom right corner of the page to **save** and make the configuration



effective.。

无线概况

radio0 Generic MAC80211 802.11acxbgn
设备未激活

重启 扫描 添加

已连接站点

网络	MAC 地址	主机	信号/噪声	接收速率/发送速率
无可用信息				

保存并应用 保存 复位

5) Then click the **scan** button to scan the surrounding WiFi hotspots.

未设置密码！
尚未设置密码。请为 root 用户设置密码以保护主机并启用。

无线概况

radio0 Generic MAC80211 802.11acbgm
信道: ? (? GHz) | 速率: ? Mbit/s

重启 扫描 添加

已连接站点

网络	MAC 地址	主机	信号/噪声	接收速率/发送速率
无可用信息				

保存并应用 保存 复位

6) Then a window will pop up displaying available WiFi hotspots. Click the **"Join Network"** button to the right of the desired WiFi hotspot to connect.

加入网络：搜索无线

信号	SSID	信道	模式	BSSID	加密	加入网络
-58 dBm	Waiting_OrangePi_10	48	Master	E8:9F:80:DF:4F:3F	WPA2 PSK (CCMP)	加入网络
-59 dBm	Waiting_OrangePi_10	153	Master	E8:9F:80:DF:4F:40	WPA2 PSK (CCMP)	加入网络
-60 dBm	Waiting_OrangePi_10	149	Master	A0:40:A0:A1:72:31	WPA2 PSK (CCMP)	加入网络
-67 dBm	Waiting_OrangePi_10	60	Master	50:6A:03:AB:90:1A	WPA2 PSK (CCMP)	加入网络

7) Then a interface will pop up to connect to the WiFi hotspot. We will enter the hotspot password at the location shown in the figure below, and then click the **submit** button.



正在加入网络: "xunlong_orangepi_5G"

重置无线配置 ☐ 选中此选项以从无线中删除现有网络。

新网络的名称: wwan

WPA 密码: 在此指定密码。

绑定到 BSSID ☐ 仅连接到 BSSID 为 `xxxxxxxxxxxx` 的网络, 而不是其它 SSID 相同的网络。

创建/分配防火墙区域: 为此接口分配所属的防火墙区域, 选择未指定可将该接口移出已关联的区域, 或者填写创建也来创建一个新的区域, 并将当前接口与之建立关联。

8) Then the following interface will pop up, click the **save** button in the bottom right corner.

无线网络: 客户端 "xunlong_orangepi_5G" (radio0.network1)

设备配置

无线网络已启用

模式: 客户端 | SSID: xunlong_orangepi_5G | 信道: 36 (5180 MHz) | 带宽: 80 MHz

工作频率: AC | 36 (5180 MHz) | 80 MHz

最大传输功率: 驱动默认 | 当前功率: 未知

☒ 指定最大发射功率, 依据监管要求和使用情况, 驱动程序可能将实际发射功率限定在此值以下。

接口配置

模式: 客户端

BSSID: xunlong_orangepi_5G

BSSID:

网络: wwan: 是

☒ 选择指派到此无线接口的网络, 或者填写创建全新网络。

9) Finally, you will return to the main interface of wireless configuration, click **save and apply**, and wait for the configuration to be applied.

未设置密码!
尚未设置密码。请为 root 用户设置密码以保护主机并启用。

无线概况

radio0	Generic MAC80211 802.11acbgm 信道: ? (GHz) 速率: ? Mbit/s	重启 扫描 添加
已禁用	SSID: xunlong_orangepi_5G 模式: Client 接口有 7 个未应用的更改	禁用 编辑 移除

已连接站点

网络	MAC 地址	主机	信号/噪声	接收速率/发送速率
无可用信息				

10) After successfully connecting to the WiFi hotspot, the interface displays as shown in the following figure.



无线概况

radio0 Generic MAC80211 802.11acbgm
信道: 48 (5.240 GHz) | 速率: 292.5 Mbit/s

重启 扫描 添加

-60 dBm SSID: xunlong_orangepi_5G | 模式: Client
BSSID: 1C:BF:CE:D9:D2:60 | 加密: WPA2 PSK (CCMP)

禁用 编辑 移除

已连接站点

网络	MAC 地址	主机	信号/噪声	接收速率/发送速率
客户端 "xunlong_orangepi_5G" (wlan0)	E8:9F:80:DF:4F:3F	?	-60 dBm	234.0 Mbit/s, 80 MHz, VHT-MCS 5, VHT-NSS 1 117.0 Mbit/s, 80 MHz, VHT-MCS 3, VHT-NSS 1

保存并应用 保存 复位

6.8.2. Method for creating a WIFI hotspot using a USB wireless network card

- 1) Insert the USB wireless network card into the USB port of the development board, and then connect the power supply to power on the development board.
- 2) The system startup is complete, click on **Network -> Wireless** to enter the wireless WiFi configuration interface.

192.168.2.1/cgi-bin/luci/

OpenWrt 状态 系统 Docker 服务 网络 统计 退出

未设置密码！
尚未设置密码，请为 root 用户设置密码以保护主机并启用。

状态

系统

主机名 OpenWrt

型号 Orange Pi

架构 ARMv8 Processor rev 0

目标平台 rockchip/armv8

接口

无线

路由

DHCP/DNS

网络诊断

防火墙

MultWAN 管理器

服务质量(QoS)

- 3) The default wireless configuration of OpenWRT system is **Master** mode. For the convenience of the next operation, we will remove the default wireless connection.

无线概况

radio0 Generic MAC80211 802.11acxbgm
设备未激活

重启 扫描 添加

已禁用 SSID: OpenWrt | 模式: Master
无线未开启

启用 编辑 移除

已连接站点

网络	MAC 地址	主机	信号/噪声	接收速率/发送速率
无可用信息				



4) Then click on the bottom right corner of the page to **save** and make the configuration effective.

无线概况

radio0 Generic MAC80211 802.11acaxbgn 设备未激活 重启 扫描 添加

已连接站点

网络	MAC 地址	主机	信号/噪声	接收速率/发送速率
无可用信息				

保存并应用 保存 复位

5) Then click the **add** button on the right.

无线概况

radio0 Generic MAC80211 802.11acaxbgn 设备未激活 重启 扫描 添加

已连接站点

网络	MAC 地址	主机	信号/噪声	接收速率/发送速率
无可用信息				

6) In the pop-up tab **device configuration**, we set the parameters as shown in the following figure.

编辑无线网络

设备配置

常规设置 高级设置

状态 模式: Master | SSID: OpenWrt
dBm 无线未关联

无线网络已启用 禁用

工作频率

模式	带宽	信道	带宽
N	2.4 GHz	7 (2442 Mhz)	20 MHz

允许使用旧的 802.11b 速率 ☐

最大传输功率 驱动默认 - 当前功率: 未知

过时或性能欠佳的设备可能需要旧的 802.11b 速率才能互联。在使用这些速率的情况下，信道占用效率可能会显著降低。建议尽可能不使用 802.11b 速率。

指定最大发射功率。依据监管要求和使用情况，驱动程序可能将实际发射功率限定在此值以下。

7) Then in Interface **Configuration ->General Settings**, set the mode to **Access Point AP**, **ESSID** (Wireless Network Name) to **OpenWrt**, and network to **lan**



接口配置

常规设置 无线安全 MAC 过滤 高级设置 WLAN 漫游

模式

ESSID

网络

☐ docker: 写 创建栏来新建网络。

隐藏 ESSID ☒ lan: 无线局域网

☐ wwan: (没有接口连接) 可能无法漫游且信道占用效率可能显著降低。

WMM 模式 ☒

如果禁用 Wi-Fi 多媒体 (WMM) 模式 QoS, 则客户端的速率可能限制为 802.11a/802.11g。

8) Then in Interface **Configuration ->Wireless Security**, select **WPA2-PSK** as the encryption algorithm; Set the key (wireless password) to **password**

接口配置

常规设置 无线安全 MAC 过滤 高级设置 WLAN 漫游

加密

算法

密钥

9) After completing the above settings, click on the bottom right corner of the page to **save**, and then you will exit the tab



接口配置

常规设置 无线安全 MAC 过滤 高级设置 WLAN 漫游

加密 WPA2-PSK (强安全性) ▼

算法 自动 ▼

密钥 password *

802.11w 管理帧保护 已禁用 ▼

注意：有些无线驱动程序不完全支持 802.11w。例如：mwlwifi 可能会有一些问题

启用密钥重新安装 (KRACK) 对策 ☐

通过禁用用于安装密钥的 EAPOL-Key 帧的重新传输，来增加客户端密钥重装攻击的复杂度。此解决方法可能会导致互操作性问题，并降低密钥协商的可靠性，特别是在流量负载较重的环境中。

启用 WPS 一键加密按钮，需要 WPA(2)-PSK/WPA3-SAE ☐

关闭 保存

10) Then click on the bottom right corner of the page to **save and apply**, and wait for the configuration to be applied.

无线概况

radio0 Generic MAC80211 802.11acaxbgn 设备未激活 重启 扫描 添加

已禁用 SSID: OpenWrt | 模式: Master 接口有 7 个未应用的更改 禁用 编辑 移除

已连接站点

网络	MAC 地址	主机	信号/噪声	接收速率/发送速率
无可用信息				

保存并应用 ▼ 保存 复位

11) The display interface for successfully creating a hotspot is shown in the following figure



12) Then use your phone or computer to search for the corresponding WiFi SSID for connection. After successful connection, as shown in the following figure



6. 9. Installing software packages through the command line

6. 9. 1. Installing through opkg on the terminal

1) Update the list of available software packages

```
root@OpenWrt:/# opkg update
```

2) Get software list

```
root@OpenWrt:/# opkg list
```

3) Install the specified software package

```
root@OpenWrt:/# opkg install <Package Name>
```



4) View installed software

```
root@OpenWrt:/# opkg list-installed
```

5) Uninstall software

```
root@OpenWrt:/# opkg remove <Package Name>
```

6. 10. OpenWRT management interface installation software package

If you need to add software packages, you can install them through the OpenWRT management interface.

6. 10. 1. View the list of available software packages in the system

1) First, enter the software package management page

- Find the "System" option in the navigation bar and click to enter
- In the vertical bar options below the system, select "Software Package" and click to enter

The screenshot shows the OpenWRT management interface. At the top, there is a navigation bar with options: OpenWrt, 状态, 系统, 服务, 网络, 统计, and 退出. A red arrow points to the '系统' (System) option. Below the navigation bar, a dropdown menu is open, showing options: 系统, 管理权, 软件包, 启动项, 计划任务, 挂载点, LED 配置, 备份与升级, 自定义命令, and 重启. A red arrow points to the '软件包' (Software Package) option. The main content area displays system information under the '状态' (Status) section, including host name, model, architecture, target platform, firmware version, kernel version, local time, running time, and average load. Below this, the '内存' (Memory) section shows available, used, and cached memory with progress bars.

Item	Value
主机名	OpenWrt
型号	OrangePi Zero2 W
架构	ARMv8 Processor rev 4
目标平台	sunxi/cortexa53
固件版本	OpenWrt SNAPSHOT r24896+1-d094c3fbce / LuCI Master 24.201.48886~b3ea37c
内核版本	6.1.74
本地时间	2024-07-23 12:38:21
运行时间	0h 32m 55s
平均负载	0.23, 0.19, 0.08

Item	Value
可用数	1.83 GiB / 1.95 GiB (93%)
已使用	153.28 MiB / 1.95 GiB (7%)
已缓冲	2.65 MiB / 1.95 GiB (0%)




2) Then the main page of the software package will appear, as shown in the following figure, to obtain the list of available software

- In the **"Operation"** option of the software package, click **"Update List"** to obtain the list of available software packages
- On the Tab page, click **"Available"** to view the currently available software packages
- View the current number of available software packages



6. 10. 2. Example of Installing Software Packages

- Taking the installation of the software package **"luci-app-acl"** as an example
 - In the package management interface of OpenWRT, click on the filter dialog box and enter **"luci-app-acl"**
 - In the list of software packages, you can see the version, package size, and description information of the **"luci-app-acl"** package, and then click the **"Install"** button

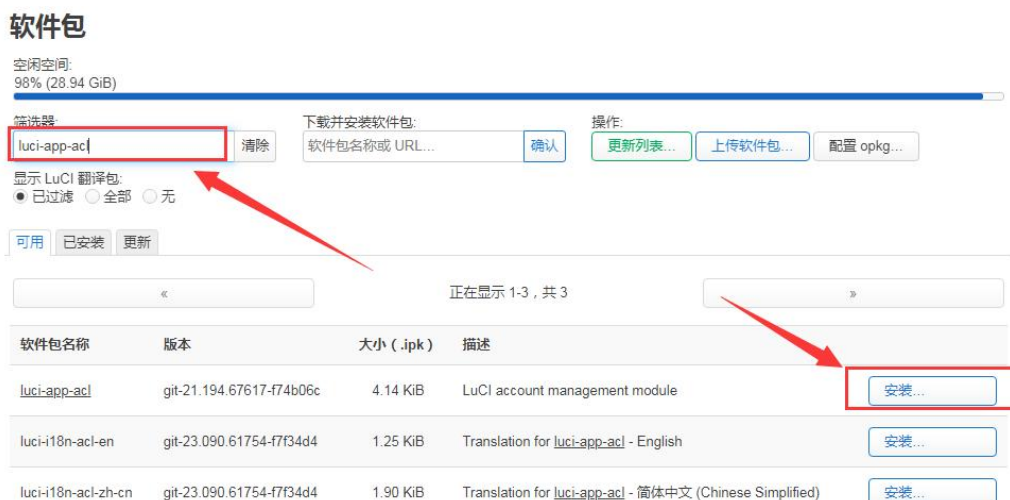



- c. Then the following pop-up window will appear, click "**Install**" to proceed



- d. Then wait for the installation to complete



- e. The display after installation is as follows



正在执行软件包管理器

```

Installing luci-i18n-acl-en (git-23.090.61754-f7f34d4) to root...
Downloading
https://downloads.openwrt.org/releases/22.03.4/packages/aarch64_generic/luci/
luci-i18n-acl-en_git-23.090.61754-f7f34d4_all.ipk
Installing luci-app-acl (git-21.194.67617-f74b06c) to root...
Downloading
https://downloads.openwrt.org/releases/22.03.4/packages/aarch64_generic/luci/
luci-app-acl_git-21.194.67617-f74b06c_all.ipk
Installing luci-i18n-acl-zh-cn (git-23.090.61754-f7f34d4) to root...
Downloading
https://downloads.openwrt.org/releases/22.03.4/packages/aarch64_generic/luci/
luci-i18n-acl-zh-cn_git-23.090.61754-f7f34d4_all.ipk
Package luci-app-acl (git-21.194.67617-f74b06c) installed in root is up to
date.
Configuring luci-app-acl.
Configuring luci-i18n-acl-zh-cn.
Configuring luci-i18n-acl-en.

```

关闭

- 2) Check if the software package has been successfully installed
 - a. In the package management interface of OpenWRT, click on the filter dialog box and enter "**luci-app-acl**"
 - b. Select and click '**Available**' on the tab page
 - c. The '**luci-app-acl**' package will be displayed in the package list and updated to '**installed**' status

软件包

空闲空间: 95% (7.4 GB)

筛选器: 清除

下载并安装软件包: 确认

操作:

☒ 可用 ☐ 已安装 ☐ 更新

正在显示 1-36, 共 36

软件包名称	版本	大小 (.ipk)	描述	
luci-app-acl	git-21.194.67638-1d6053e	4.2 KB	LuCI account management module	☒ 已安装

6. 10. 3. Example of Removing Software Packages

- 1) Taking the removal of the software package '**luci-app-acl**' as an example
 - a. In the package management interface of OpenWRT, click on the filter dialog box and enter "**luci-app-acl**"
 - b. Select '**Installed**' on the tab page to display a list of installed software packages
 - c. Click '**Remove**' on the right to remove the corresponding software package



软件包

空闲空间: 95% (7.4 GB)

筛选器: 清除 下载并安装软件包: 确认 操作:

可用 更新

正在显示 1-1, 共 1

软件包名称	版本	大小 (.ipk)	描述	
luci-app-acl	git-21.194.67638-1d6053e	~4.2 KB	LuCI account management module	移除...

- d. Then a pop-up window will appear below, click '**Remove**' to proceed

移除软件包 *luci-app-acl*

版本: git-21.194.67638-1d6053e
大小: ~3.4 KB 已安装

描述

LuCI account management module

☒ 自动移除未使用的依赖

- e. After successful removal, the display interface is as follows

正在执行软件包管理器

Removing package luci-app-acl from root...

- 2) Check if the software package has been successfully removed

- In the package management interface of OpenWRT, click on the filter dialog box and enter "**luci-app-acl**"
- Select and click '**Installed**' on the Tab page
- The '**luci-app-acl**' package will not be displayed in the package list, and the '**luci-app-acl**' package has been successfully removed

软件包

空闲空间: 95% (7.4 GB)

筛选器: 清除 下载并安装软件包: 确认 操作:

可用 更新

没有软件包

软件包名称	版本	大小 (.ipk)	描述
没有匹配'luci-app-acl'的软件包。(复位)			



6. 11. Using Samba Network Sharing

There are two main software options for implementing OpenWRT LAN file sharing: Samba and NFS. Samba system has good compatibility, while NFS performs better. For users who need to use Windows devices, it is recommended to choose Samba.

- 1) Enter the Samba network share management page
 - a. Find the **"Services"** option in the navigation bar and click to enter
 - b. In the vertical bar options below the service, select **"Network Sharing"** and click to enter



- 2) Select the interface that Samba service needs to listen on
 - a. Select **"General Settings"** in the navigation bar of network sharing and click to enter
 - b. Set the interface to **"Lan"**



网络共享

Samba Version 4.14.12

常规设置 编辑模板

接口: lan:

工作组: ☒ lan:

描述: ☐ -- 自定义 --

启用扩展调整 ☐
 启用一些社区驱动的调整参数，通过 WiFi 可以提高写入速度和更好地运行。不建议多个客户端同时写入同一文件！

强制同步 I/O ☐
 在低端设备上，可以通过强制使用同步 I/O 而不是默认的异步来提高速度。

3) Set the shared directory for network sharing

- Click "Add" in the "Shared Directory" section of the "General Settings" for network sharing to share the directory address
- Enter the name of the shared folder as "mmt" under the name
- Under the path of the shared directory, select the location of the shared directory "/"
- Check 'browseable' and 'allow anonymous users to run'
- Click 'Save and Apply' to save the configuration

共享目录

请添加要共享的目录。每个目录指到已挂载设备上的文件夹。

名称	路径	可 浏 览	只 读	强 制 Root	允 许 用 户	允 许 匿 名 用 户	仅 来 宾 用 户	继 承 所 有 者	创 建 权 限 掩 码	目 录 权 限 掩 码	VFS 对 象	Apple Time- machine 共 享	Time- machine 大 小 (GB)	
2. Enter the name of the shared folder mmt	3. Set shared directory /	☒	☐	☐	☐	☒	☐	☐	0666	0777	☐	☐		删除
1. Click on 'Add' 4. Click 'Save and Apply' to save the configuration														

添加

保存并应用 保存 复位


4) windows 10 starts network discovery and sharing

Note: To access Samba on the Windows 10 system, it is necessary to first confirm whether windows 10 has started network discovery and sharing. If it has not been started, the following settings should be made first.


- Enable access to Samba v1/v2




- a) Enter the Control Panel of windows 10
- b) Click on "Programs" in the left navigation bar of the control panel
- c) Select 'Enable or Disable Windows Features' in Programs and Features
- d) Check 'SMB 1.0/CIFS file sharing support' in the pop-up box to enable or disable Windows features
- e) Click 'OK' to configure the application

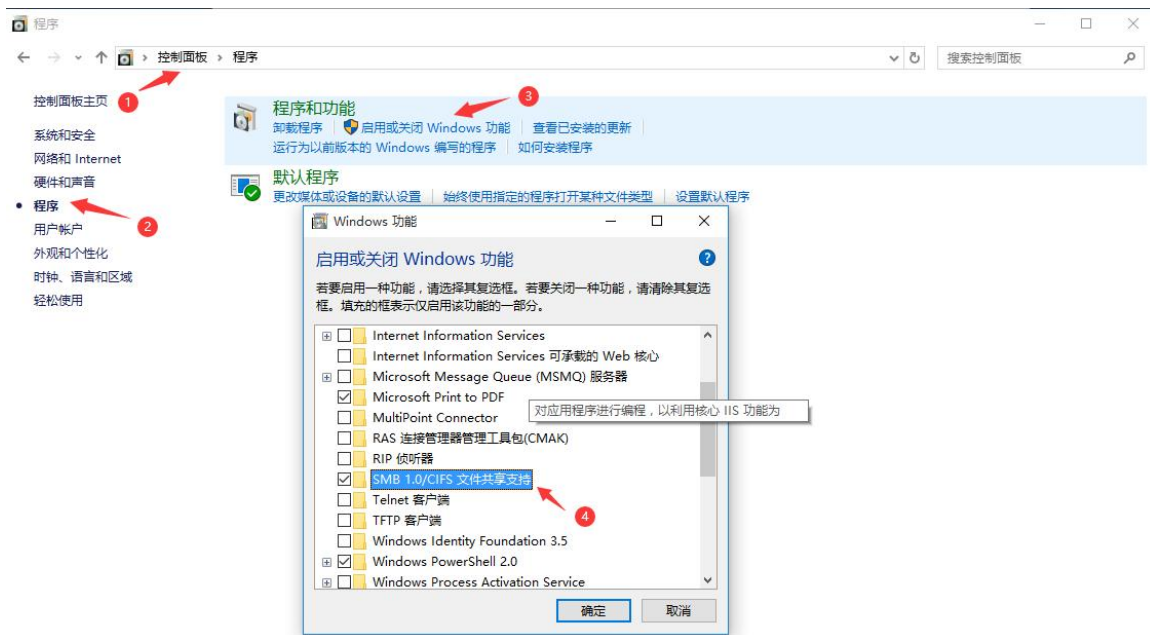

- b. Open Windows 10 Network Discovery
 - a) Enter the Control Panel of windows 10
 - b) Select "Network and Internet" in the control panel
 - c) Then open the "Network and Sharing Center"
 - d) Click on 'Advanced Sharing Settings'
 - e) Open '**Enable Network Discovery**' and '**Enable File and Printer Sharing**'
 - f) Click 'Save Changes' to save the network discovery configuration for Windows 10

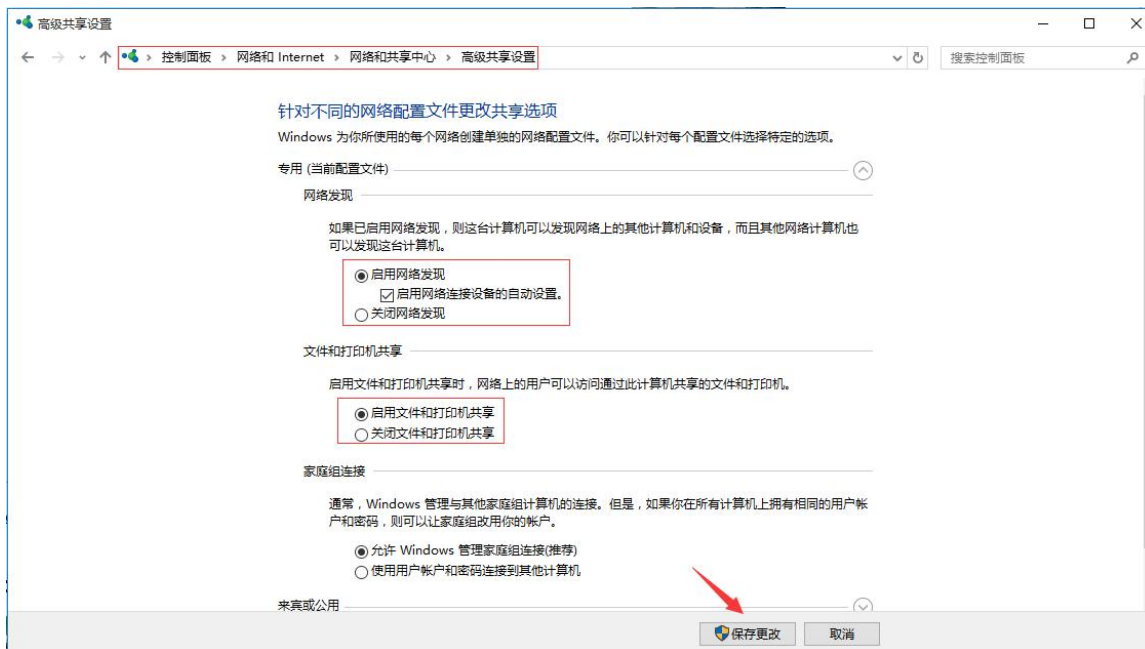

5) After setting up, enter \\OpenWrt in the address bar of the resource manager to access the shared directory. The username is root and the password is the password set by the development board host

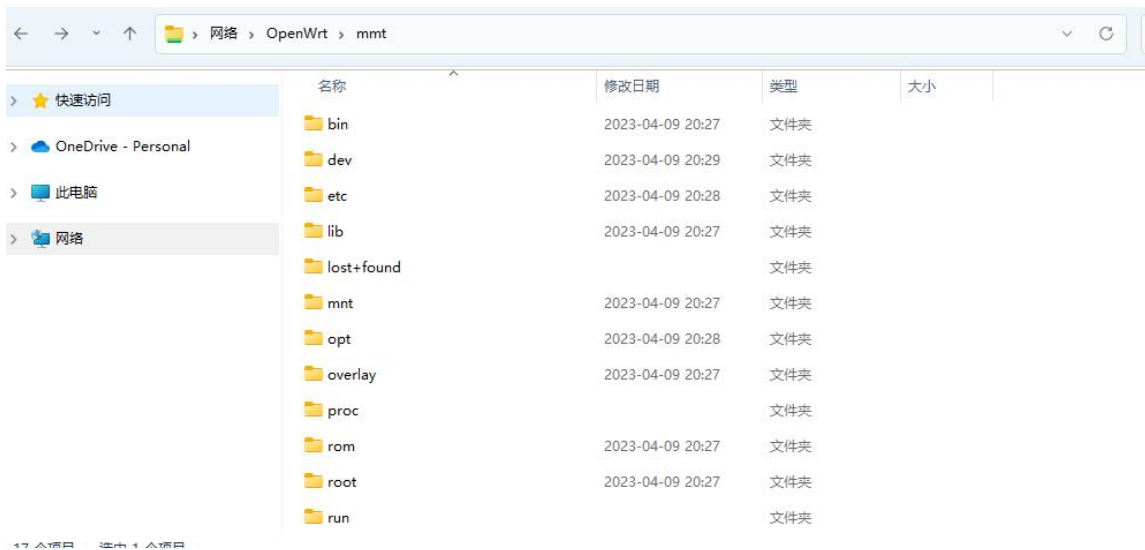



7. Compilation method of OpenWRT source code

7.1. Download OpenWRT source code

1) First, execute the following command to download the main branch code

```
test@test:~$ sudo apt update
test@test:~$ sudo apt install -y git
test@test:~$ git clone https://github.com/orangepi-xunlong/openwrt.git -b main
```

2) After downloading the OpenWRT code, the following files and folders will be included

```
test@test:~/openwrt$ ls
BSDmakefile  Config.in  include  Makefile  README.md  scripts  toolchain
Config  feeds.conf.default  LICENSE  package  rules.mk  target  tools
```

7.2. Compile OpenWRT source code

1) Firstly, install the following dependency packages (currently only tested for compilation on Ubuntu 22.04, which requires installing the following dependency packages. If compiling on other versions of the system, please install the dependency packages yourself according to the error message), and use the following command to install the dependency packages

```
test@test:~/openwrt$ sudo apt update
```



```
test@test:~/openwrt$ sudo apt install -y ack antlr3 asciidoc autoconf \
automake autopoint binutils bison build-essential \
bzip2 ccache cmake cpio curl device-tree-compiler fastjar \
flex gawk gettext gcc-multilib g++-multilib git gperf haveged \
help2man intltool libc6-dev-i386 libelf-dev libglib2.0-dev \
libgmp3-dev libltdl-dev libmpc-dev libmpfr-dev \
libncurses5-dev \libncursesw5-dev libreadline-dev libssl-dev \
libtool lrzsz mkisofs msmtp nano ninja-build p7zip p7zip-full \
patch pkgconf python2.7 python3 python3-pyelftools \
libpython3-dev qemu-utils rsync scons squashfs-tools \
subversion swig texinfo uglifyjs upx-ucl unzip \
vim wget xmlto xxd zlib1g-dev
```

- 2) Then execute `./scripts/feeds update -a` and `./scripts/feeds install -a` download dependency package

```
test@test:~/openwrt$ ./scripts/feeds update -a
test@test:~/openwrt$ ./scripts/feeds install -a
```

- 3) Then choose to use the configuration file of OrangePi Zero 2w

```
test@test:~/openwrt$ cp configs/orangepi-zero2w-h618_defconfig .config
```

- 4) Then execute the following command to make the configuration effective

```
test@test:~/openwrt$ make defconfig
```

- 5) Execute the following command to start compiling the openwrt source code

```
test@test:~/openwrt$ make V=s
```

- 6) After compilation, the path where the image is generated is:

```
bin/targets/sunxi/cortexa53/openwrt-sunxi-cortexa53-xunlong_orangepi-zero2w-ext4-sdcard.img.gz
```



8. Android 12 TV system usage instructions

8.1. Supported Android versions

Android Version	Kernel version
Android 12 TV Version	linux5.4

8.2. Android 12 TV function adaptation status

Motherboard functions	Android12 TV
HDMI video	OK
HDMI Audio	OK
Type-C USB2.0 x 2	OK
TF card startup	OK
WIFI	OK
Bluetooth	OK
USB Camera	OK
LED Light	OK
40pin GPIO	OK
40pin I2C	OK
40pin SPI1	OK
40pin UART	OK
40pin PWM	OK
Temperature Sensor	OK
Hardware watchdog	OK
Mali GPU	OK
Video codec	OK

24pin Expansion board function	Android12 TV
100M network port	OK
100M Ethernet port light	OK
USB2.0 HOST x 2	OK



Infrared reception	OK
Headphone audio playback	OK
On/off button	OK
LRADC Custom buttons x 2	OK, The default setting is the volume up and down keys.
TV-OUT	OK

8. 3. Onboard LED light display instructions

	green light	red light
u-boot startup phase	Off	on
Kernel boot to enter the system	on	on

8. 4. How to return to the previous interface in Android

We generally use the mouse and keyboard to control the Android system of the development board. When entering certain interfaces and need to return to the previous interface or desktop, we can only return by right-clicking the mouse, and the keyboard cannot return.

If you have purchased the infrared remote control (other remote controls do not work) and a 24pin expansion board that come with the development board, after connecting the 24pin expansion board to the development board, you can also use the return key on the remote control to return to the previous menu. The location of the return key is as shown below. Shown:





8. 5. How to use ADB

8. 5. 1. Use network connection adb debugging

Using network adb does not require a USB Type C interface data cable to connect the computer and the development board. Instead, it communicates through the network, so first make sure that the development board's wired or wireless network is connected, and then obtain the IP address of the development board. Next To be used.

1) Make sure the **service.adb.tcp.port** of the Android system is set to 5555 port number

```
apollo-p2:/ # getprop | grep "adb.tcp"
[service.adb.tcp.port]: [5555]
```

2) If **service.adb.tcp.port** is not set, you can use the following command in the serial port to set the port number of the network adb

```
apollo-p2:/ # setprop service.adb.tcp.port 5555
apollo-p2:/ # stop adbd
apollo-p2:/ # start adbd
```

3) Install adb tool on Ubuntu PC

```
test@test:~$ sudo apt-get update
test@test:~$ sudo apt-get install -y adb
```

4) Then connect network adb on Ubuntu PC

```
test@test:~$ adb connect 192.168.1.xxx:5555    (Need to be modified to the IP
address of the development board)
* daemon not running; starting now at tcp:5037
* daemon started successfully
connected to 192.168.1.xxx:5555

test@test:~$ adb devices
List of devices attached
192.168.1.xxx:5555      device
```



5) Then you can log in to the android system through adb shell on Ubuntu PC

```
test@test:~$ adb shell
apollo-p2:/ #
```

8. 5. 2. Use data cable to connect adb debugging

1) Prepare a USB Type C interface data cable, plug one end of the USB interface into the USB interface of the computer, and plug one end of the USB Type C interface into the USB0 interface of the development board (see the description of the picture on the right below for the location of USB0). In this case, the development board is powered by the computer's USB interface, so please ensure that the computer's USB interface can provide the most sufficient power to drive the development board.



Only this Type-C interface has device function and adb can be used



2) Install adb tool on Ubuntu PC

```
test@test:~$ sudo apt-get update
test@test:~$ sudo apt-get install -y adb
```

3) Check whether the ADB device is recognized


```
test@test:~$ adb devices
List of devices attached
4c00146473c28651dd0    device
```

4) Then you can log in to the android system through adb shell on Ubuntu PC


```
test@test:~$ adb shell
apollo-p2:/ $
```

8. 6. View how to set HDMI display resolution


1) Enter first **Settings**

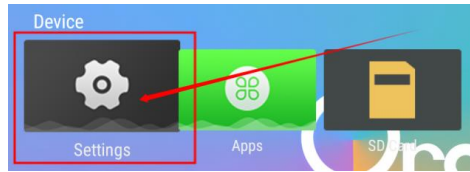


2) Then select **Device Preferences**

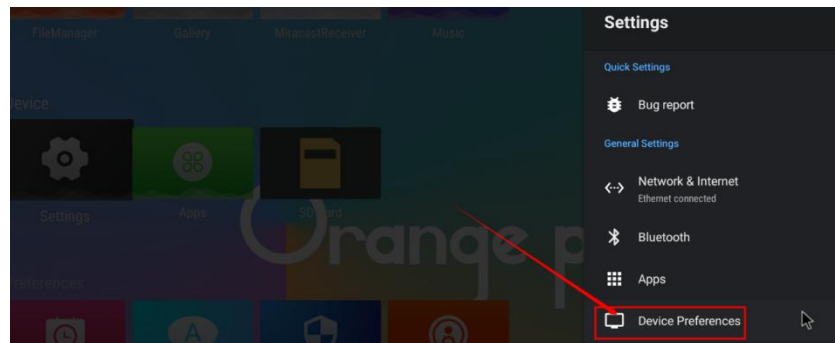


3) Then select **Display & Sound**

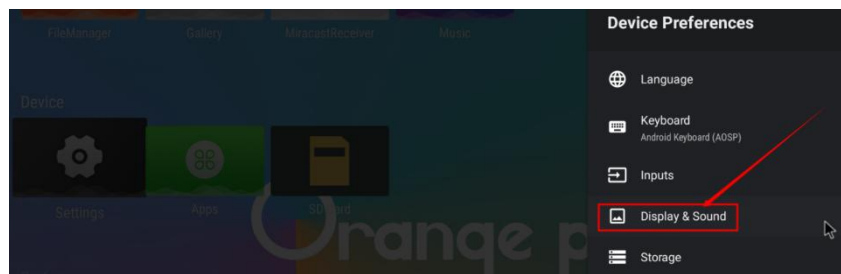

4) Then select **Advanced display settings**

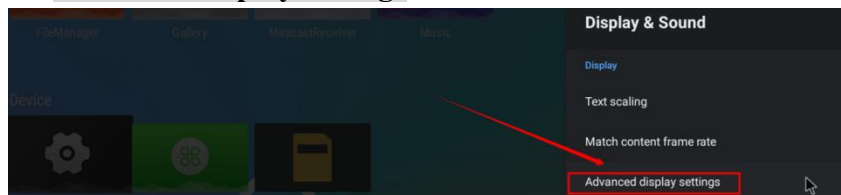


5) Then select **HDMI output mode**

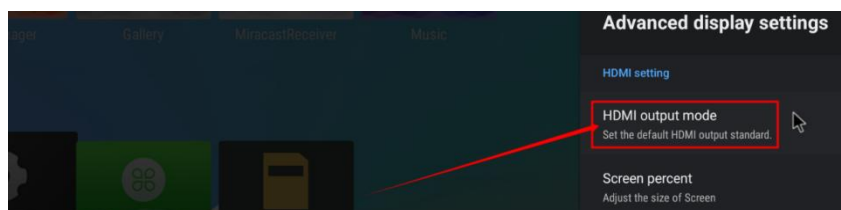




6) Then you can see the list of resolutions supported by the monitor. At this time, clicking the corresponding option will switch to the corresponding resolution. Please note that different monitors may support different resolutions. If you connect it to a TV, you will generally see more resolution options than the picture below.

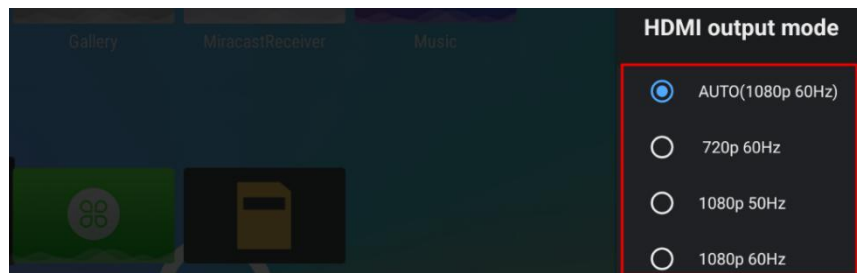

7) The HDMI output of the development board supports 4K display. When connected to a 4K TV, you can see the 4K resolution option.

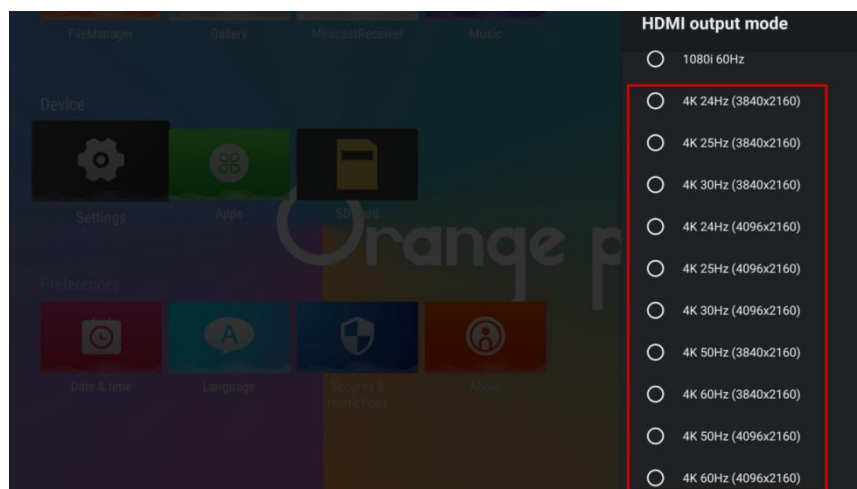

8. 6. 1. HDMI to VGA display test

1) First you need to prepare the following accessories

- a. HDMI to VGA converter




- b. A VGA cable and a Mini HDMI male to HDMI female adapter



- c. A monitor or TV that supports VGA interface


2) HDMI to VGA display test is as follows

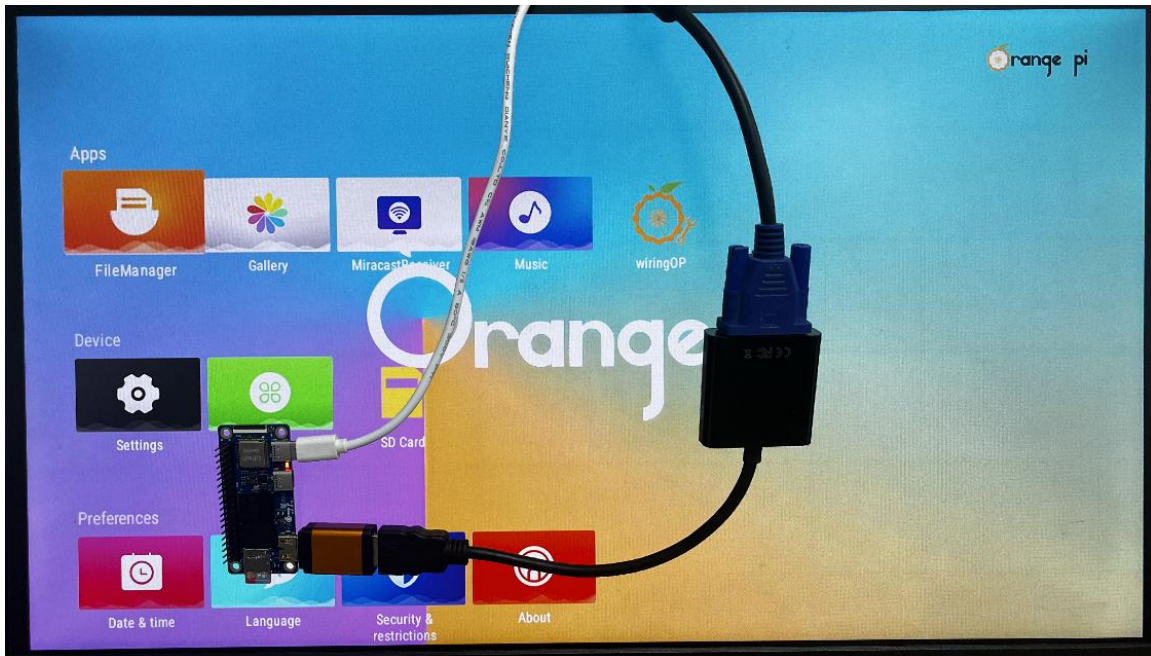


When using HDMI to VGA display, the development board and the Android system of the development board do not need to make any settings. You only need the Mini HDMI interface of the development board to display normally. So if there is a problem with the test, please check whether there is a problem with the HDMI to VGA converter, VGA cable and monitor.

8.7. WI-FI connection method

- 1) Choose first **Settings**

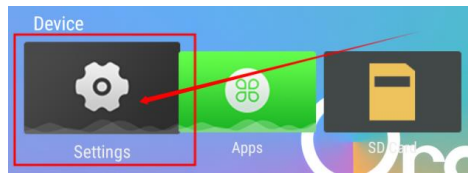


2) Then select **Network & Internet**

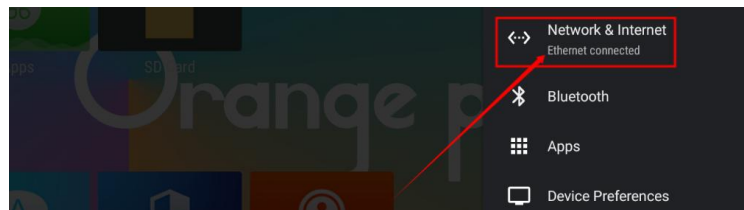


3) Then turn on WI-FI




4) After turning on WI-FI, you can see the searched signals under **Available networks**.

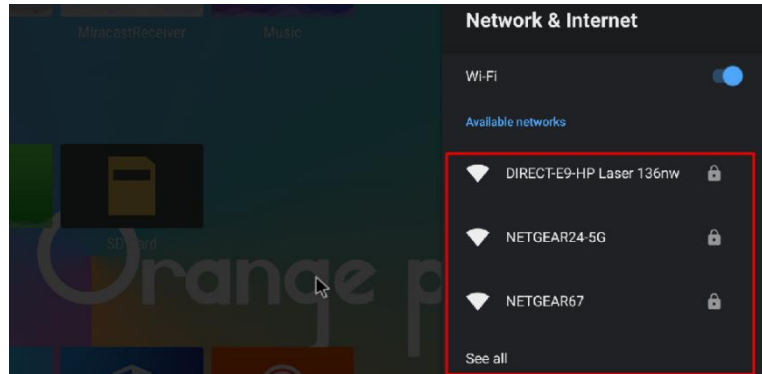


5) After selecting the WI-FI you want to connect to, the password input interface shown below will pop up.

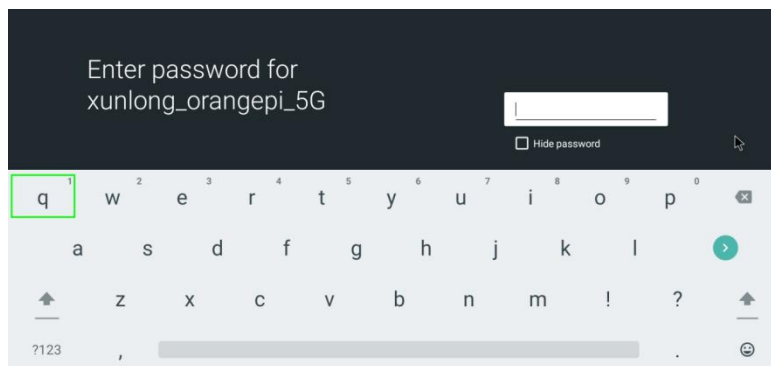

6) Then use the keyboard to enter the password corresponding to the WI-FI, and then use the mouse to click the Enter button on the virtual keyboard to start connecting to the WI-FI.

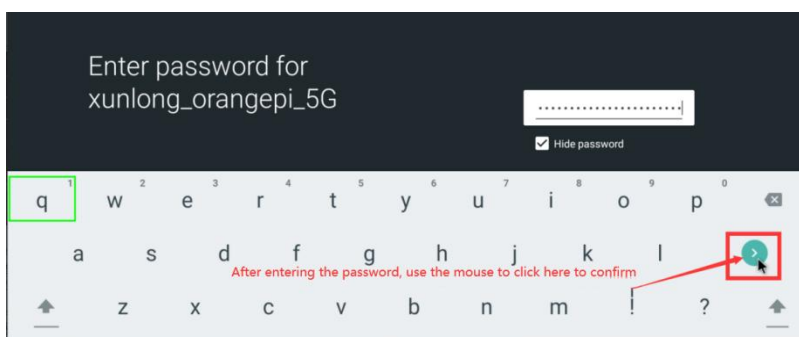


7) The display after successful WI-FI connection is as shown below

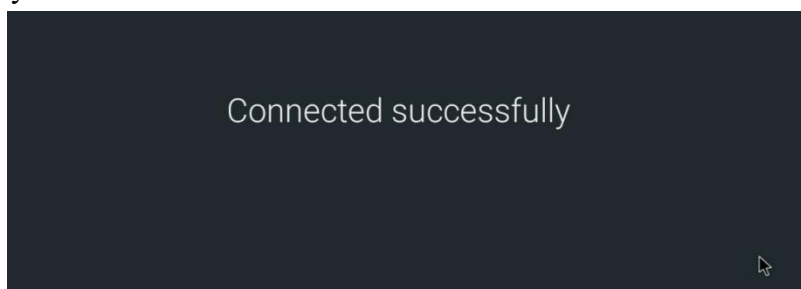


8.8. How to use WI-FI hotspot

1) First, please make sure that the Ethernet port is connected to the network cable and can access the Internet normally.


2) Then select **Settings**

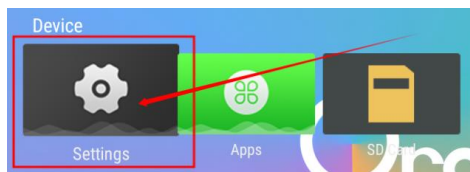


3) Then select **Network & Internet**

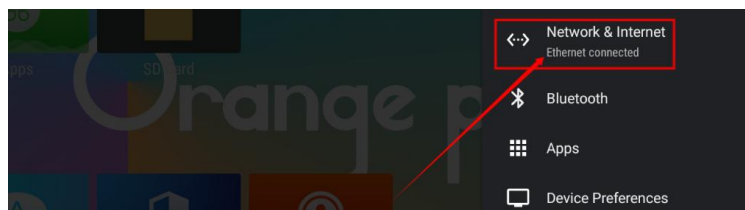

4) Then select **WiFi hotspot**

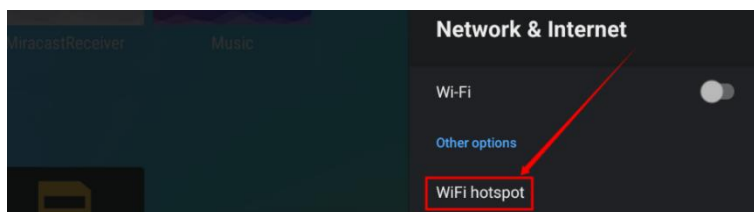

5) Then open **Hotspot Enable**. You can also see the name and password of the generated hotspot in the picture below. Remember them and use them when connecting to the hotspot (if you need to modify the name and password of the hotspot, you need to close Hotspot Enable first. Then you can modify it)

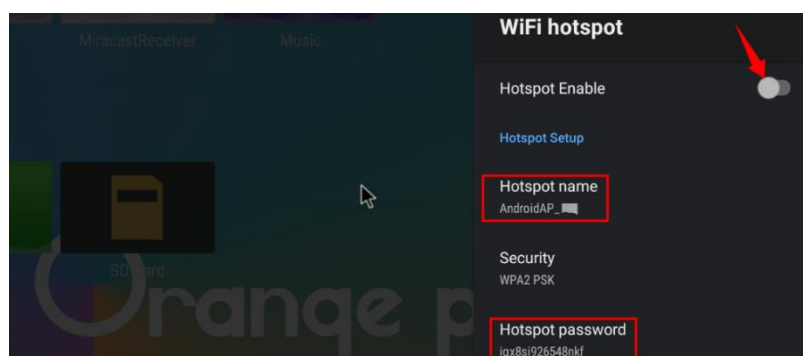


6) At this time, you can take out your mobile phone. If everything is normal, you can find the WIFI hotspot with the same name (**here AndroidAP_7132**) shown under the **Hotspot name** in the picture above in the WI-FI list searched by the mobile phone. Then you can click AndroidAP_7132 to connect to the hotspot. The password can be seen



under the **Hotspot password** in the picture above.




7) After the connection is successful, it will be displayed as shown below (the interface will be different on different mobile phones, the specific interface is subject to the one displayed on your mobile phone). At this time, you can open a web page on your mobile phone to see if you can access the Internet. If the web page can be opened normally, it means that the **WI-FI Hotspot** of the development board can be used normally.

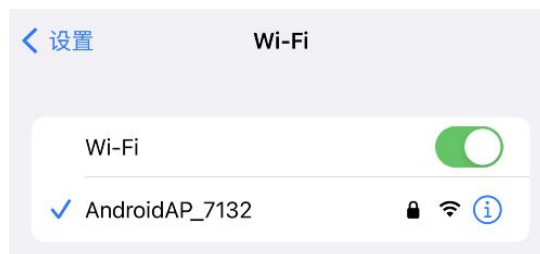


8. 9. How to check the IP address of the Ethernet port

1) There is no wired network interface on the main board of the development board. We can expand the 100M Ethernet through a 24pin expansion board.

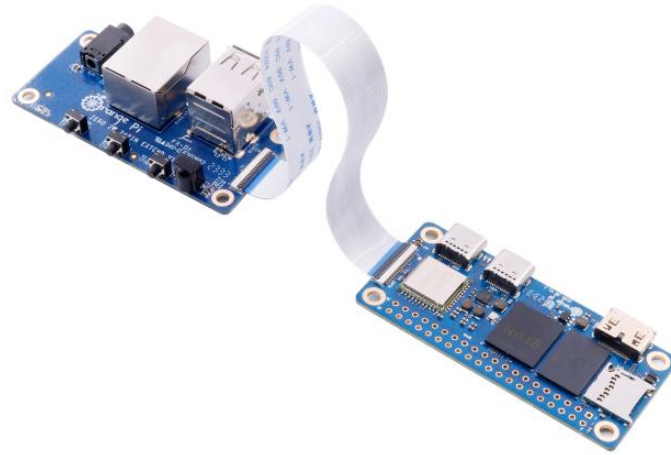


2) Then make sure the network port of the expansion board is connected to the router or switch

3) Then open **Settings**

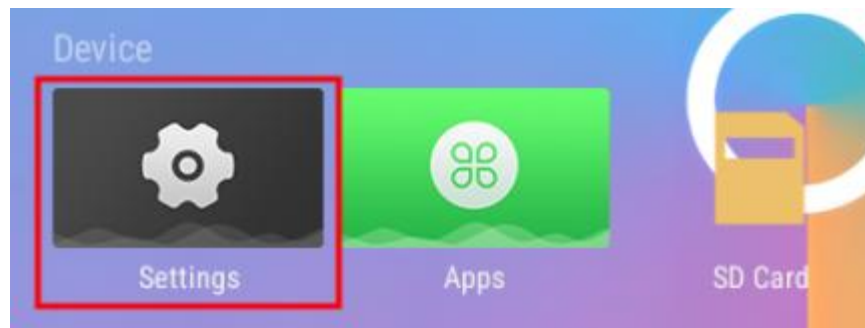

4) Then select **Network & Internet**

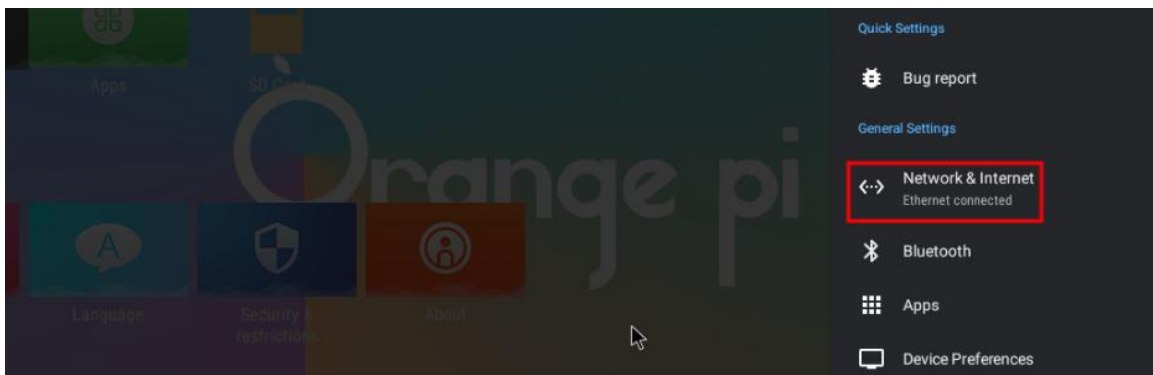


5) Then you can see the IP address of the development board's wired network port at the location shown in the picture below.




8. 10. Bluetooth connection method


1) Choose first **Settings**

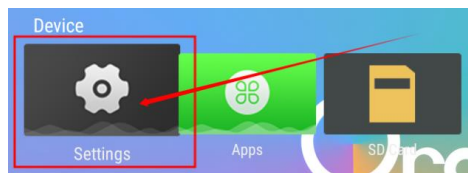

2) Then select **Bluetooth**

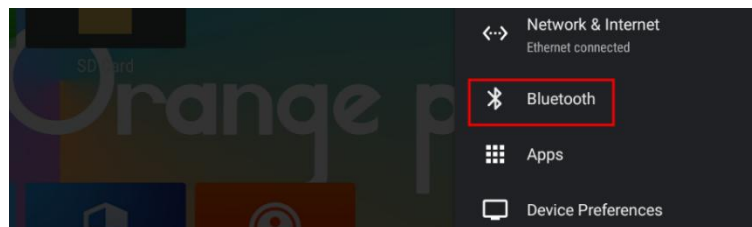


3) Then Open **Bluetooth Enable**

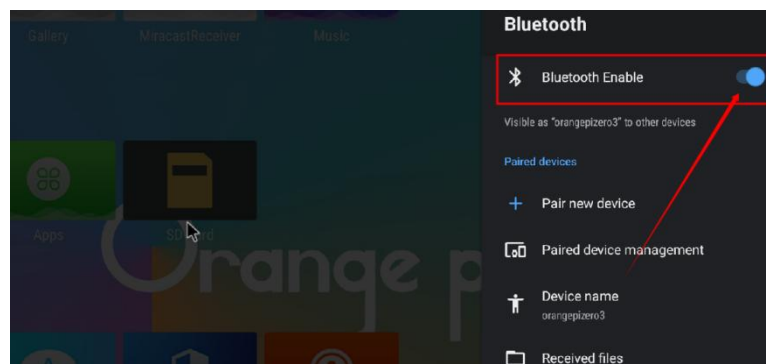





4) Then click **Pair new device** to start scanning for surrounding Bluetooth devices

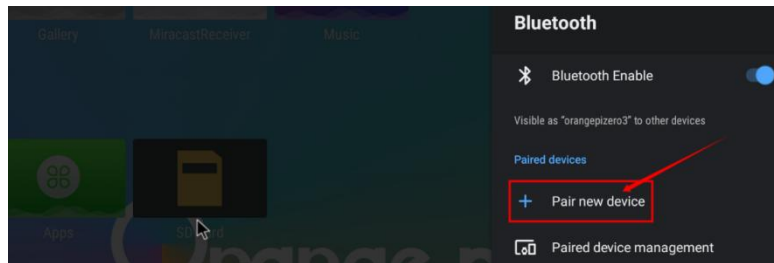


5) The searched Bluetooth devices will be displayed under **Available devices**

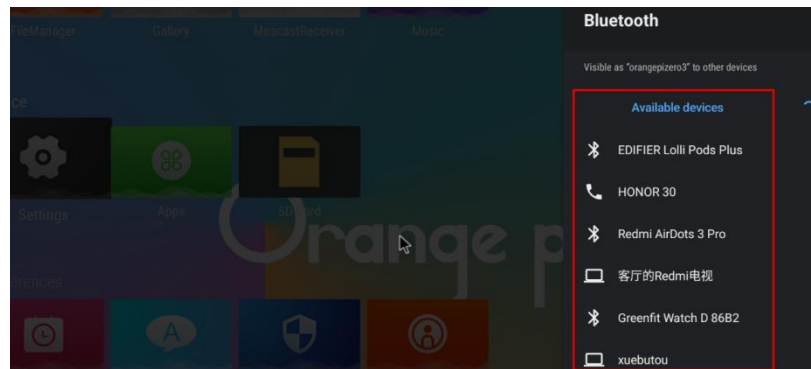


6) Then click on the Bluetooth device you want to connect to start pairing. When the following interface pops up, please use the mouse to select the **Pair** option

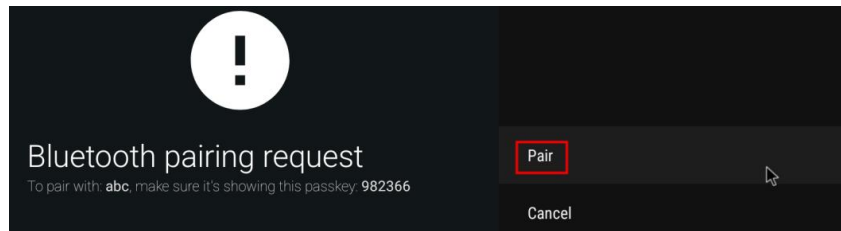


7) What is tested here is the Bluetooth configuration process between the development board and the Android phone. At this time, the following confirmation interface will pop up on the phone. Click the pairing button on the phone to start the pairing process.

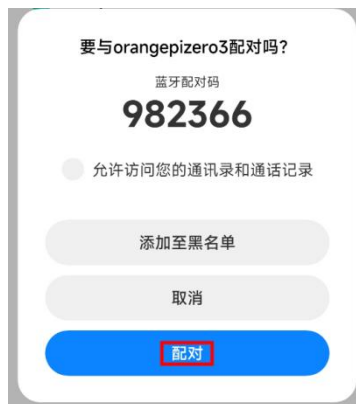


8) After pairing is completed, open **Paired devices** and you will see the paired Bluetooth devices.

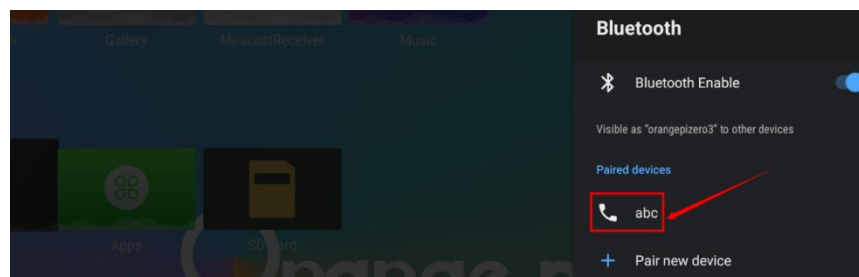

9) At this time, you can use the Bluetooth of your mobile phone to send a picture to the development board. After sending, you can see the following confirmation interface in the Android system of the development board, and then click **Accept** to start receiving the pictures sent by the mobile phone.

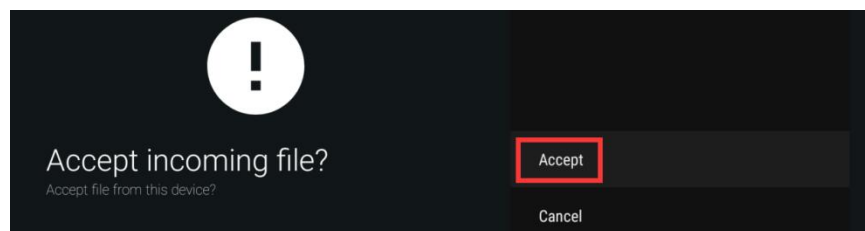


10) Pictures received by the Bluetooth system of the development board Android system can be viewed in **Received files**.

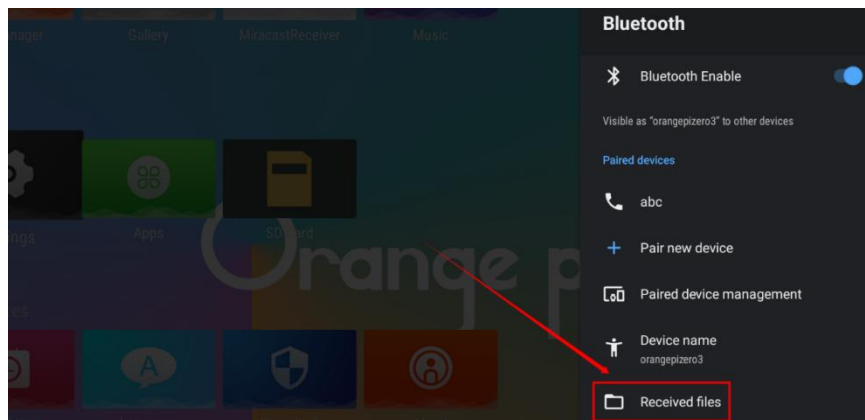

8. 11. How to set USB0 to HOST mode

As shown in the figure below, there are two Type-C interfaces on the motherboard of the development board: USB0 and USB1. Both of these interfaces can be used to power the development board, and they can also be used as USB2.0 HOST interfaces. The difference between USB0 and USB1 is that in addition to being set to HOST mode, USB0 can also be set to Device mode, while USB1 only has HOST mode.

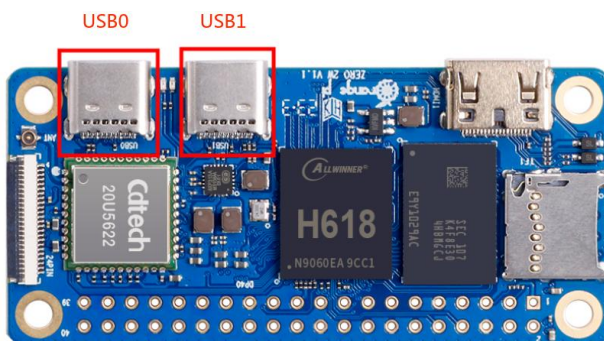

USB0 of the Android12 TV system released by Orange Pi is set to Device mode by default, so when there is no need to use USB0 Device mode (ADB function needs to ensure that USB0 is in Device mode), it is recommended to use USB0 for power supply, so that USB1 can be directly used to connect USB devices .

If you want to use USB0 to connect USB devices, you need to set USB0 to HOST mode. The method is as follows:

- e. Run the following command to set USB0 to HOST mode:

```
apollo-p2:/ # cat /sys/devices/platform/soc@3000000/soc@3000000\:usb0@0/usb_host
host_chose finished!
apollo-p2:/ #
```



f. Run the following command to switch back to Device mode

```
apollo-p2:/ # cat /sys/devices/platform/soc@3000000/soc@3000000\:usbc0@0/usb_device
device_chose finished!
apollo-p2:/ #
```

g. The command to view the current mode of USB0 is

```
apollo-p2:/ # cat /sys/devices/platform/soc@3000000/soc@3000000\:usbc0@0/otg_role
usb_host
```

8. 12. How to use USB camera

1) First insert the USB (UVC protocol) camera into the USB interface of the development board

2) If the USB camera is recognized normally, the corresponding video device node will be generated under /dev

```
console:/ # ls /dev/video0
/dev/video0
```

3) Then make sure that the adb connection between the Ubuntu PC and the development board is normal. For how to use adb, please refer to the instructions in the section "[How to use ADB](#)".

4) Download the USB camera test APP from the **official tool** on the development board information download page

Official Resources



User Manual

[Downloads](#)



Schematic

[Downloads](#)



Official Tools

[Downloads](#)



... > Office_Tools > Android test APP


Type People Modified

Name	Owner	Last modified	File size
usbcamera.apk	me	20 Sept 2023	20 MB
rootcheck.apk	me	20 Sept 2023	2 MB
Firefox.apk	me	20 Sept 2023	78.8 MB

5) Then use the adb command to install the USB camera test APP into the Android system. Of course, you can also use a USB disk copy to install it.

```
test@test:~$ adb install usbcamera.apk
```

6) After installation, you can see the startup icon of the USB camera on the Android desktop.

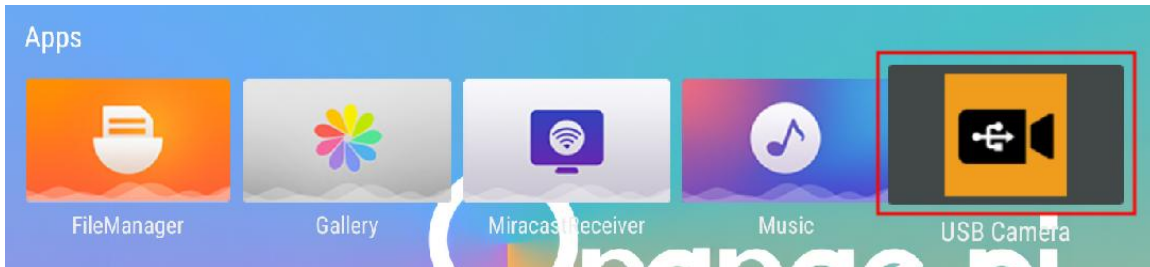

7) Then double-click to open the USB camera APP and you can see the output video of the USB camera.

8. 13. Android system ROOT description

。 The Android system released by Orange Pi has been ROOT and can be tested using the following method.

1) Download from the **official tool** on the development board data download page **rootcheck.apk**



Official Resources




User Manual

[Downloads](#)

Schematic

[Downloads](#)

Official Tools

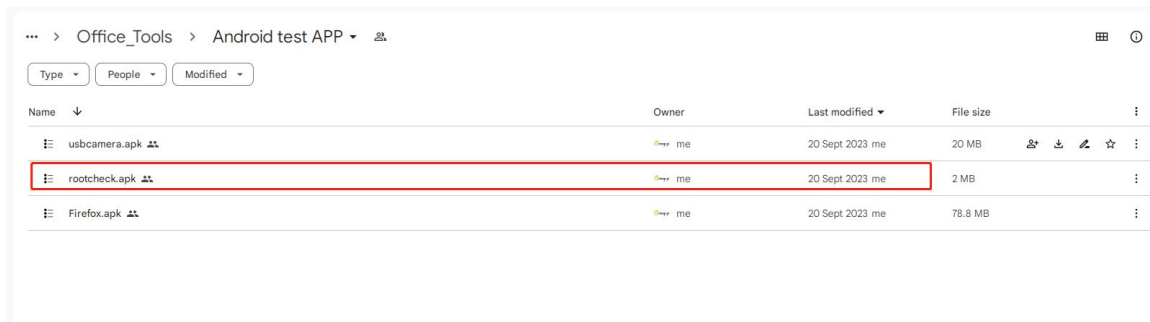
[Downloads](#)

2) Then make sure that the adb connection between the Ubuntu PC and the development board is normal. For how to use adb, please refer to the instructions in the section "[How to use ADB](#)".


3) Then use the adb command to install rootcheck.apk into the Android system. Of course, you can also use a USB disk copy to install it.

```
test@test:~$ adb install rootcheck.apk
```


4) After installation, you can see the startup icon of the ROOT test tool on the Android desktop.

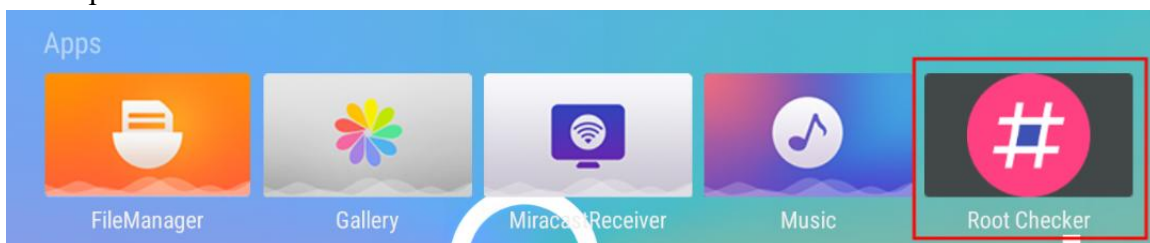

5) The display interface after opening the **ROOT test tool** for the first time is as shown below

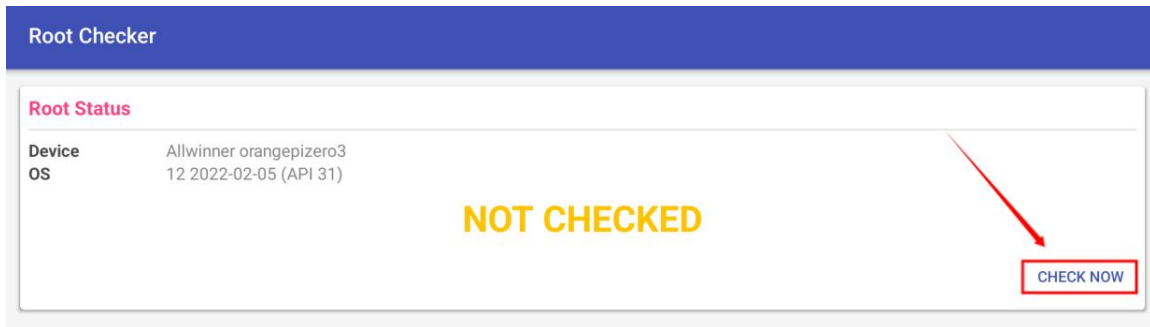


6) Then you can click **CHECK NOW** to start checking the ROOT status of the Android system. After the check is completed, the display is as follows. You can see that the Android system has obtained ROOT permissions.

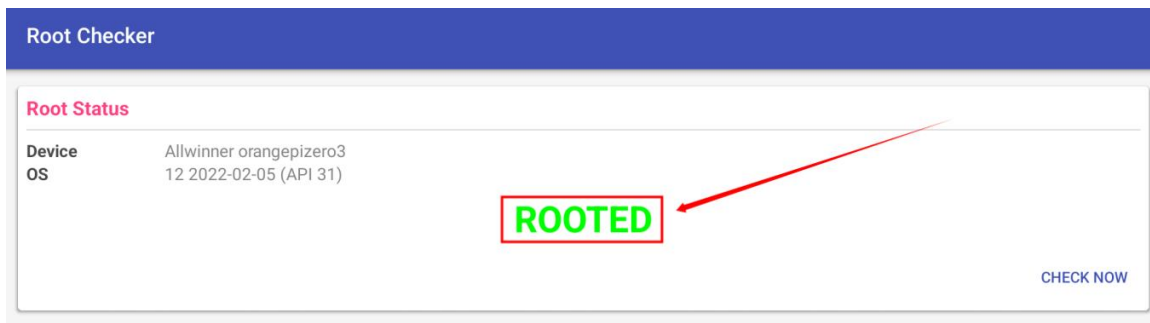


8. 14. How to use MiracastReceiver to cast the mobile phone screen to the development board

1) First, please make sure that both the development board and the mobile phone are connected to the same WIFI hotspot. For the method of connecting the development board to WIFI, please refer to [the instructions in the WI-FI connection method](#).

2) Then open the **MiracastReceiver** application in the Android system of the development board

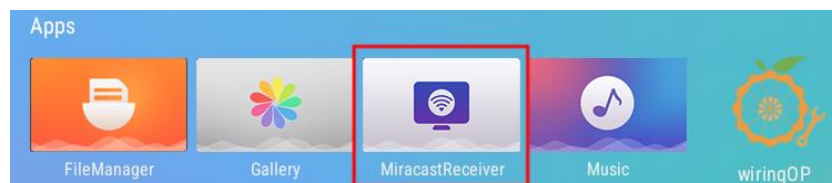


3) The interface after **MiracastReceiver** is opened is as follows

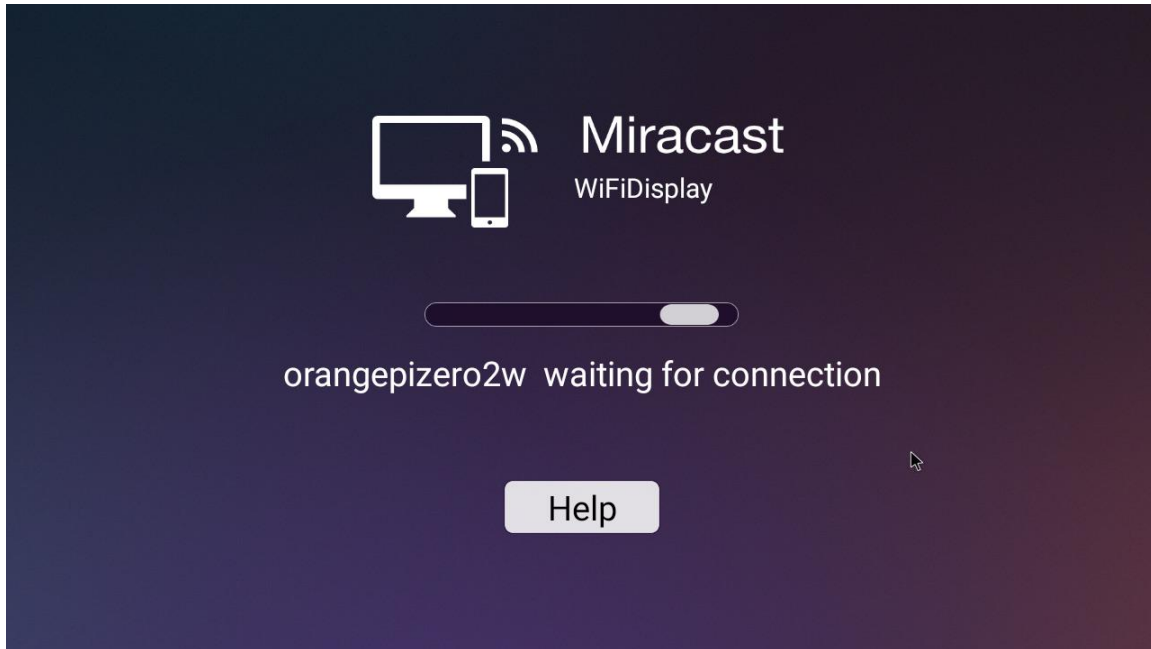


4) Then find the screen mirroring function in the phone settings. Here we take **Xiaomi 12S Pro mobile phone** as an example. Please research other brands of mobile phones by yourself. As shown in the picture below, click the button in the red box to open the screen mirroring function of the phone.




5) After waiting for a period of time, you will be able to see the searched connectable devices on your mobile phone, and then we can select the device corresponding to the development board to connect.

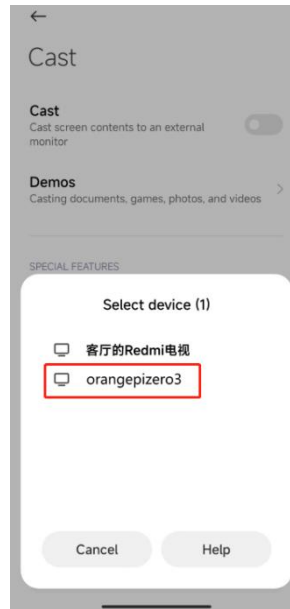

6) Then the selection box shown in the figure below will pop up in the **MiracastReceiver** application interface of the development board. Here we can select **Accept**

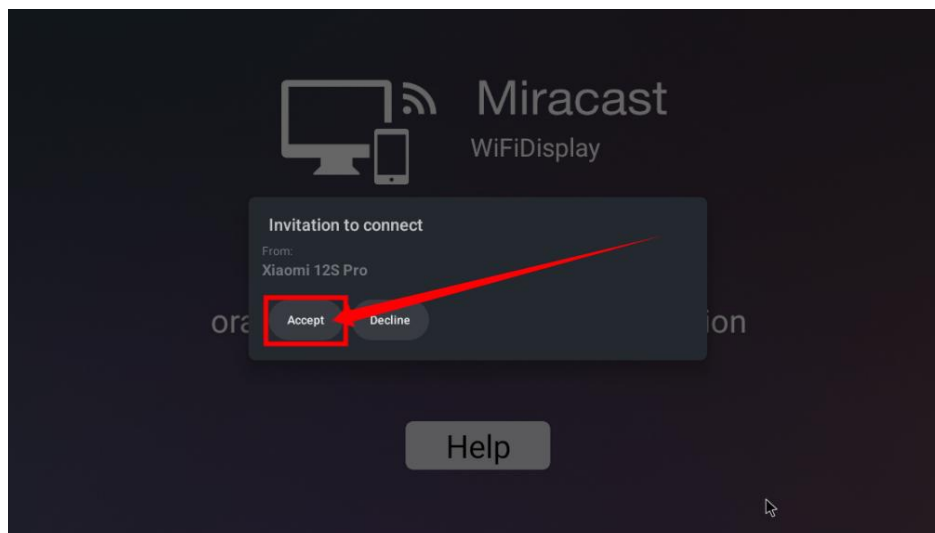


7) Then you can see the content of the mobile phone screen on the HDMI screen connected to the development board

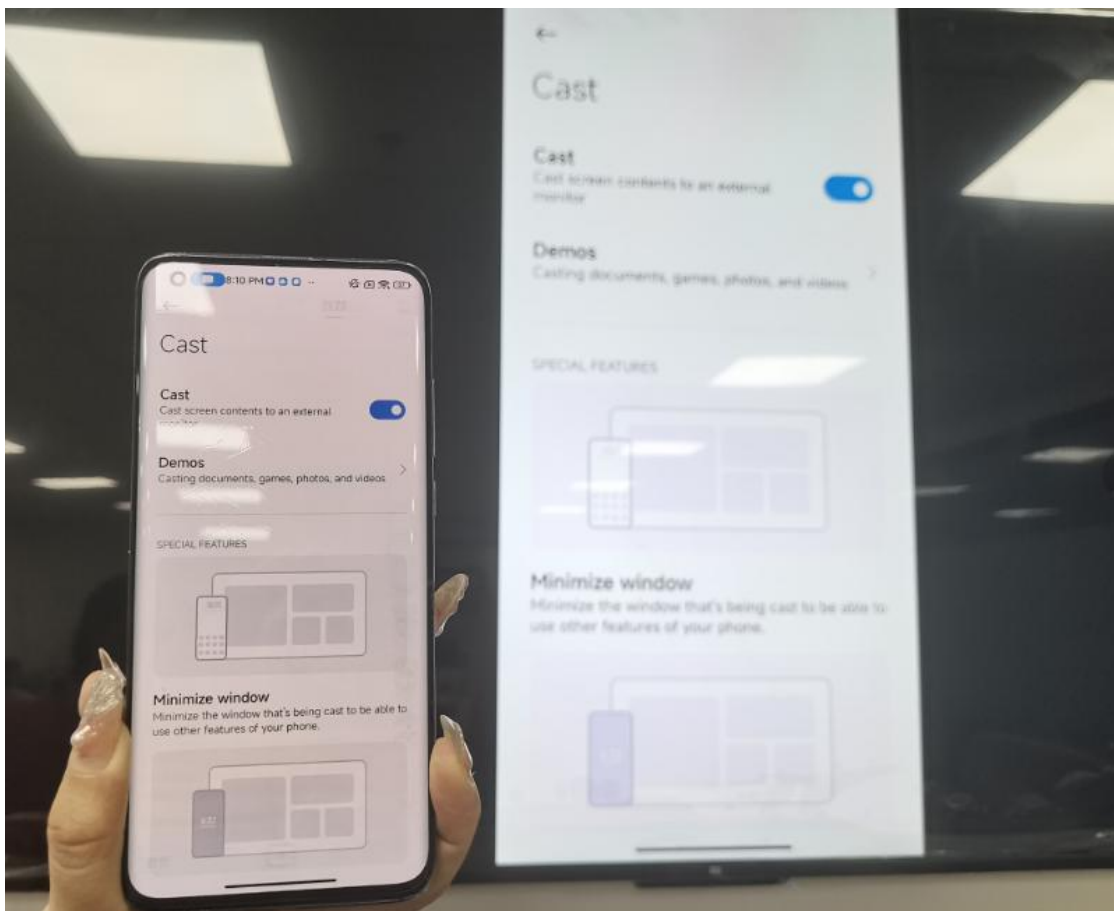

8.15. Method of turning on and off the machine through buttons or infrared remote control

We can turn off or turn on the Android system of the development board through the power on/off button or infrared remote control. However, it should be noted that there is no power on/off button and infrared receiver on the main board of the development board, and it needs to be expanded through a 24pin expansion board.

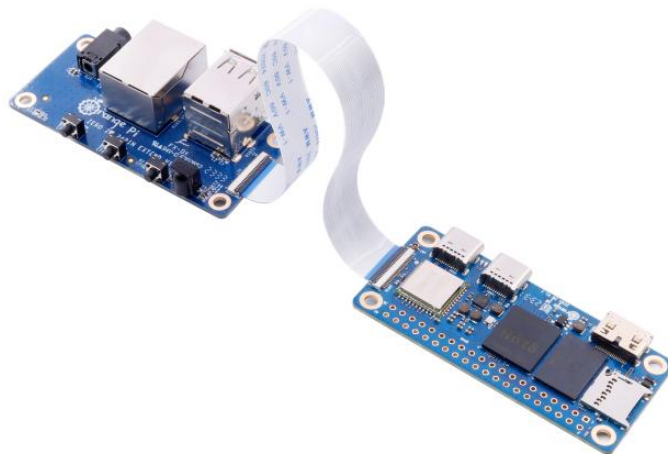


The location of the power button on the 24pin expansion board is as shown in the figure below:



The location of the infrared remote control power button is as follows:



When shutting down, we need to press and hold the power button or the power button on the infrared remote control, and then the Android system will pop up the confirmation dialog box shown in the figure below, and then select **OK** to shut down the Android system.

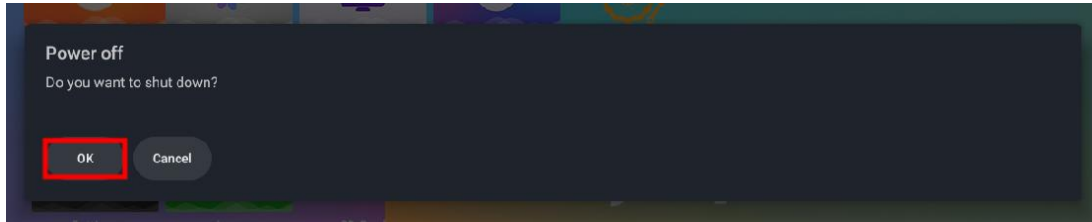


After shutting down, press and hold the power button or the power button on the infrared remote control again to turn it on.

8. 16. 40pin interface GPIO, UART, SPI test


Note: The pin header on the 40pin interface is not soldered by default, and you need to solder it yourself before it can be used.

8. 16. 1. 40pin GPIO port test method

1) First open wiringOP APP on the desktop

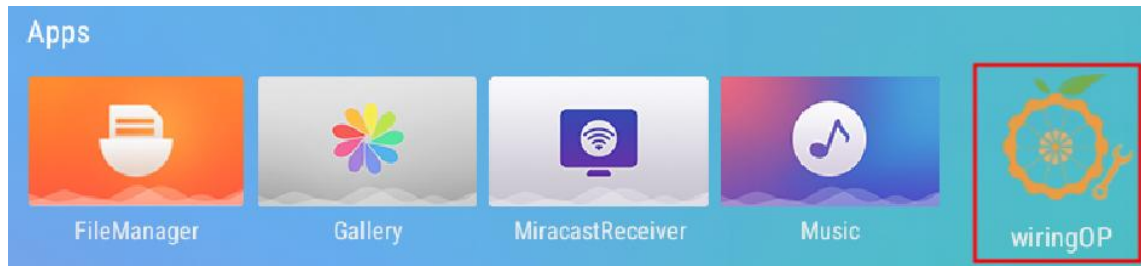

2) Then click the **GPIO_TEST** button to open the GPIO test interface

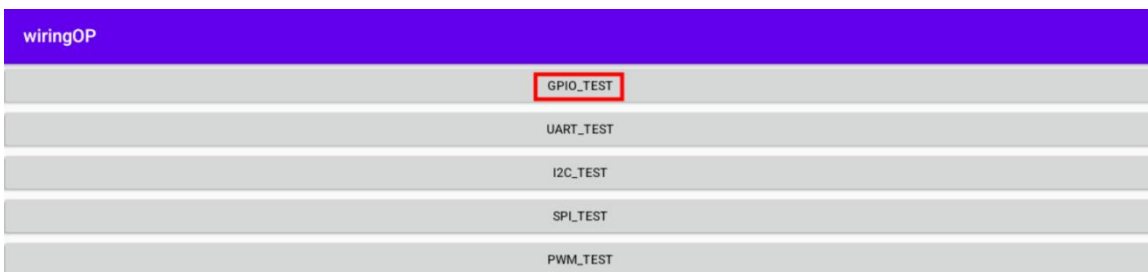


3) The GPIO test interface is as shown in the figure below. The two rows of **CheckBox** buttons on the left have a one-to-one correspondence with the 40pin pins. When the **CheckBox** button is checked, the corresponding GPIO pin will be set to **OUT** mode and the pin level is set to high level; when unchecked, the GPIO pin level will be set to low level; when the GPIO is clicked When you click the **GPIO READALL** button, you can



get information such as wPi number, GPIO mode, pin level, etc.; when you click the **BLINK ALL GPIO** button, all GPIO ports will cycle through outputting high and low levels. This function can be used to test all the 40pin pins. GPIO port.



4) Then click the **GPIO READALL** button, and the output information is as shown below:

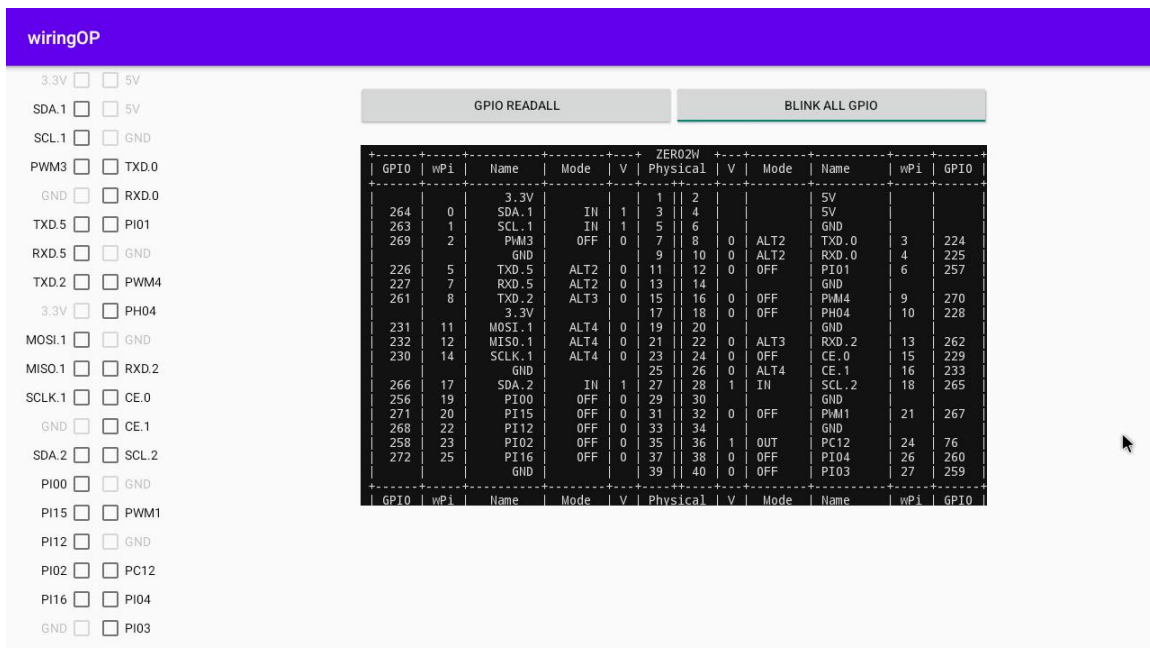

5) There are a total of 28 GPIO ports available in the 40-pin development board. The



following takes pin 12 - corresponding to GPIO PI01 - corresponding to wPi serial number 6 - as an example to demonstrate how to set the high and low levels of the GPIO port. First click the **CheckBox** button corresponding to pin 12. When the button is selected, pin 12 will be set to high level. After setting, you can use a multimeter to measure the value of the voltage of the pin. If it is **3.3v**, it means the setting High level success.


GPIO	wPi	Name	Mode	V	Physical	V	Mode	Name	wPi	GPIO	
264	0	3.3V	IN	1	3	2		5V			
263	1	SDA.1	IN	1	3	4		5V			
269	2	SCL.1	IN	1	5	6		GND			
		PWM3	OFF	0	7	8	0	ALT2	TXD.0	3	224
		GND			9	10	0	ALT2	RXD.0	4	225
226	5	TXD.5	ALT2	0	11	12	0	OFF	PI01	6	257
227	7	RXD.5	ALT2	0	13	14			GND		
261	8	TXD.2	ALT3	0	15	16	0	OFF	PWM4	9	270
		3.3V			17	18	0	OFF	PH04	10	228
231	11	MOSI.1	ALT4	0	19	20			GND		
232	12	MISO.1	ALT4	0	21	22	0	ALT3	RXD.2	13	262
230	14	SCLK.1	ALT4	0	23	24	0	OFF	CE.0	15	229
		GND			25	26	0	ALT4	CE.1	16	233
266	17	SDA.2	IN	1	27	28	1	IN	SCL.2	18	265
256	19	PI00	OFF	0	29	30			GND		
271	20	PI15	OFF	0	31	32	0	OFF	PWM1	21	267
268	22	PI12	OFF	0	33	34			GND		
258	23	PI02	OFF	0	35	36	1	OUT	PC12	24	76
272	25	PI16	OFF	0	37	38	0	OFF	PI04	26	260
		GND			39	40	0	OFF	PI03	27	259

6) Then click the **GPIO READALL** button and you can see that the current pin 12 mode is **OUT** and the pin level is high level.


GPIO	wPi	Name	Mode	V	Physical	V	Mode	Name	wPi	GPIO	
264	0	3.3V	IN	1	3	2		5V			
263	1	SDA.1	IN	1	3	4		5V			
269	2	SCL.1	IN	1	5	6		GND			
		PWM3	OFF	0	7	8	0	ALT2	TXD.0	3	224
		GND			9	10	0	ALT2	RXD.0	4	225
226	5	TXD.5	ALT2	0	11	12	1	OUT	PI01	6	257
227	7	RXD.5	ALT2	0	13	14			GND		
261	8	TXD.2	ALT3	0	15	16	0	OFF	PWM4	9	270
		3.3V			17	18	0	OFF	PH04	10	228
231	11	MOSI.1	ALT4	0	19	20			GND		
232	12	MISO.1	ALT4	0	21	22	0	ALT3	RXD.2	13	262
230	14	SCLK.1	ALT4	0	23	24	0	OFF	CE.0	15	229
		GND			25	26	0	ALT4	CE.1	16	233
266	17	SDA.2	IN	1	27	28	1	IN	SCL.2	18	265
256	19	PI00	OFF	0	29	30			GND		
271	20	PI15	OFF	0	31	32	0	OFF	PWM1	21	267
268	22	PI12	OFF	0	33	34			GND		
258	23	PI02	OFF	0	35	36	1	OUT	PC12	24	76
272	25	PI16	OFF	0	37	38	0	OFF	PI04	26	260
		GND			39	40	0	OFF	PI03	27	259



7) Click the **CheckBox** button in the picture below again to uncheck it, and pin 12 will be set to low level. After setting, you can use a multimeter to measure the voltage value of the pin. If it is **0v**, it means the low level setting is successful.

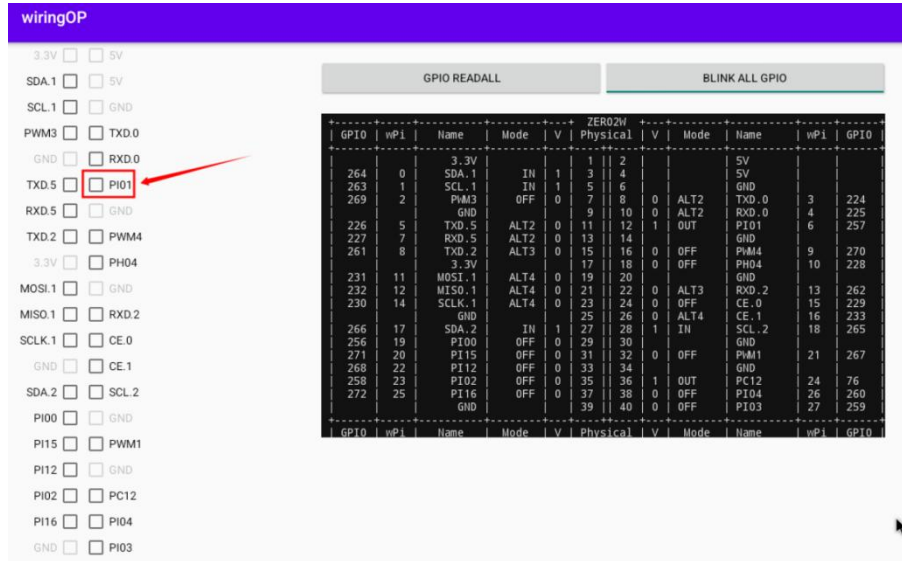

8) Then click the **GPIO READALL** button and you can see that the current pin 12 mode is OUT and the pin level is low level.

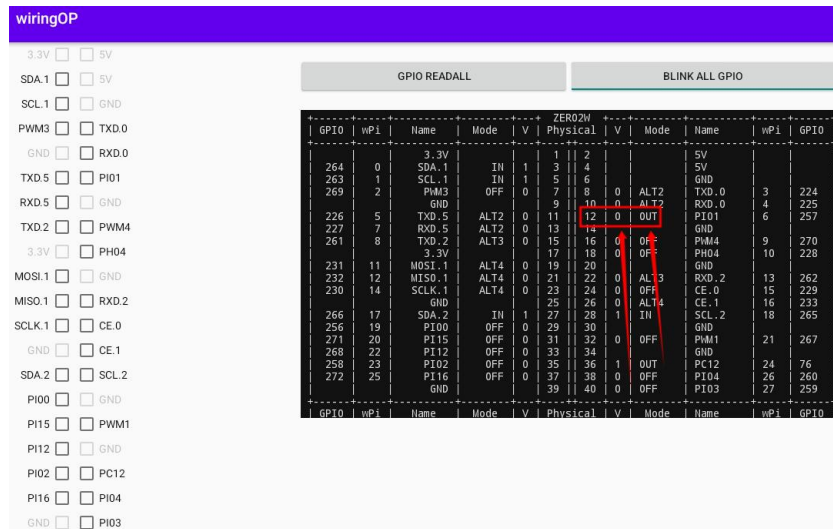

8. 16. 2. 40pin UART test method

1) As can be seen from the table below, the default uarts available in the Android12 TV system are uart2 and uart5. Please note that uart0 is set as a debugging serial port by default. Please do not use uart0 as a normal serial port.

GPIO序号	GPIO	功能	引脚	引脚	功能	GPIO	GPIO序号
--------	------	----	----	----	----	------	--------




		3.3V	1	2	5V		
264	PI8	TWI1-SDA	3	4	5V		
263	PI7	TWI1-SCL	5	6	GND		
269	PI13	PWM3	7	8	UART0_TX	PH0	224
		GND	9	10	UART0_RX	PH1	225
226	PH2	UART5_TX	11	12		PI1	257
227	PH3	UART5_RX	13	14	GND		
261	PI5	UART2_TX	15	16	PWM4	PI14	270
		3.3V	17	18		PH4	228
231	PH7	SPI1_MOSI	19	20	GND		
232	PH8	SPI1_MISO	21	22	UART2_RX	PI6	262
230	PH6	SPI1_CLK	23	24	SPI1_CS0	PH5	229
		GND	25	26	SPI1_CS1	PH9	233
266	PI10	TWI2-SDA	27	28	TWI2-SCL	PI9	265
256	PI0		29	30	GND		
271	PI15		31	32	PWM1	PI11	267
268	PI12	PWM2	33	34	GND		
258	PI2		35	36		PC12	76
272	PI16		37	38		PI4	260
		GND	39	40		PI3	259


2) The device node corresponding to uart2 is **/dev/ttyAS2**, and the device node corresponding to uart5 is **/dev/ttyAS5**

```
apollo-p2:/ # ls /dev/ttyAS*
/dev/ttyAS0 /dev/ttyAS1 /dev/ttyAS2 /dev/ttyAS5
```


3) First open wiringOP APP on the desktop

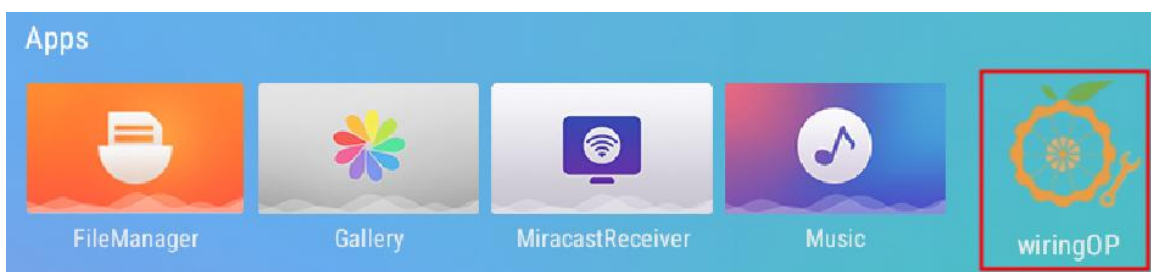


4) Then click the **UART_TEST** button to open the UART test interface

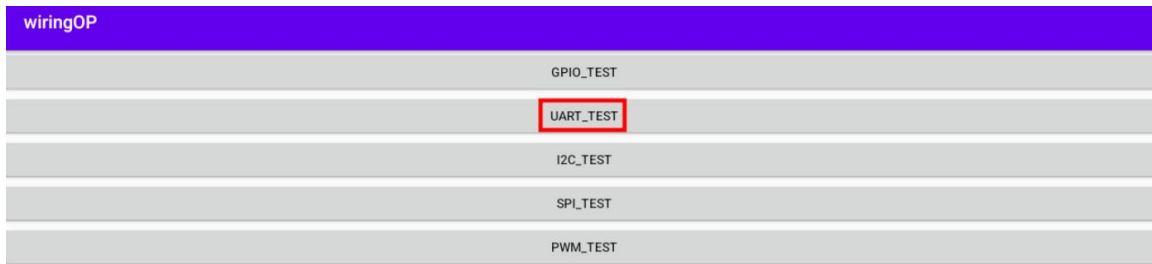


5) The serial port test interface of wiringOP is as shown in the figure below

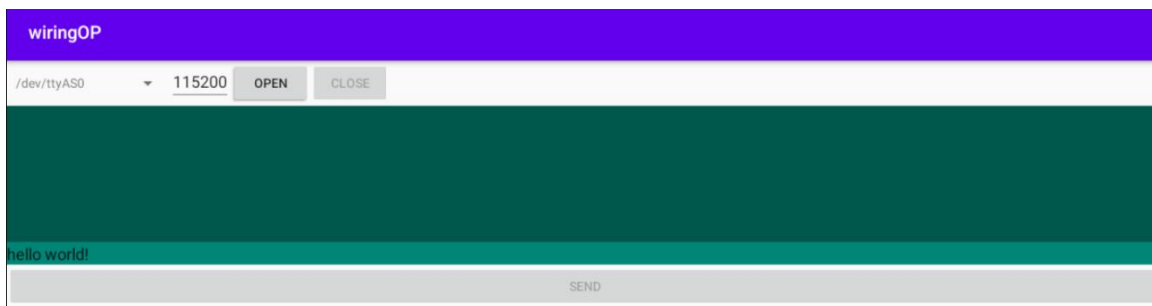

6) Then select the `/dev/ttyAS2` or `/dev/ttyAS5` node in the selection box

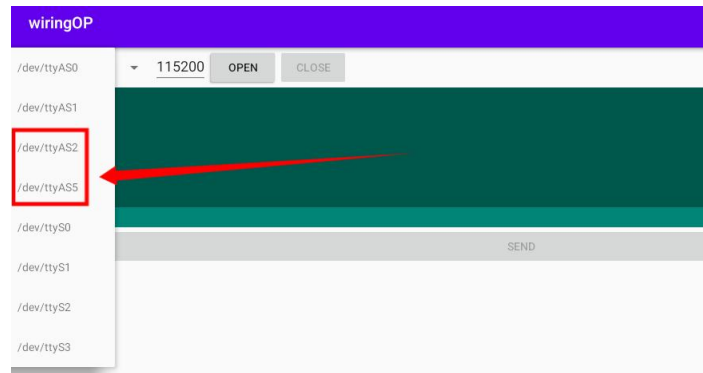


7) Enter the baud rate you want to set in the edit box, and then click the **OPEN** button to open the uart node. After the opening is successful, the **OPEN** button becomes unselectable, and the **CLOSE** button and **SEND** button become selectable.

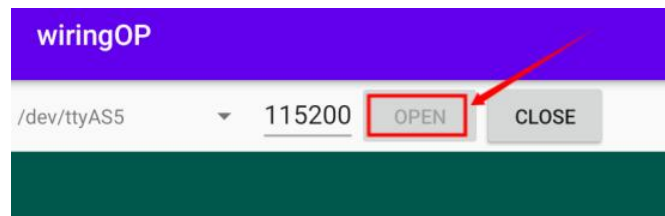


8) Then use Dupont wire to short the rx and tx pins of uart



9) Then you can enter a paragraph of characters in the send edit box below and click the **SEND** button to start sending.

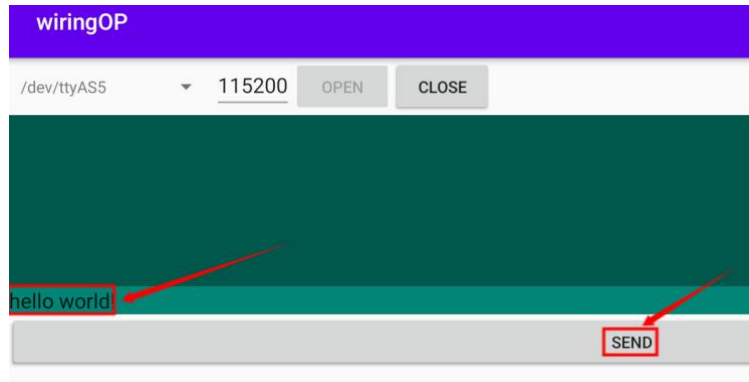

10) If everything is normal, the received string will be displayed in the receiving box

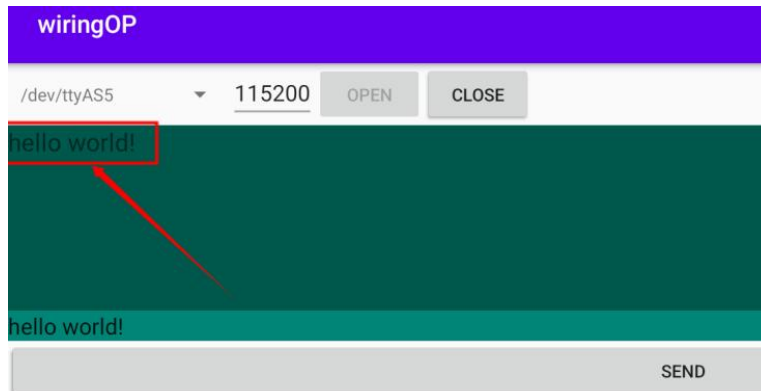

8. 16. 3. 40pin SPI test method

1) As can be seen from the table below, the spi available for the 40pin interface is spi1, and there are two chip select pins cs0 and cs1

GPIO serial number	GPIO	Function	pin
		3.3V	1
264	PI8	TWI1-SDA	3
263	PI7	TWI1-SCL	5
269	PI13	PWM3	7
		GND	9
226	PH2	UART5_TX	11
227	PH3	UART5_RX	13

pin	Function	GPIO	GPIO serial number
2	5V		
4	5V		
6	GND		
8	UART0_TX	PH0	224
10	UART0_RX	PH1	225
12		PI1	257
14	GND		



261	PI5	UART2_TX	15	16	PWM4	PI14	270
		3.3V	17	18		PH4	228
231	PH7	SPI1_MOSI	19	20	GND		
232	PH8	SPI1_MISO	21	22	UART2_RX	PI6	262
230	PH6	SPI1_CLK	23	24	SPI1_CS0	PH5	229
		GND	25	26	SPI1_CS1	PH9	233
266	PI10	TWI2-SDA	27	28	TWI2-SCL	PI9	265
256	PI0		29	30	GND		
271	PI15		31	32	PWM1	PI11	267
268	PI12	PWM2	33	34	GND		
258	PI2		35	36		PC12	76


- 2) The device node corresponding to SPI1 CS0 is `/dev/spidev1.0`, and the device node corresponding to SPI1 CS1 is `/dev/spidev1.1`

```
apollo-p2:/ # ls /dev/spidev1.*
/dev/spidev1.0 /dev/spidev1.1
```


- 3) Here is a demonstration to test the SPI1 interface through the `w25qxx` module. First, connect the w25qxx module to the SPI1 interface.

It doesn't matter if there is no w25qxx module, because there is a SPIFlash on the development board connected to SPI0, and the configuration of SPI0 is also turned on by default in Android, so we can also directly use the onboard SPIFlash for testing.


- 4) Then open wiringOP APP on the desktop

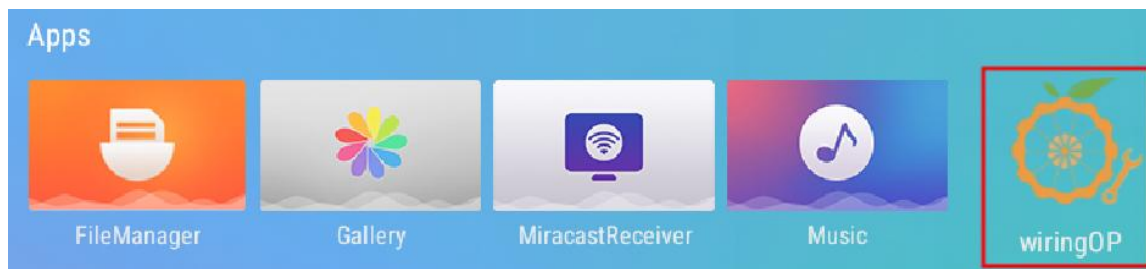


- 5) Then click the `SPI_TEST` button to open the SPI test interface

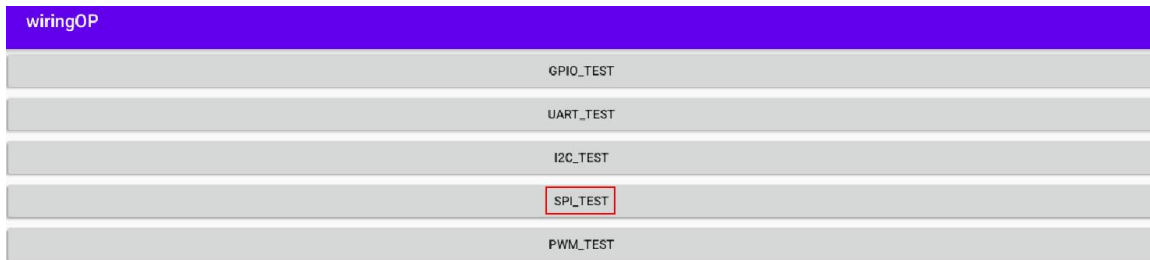

6) Then select the spi device node in the upper left corner. If you test the onboard SPIFlash directly, just keep the default `/dev/spidev0.0`. If the **w25qxx** module is connected to the 40pin spi1 cs0, then please select `/dev/spidev1.0`, if the w25qxx module is connected to the 40pin spi1 cs1, then please select `/dev/spidev1.1`

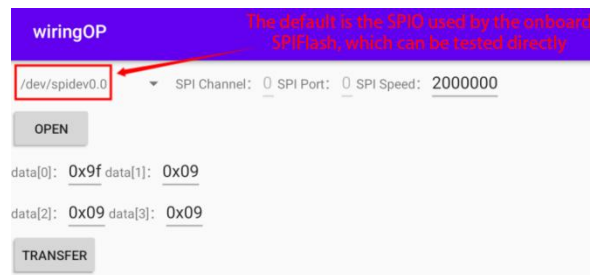


7) Then click the **OPEN** button to initialize the SPI

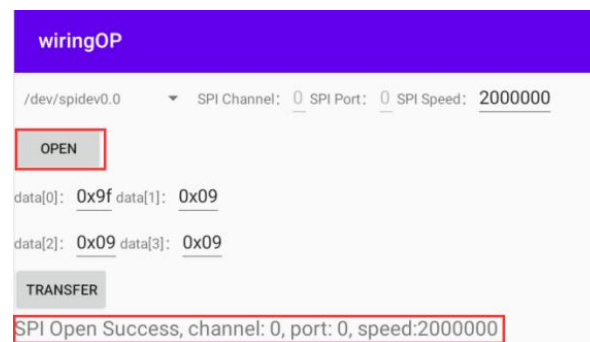

8) Then fill in the bytes that need to be sent, such as reading the ID information of the onboard SPIFlash, filling in the address 0x9f in data[0], and then click the **TRANSFER** button



9) Finally, the APP will display the read ID information of the onboard SPI Flash.

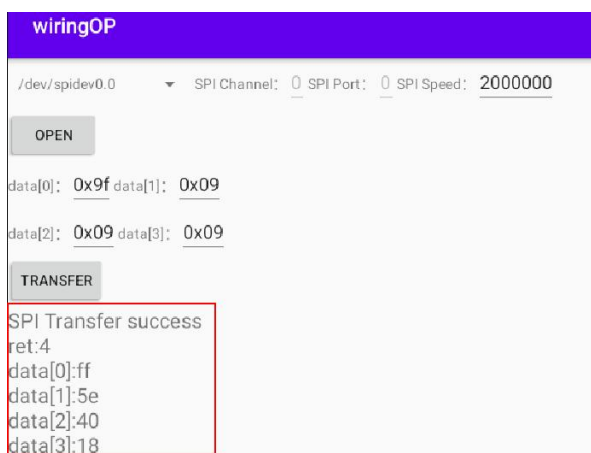

10) If the w25qxx module connected to 40pin SPI1 is read, the ID information of the onboard SPI Flash is also similar.

8. 16. 4. 40pin I2C test method

1) As can be seen from the table below, the Android12 TV system has i2c1 and i2c2 turned on by default.

GPIO serial number	GPIO	Function	pin
		3.3V	1
264	PI8	TWI1-SDA	3
263	PI7	TWI1-SCL	5
269	PI13	PWM3	7
		GND	9
226	PH2	UART5_TX	11

pin	Function	GPIO	GPIO serial number
2	5V		
4	5V		
6	GND		
8	UART0_TX	PH0	224
10	UART0_RX	PH1	225
12		PI1	257




227	PH3	UART5_RX	13
261	PI5	UART2_TX	15
		3.3V	17
231	PH7	SPI1_MOSI	19
232	PH8	SPI1_MISO	21
230	PH6	SPI1_CLK	23
		GND	25
266	PI10	TWI2-SDA	27
256	PI0		29
271	PI15		31
268	PI12	PWM2	33
258	PI2		35
272	PI16		37
		GND	39

14	GND		
16	PWM4	PI14	270
18		PH4	228
20	GND		
22	UART2_RX	PI6	262
24	SPI1_CS0	PH5	229
26	SPI1_CS1	PH9	233
28	TWI2-SCL	PI9	265
30	GND		
32	PWM1	PI11	267
34	GND		
36		PC12	76
38		PI4	260
40		PI3	259


2) The device node corresponding to i2c1 is **/dev/i2c-1**, and the device node corresponding to i2c2 is **/dev/i2c-2**

```
apollo-p2:/ # ls /dev/i2c-*
/dev/i2c-1 /dev/i2c-2 /dev/i2c-5
```

3) First open wiringOP APP on the desktop

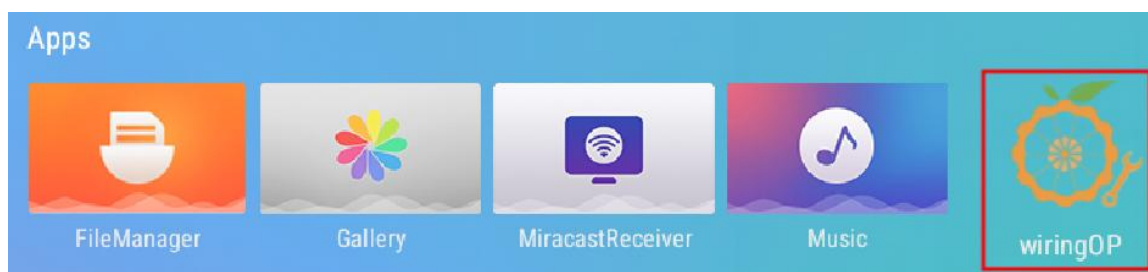

4) Then click the **I2C_TEST** button to open the i2c test interface

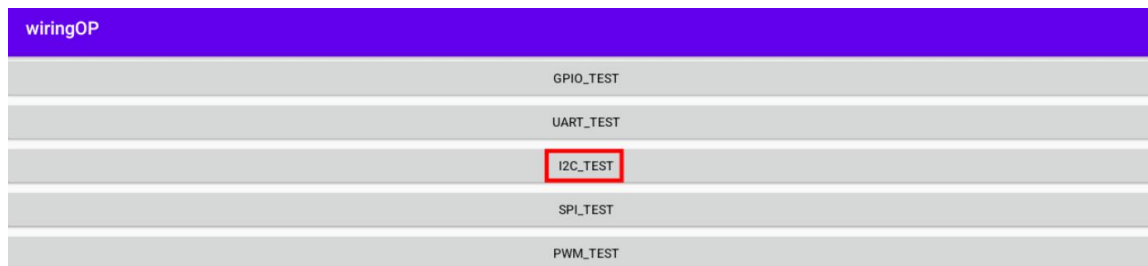




5) The i2c test interface of wiringOP is shown in the figure below



6) Then click the device node selection box in the upper left corner to select the i2c you want to test



7) Then connect an i2c device to the 40pin i2c pin. Here we take the ds1307 rtc module as an example.

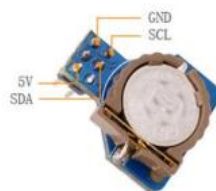

8) The i2c address of the ds1307 rtc module is 0x68. After connecting the lines, we can use the **i2cdetect -y 1** or **i2cdetect -y 2** command on the serial port command line to check whether the i2c address of the ds1307 rtc module can be scanned. If you can see the address 0x68, it means that the ds1307 rtc module is wired correctly.

```
apollo-p2:/ # i2cdetect -y 1
```


Or



```
apollo-p2:/ # i2cdetect -y 2
```

```
apollo-p2:/ # i2cdetect -y 1
   0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
10:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
20:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
30:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
40:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
50:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
60:  --  --  --  --  --  --  --  68  --  --  --  --  --  --  --
70:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
apollo-p2:/ #
```

9) Then set the i2c address to 0x68 in wiringOP, and then click the **OPEN** button to open i2c

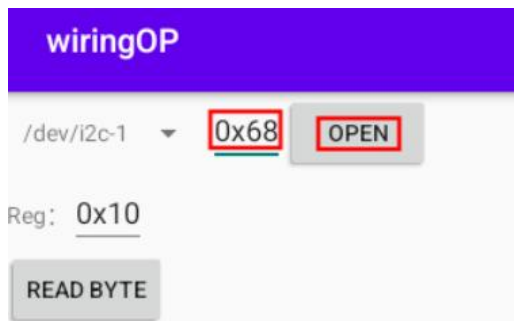

10) After clicking the **OPEN** button to open i2c, the display is as follows



11) Then we test writing a value to the register of the rtc module, for example, writing 0x55 to the 0x1c address

a. We first set the address of the register to be written to 0x1c



- b. Then set the value to be written to 0x55



- c. Then click the **WRITE BYTE** button to perform the writing action



12) Then click the **READ BYTE** button to read the value of the 0x1c register. If it displays 0x55, it means that the i2c read and write test has passed.



8. 16. 5. 40pin PWM test


1) As can be seen from the table below, the available pwm are pwm1, pwm2, pwm3 and pwm4.

GPI0 serial number	GPI0	Function	pin
		3.3V	1
264	PI8	TWI1-SDA	3
263	PI7	TWI1-SCL	5
269	PI13	PWM3	7
		GND	9
226	PH2	UART5_TX	11
227	PH3	UART5_RX	13
261	PI5	UART2_TX	15
		3.3V	17
231	PH7	SPI1_MOSI	19
232	PH8	SPI1_MISO	21
230	PH6	SPI1_CLK	23
		GND	25
266	PI10	TWI2-SDA	27
256	PI0		29
271	PI15		31
268	PI12	PWM2	33
258	PI2		35
272	PI16		37
		GND	39


pin	Function	GPI0	GPI0 serial number
2	5V		
4	5V		
6	GND		
8	UART0_TX	PH0	224
10	UART0_RX	PH1	225
12		PI1	257
14	GND		
16	PWM4	PI14	270
18		PH4	228
20	GND		
22	UART2_RX	PI6	262
24	SPI1_CS0	PH5	229
26	SPI1_CS1	PH9	233
28	TWI2-SCL	PI9	265
30	GND		
32	PWM1	PI11	267
34	GND		
36		PC12	76
38		PI4	260
40		PI3	259




2) First click the wiringOP icon to open wiringOP APP

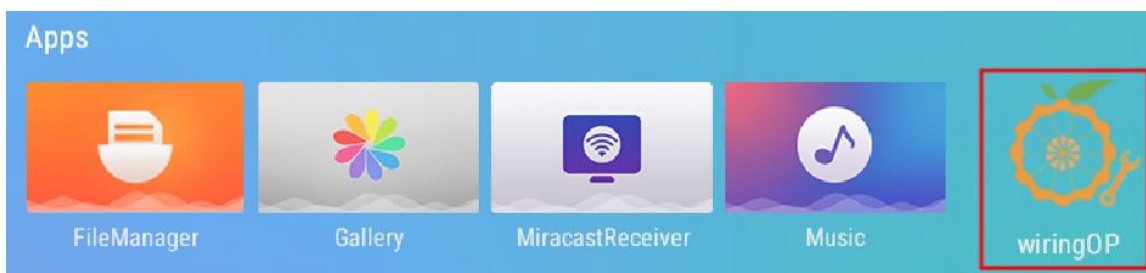


3) Then click the **PWM_TEST** button on the main interface of wiringOP to enter the PWM test interface

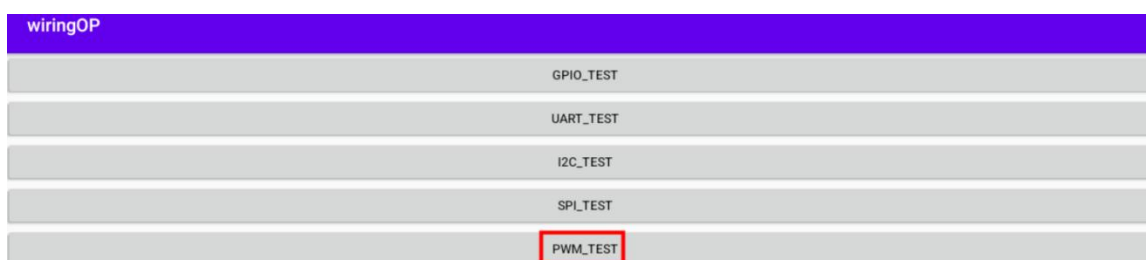

4) The PWM test interface is as follows

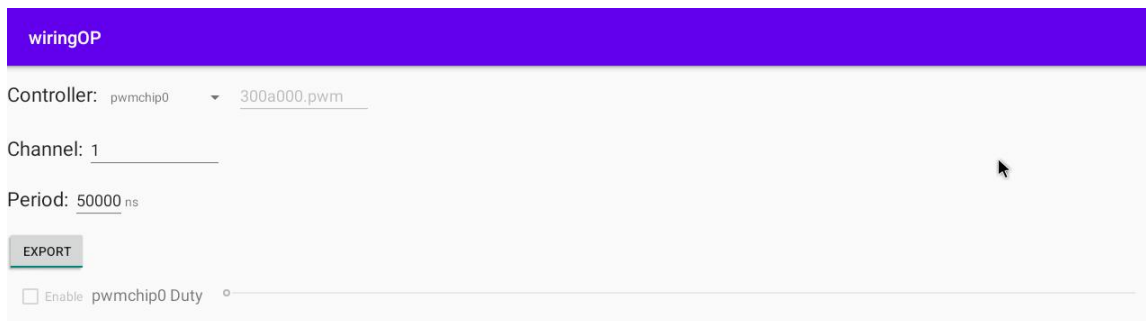


5) Then set which PWM you want to use in the Channel. The default is PWM1. If you want to set it to PWM2, just enter 2 in the Channel. PWM3 and PWM4 and so on.

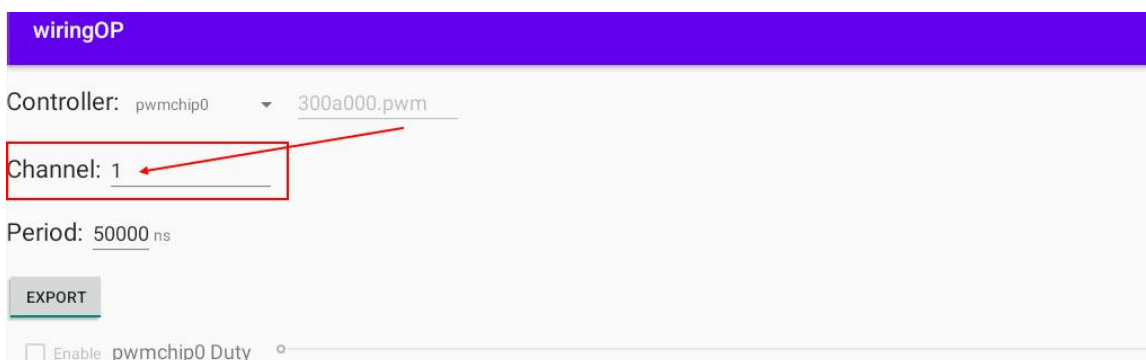




6) Then you can set the PWM period. The default configuration is **50000ns**. The converted PWM frequency is **20KHz**

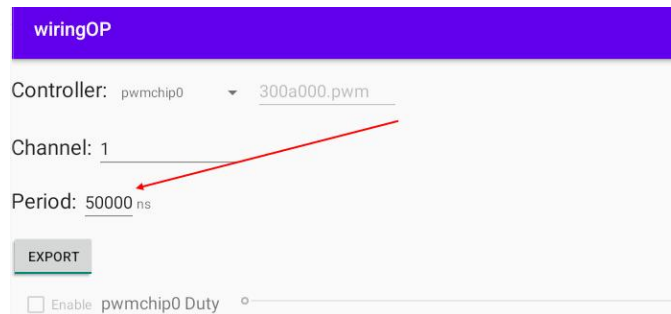


7) Then click the **EXPORT** button to export PWM

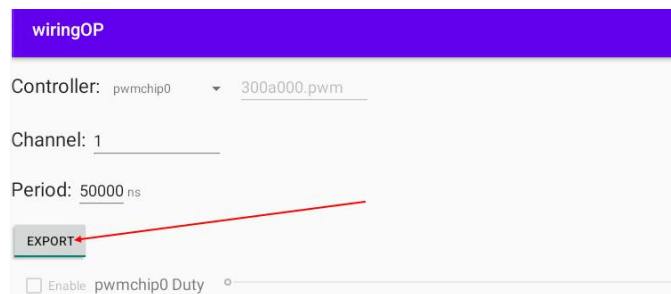

8) Then drag the progress bar below to change the PWM duty cycle, and then check **Enable** to output the PWM waveform.



9) Then use an oscilloscope to measure the corresponding pins in the 40pin development board and you can see the following waveform.

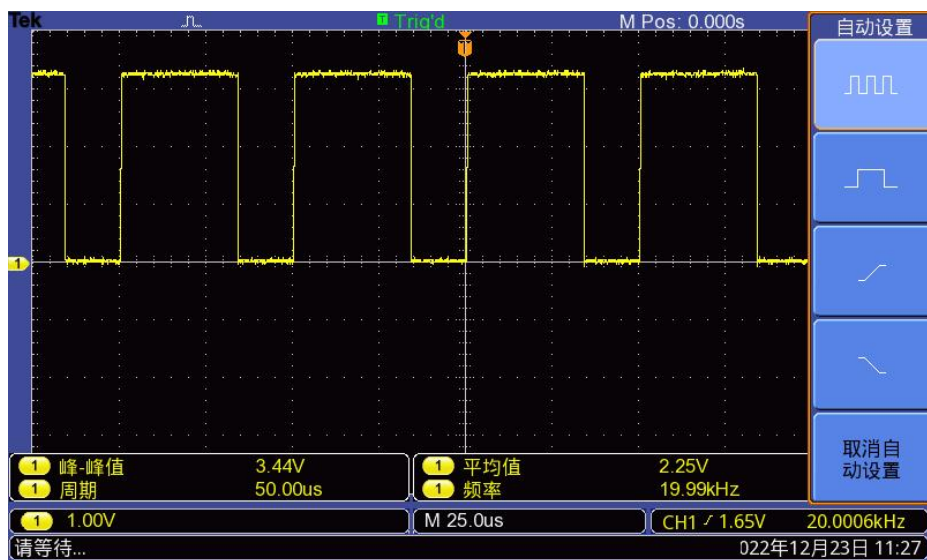

9. How to compile Android 12 source code

9.1. Download the source code of Android 12

1) First download the compressed package of the Android 12 source code and the compressed package of the files modified by Orange Pi Zero2w from Google Cloud



Drive

a. Google Cloud Drive



H618_Android_Source_Code

名称	所有者	上次修改日期	文件大小
H618-Android12-Src.tar.gz.md5sum .A.	所有者已隐藏	09-20	1 KB
H618-Android12-Src.tar.gzaa .A.	所有者已隐藏	09-20	1.86 GB
H618-Android12-Src.tar.gzab .A.	所有者已隐藏	09-20	1.86 GB
H618-Android12-Src.tar.gzac .A.	所有者已隐藏	09-20	1.86 GB
H618-Android12-Src.tar.gzad .A.	所有者已隐藏	09-20	1.86 GB
H618-Android12-Src.tar.gzae .A.	所有者已隐藏	09-20	1.86 GB
H618-Android12-Src.tar.gzaf .A.	所有者已隐藏	09-21	1.86 GB
H618-Android12-Src.tar.gzag .A.	所有者已隐藏	09-21	1.86 GB
H618-Android12-Src.tar.gzah .A.	所有者已隐藏	09-21	1.86 GB
H618-Android12-Src.tar.gzai .A.	所有者已隐藏	09-21	1.86 GB
H618-Android12-Src.tar.gzaj .A.	所有者已隐藏	09-21	1.86 GB
H618-Android12-Src.tar.gzak .A.	所有者已隐藏	09-21	1.86 GB
H618-Android12-Src.tar.gzal .A.	所有者已隐藏	09-21	1.86 GB
H618-Android12-Src.tar.gzam .A.	所有者已隐藏	09-21	1.86 GB
H618-Android12-Src.tar.gzan .A.	所有者已隐藏	09-21	1.86 GB
H618-Android12-Src.tar.gzao .A.	所有者已隐藏	09-22	1.86 GB
H618-Android12-Src.tar.gzap .A.	所有者已隐藏	09-22	1.86 GB
H618-Android12-Src.tar.gzaq .A.	所有者已隐藏	09-22	1.86 GB
H618-Android12-Src.tar.gzar .A.	所有者已隐藏	09-22	212.8 MB

2) After downloading the compressed package of Android 12 source code, please check whether the MD5 checksum is correct. If it is incorrect, please download the source code again. Here's how to check the MD5 checksum:

```
test@test:~$ md5sum -c H618-Android12-Src.tar.gz.md5sum
H618-Android12-Src.tar.gzaa: OK
H618-Android12-Src.tar.gzab: OK
.....
```

3) Then you need to merge multiple compressed files into one, and then extract the Android source code. The command looks like this:

```
test@test:~$ cat H618-Android12-Src.tar.gza* > H618-Android12-Src.tar.gz
test@test:~$ tar -xvf H618-Android12-Src.tar.gz
```

4) Then unzip the compressed package of the files modified by Orange Pi Zero2w

```
test@test:~$ tar xzf opizero2w_android12_patches.tar.gz
test@test:~$ ls
opizero2w_android12_patches  opizero2w_android12_patches.tar.gz
```

5) Then copy the files modified by Orange Pi Zero2w to the Android source code

```
test@test:~$ cp -rf opizero2w_android12_patches/* H618-Android12-Src/
```



9.2. Compile the source code of Android 12

Android12 is compiled on an x86_64 computer with **Ubuntu 22.04** installed. Other versions of Ubuntu system package dependencies may have some differences. The image download address of the Ubuntu 22.04 **amd64** version is as follows:
<https://repo.huaweicloud.com/ubuntu-releases/22.04/ubuntu-22.04.2-desktop-amd64.iso>

The x86_64 computer hardware configuration for compiling Android12 source code recommends a memory of 16GB or more, and a hard disk space of 200GB or more is recommended. The more CPU cores, the better.

1) First install the software packages needed to compile Android12 source code

```
test@test:~$ sudo apt-get update
test@test:~$ sudo apt-get install -y git gnupg flex bison gperf build-essential \
zip curl zlib1g-dev gcc-multilib g++-multilib libc6-dev-i386 \
lib32ncurses5-dev x11proto-core-dev libx11-dev lib32z1-dev ccache \
libgl1-mesa-dev libxml2-utils xsltproc unzip u-boot-tools python-is-python3 \
libssl-dev libncurses5 clang gawk
```

2) Then compile the code in the longan folder, which mainly contains u-boot and linux kernel

a. First run **./build.sh config** to set compilation options

```
test@test:~$ cd H618-Android12-Src/longan
test@test:~/H618-Android12-Src/longan$ ./build.sh config

Welcome to mkscript setup progress
All available platform:
    0. android
    1. linux
Choice [android]: 0
All available ic:
    0. h618
Choice [h618]: 0
All available board:
```



```
0. ft
1. p1
2. p2
3. p7
4. p7l
5. perf1
6. perf2
7. perf3
8. qa
Choice [p2]: 2
All available flash:
0. default
1. nor
Choice [default]: 0
All available kern_ver:
0. linux-5.4
Choice [linux-5.4]: 0
All available arch:
0. arm
1. arm64
Choice [arm64]: 1
.....
*** Default configuration is based on 'sun50iw9p1smp_h618_android_defconfig'
#
# configuration written to .config
#
make[1]: Leaving directory '/home/test/H618-Android12-Src/longan/out/kernel/build'
make: Leaving directory '/home/test/H618-Android12-Src/longan/kernel/linux-5.4'
INFO: clean buildserver
INFO: prepare_buildserver
```

b. Then run the **./build.sh** script to start compilation.

```
test@test:~/H618-Android12-Src/longan$ ./build.sh
```

c. After compilation is completed, you will see the following output

```
sun50iw9p1 compile Kernel successful
```



```
INFO: Prepare toolchain ...
.....
INFO: build kernel OK.
INFO: build rootfs ...
INFO: skip make rootfs for android
INFO: -----
INFO: build lichee OK.
INFO: -----
```

3) Then use the following command to compile the Android source code and generate the final Android image

```
test@test:~$ cd H618-Android12-Src
test@test:~/H618-Android12-Src$ source build/envsetup.sh
test@test:~/H618-Android12-Src$ lunch apollo_p2-userdebug
test@test:~/H618-Android12-Src$ make -j8
test@test:~/H618-Android12-Src$ pack
```

4) The storage path of the Android image generated by compilation is:

```
longan/out/h618_android12_p2_uart0.img
```

10. Appendix

10.1. User manual update history

Version	Date	Release Notes
v1.0	2023-09-14	initial version
v1.1	2023-10-13	1. How to use wiringOP hardware PWM
v1.2	2024-08-20	1. Linux6.1: Update u-boot to v2024.01 2. OpenWRT system usage instructions 3. The compilation method of OpenWRT source code
v1.3	2024-10-10	1. Add user manual for Ubuntu 24.04



10. 2. Image update history

Date	Release Notes
2023-09-14	orangepi-zero2w_1.0.0_debian_bullseye_server_linux5.4.125.7z orangepi-zero2w_1.0.0_ubuntu_focal_server_linux5.4.125.7z orangepi-zero2w_1.0.0_ubuntu_focal_desktop_xfce_linux5.4.125.7z orangepi-zero2w_1.0.0_debian_bullseye_desktop_xfce_linux5.4.125.7z orangepi-zero2w_1.0.0_ubuntu_jammy_server_linux6.1.31.7z orangepi-zero2w_1.0.0_debian_bookworm_server_linux6.1.31.7z orangepi-zero2w_1.0.0_debian_bullseye_server_linux6.1.31.7z orangepi-zero2w_1.0.0_ubuntu_jammy_desktop_xfce_linux6.1.31.7z orangepi-zero2w_1.0.0_debian_bookworm_desktop_xfce_linux6.1.31.7z orangepi-zero2w_1.0.0_debian_bullseye_desktop_xfce_linux6.1.31.7z OrangePi_Zero2w_Android12_v1.0.tar.gz Opios-arch-aarch64-xfce-opi-zero2w-23.09-linux6.1.31.img.xz * initial version
2024-07-25	openwrt-sunxi-cortexa53-xunlong_orangepi-zero2w-ext4-sdcard.img.gz * initial version
2024-10-10	Orangepi-zero2w_1.0.4_ubuntu_noble_desktop_xfce_linux6.1.31.7z Orangepi-zero2w_1.0.4_ubuntu_noble_server_linux6.1.31.7z * Initial version